


Media Wall Console


Copyright © 2015 Shanty-2-Chic.com






Supply List

Item	Quantity	Description
48" x 96" x 3/4" plywood	4	
48" x 48" x 1/4" plywood	1	
1 x 6 x 10'	1	Pine or whitewood board
1 x 4 x 10'	2	Pine or whitewood board
1 x 4 x 8'	1	Pine or whitewood board
1 x 12 x 8'	2	Pine or whitewood board
1 x 2 x 8'	10	Pine or whitewood board
2 x 2 x 8'	2	Pine or whitewood board
2 x 4 x 8'	1	Pine or whitewood board
5/8" staples or brad nails	handful	For attaching the interior 1/4" panels
Drawer pull	6	
1-1/4" pocket hole screws	164	
1-1/4" wood screws	handful	Optional
Finish nails	handful	
Finish of choice		

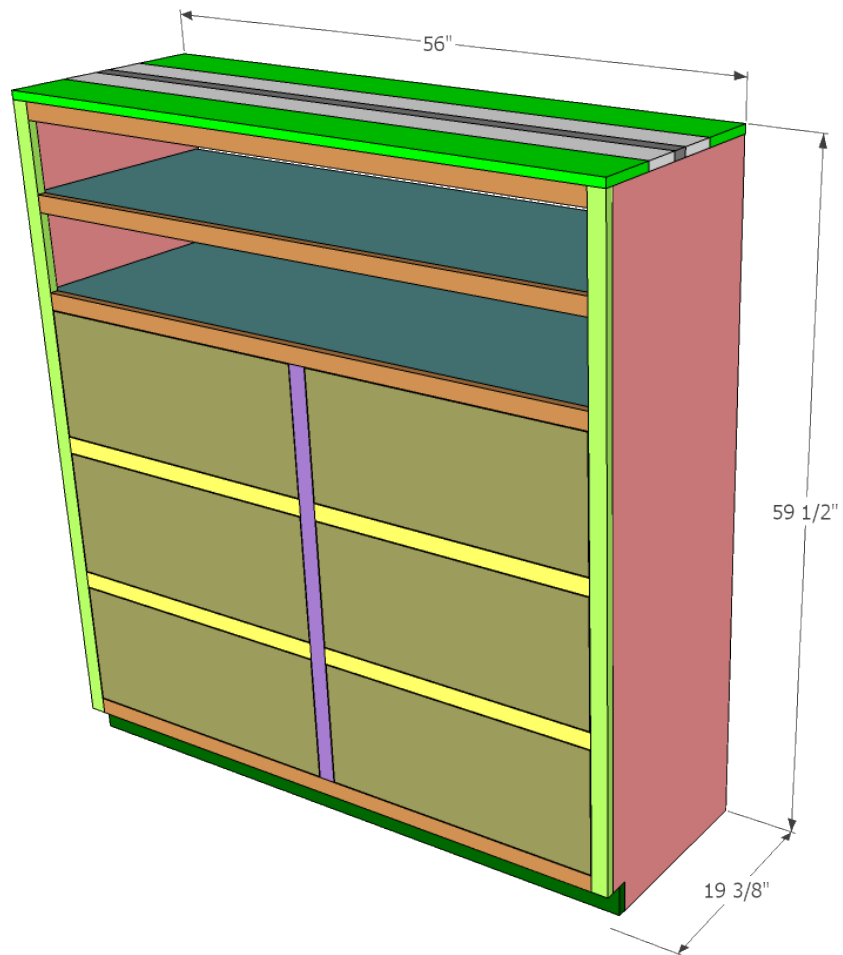

Drill pocket holes for 1-1/4" pocket hole screws as indicated by the arrows in the layout diagrams. be sure to check your scrap bin for material before purchasing anything. You may already have enough scrap to save yourself some money. These measurements are exact for this model. Measure and cut as you go to make sure everything lines up perfectly with your project. Read and understand the entire plan before beginning th project.


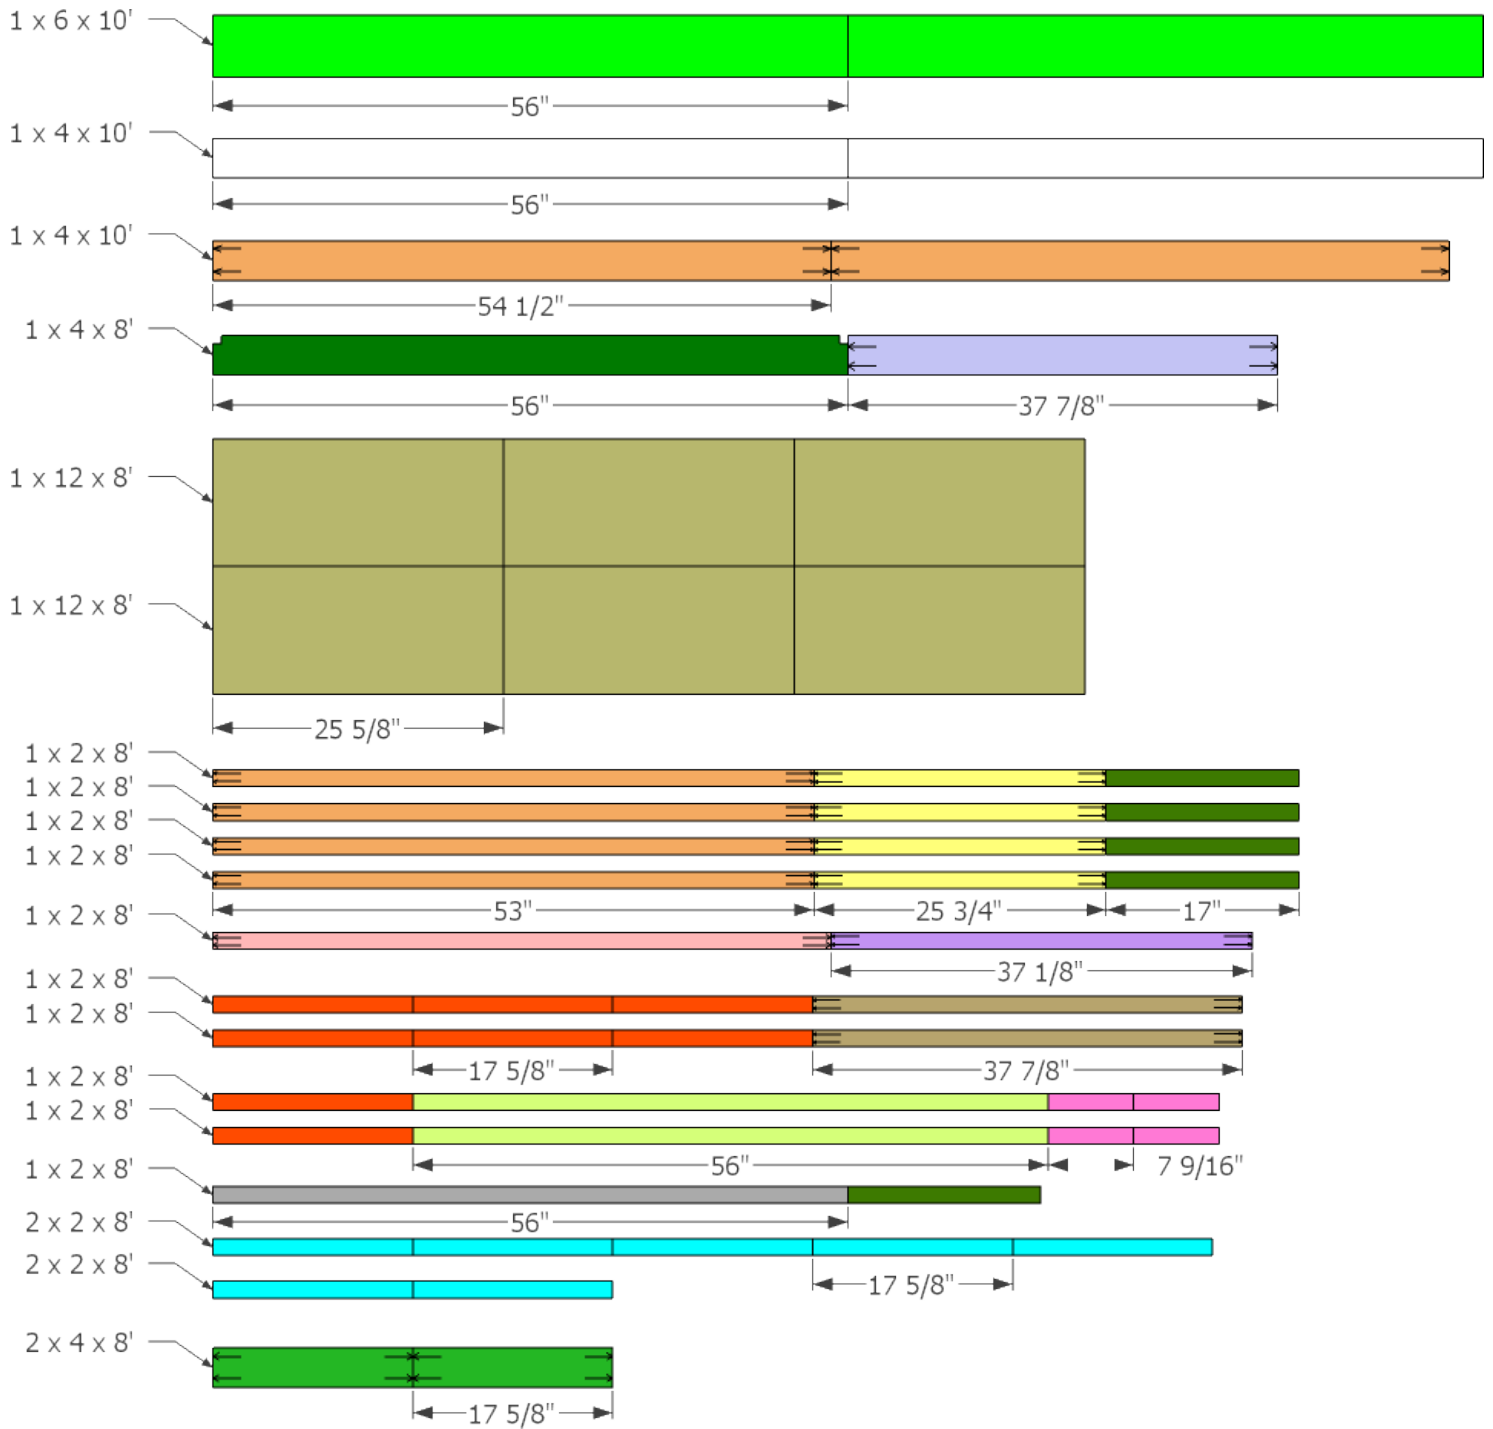


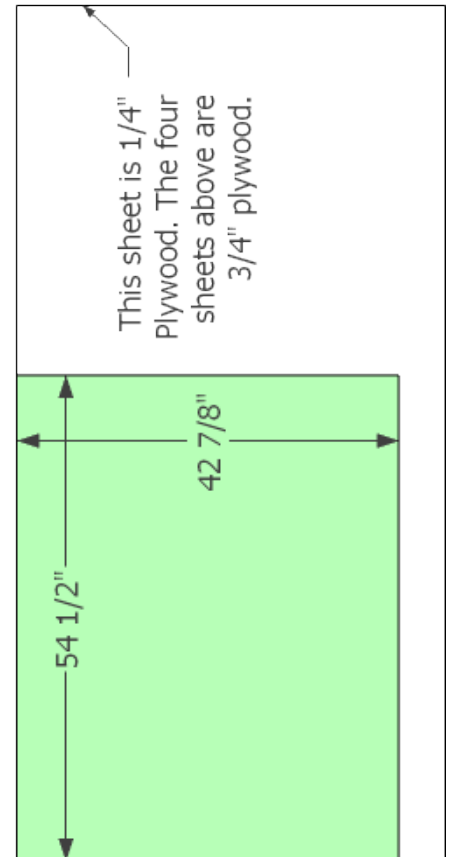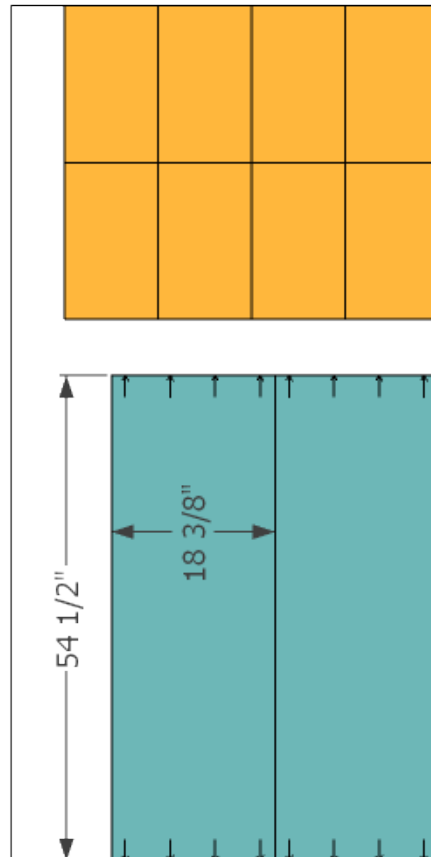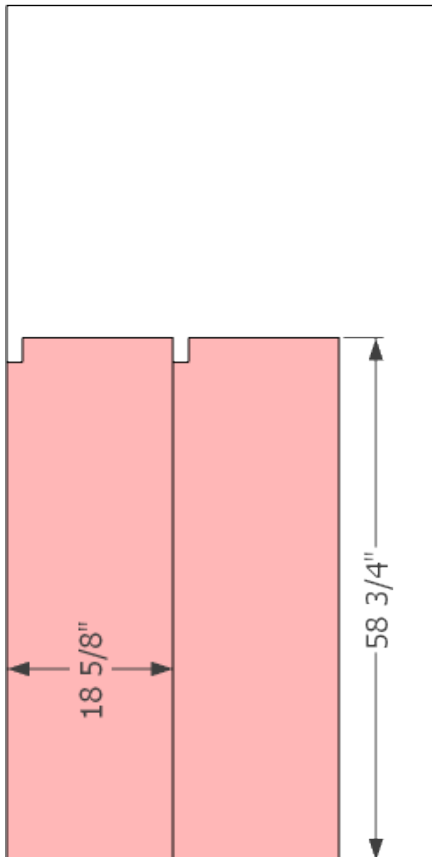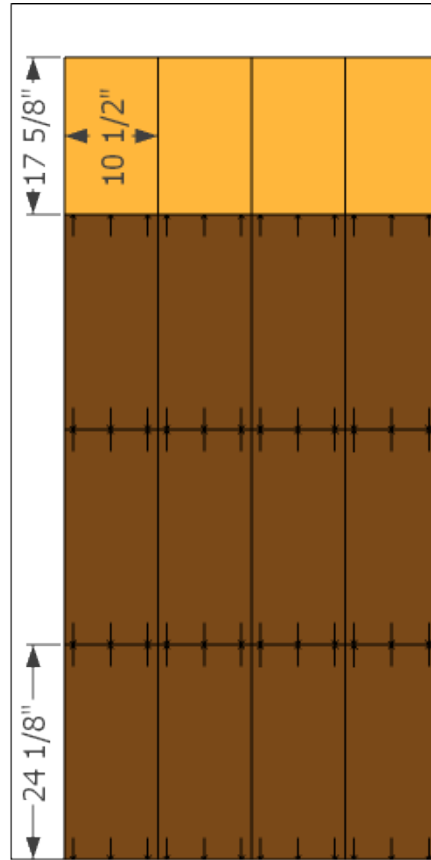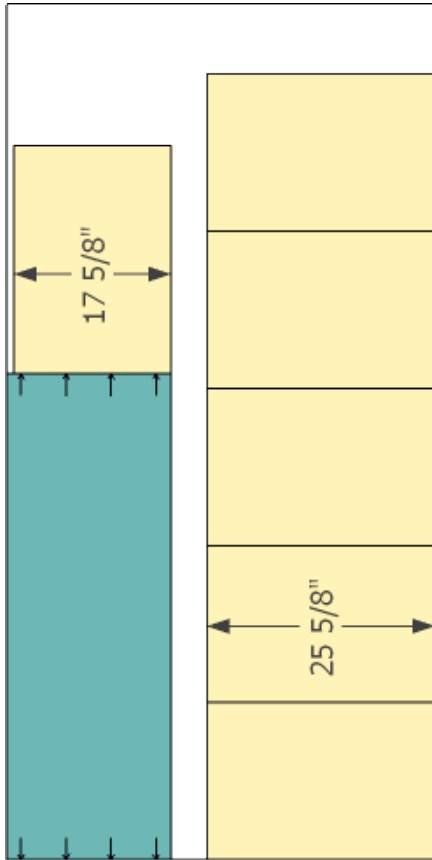

1

On the front edge of both side panels cut a 1-3/4" wide by 2-3/4" tall notch with a jigsaw and a speed square.

To prevent tear-out, make sure the jigsaw blade has the teeth cutting into the outside face of the panels.

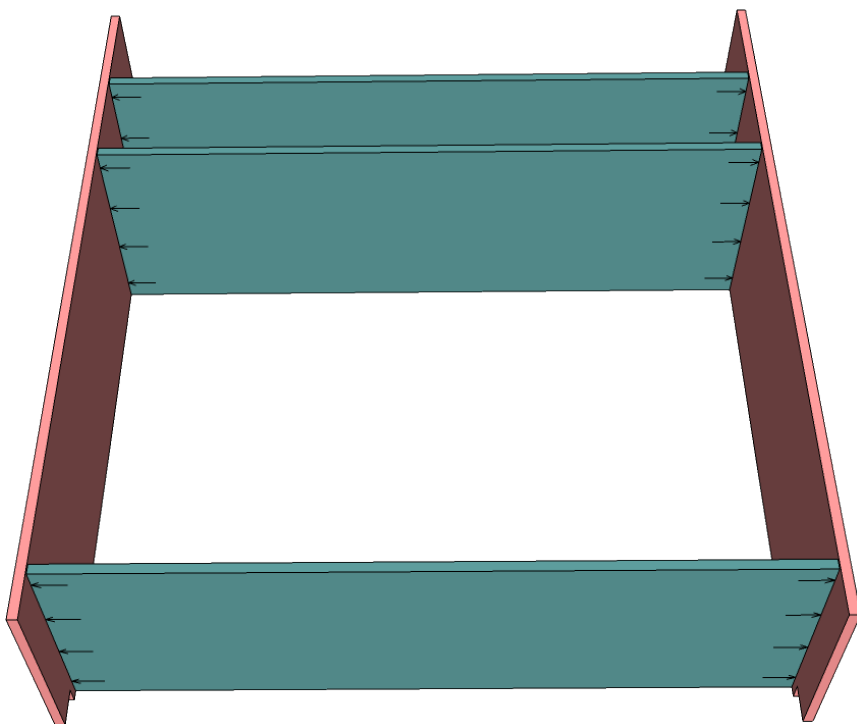



2

Attach the shelves to the side panels with wood glue and 1-1/4" pocket hole screws with the front edge facing down. The front edges will be flush. The back edge of the shelves are 1/4" inset from the back of the sides. From the top of the sides the top of the top two shelves should be at 7-9/16" and 15-7/8". The top of the bottom shelf should be at 4-1/4" from the bottom of the sides.

3

Attach the front and back lower braces with wood glue and 1-1/4" pocket hole screws. Use finish nails to secure the lower shelf to the braces.

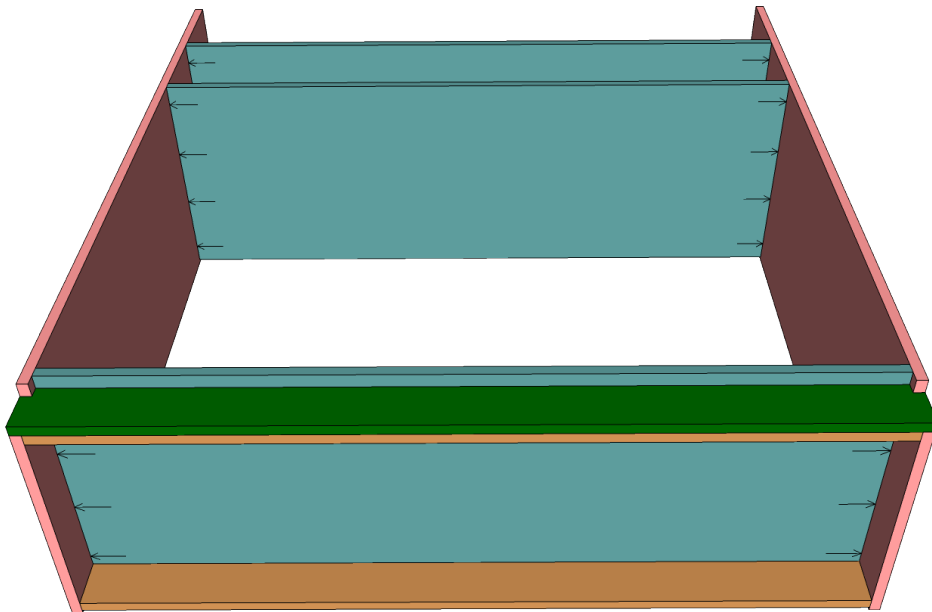
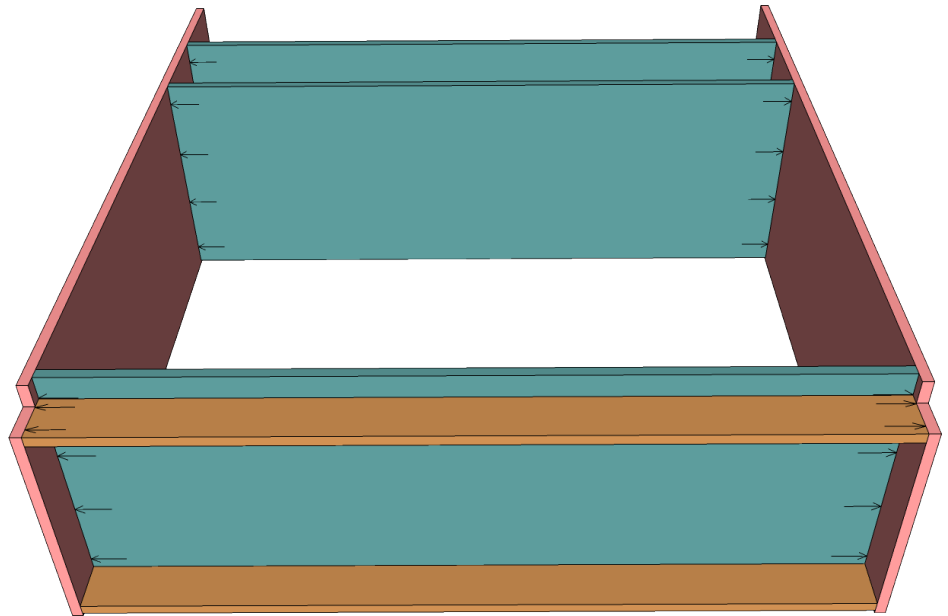


4

Use a jigsaw to notch out the necessary material to add a 1 x 4 trim board to the front lower brace. Use wood glue and either finish nails or 1-1/4" screws from the inside to secure it.

5

Assemble the front face frame with wood glue and 1-1/4" pocket hole screws.

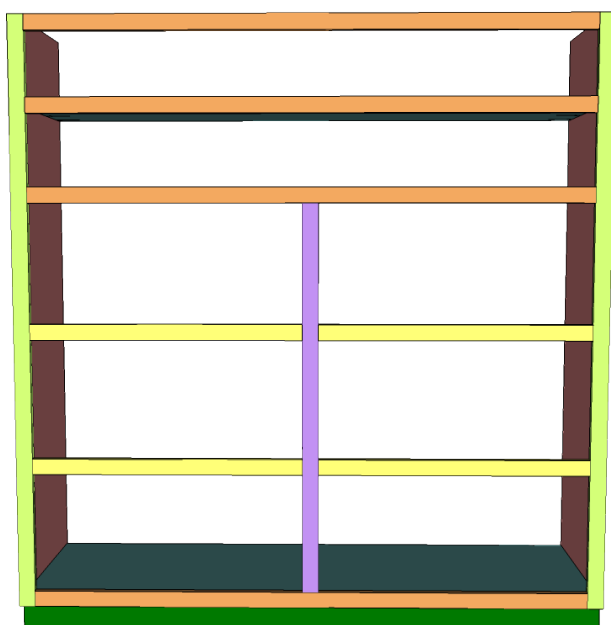
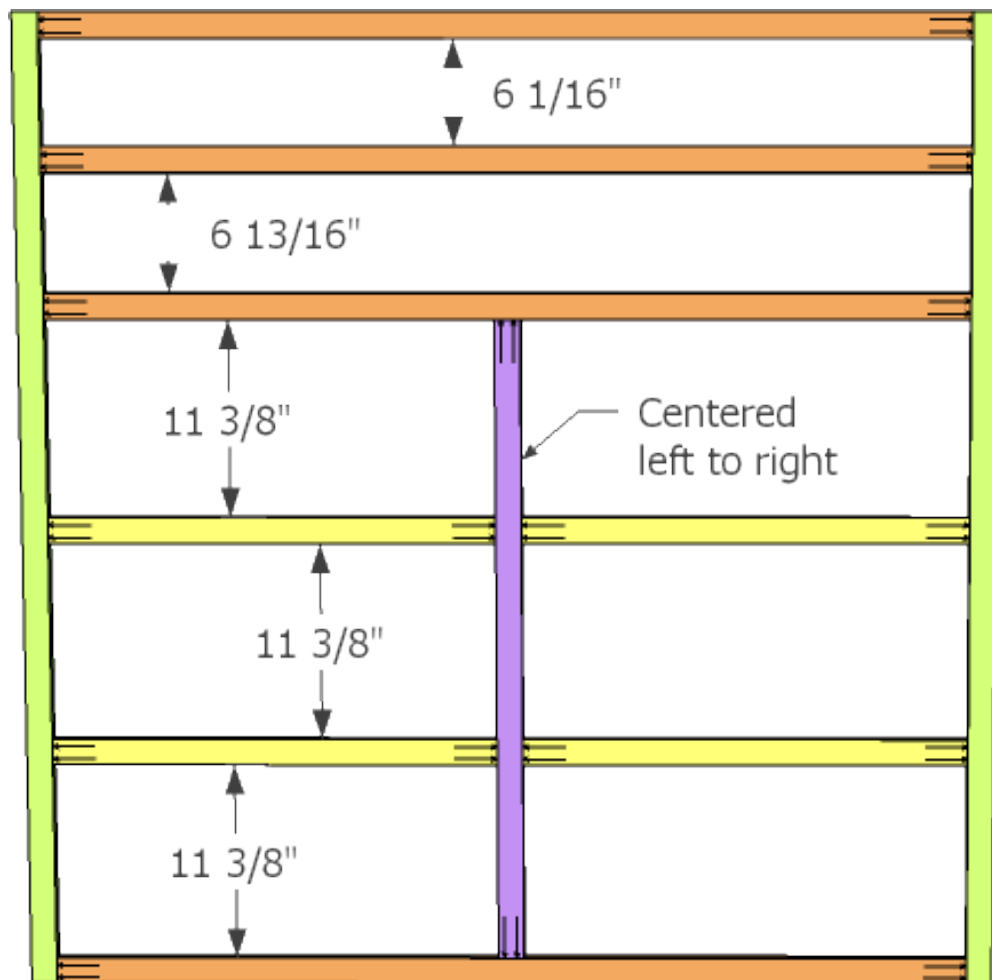


6

Attach the front face frame to the rest of the assembly with wood glue and finish nails.





Attach the top horizontal brace and the three vertical braces to the back of the assembly with wood glue and 1-1/4" pocket hole screws. The vertical braces should be inset 1/4" from the back of the side panels to allow for the back panel.

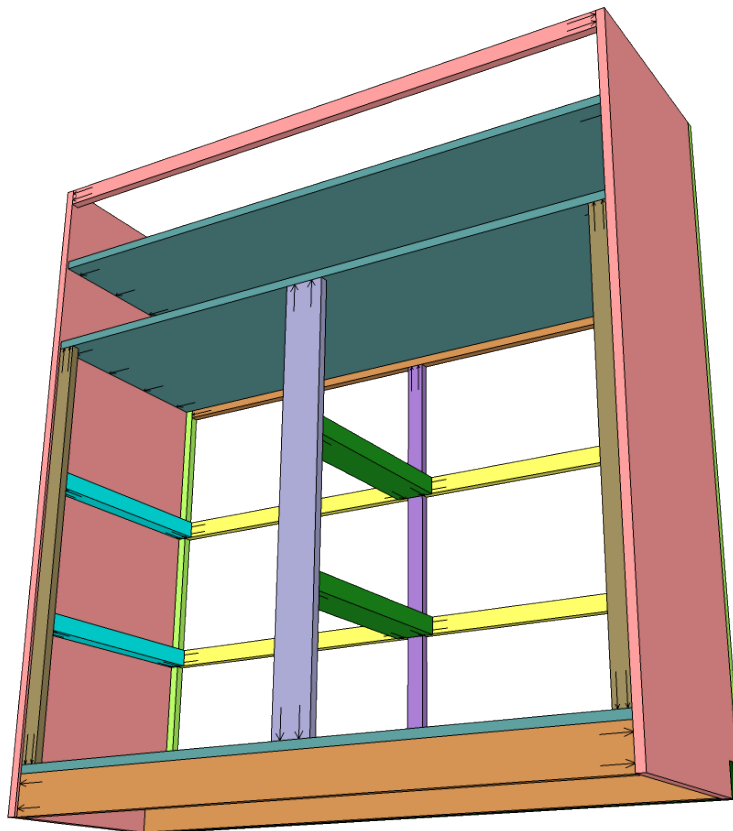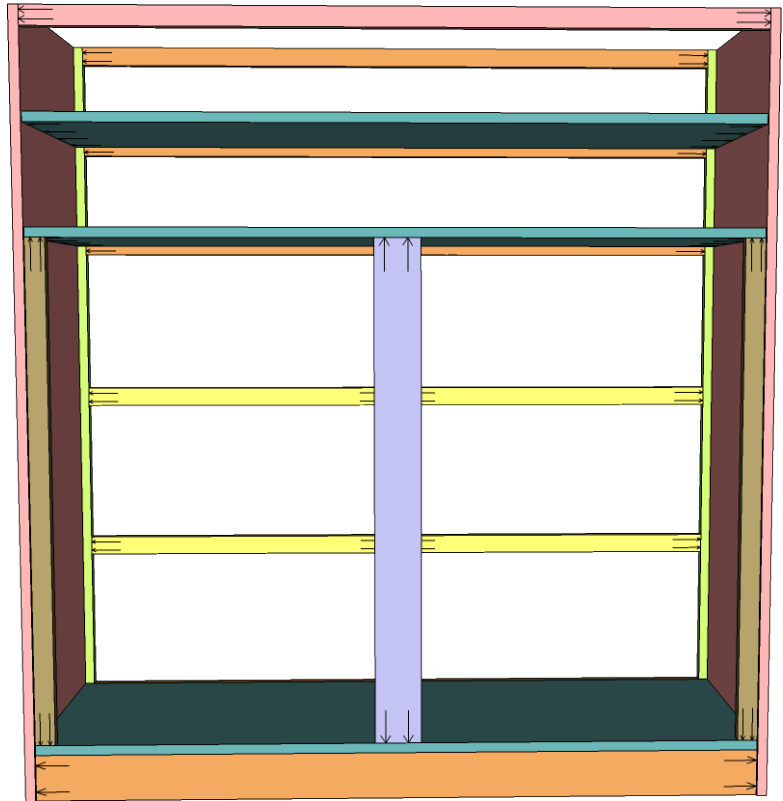

Add the lower drawer 2 x 2 and 2 x 4 drawer runners with wood glue and 1-1/4" pocket holes to the front and back frames.

9

Add the side and top 1 x 2 and 2 x 2 drawer guides with wood glue and finish nails.

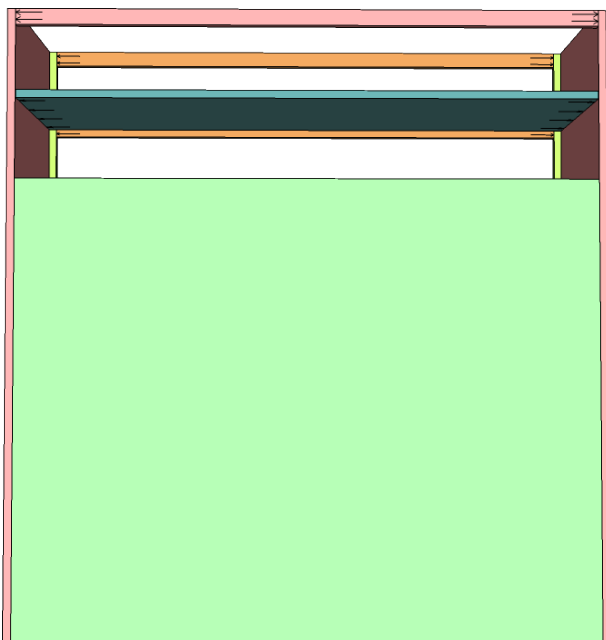
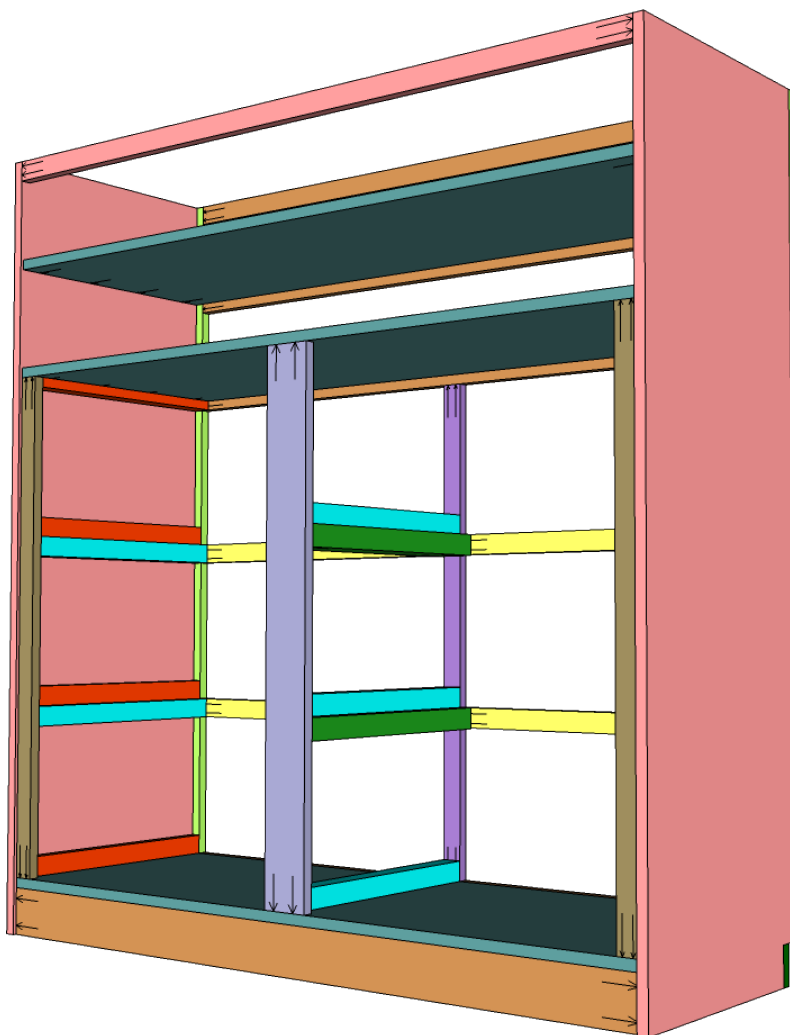


10

Attach the back with wood glue and finish nails.

11

Assemble the drawer frame with wood glue and 1-1/4" pocket hole screws. Then attach the bottom directly to the bottom of the frame with wood glue and finish nails.

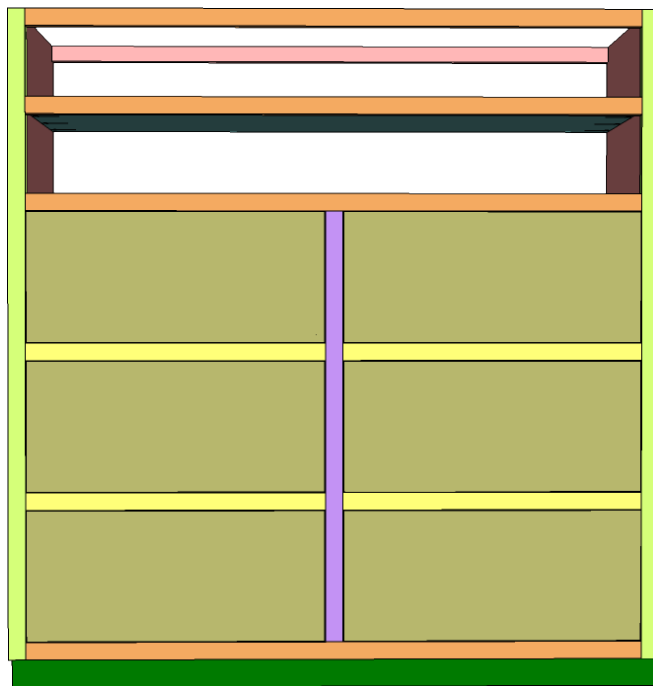
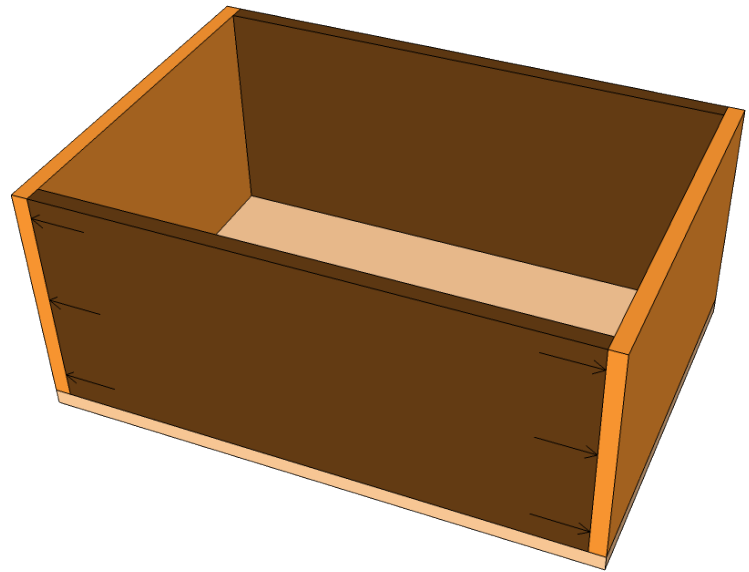


12

Cut and fit the 1 x 12 front panels for the drawers. Attach them to the drawer boxes with wood glue and either finish nails or 1-1/4" wood screws from the inside of the drawer. Attach any drawer pulls you wish to use.

13

Line up the top planks and use 1 x 2 strips, wood glue, and either 1-1/4" screws or finish nails to create a planked panel.

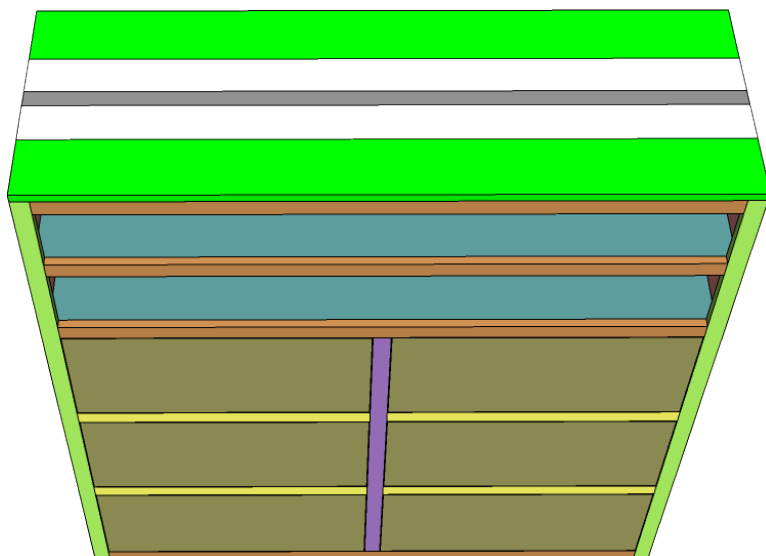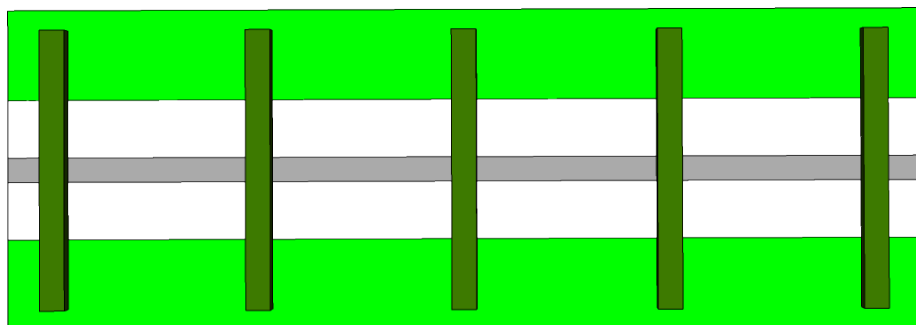

14

Attach the top panel with wood glue and finish nails. The front edge should be flush with a little bit of an overhang at the back. Sand and finish as you wish! If you decide to make one of these be sure to stop by our website and show it off in the Submit Your Project section!!