




# Media Console Table


*A* sleek, modern take on a traditional concept; this console table is as stylish as it is functional and you'll have it done in a weekend. And versatile enough to be painted for any room in your home.

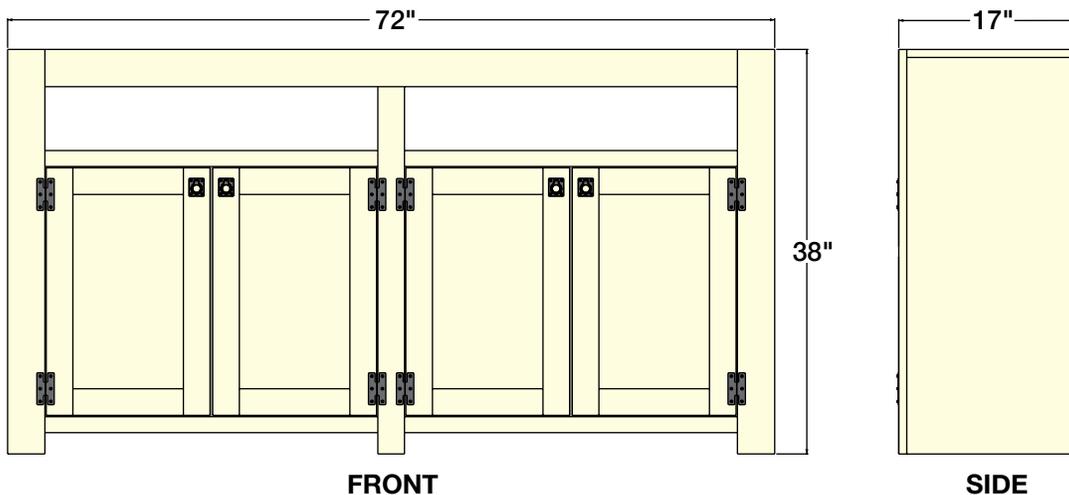

Make sure you read through the instructions carefully and take notice of any special construction notes prior to making any cuts. And always practice safe DIY'ing. Have fun!

**PLEASE NOTE - many pieces may require you to cut them to fit a certain size while you are building it. Its best not to cut pieces until you need them. Take your time and study all the diagrams.**

### CUT LIST

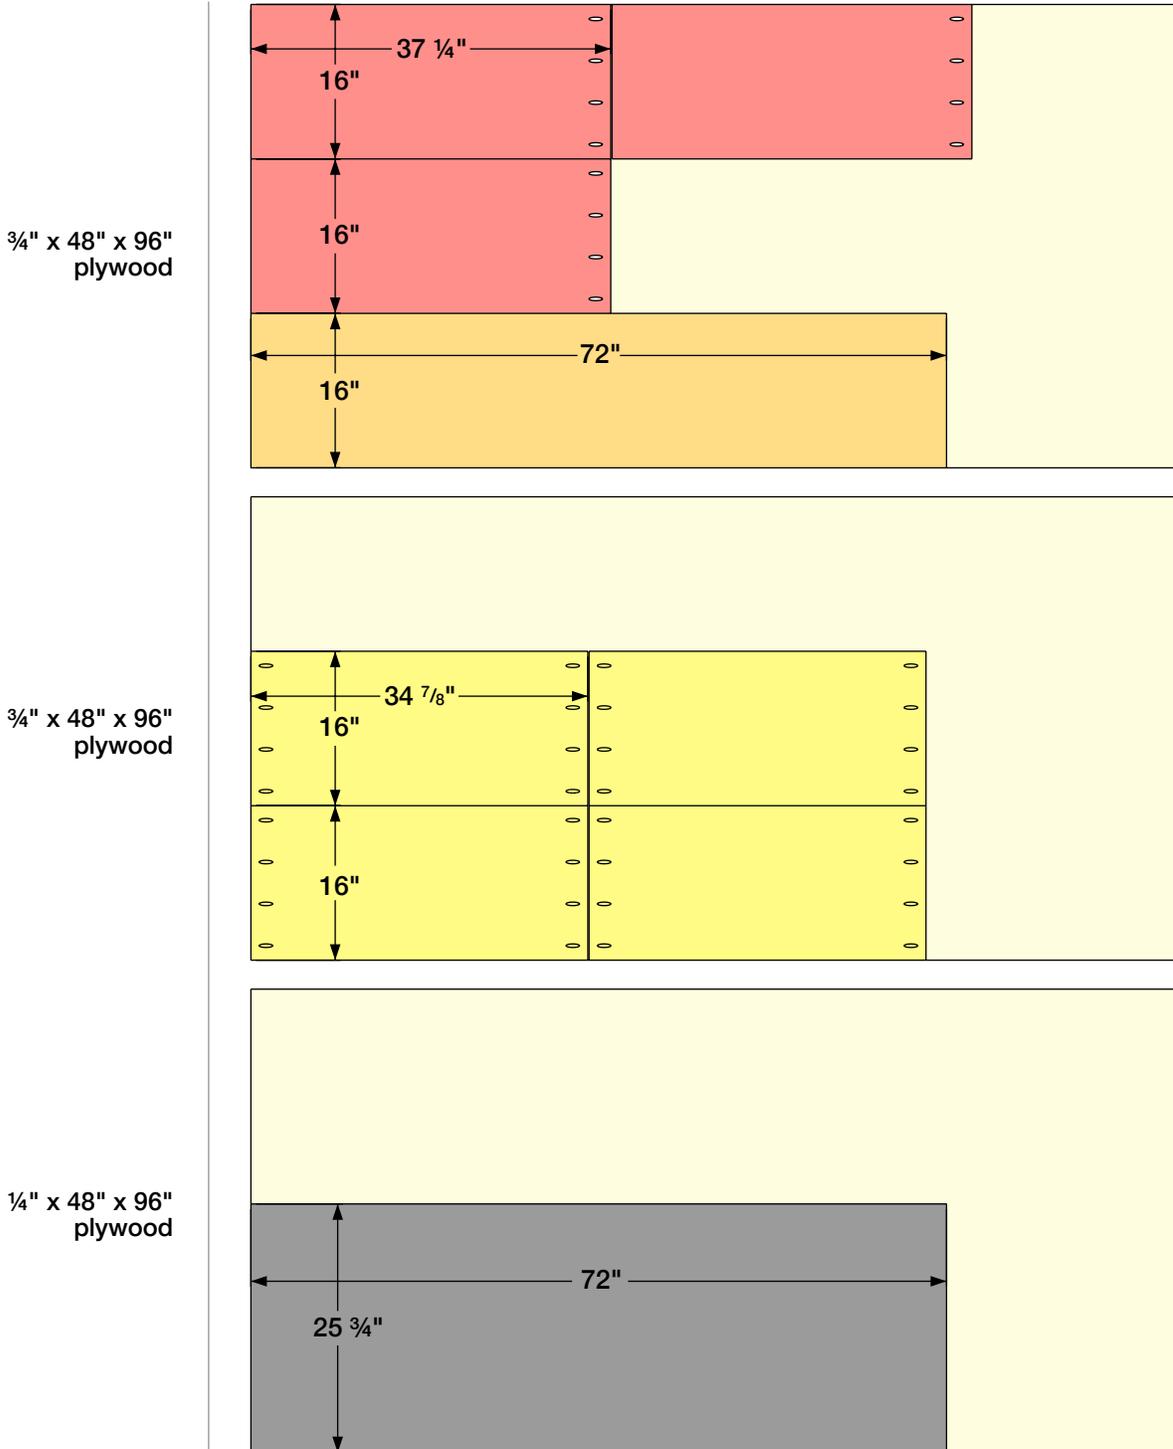


**NOTE**  
To make it easier to transport home ask that they rip both sheets down to 16" strips.

Make sure you read through the instructions carefully and take notice of any special construction notes prior to making any cuts. And always practice safe DIY'ing. Have fun!

**PLEASE NOTE - many pieces may require you to cut them to fit a certain size while you are building it. Its best not to cut pieces until you need them. Take your time and study all the diagrams.**

**CUT LIST**

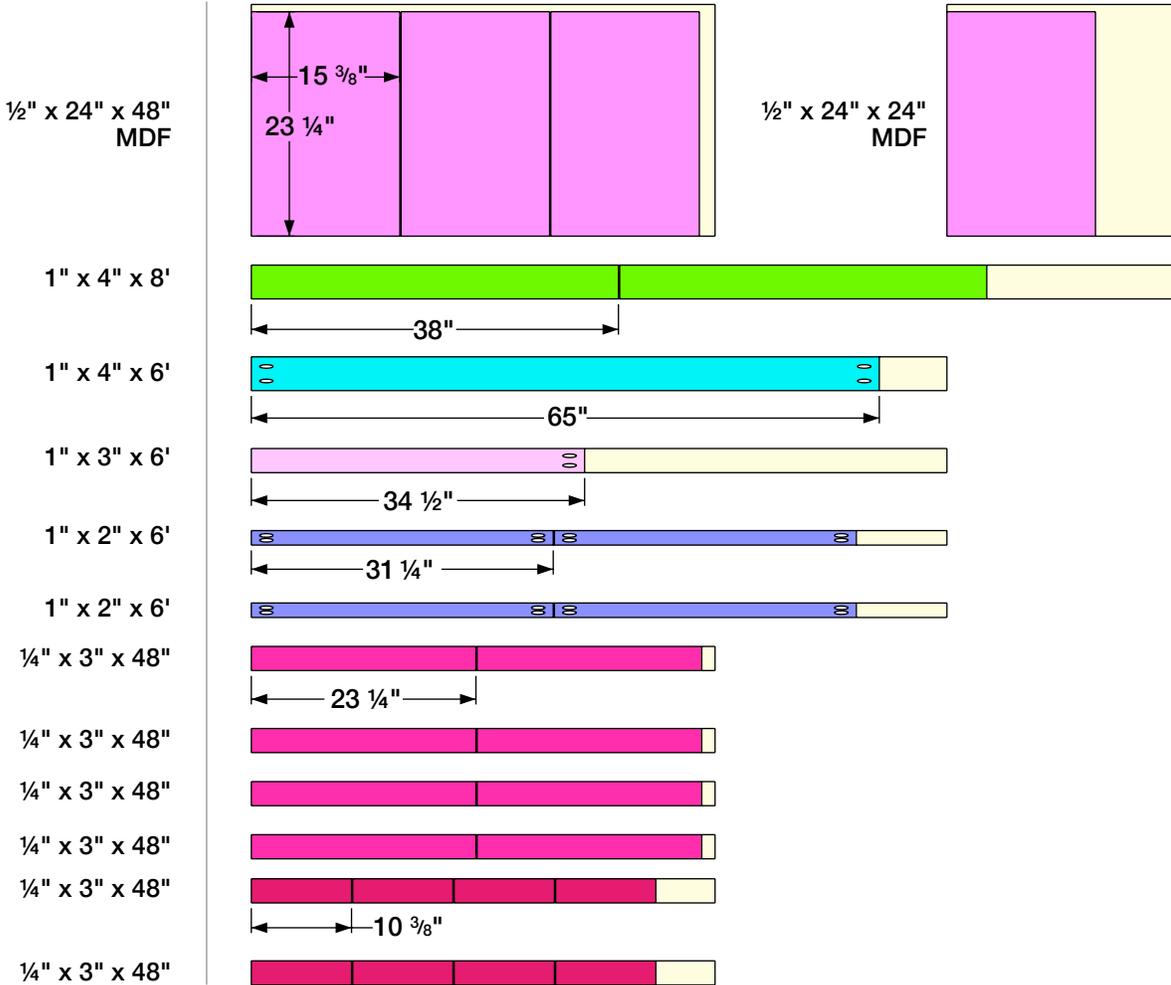





## MATERIALS LIST

Material	Qty
3/4" x 48" x 96" plywood	2
1/4" x 48" x 96" plywood	1
1/2" x 24" x 48" MDF	1
1/2" x 24" x 24" MDF	1
1" x 4" x 8' pine board	1
1" x 4" x 6' pine board	1
1" x 3" x 6' pine board	1
1" x 2" x 6' pine board	2
1/4" x 3" x 48" pine board	6

Material	Qty
1-1/4" pocket screws	
1-1/4" brad nails	
1/2" brad nails	
3/4" staples	
wood glue	
Hinges	4
Door pulls	4

---

## NOTES

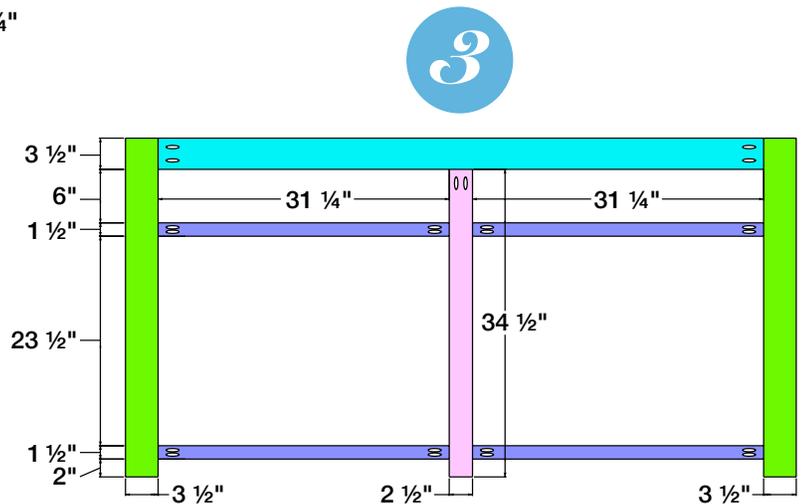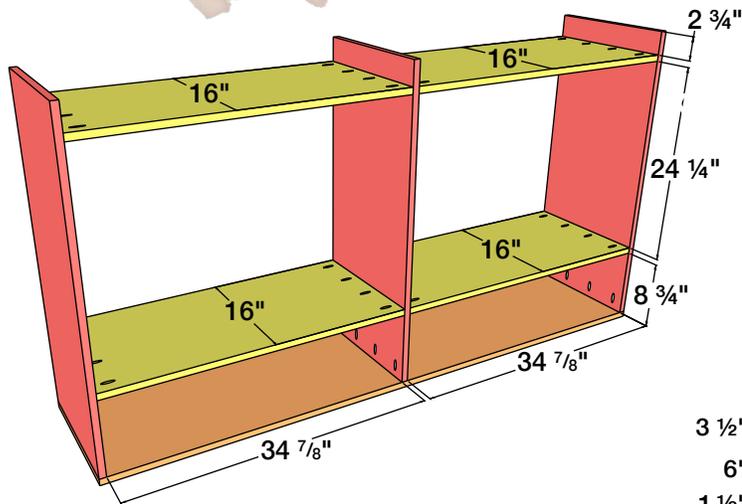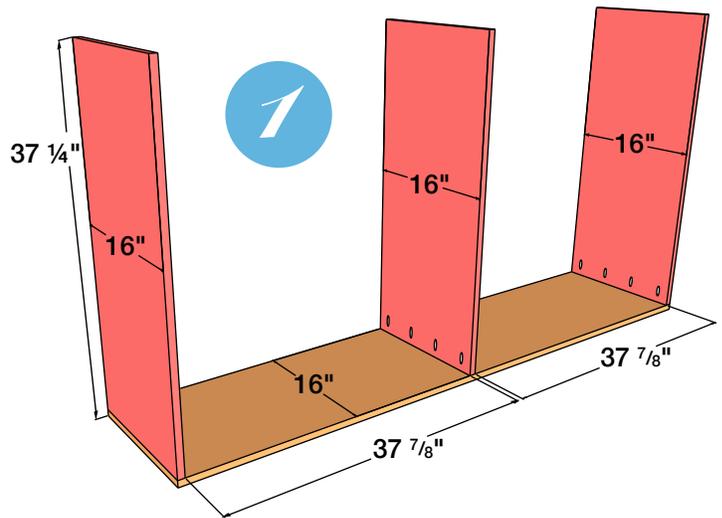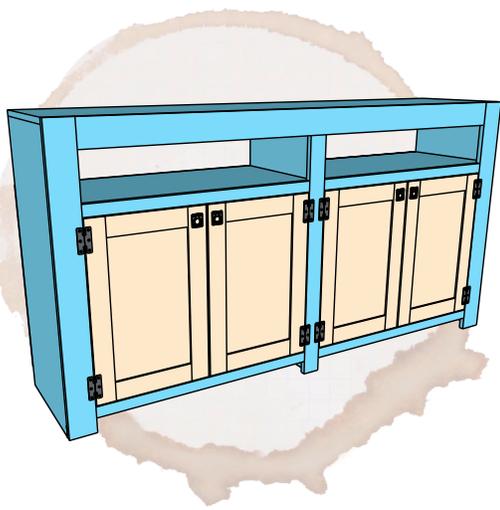

1.

After cutting all the 16" strips of plywood to the various lengths drill  $\frac{3}{4}$ " pocket holes into one end of the 37  $\frac{1}{4}$ " long side panels. Attach to the 72" long top panel with wood glue and 1- $\frac{1}{4}$ " pocket screws as shown, making sure the outside edges are flush. For reference, currently the console table is shown upside down.

2.


Next you will attach the shelves. Drill  $\frac{3}{4}$ " pocket holes into both ends of all shelves. Attach to the carcass with wood glue and 1- $\frac{1}{4}$ " pocket screws; spaced as shown with pocket holes facing up.

Flip the console right-side up. Fill in any pocket holes you may see with wood filler. Fill the outside exposed edges of the top  $\frac{3}{4}$ " plywood with wood filler. Allow to dry and sand smooth.


3.

Now for the face frame. Cut your 1x4, 1x3 and 1x2 boards to length as shown. Make sure to double check the size of the carcass in Step 2. Your face frame should line up exactly with the outside edges. Make any adjustments to your lengths prior to cutting.


Drill  $\frac{3}{4}$ " pocket holes into the ends of the boards as shown. Attach with wood glue and 1- $\frac{1}{4}$ " pocket screws; spaced as shown.

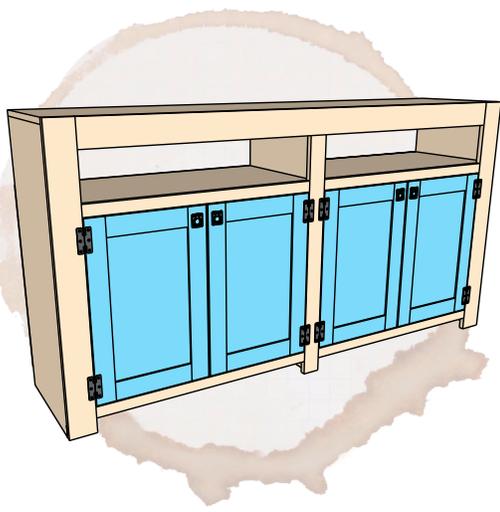


4

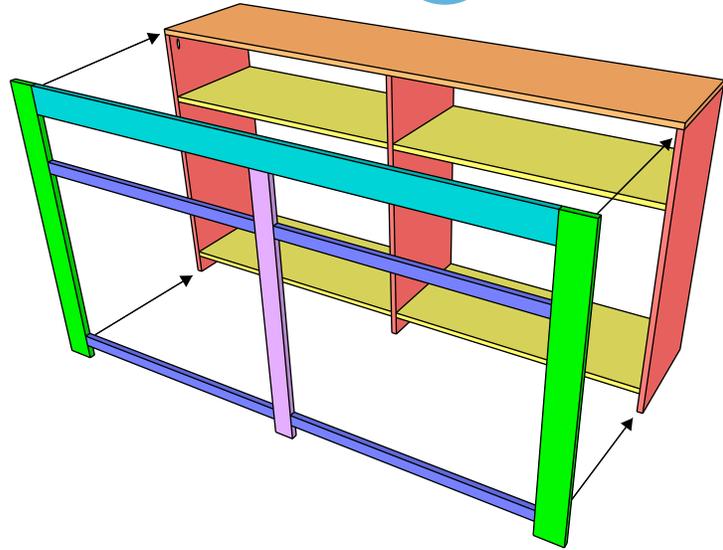

5

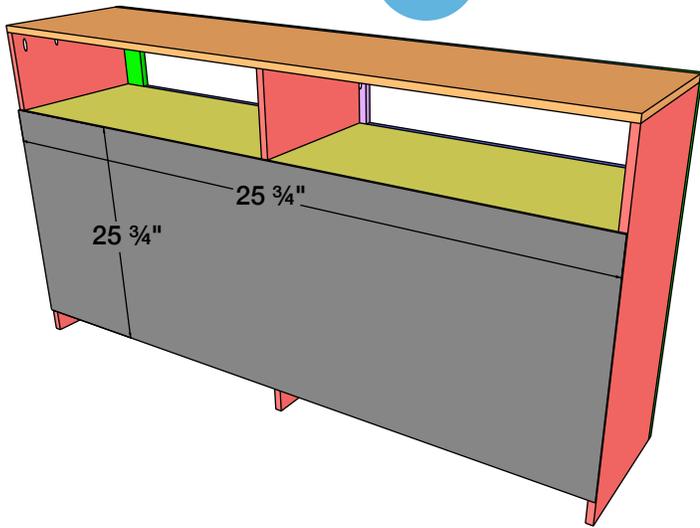

6

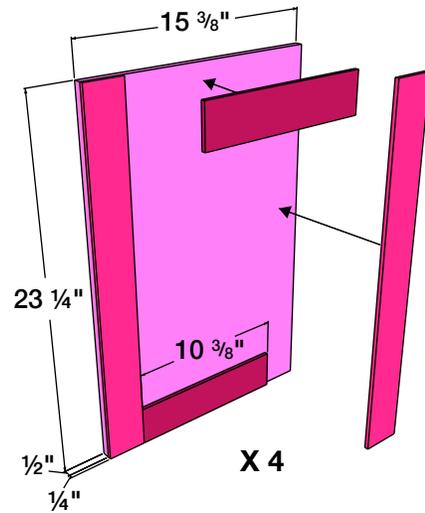

4.

Attach face frame with wood glue and 1-1/4" brad nails, making sure the outside edges and the shelf edges are flush.

Fill any nail holes with wood filler. Allow to dry and sand smooth.

Prime and paint your console table. Allow to dry.

5.

Cut the 1/4" plywood back to fit flush with the outside edges of the console table and flush with the top edge of the top shelves and the bottom edge of the bottom shelves. Sand and paint. Allow to dry.

Attach to the back of your console table with 3/4" staples.


6.

Now for the four doors. Measure the openings in the lower half of the console table. You want a 1/8" gap all around the doors. The above measurements should be close but make sure to cut your 1/2" MDF to fit properly.


Cut your decorative door stiles and rails to length and attach with wood glue and 1/2" brad nails as shown. Repeat for a total of four doors.

Fill any nail holes with wood filler. Allow to dry and sand smooth.

Prime and paint the doors. Allow to dry.

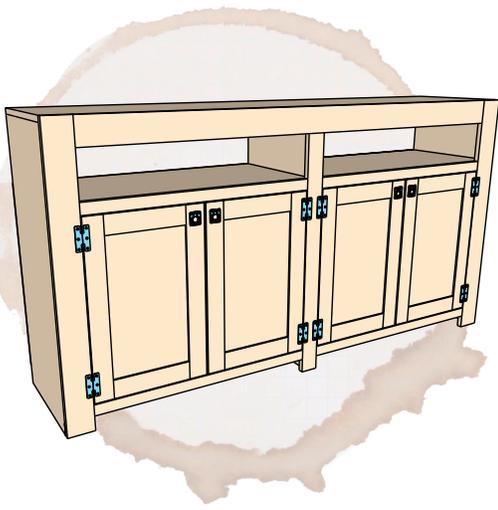

7

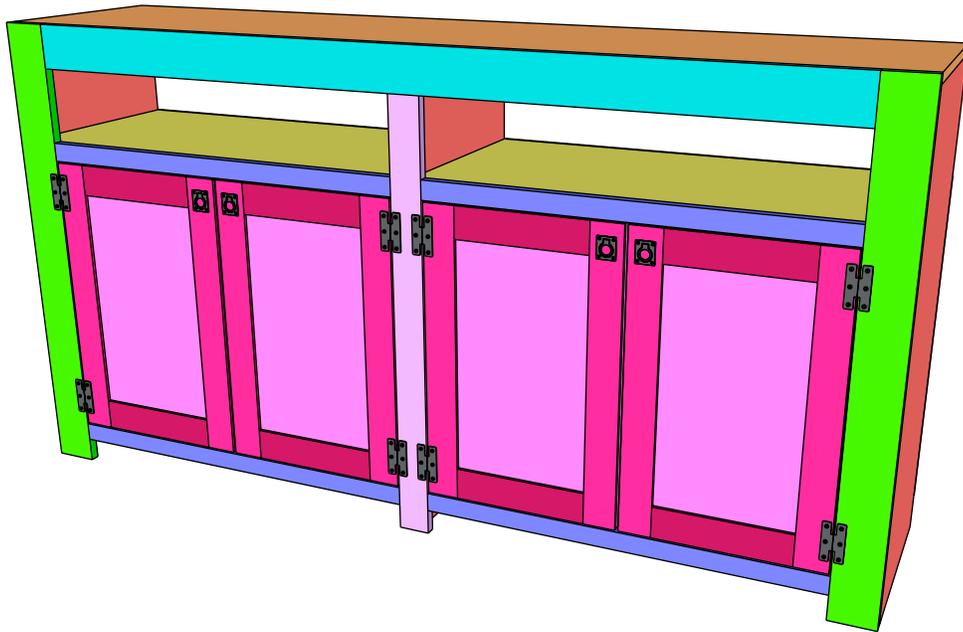

7.

Finally, attach the doors with hinges. Attach your door pulls.

Place in your room and enjoy!!