



DIY Workbench

Copyright © 2014 Shanty-2-Chic.com

Supply List


Item	Quantity	Description
3/4" x 4 x 8' MDF	1	Heavy! Be careful!
2 x 4 x 8'	7	Pine
2 x 6 x 8	2	Pine
2-1/2" pocket hole screws	36	
2-1/2" wood screws	handful	
Brad nails	handful	
wood glue		
4" locking casters	4	

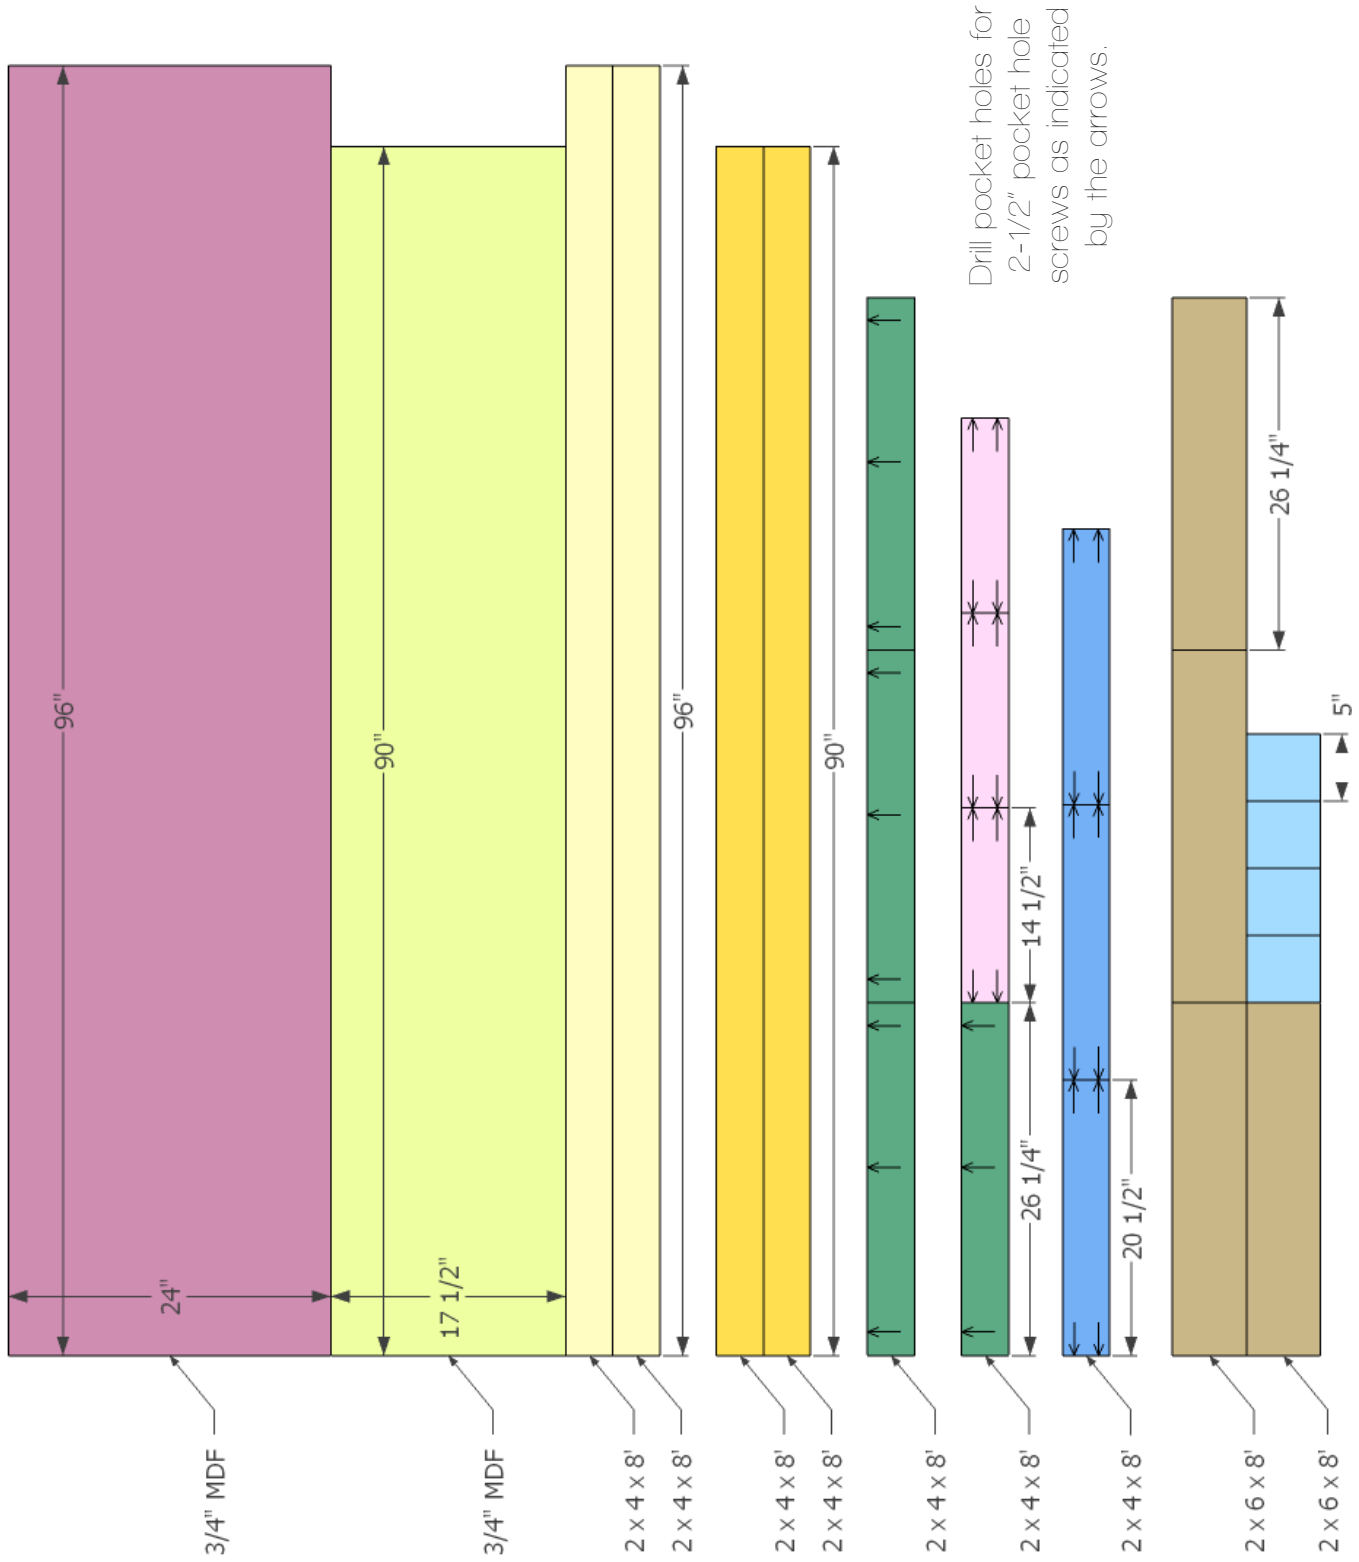

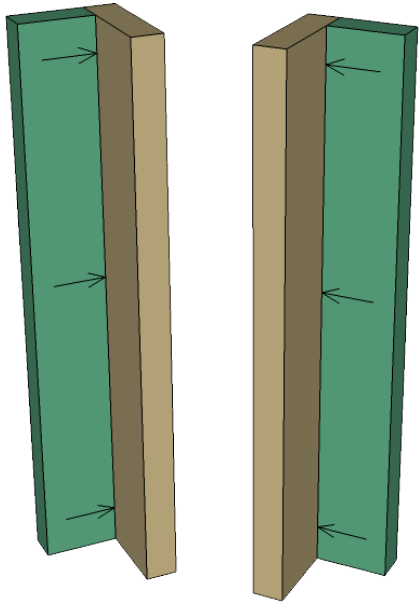


1

Assemble all of the sub assemblies. Make two left legs and two right legs. Also make the top and bottom shelf frames. Use glue at every joint and secure everything with 2-1/2" pocket hole screws.

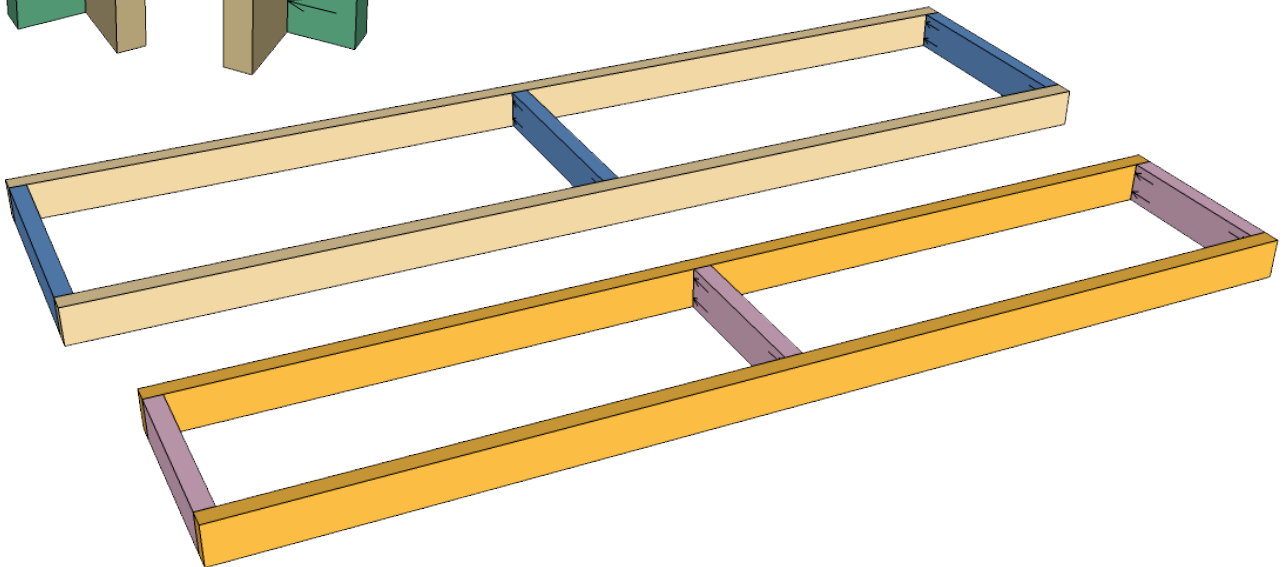


2

Attach the legs to the bottom frame first. Use glue and a couple 2-1/2" wood screws through the bottom frame into each piece of wood in the legs.

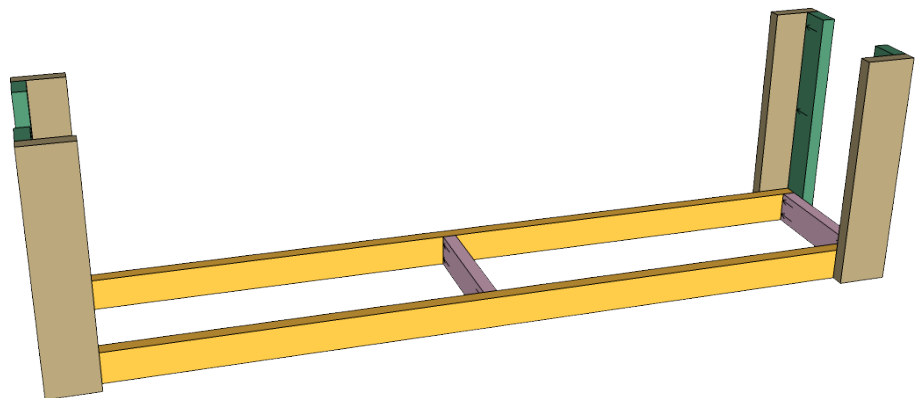


3

Lay the assembly on its side and slip the top frame over the legs. Attach it with glue and 2-1/2" wood screws in the same way.

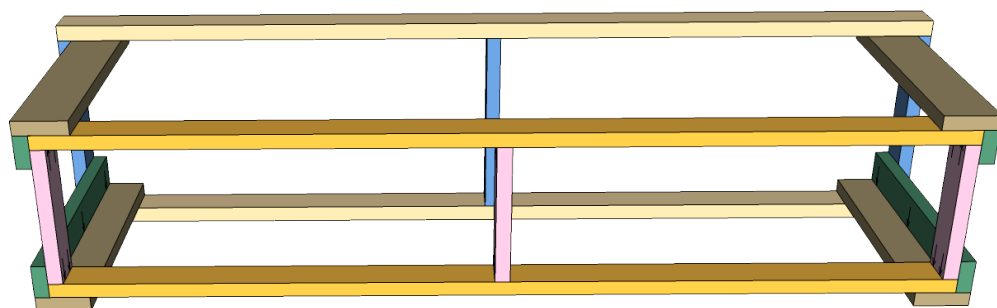

4

While it's on its side attach the bottom foot pads with glue and screws and the casters with the included screws. If they did not come with screws any 3/4" to 1-1/4" screws will work just fine.

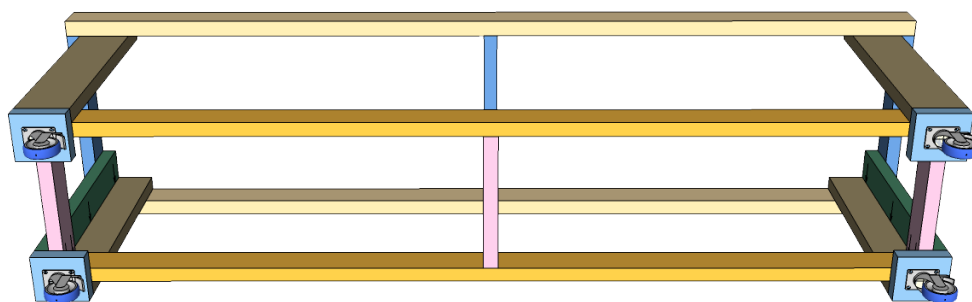

5

Carefully lift the workbench onto its wheels and add the MDF top and shelf. Brad nails spaced every 10-12" should be fine to hold them down, Remember to stop by our site and let us know if you decide to make one of these!

