
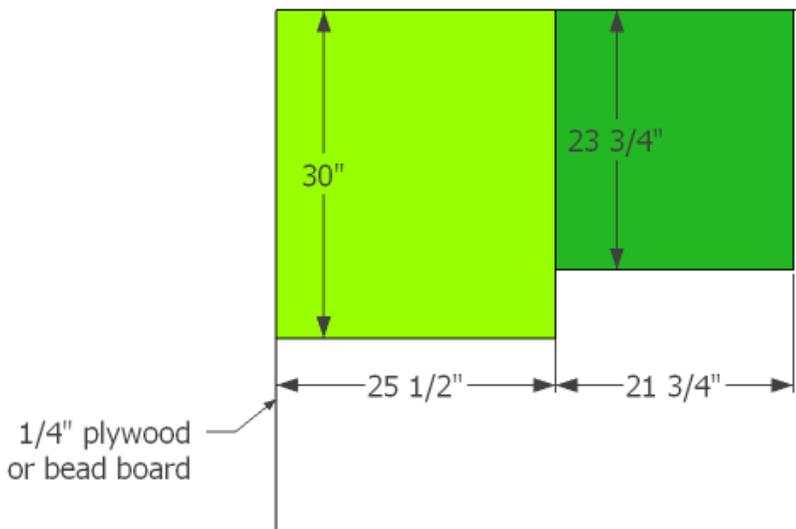
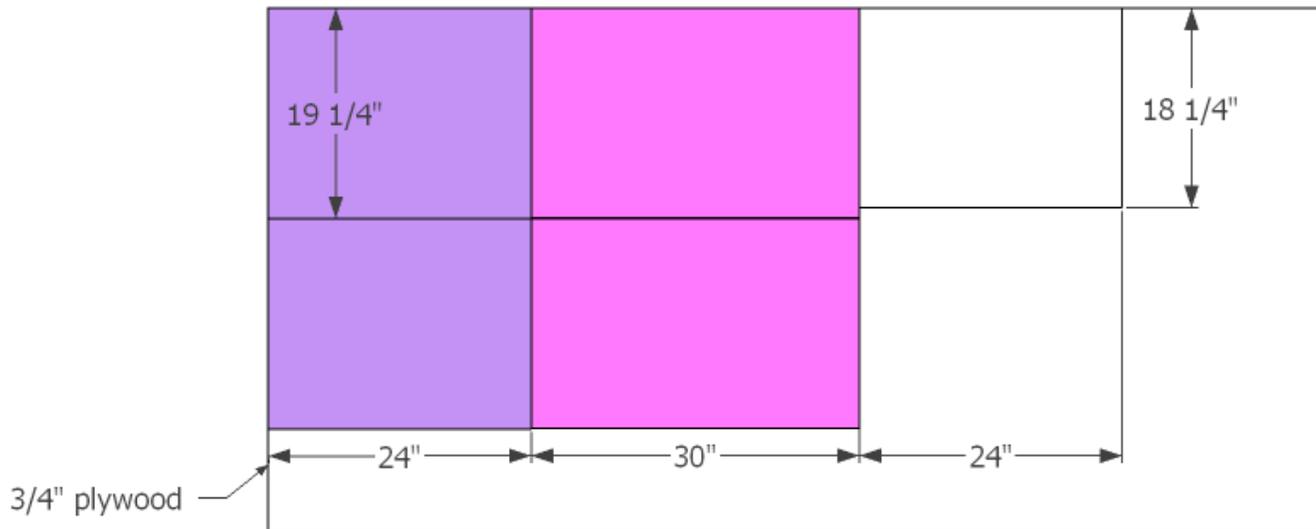


## DIY Bedside Cabinet

Copyright © 2014 Shanty-2-Chic.com

### Supply List



Item	Quantity	Description
1 x 4 x 8'	4	Pine or whitewood board
1 x 3 x 8"	2	Pine or whitewood board
1 x 2 x 8'	2	Pine or whitewood board
48 x 96 x 3/4" plywood	1	
48 x 48 x 1/2" plywood	1	
1-1/4" pocket hole screws	16	Optional to use more if you want
Brad nails	A bunch	
Decorative door hinges	2	
Cabinet door pull	1	
Wood glue		
Finish of choice		

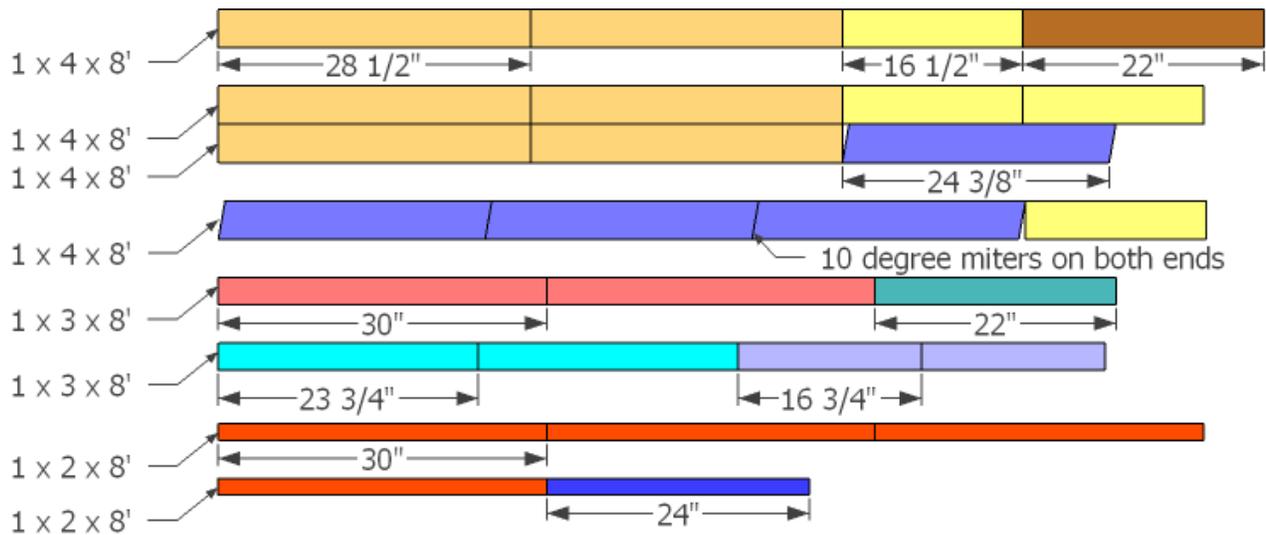

While the dimensions are given for all parts make sure you measure and cut as you go to fit your specific project. Use wood glue at every joint in this project. You can incorporate pocket holes for most of the joinery instead of brad nails if you prefer.


1

Assemble the plywood panels. All of the horizontal pieces will fit inside the side pieces. It will help to assemble this on it's back. Attach the top panel flush with the top of the sides. Attach the bottom panel so that it's top side is 3-1/2" off of the ground and center the middle shelf. The middle shelf needs to be lined up with the back of the side panels so that there will be room for the front trim board later.

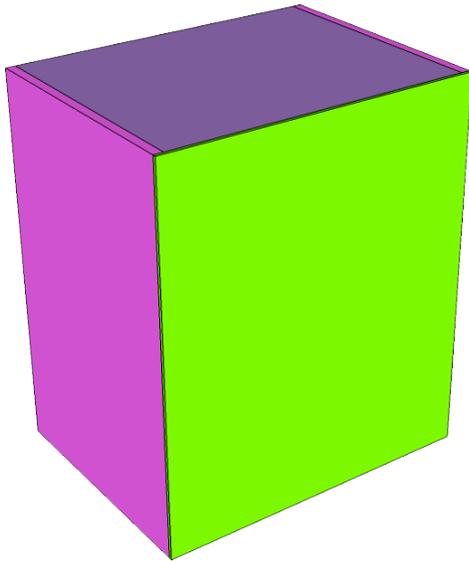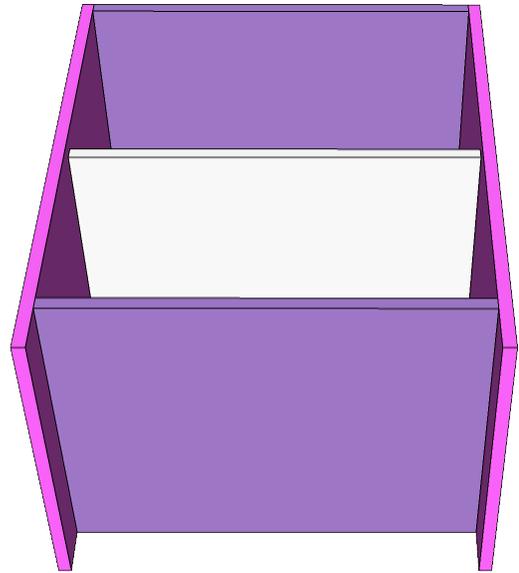

2

Glue and nail the back panel onto the back side of the assembled panels.


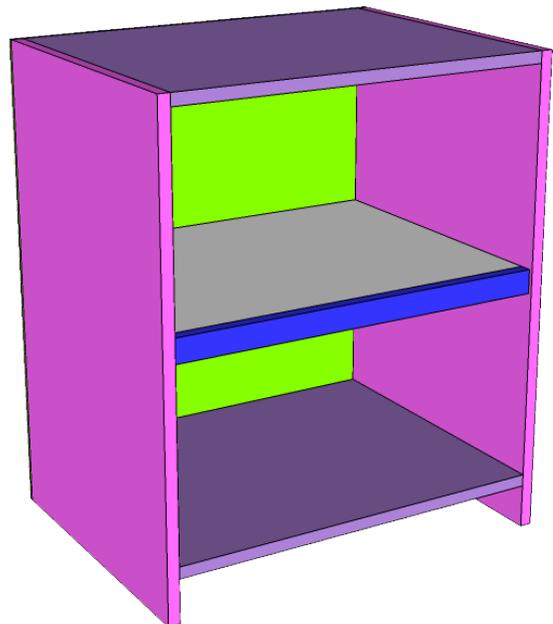


3

Glue and nail the trim board to the front of the middle shelf.

4

Add the side trim boards. The resulting pieces will be flush with the front of the side panels and flush with the back of the back panel. Start with the vertical boards, then the horizontal boards, and finally the diagonals. Use wood glue and attach them with brad nails from the inside if you are going to stain. If you are going to fill the nail holes and paint you can nail through the outside.

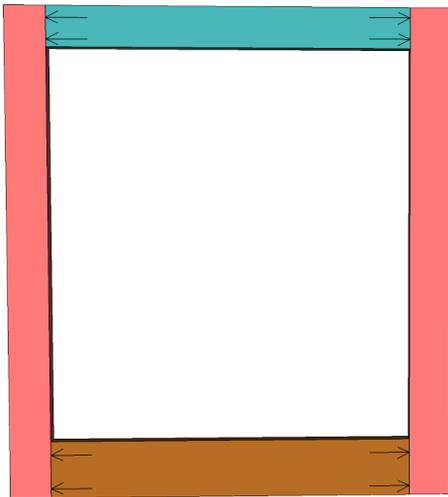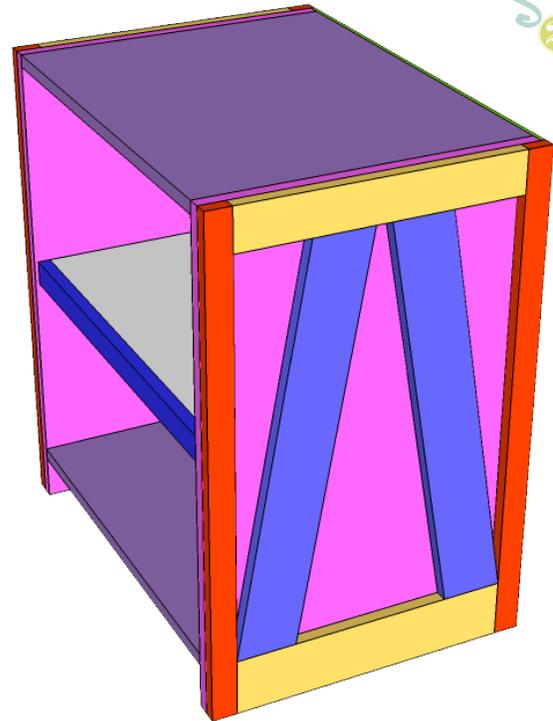


5

Drill pocket holes as indicated by the arrows in the back side of the front face frame pieces. Then assemble the front face frame with 1-1/4" pocket hole screws.



6

Nail the front face frame to the cabinet.

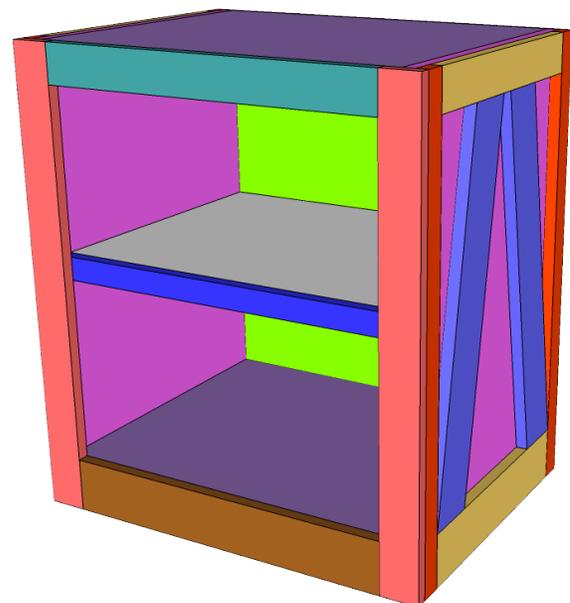




Cut and assemble the cabinet door the same way. The dimensions should result in a door that will have 1/8" clearance on all sides once installed.

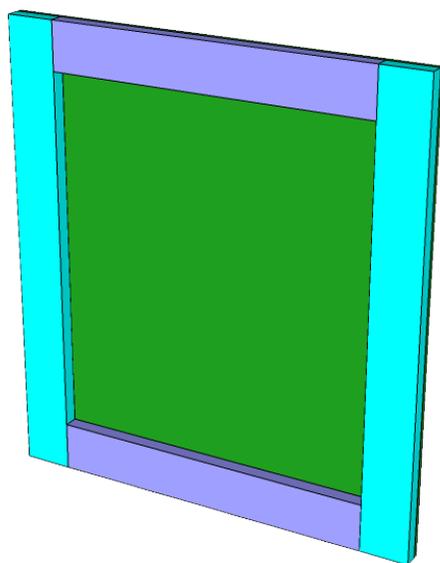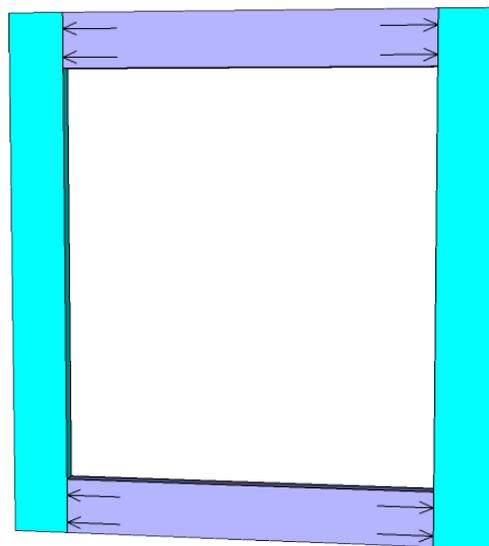

Glue and nail the door panel directly to the back of the door frame.

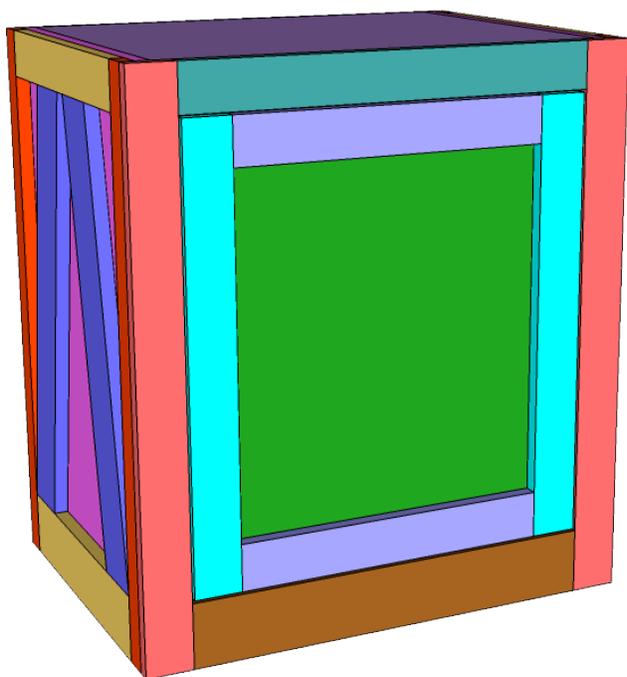

Attach the door to the cabinet with a pair of hinges.



Glue and nail down the top planks. Fill any nail holes, sand, and finish as you wish. We hope you were able to have fun building this super easy bedside table and if you did build one make sure you stop by our website and let us know! We love hearing from all of you!

