


DIY Computer Desk

Copyright © 2014 Shanty-2-Chic.com

Supply List



Item	Quantity	Description
1 x 6 x 10'	2	Pine or whitewood board
1 x 6 x 6'	1	Pine or whitewood board
2 x 4 x 8'	6	Pine or whitewood board
1-1/4" pocket hole screws	42	
2-1/2" pocket hole screws	60	
Wood glue		
Finish of choice		

Drill pocket holes as indicated by the arrows. All the pocket holes on the ends of the boards are for 2-1/2" pocket hole screws. All of the pocket holes on the long edges of the boards are for 1-1/4" pocket hole screws.

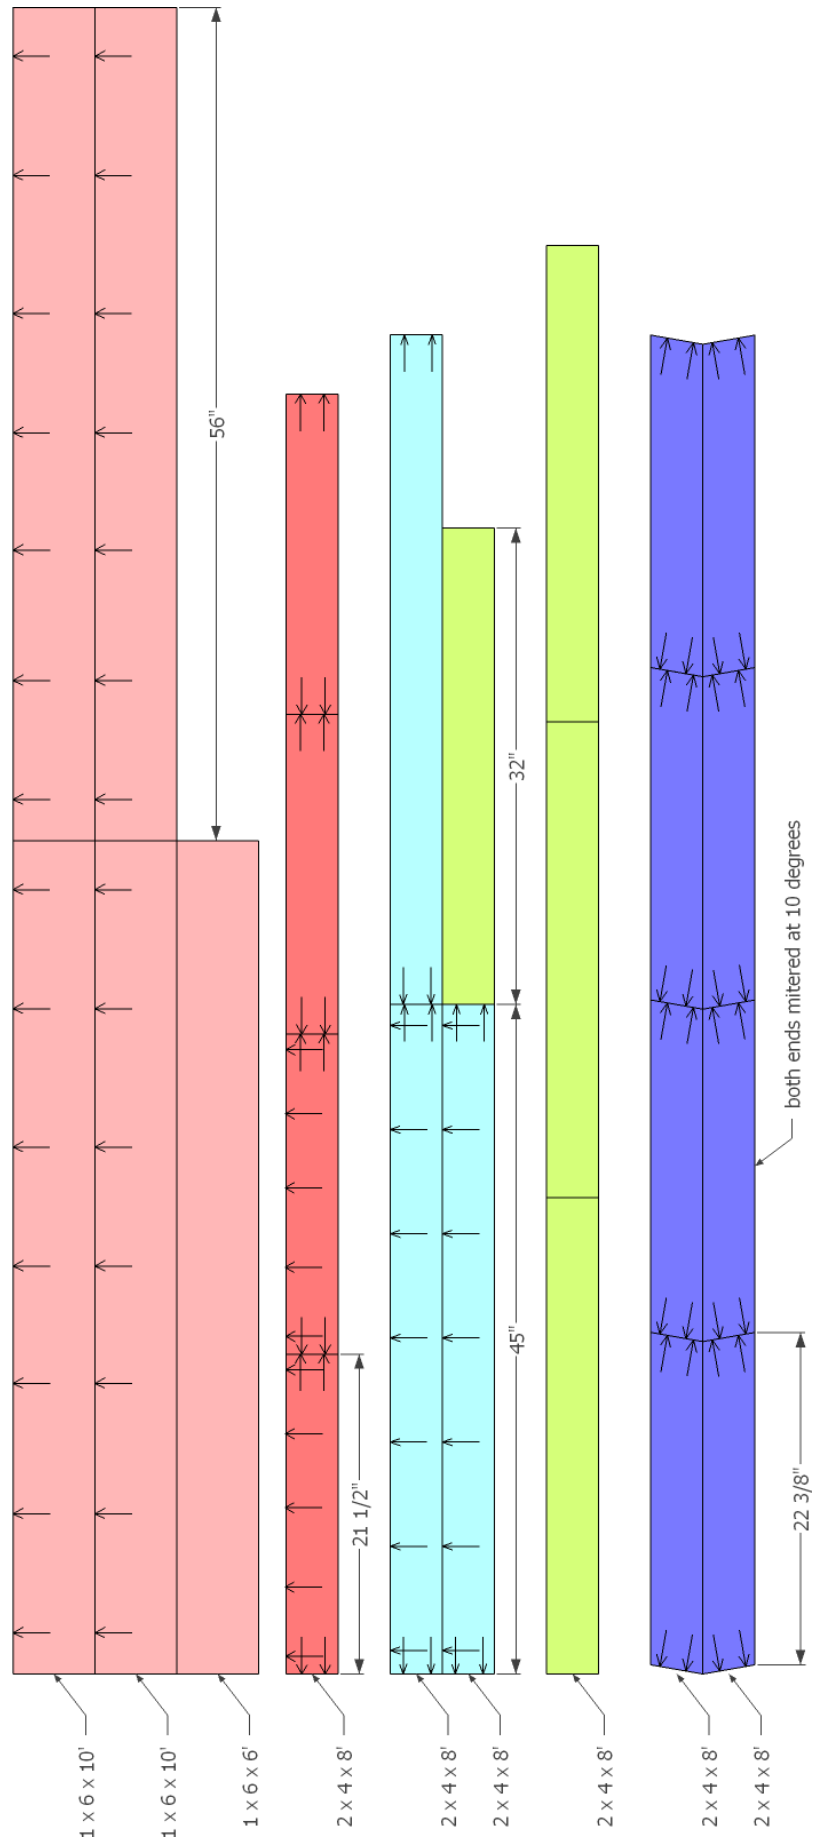

1

Make two leg assemblies as shown here. The top of the bottom horizontal board is 6-1/2" off of the ground. All of the mitered cuts are at 10 degrees for the diagonal pieces. Make sure you have the pocket holes for attaching the top later in the appropriate orientation.

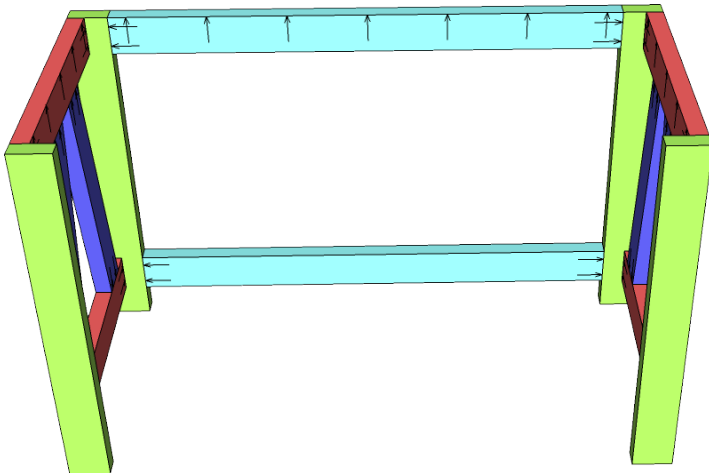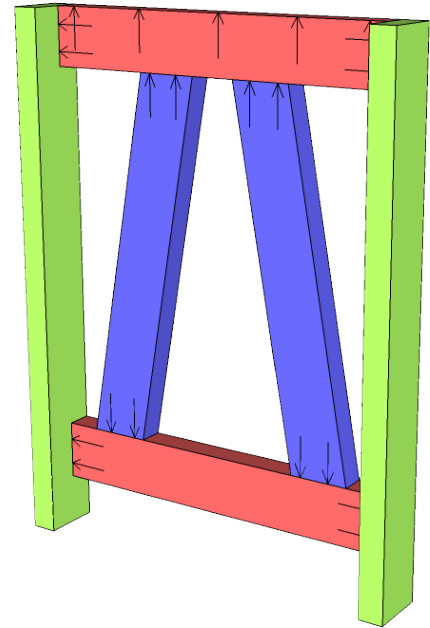


2

Connect the two leg assemblies with an upper and lower long stretcher. Make sure the top board has the pocket holes in the appropriate orientation for attaching the top later.



3

Add the diagonal bracing in the back just as you did on the side assemblies. Make sure the pocket holes for these braces are facing the back. Or, if you are going to have the back exposed you can put them on the inside. Also, add the last horizontal frame piece to the front of the desk.

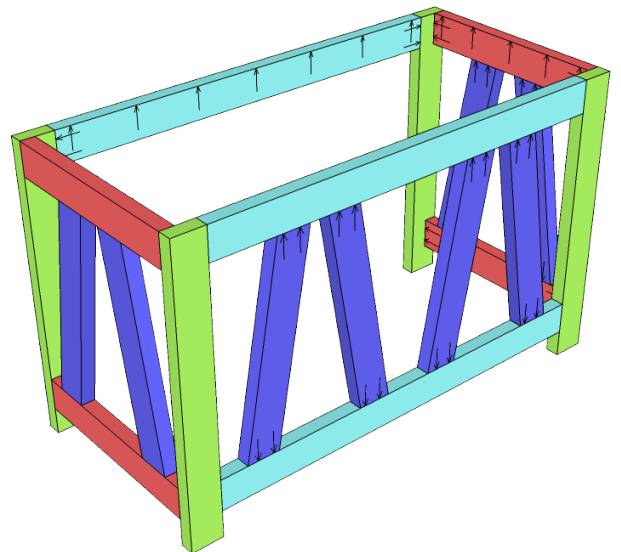

4

Assemble the top plank with glue and 1-1/4" pocket hole screws.

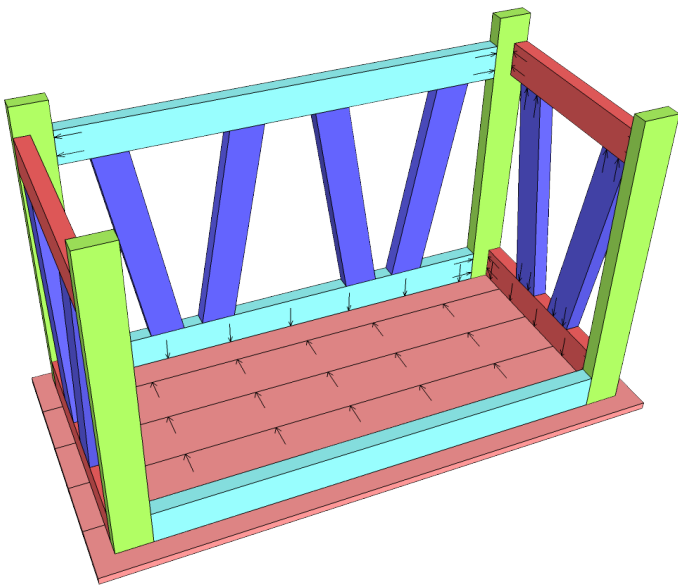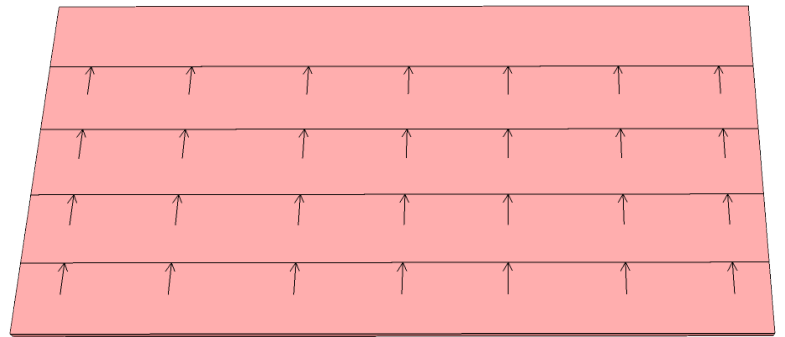

5

Lay the top on the ground with the pocket holes facing up. Flip the frame over and secure it to the top with 1-1/4" pocket hole screws.

6

Sand, finish as you desire, and most importantly personalize it! Make it your own and get creative with it. As always, stop by our website and let us know if you decide to make one of these!!!

