





## Media Wall Bookcase

Copyright © 2015 Shanty-2-Chic.com

### Supply List


Item	Quantity	Description
48" x 96" x 3/4" plywood	2	
48" x 48" x 1/4" plywood	1	
1 x 2 x 8'	6	Pine or whitewood board
1 x 4 x 8'	1	Pine or whitewood board
1-1/4" wood screws	handful	Optional
Finish nails	handful	
1-1/4" pocket hole screws	80	
Wood glue		
Finish of choice		

Drill pocket holes for 1-1/4" pocket hole screws as indicated by the arrows in the layout diagrams. be sure to check your scrap bin for material before purchasing anything. You may already have enough scrap to save yourself some money. These measurements are exact for this model. Measure and cut as you go to make sure everything lines up perfectly with your project. Read and understand the entire plan before beginning th project.

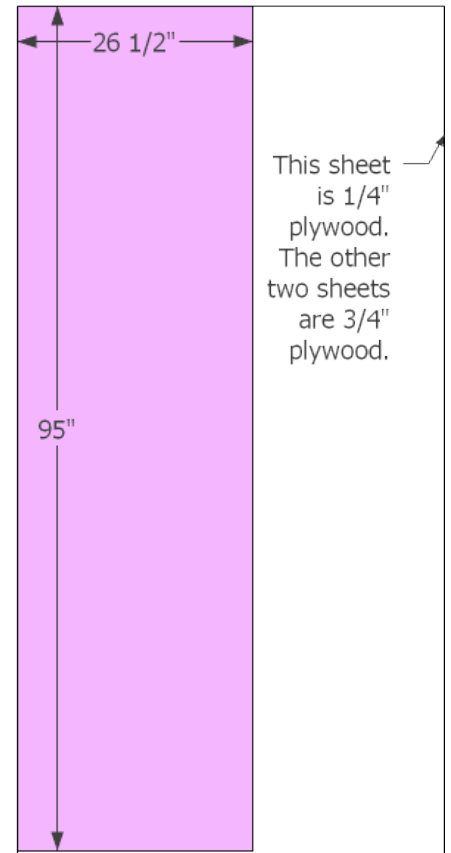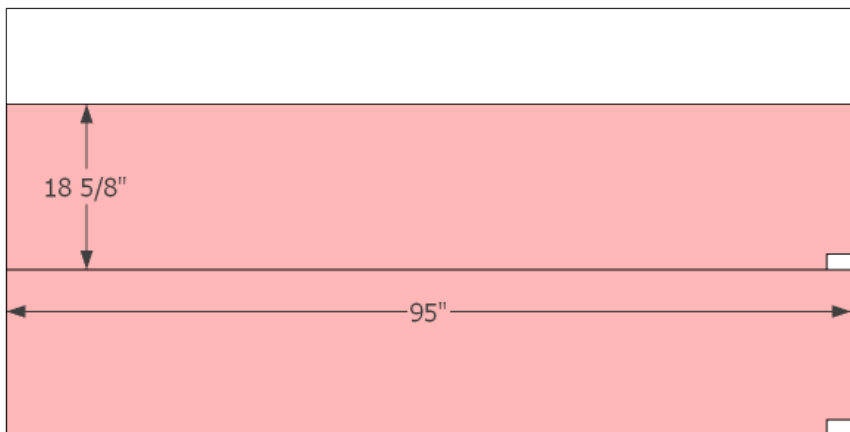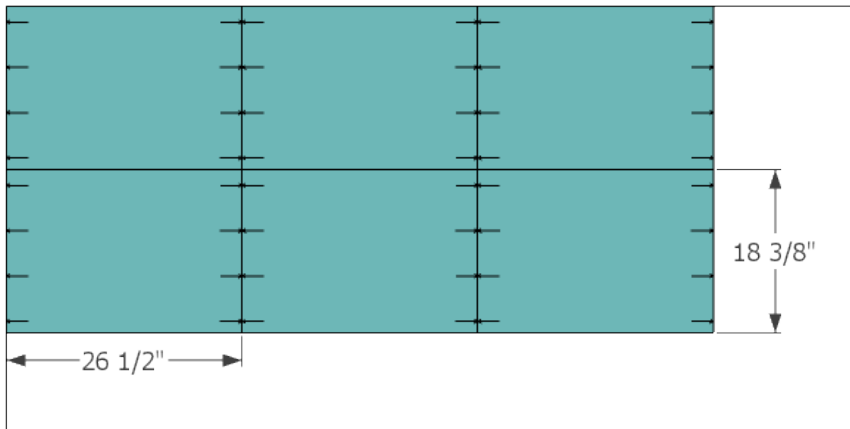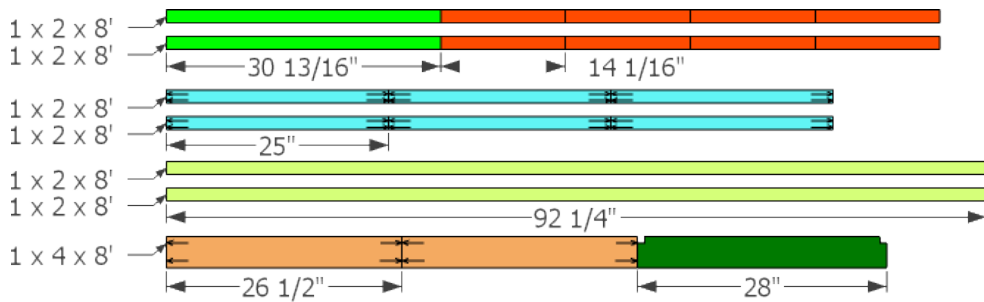

1

On the front edge of both side panels cut a 1-3/4" wide by 2-3/4" tall notch with a jigsaw and a speed square. To prevent tear-out, make sure the jigsaw blade has the teeth cutting into the outside face of the panels.


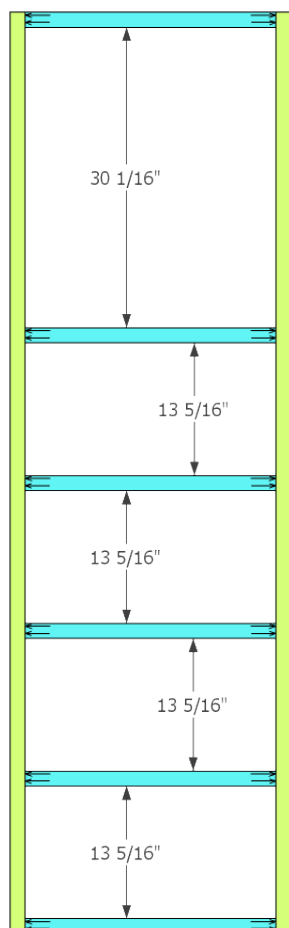


2

Assemble the front face frame with wood glue and 1-1/4" pocket hole screws.

3

Attach the shelves to the side panels with wood glue and 1-1/4" pocket hole screws with the front edge facing down. The front edges will be flush. The back edge of the shelves are 1/4" inset from the back of the sides. The top of each shelf should be positioned to line up with the top of each corresponding board in the front face frame.

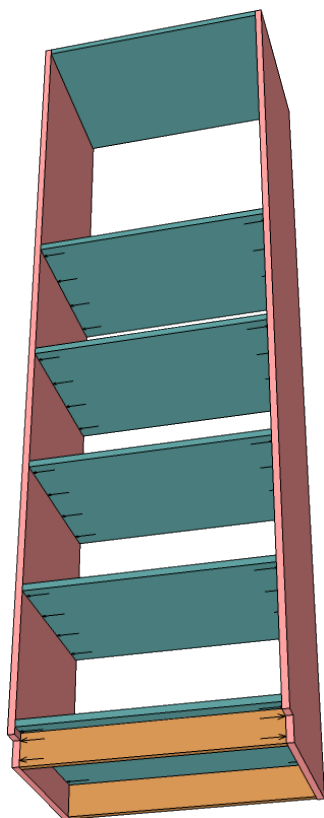
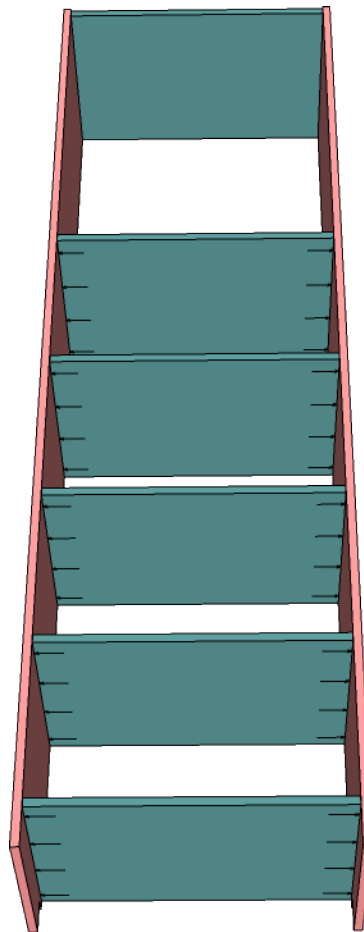


4

Attach the front and back lower braces with wood glue and 1-1/4" pocket hole screws. Use finish nails to secure the lower shelf to the braces.

5

Use a jigsaw to notch out the necessary material to add a 1 x 4 trim board to the front lower brace. Use wood glue and either finish nails or 1-1/4" screws from the inside to secure it.

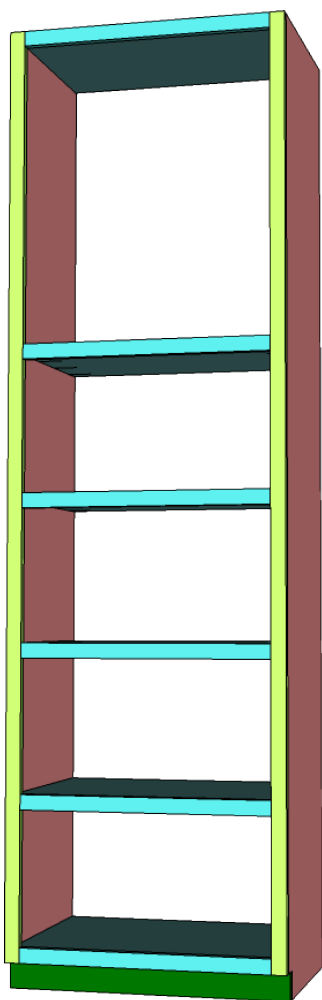
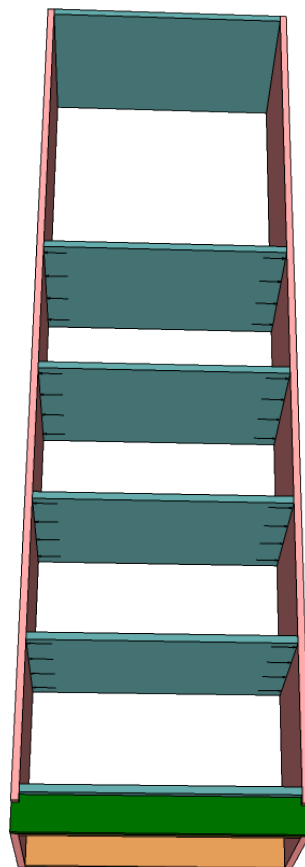


6

Attach the front face frame to the rest of the assembly with wood glue and finish nails.



Attach the rear 1 x 2 back panel blocks to the inside of each compartment with them inset 1/4" from the back of the side panels. Use wood glue and either finish nails or 1-1/4" wood screws.

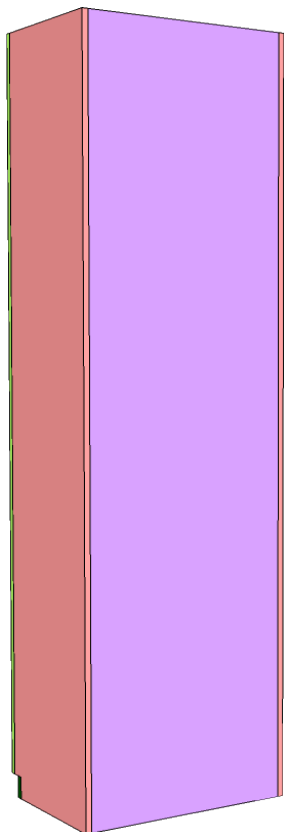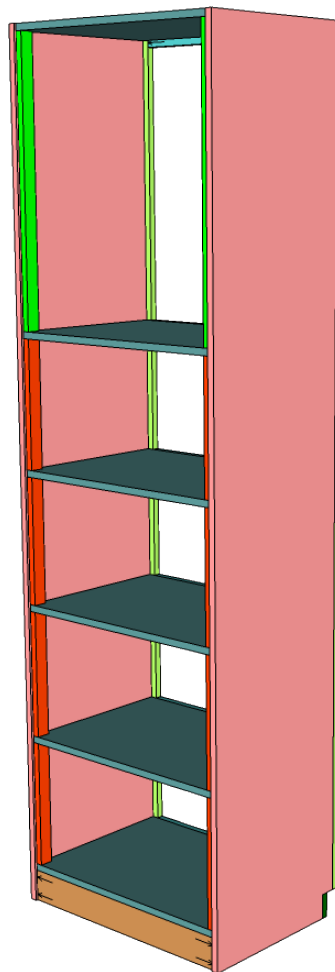

Secure the pack panel with wood glue and finish nails. Sand and finish as you wish! If you decide to make one of these super easy bookcases be sure to stop by our website and show it off in the Submit Your Project section!