



©2016 WWW.SHANTY-2-CHIC.COM



MODERN FARM TABLE



SUPPLY LIST


Item	Quantity	Description
2x6x8	12	pine or whitewood (ripped to create 2x5x8's)
2 1/2" pocket hole screws		
2 1/2" wood screws	12	
wood glue		

Remember!



Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!



CUT LIST

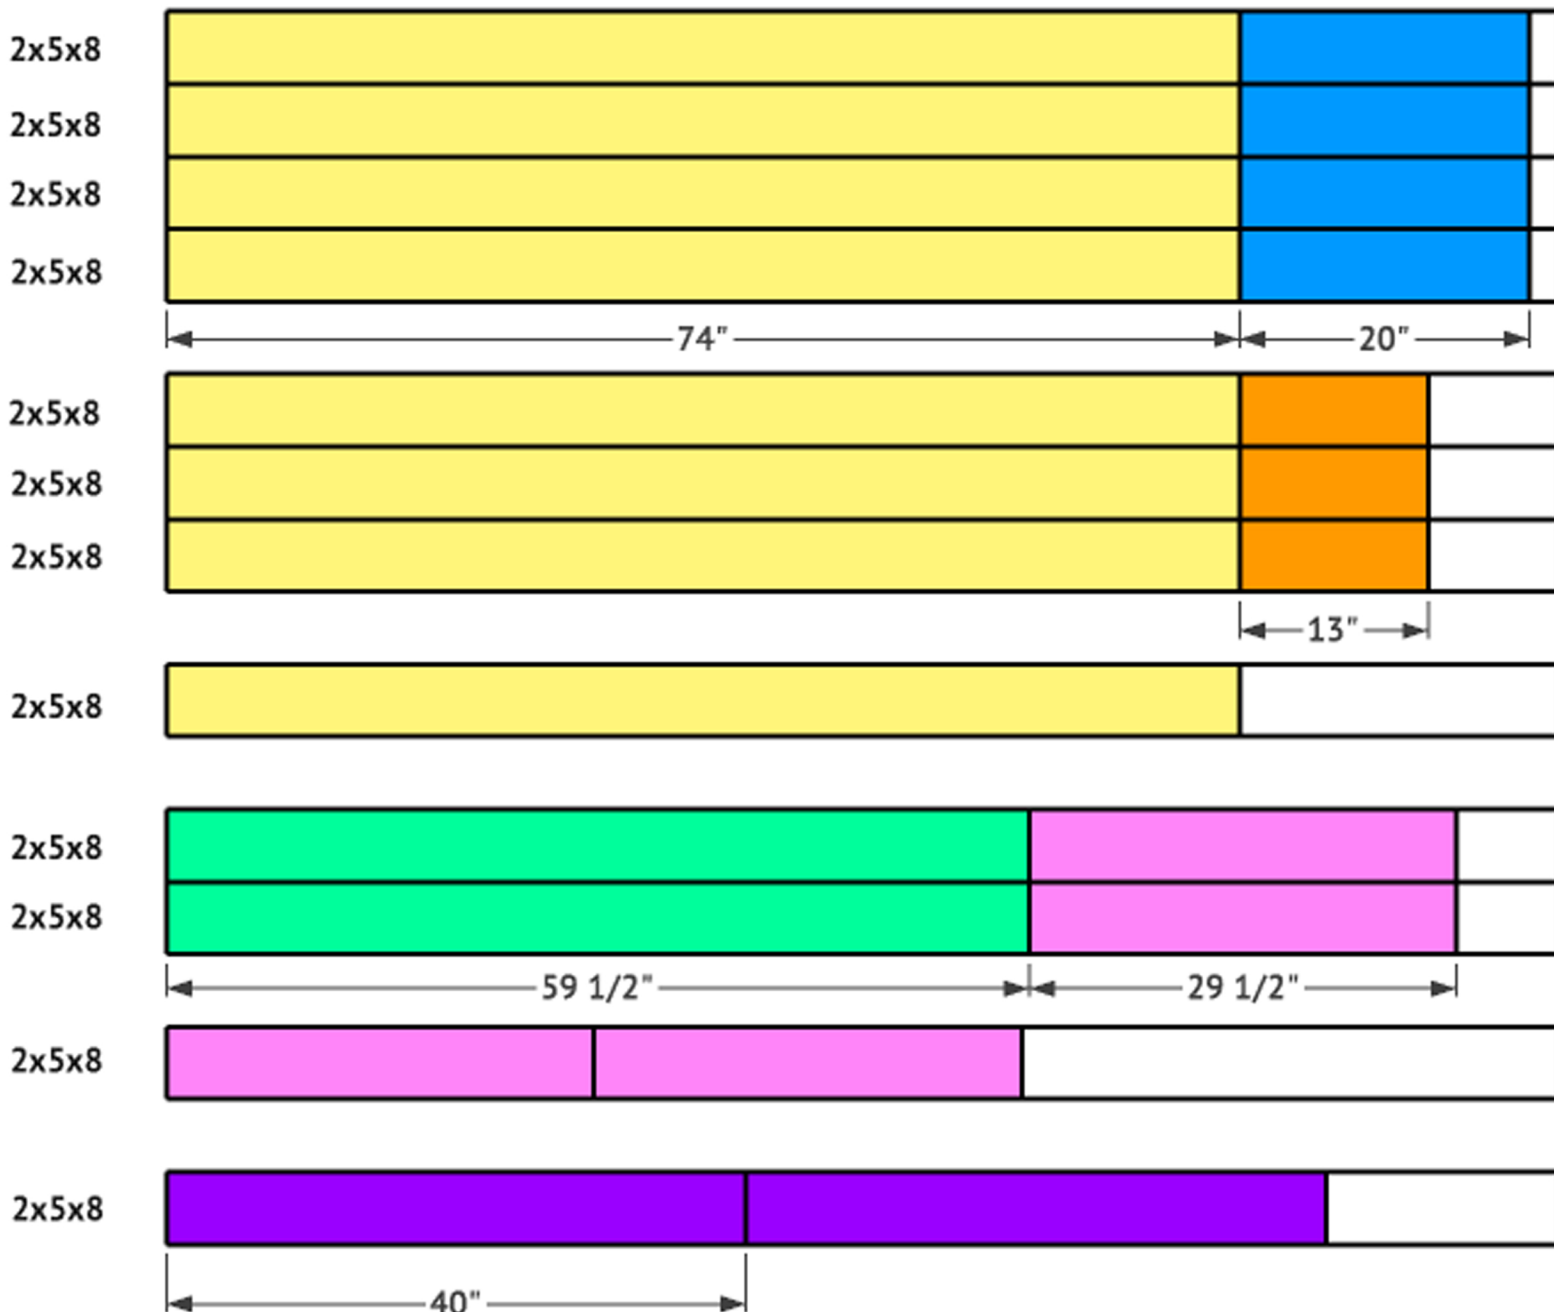



Cut table top planks and drill 1 1/2"
pocket hole screws in 7 of the planks. Then,
attach them together with 2 1/2"
pocket hole screws
and wood glue.

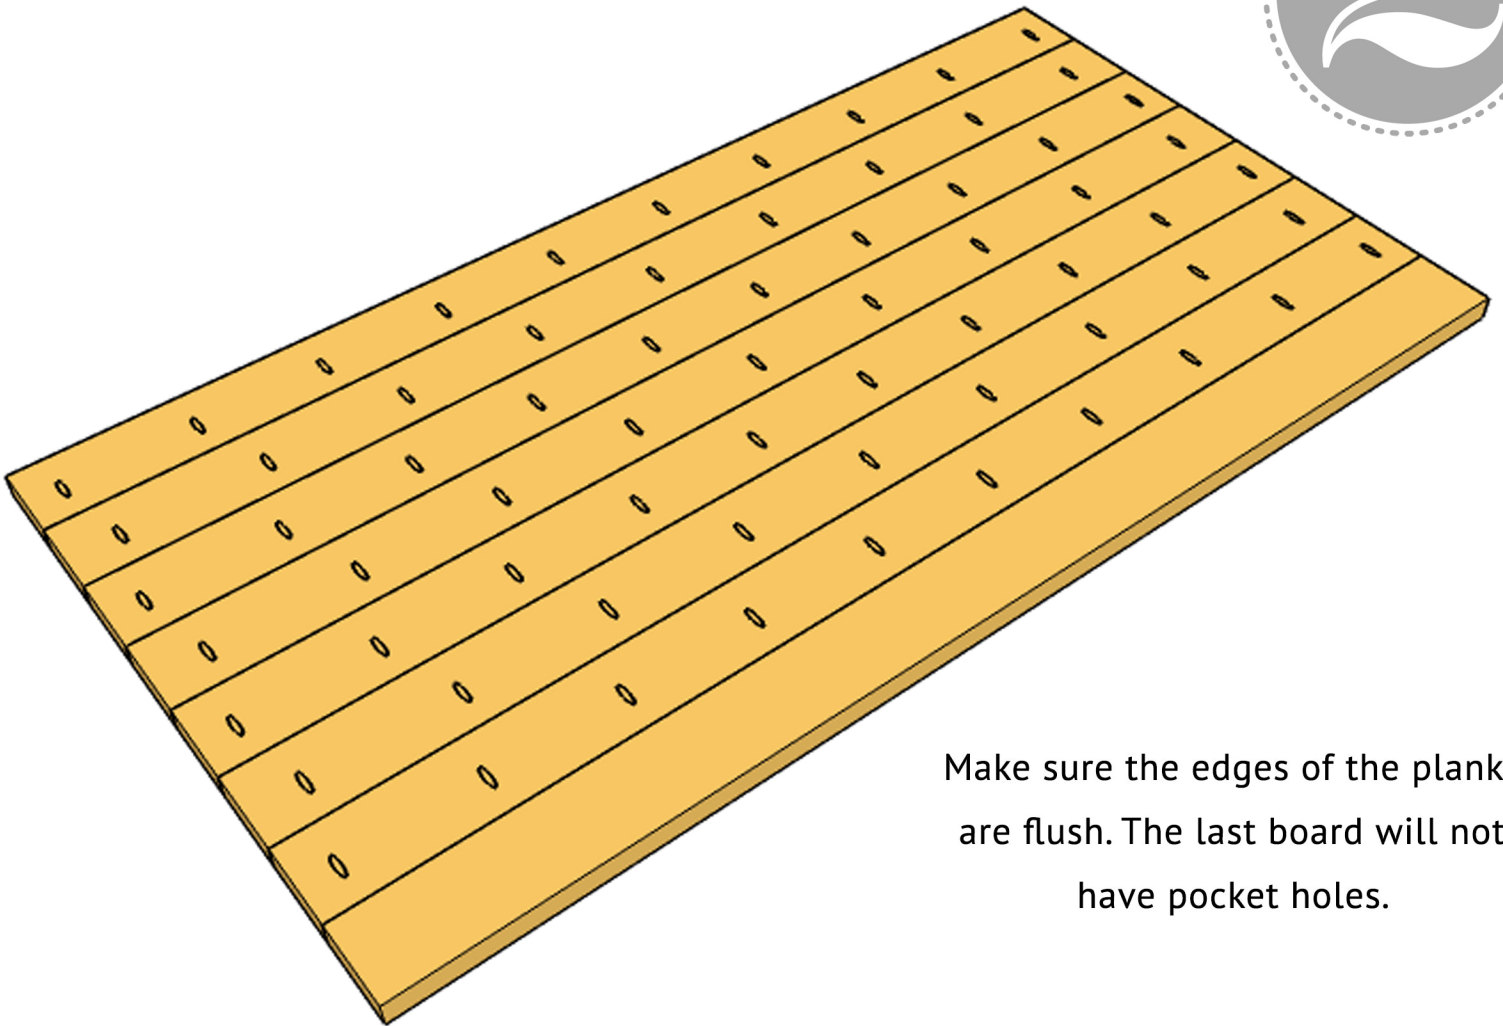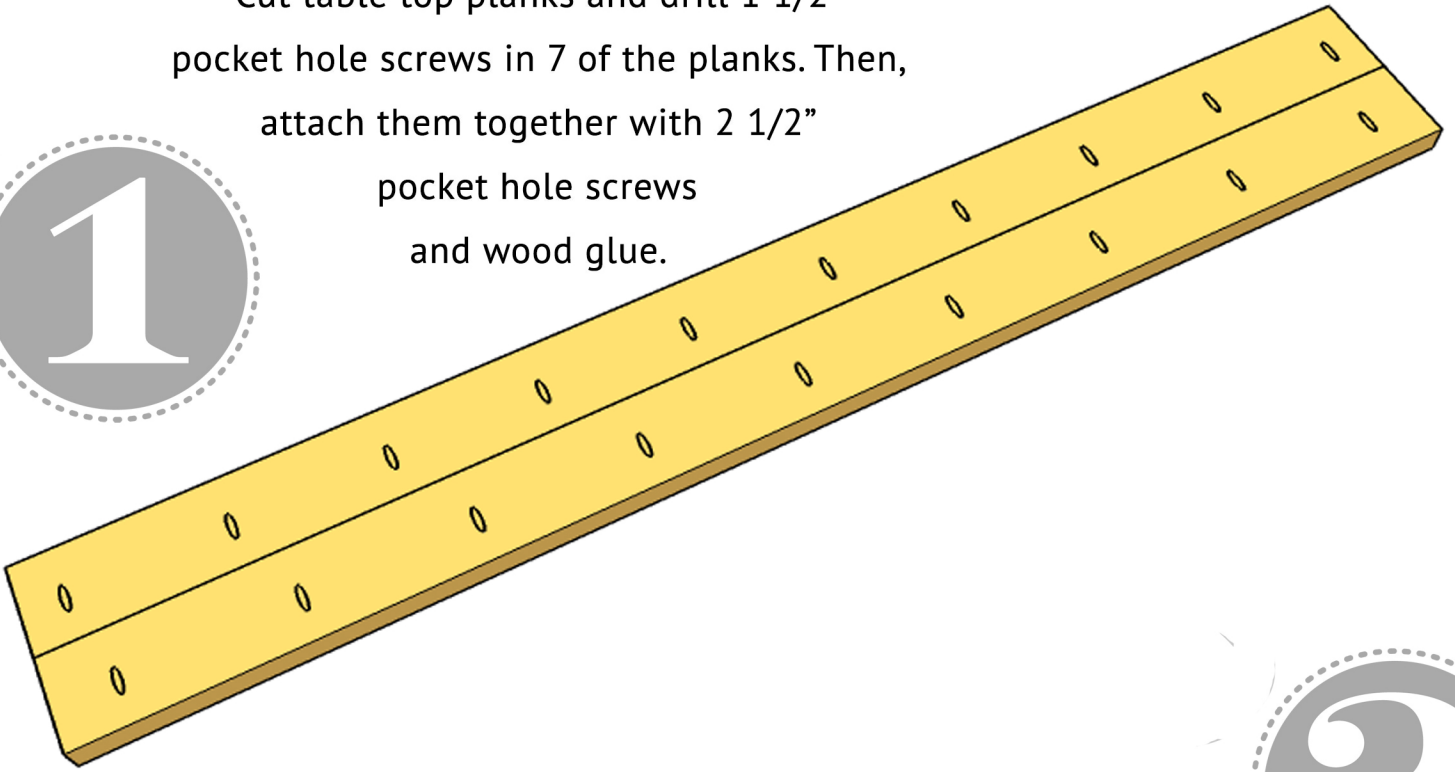

Make sure the edges of the planks
are flush. The last board will not
have pocket holes.

Now, measure and cut the breadboard pieces to fit.


Drill 1 1/2" pocket holes on each bread board and attach them to the ends of the table top planks with 2 1/2" pocket hole screws and wood glue.

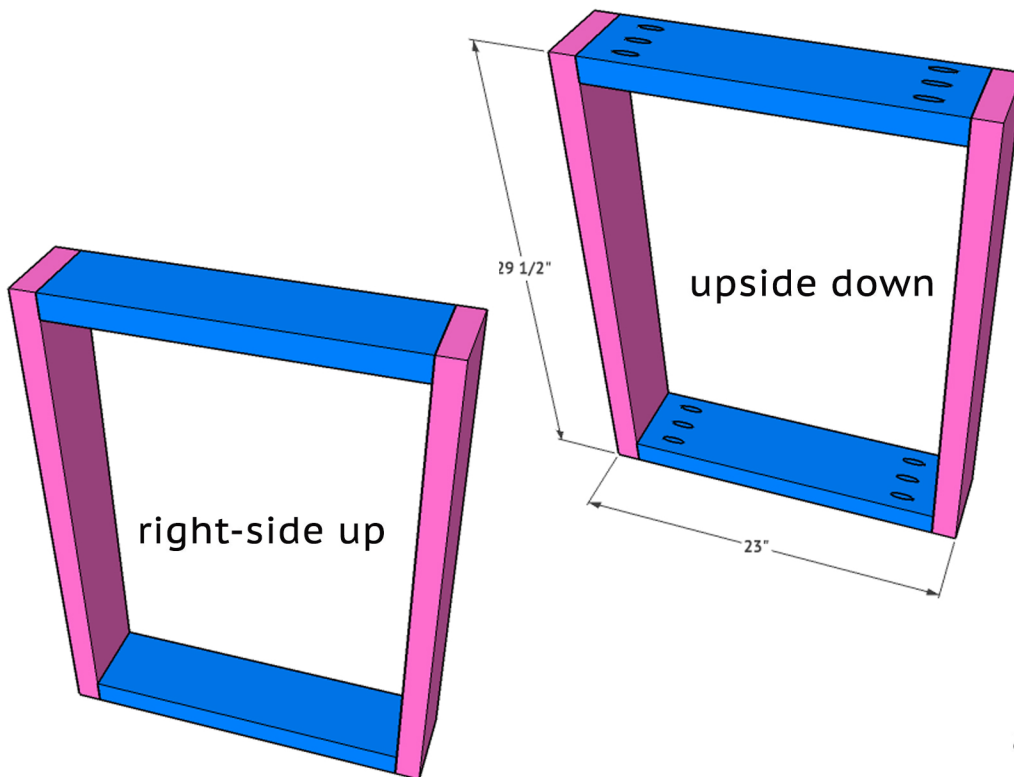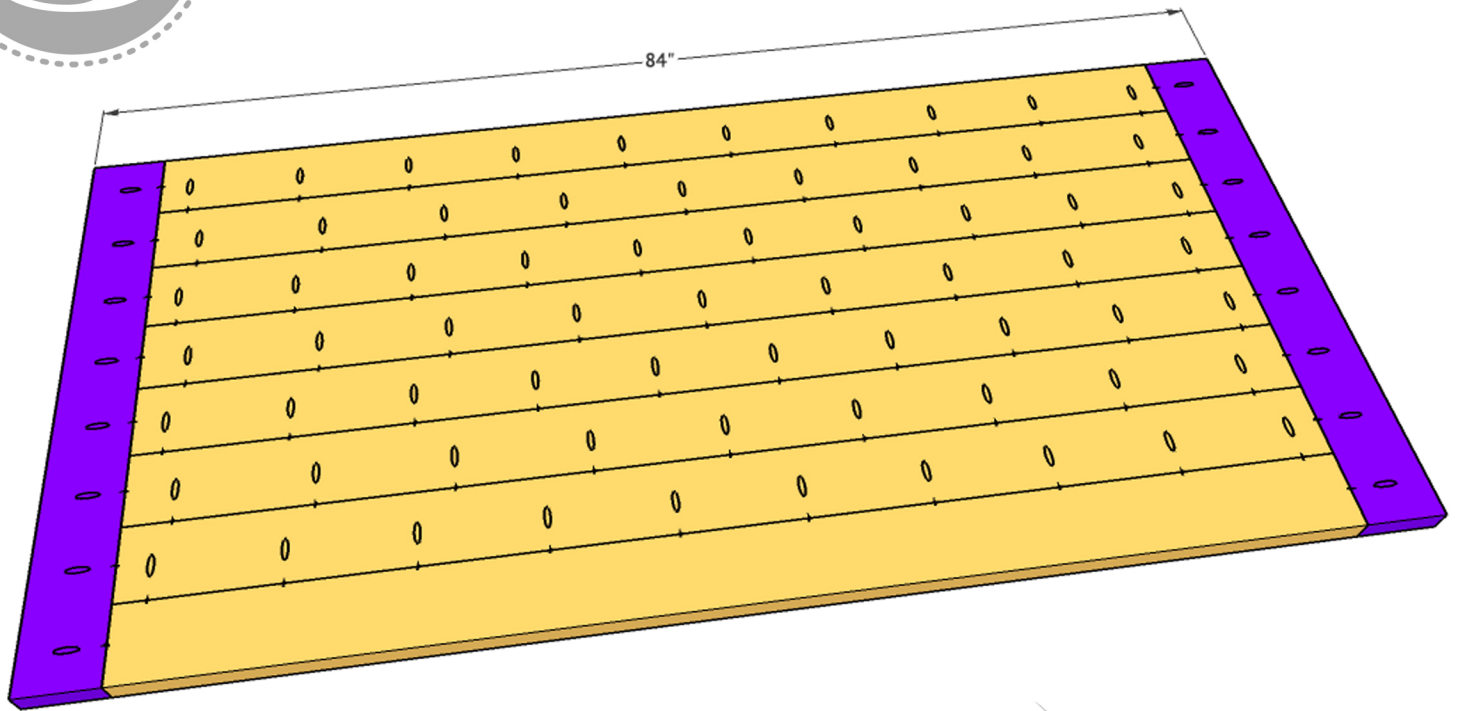


Cut the pieces for each leg. Drill 1 1/2" pocket holes into both ends of the short pieces. Then attach them to the long pieces with 2 1/2" pocket hole screws and wood glue. Pocket holes should face down.

5

Cut the runners, drill 1 1/2" pocket holes into each end and attach them to the legs with 2 1/2" pocket hole screws and wood glue. Make sure that all of the pocket holes are facing the same way (as noted).

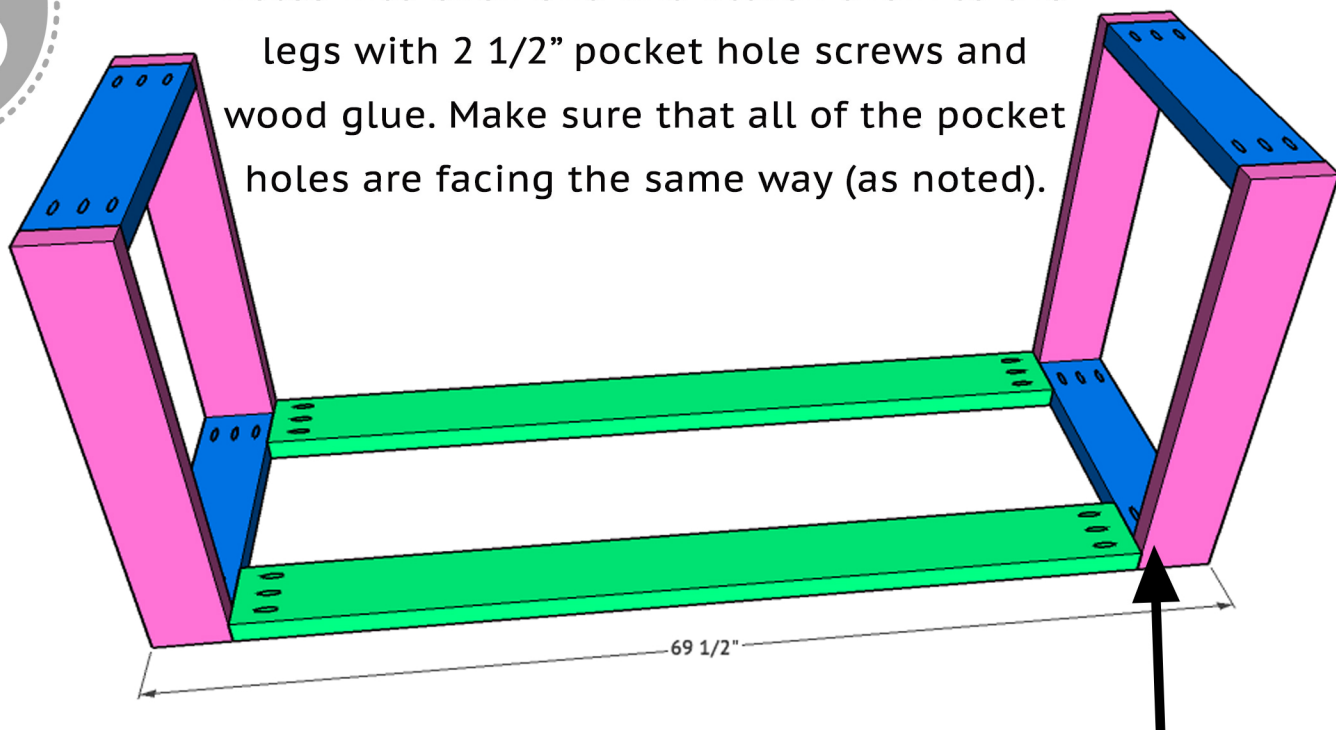



The outside of the runners will be flush with the outside edge of the legs.

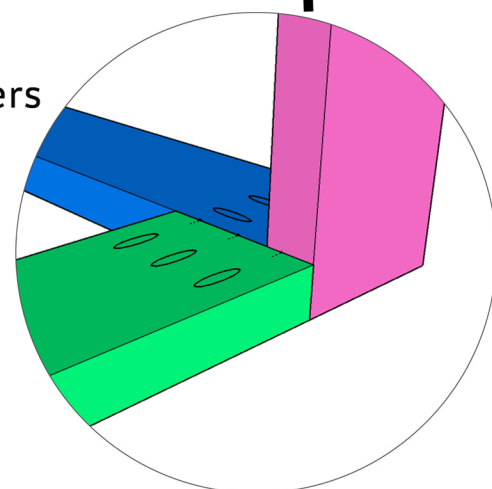



6

Cut the cross pieces to fit between the runners. Drill 1 1/2" pocket holes in each end and attach them to the runners with 2 1/2" pocket holes and wood glue.

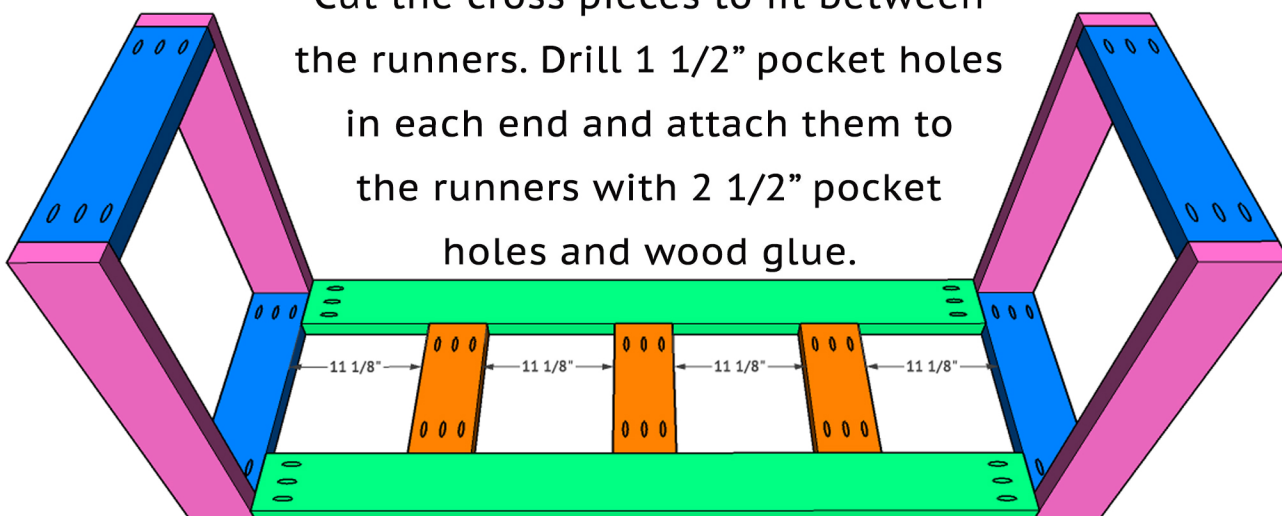

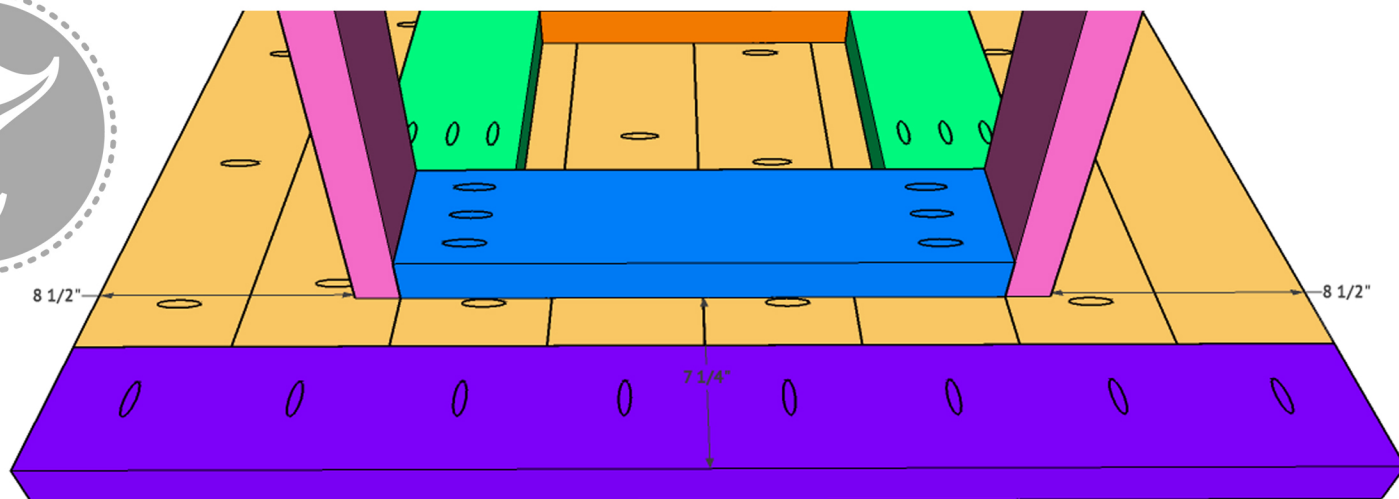

Now, center the table base on the bottom of the table top. Secure the base to the top with 2 1/2" wood screws. Do not use wood glue here.

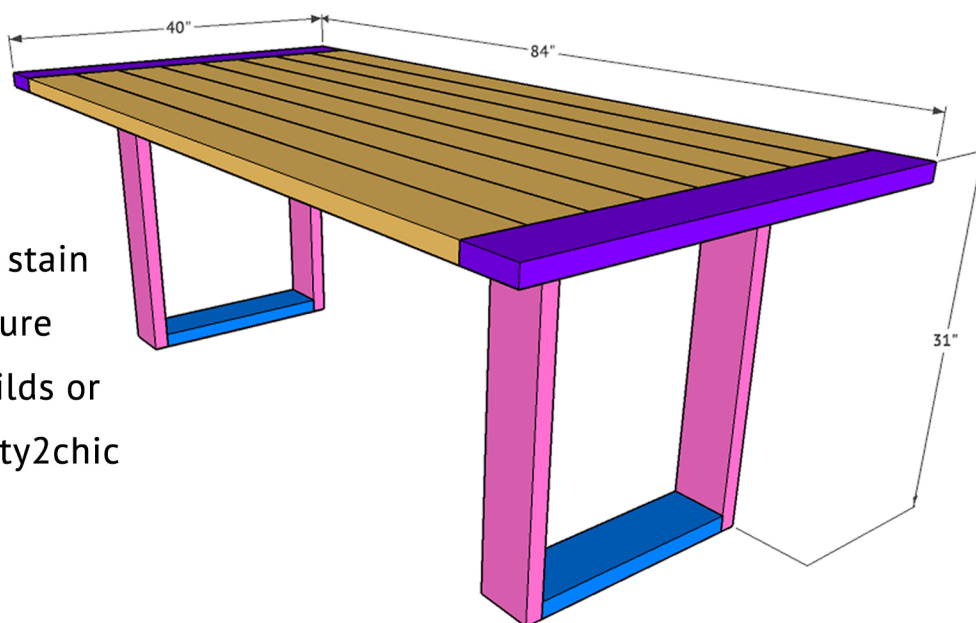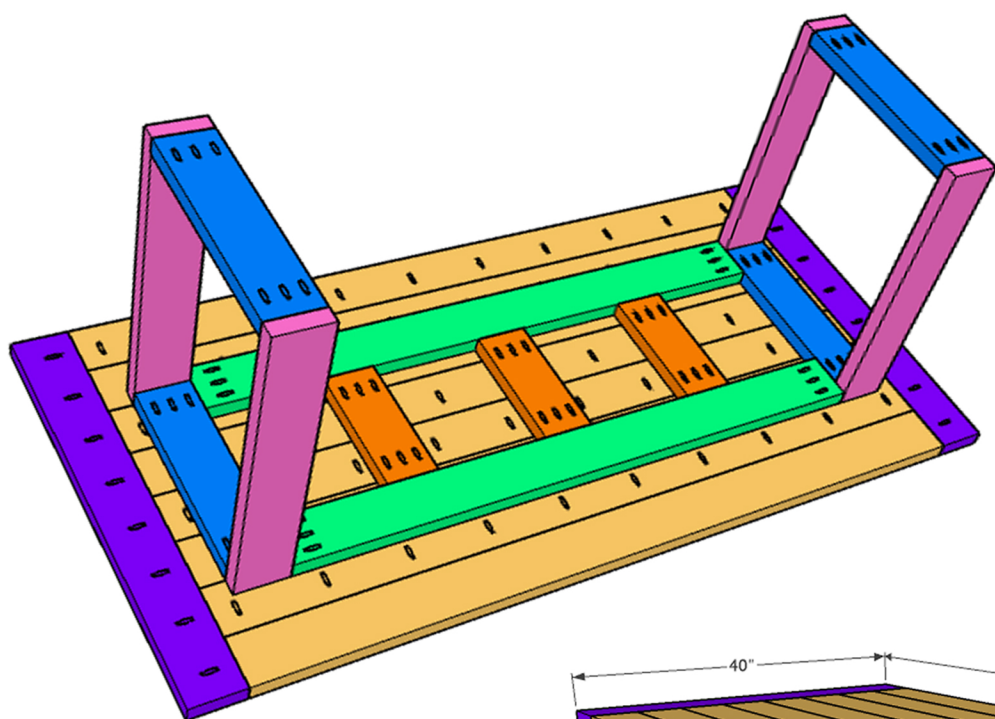

All finished! Now you can paint or stain it to get the look you want. Be sure to send us pictures of your new builds or share them on social and use #shanty2chic so we can share them too!