




©2016 WWW.SHANTY-2-CHIC.COM



DIAGONAL BRACE CONSOLE

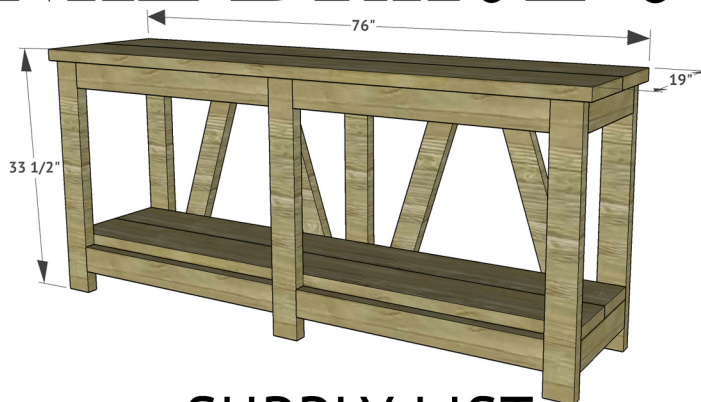

SUPPLY LIST






Item	Quantity	Description
2x4x8	7	pine or whitewood
2x8x8	2	pine or whitewood
2x10x8	2	pine or whitewood
2.5" Pocket Hole Screws		
Wood Glue		

Remember!


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!




CUT LIST

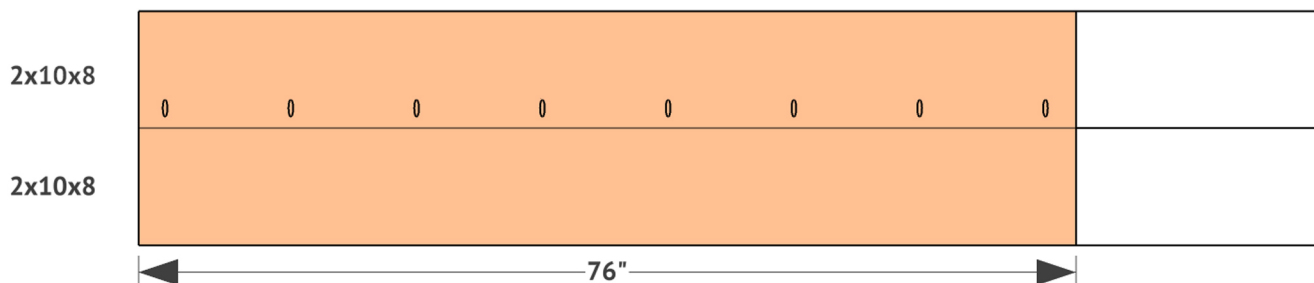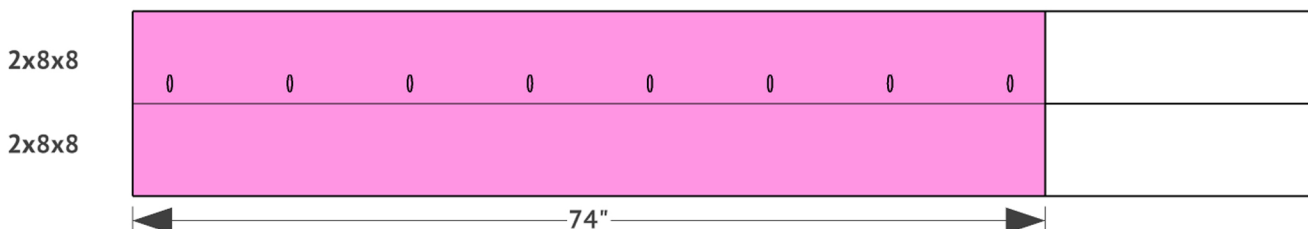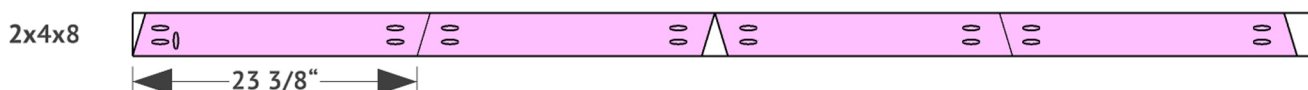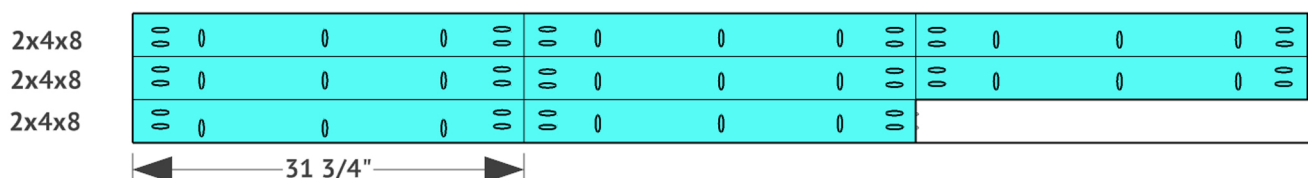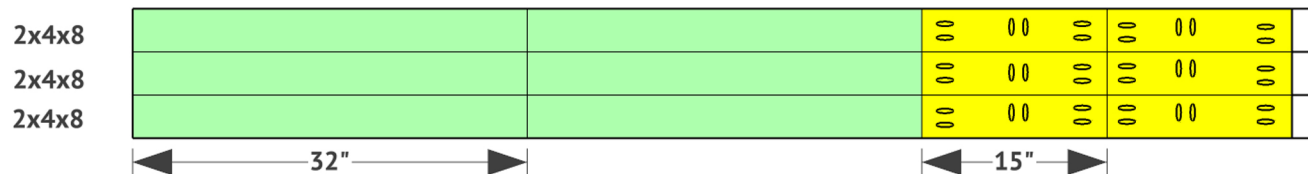

1

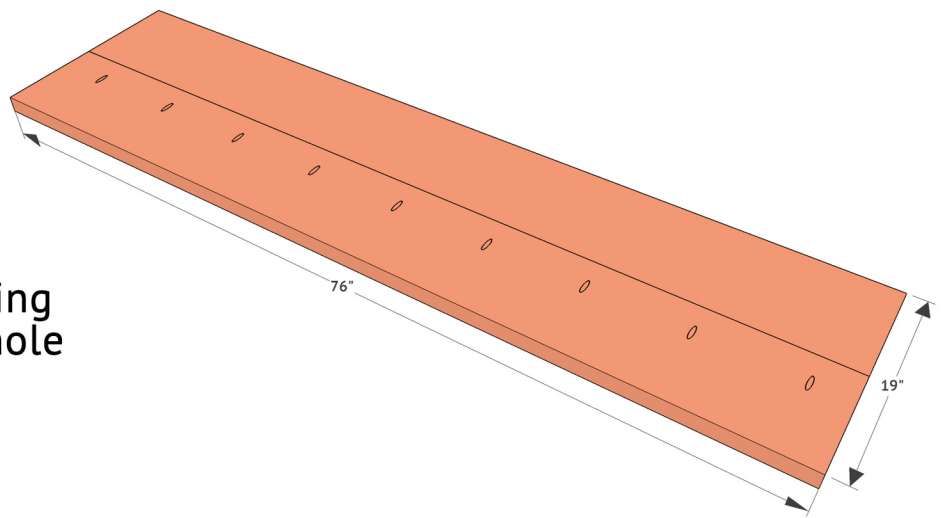


Build the table top first!
Attach both 2x10 pieces using
wood glue and 2.5" pocket hole
screws.

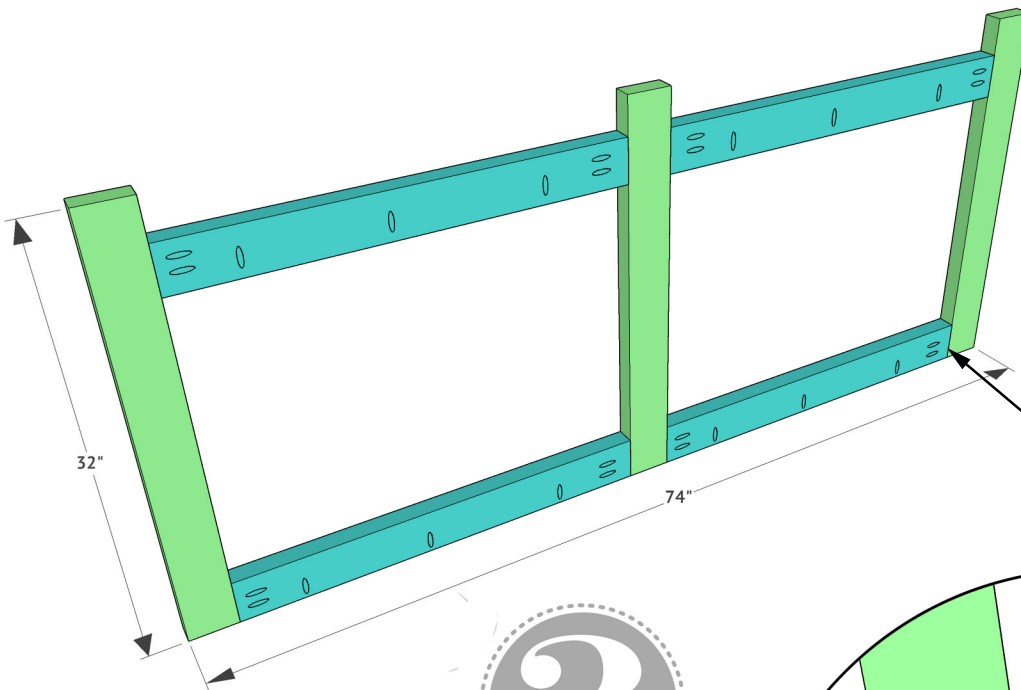


2

Now build the front and back
of the console. These will be
two identical pieces just like the one
above. Attach everything using wood
glue and 2.5" pocket hole screws.

The bottom boards will be attached
3" from the bottom of the leg pieces.

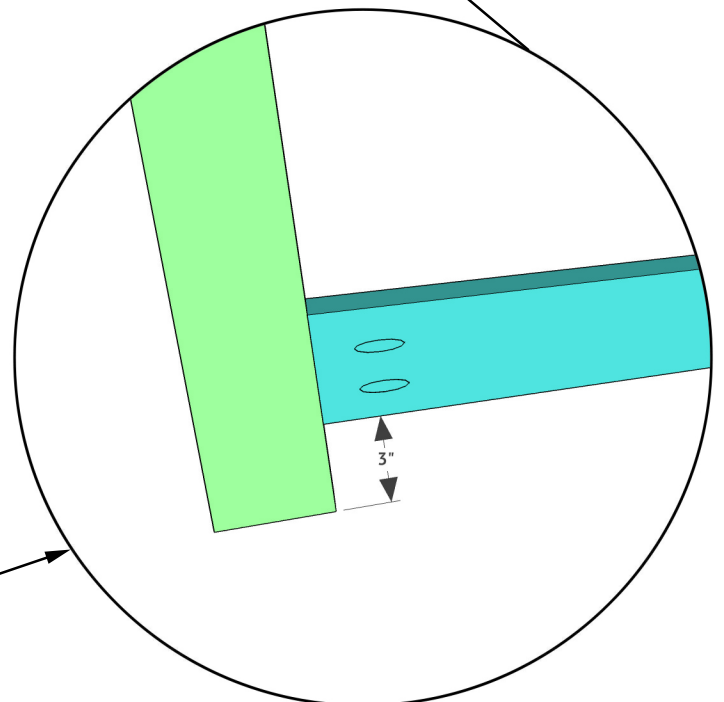


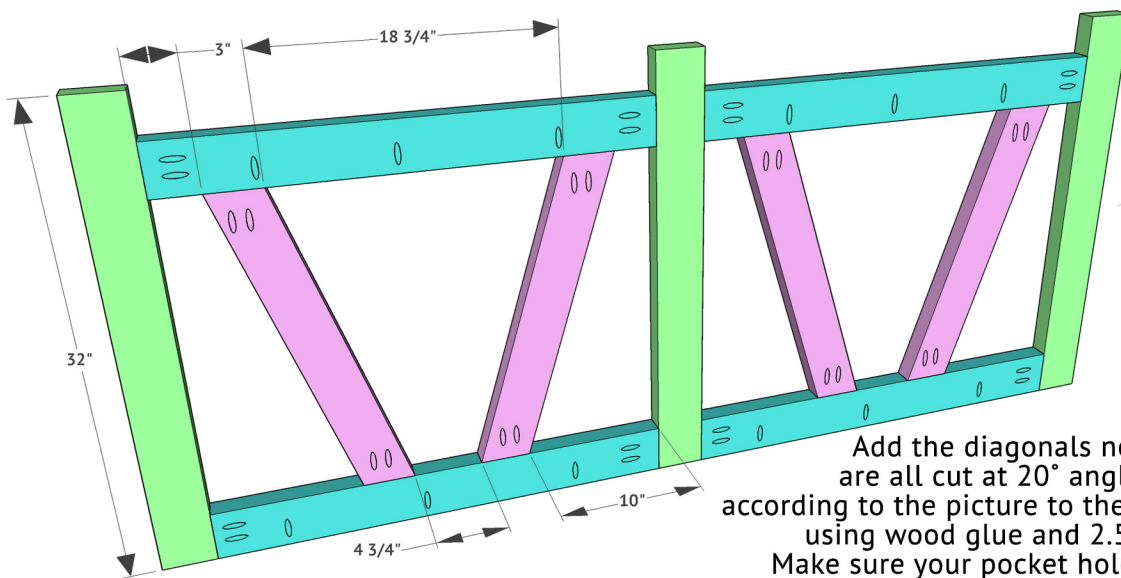


3

Add the diagonals next. These boards are all cut at 20° angles. Position them according to the picture to the left. Attach all your pieces using wood glue and 2.5" pocket hole screws. Make sure your pocket holes face the same way as the back frame you are attaching them to. These will all be on the back of the table and hidden.

4


Attach the small aprons to the front of the back brace. The pocket holes on the outside aprons need to face in, and the middle boards can face either way. Attach these with wood glue and 2.5" pocket hole screws. The bottom small aprons will also start 3" from the ground.

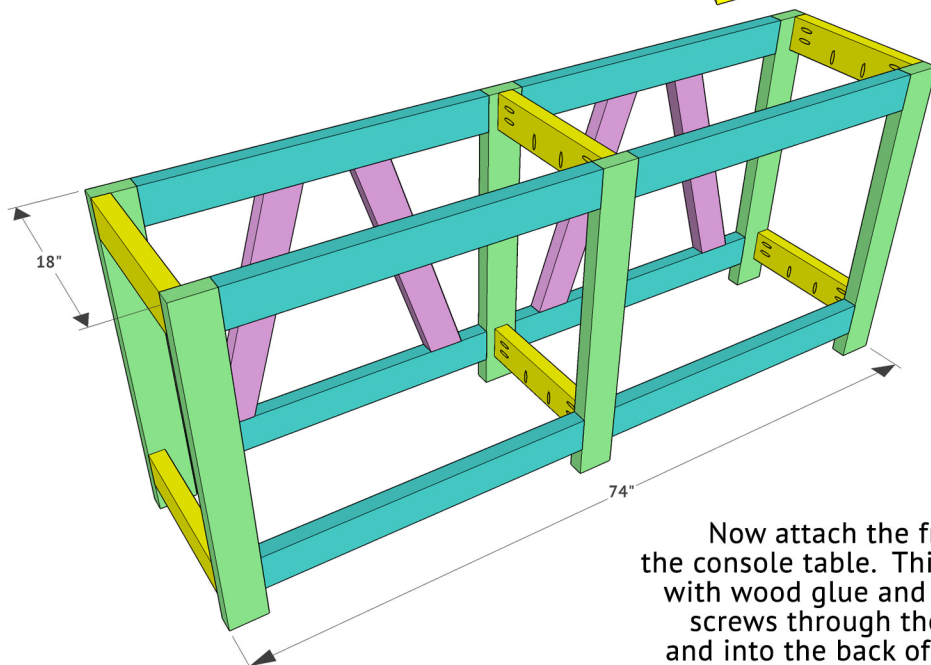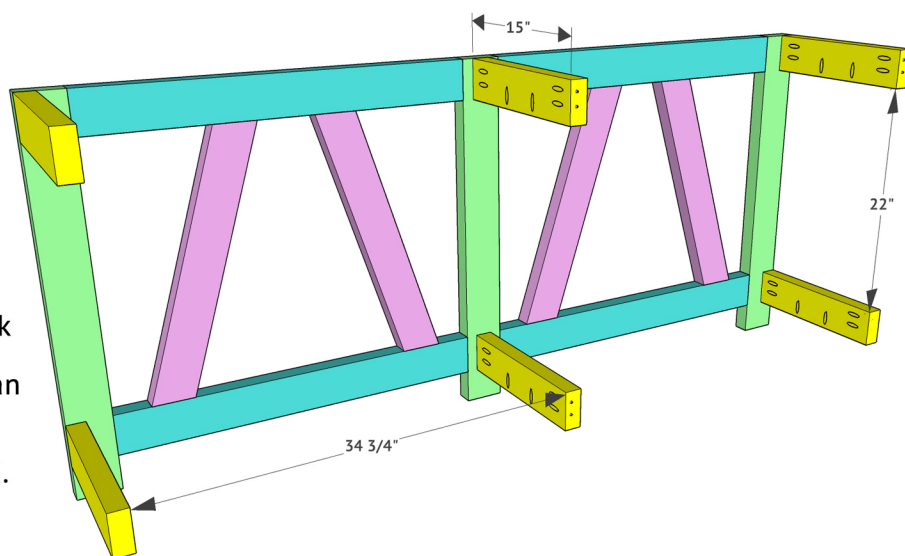


5

Now attach the front frame of the console table. This will be attached with wood glue and 2.5" pocket hole screws through the small aprons and into the back of the front frame.

6

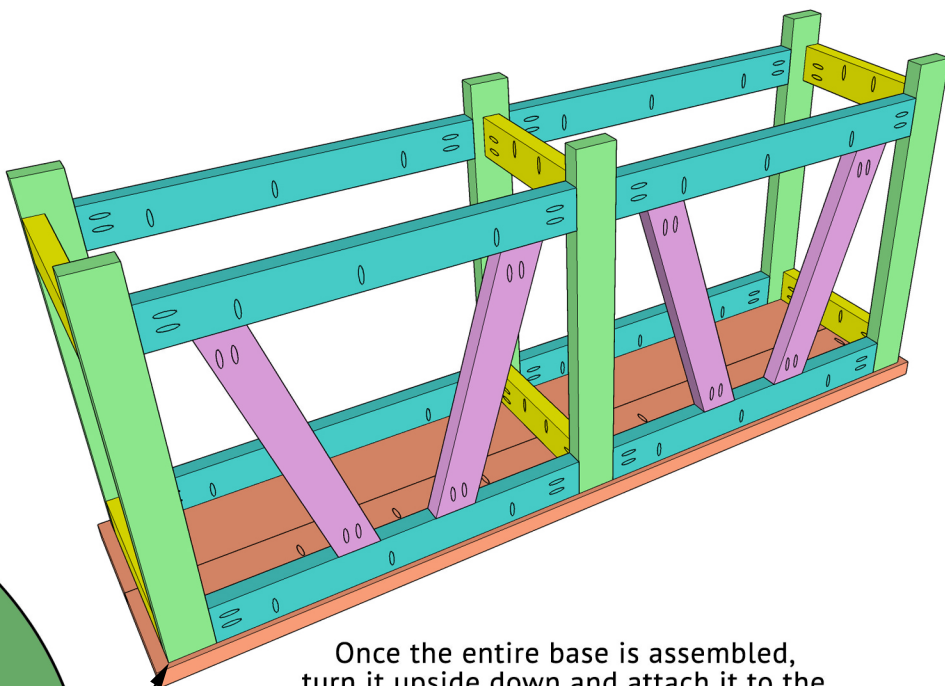



Once the entire base is assembled, turn it upside down and attach it to the top you built in step 1. You can see that you will position the base 1" from the side of the top and 1/2" from both the front and back of the top. Use wood glue and 2.5" pocket screws through the pocket holes made in the top aprons and into the bottom of the planked top.

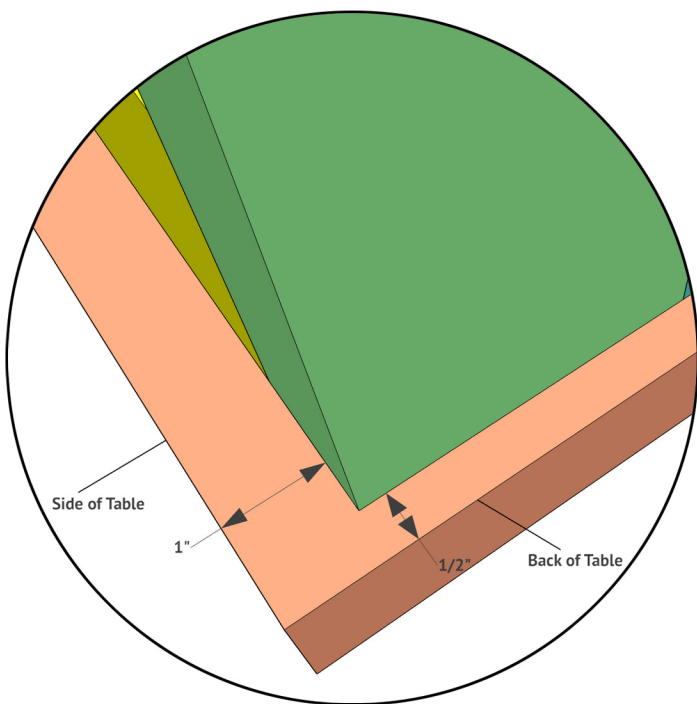


Final step is adding you bottom shelf boards. Attach both boards together using a line of wood glue and 2.5" pocket hole screws.

7

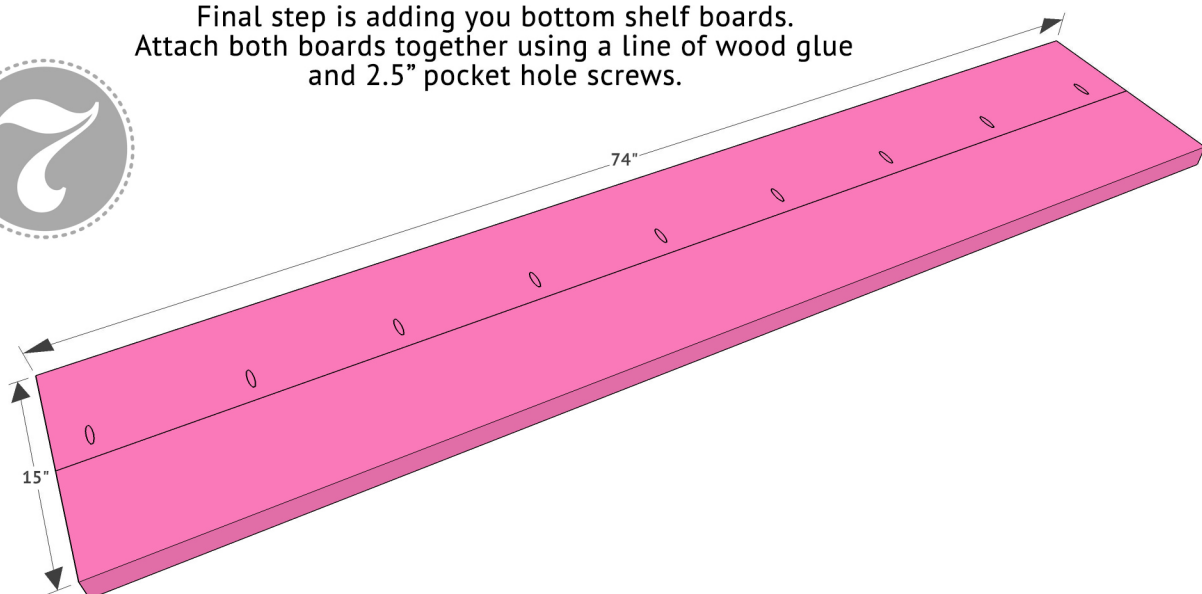

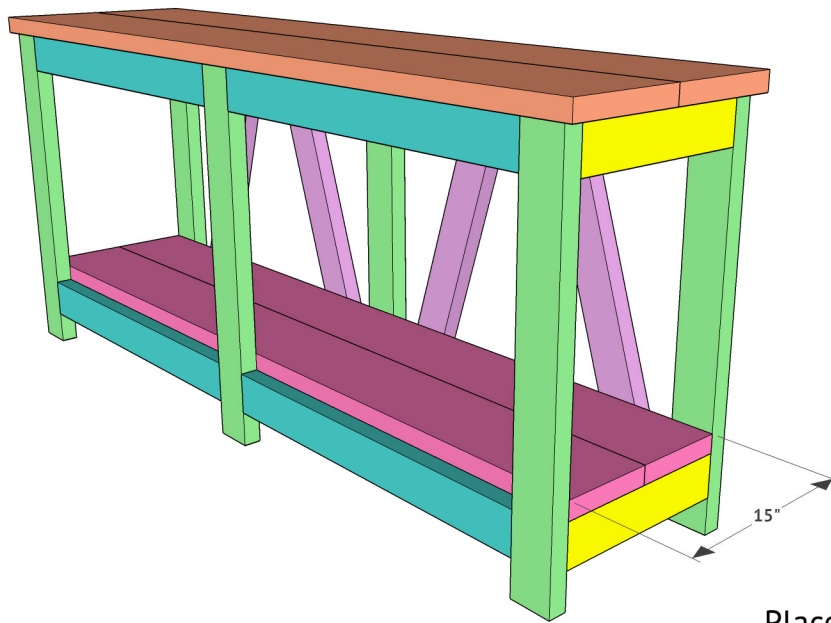

Place the shelf on the bottom aprons, and attach them using wood glue and 2.5" pocket hole screws. It helps to lay the table on it's back or side to attach these boards.

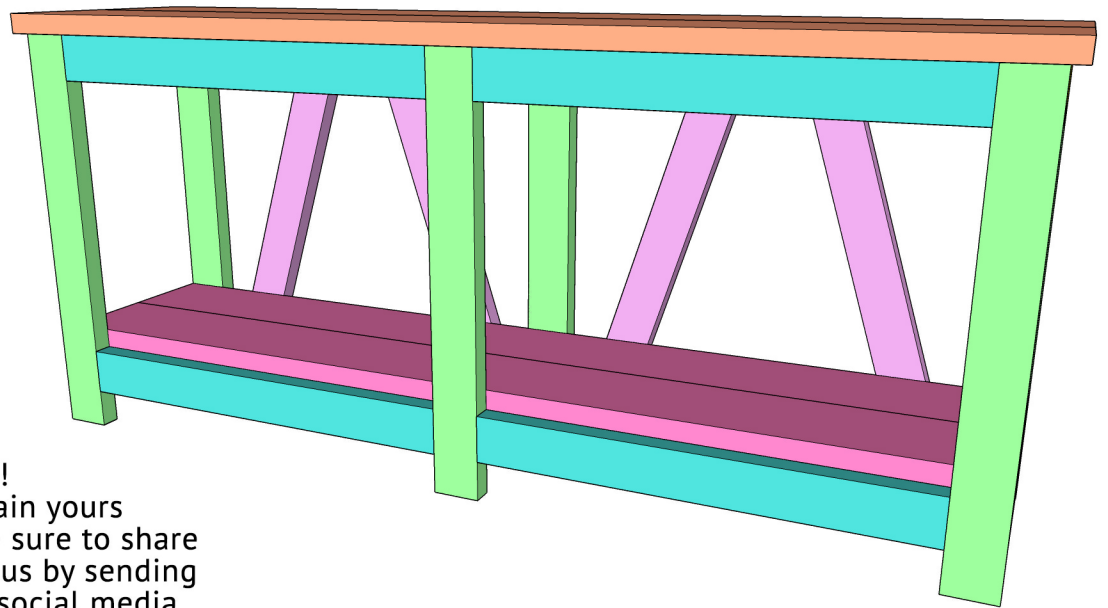

All finished!
You can paint or stain yours now to fit your style! Be sure to share your finished table with us by sending us pictures, or post on social media and use #shanty2chic so we can share it!