




©2016 WWW.SHANTY-2-CHIC.COM



MODERN FARMHOUSE COFFEE TABLE

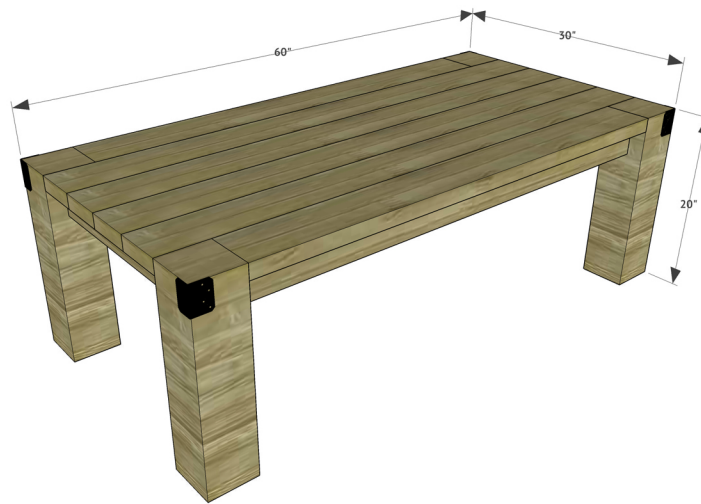

SUPPLY LIST

| Item | Quantity | Description |
|---------------------------|----------|-------------|
| 2x4x8 | 3 | Pine |
| 2x6x8 | 6 | Pine |
| 5x5 Osborne Legs | 4 | Pine |
| 2 1/2" pocket hole screws | | |
| wood glue | | |
| decorative metal pieces | | |

Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!




CUT LIST




Cut the long planks, drill 1 1/2" pocket holes and attach them together with 2 1/2" pocket hole screws.

1

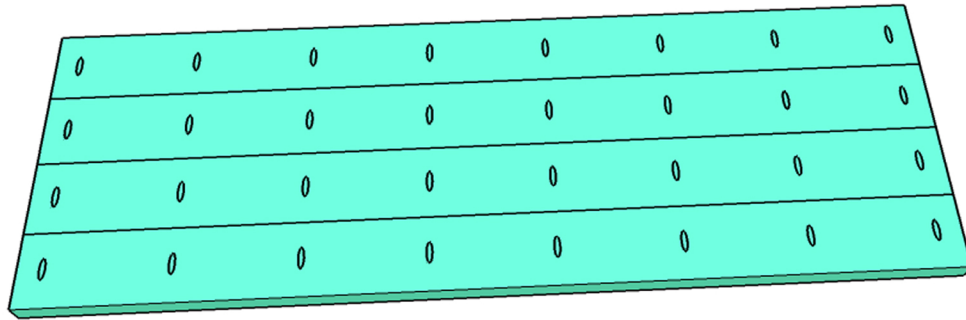


Cut the short planks, drill 1 1/2" pocket holes and attach them to the table legs with 2 1/2" pocket hole screws.

2

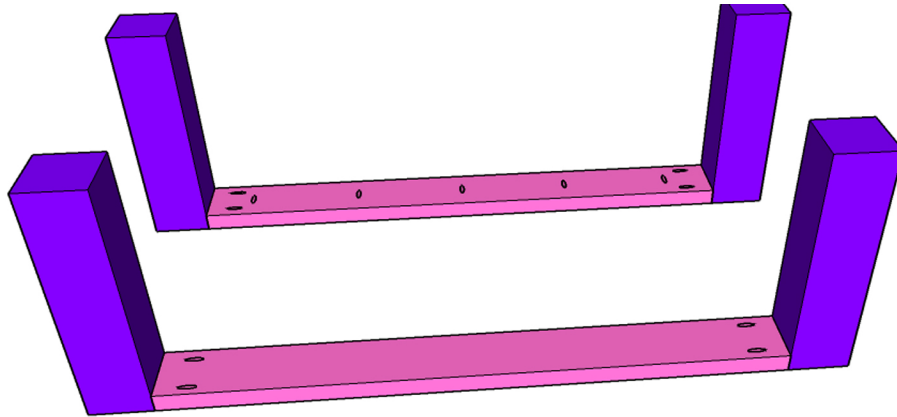


Now, attach the legs and short planks to the long planks with 1 1/2" pocket hole screws.

3

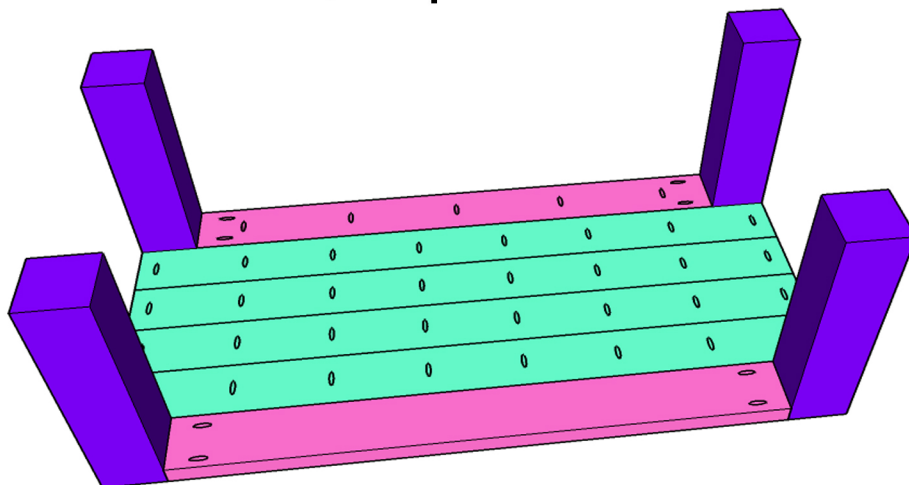


4

Measure and cut the long apron pieces to fit, drill 1 1/2" pocket holes and attach them to the legs and the short planks with 2 1/2" pocket hole screws.

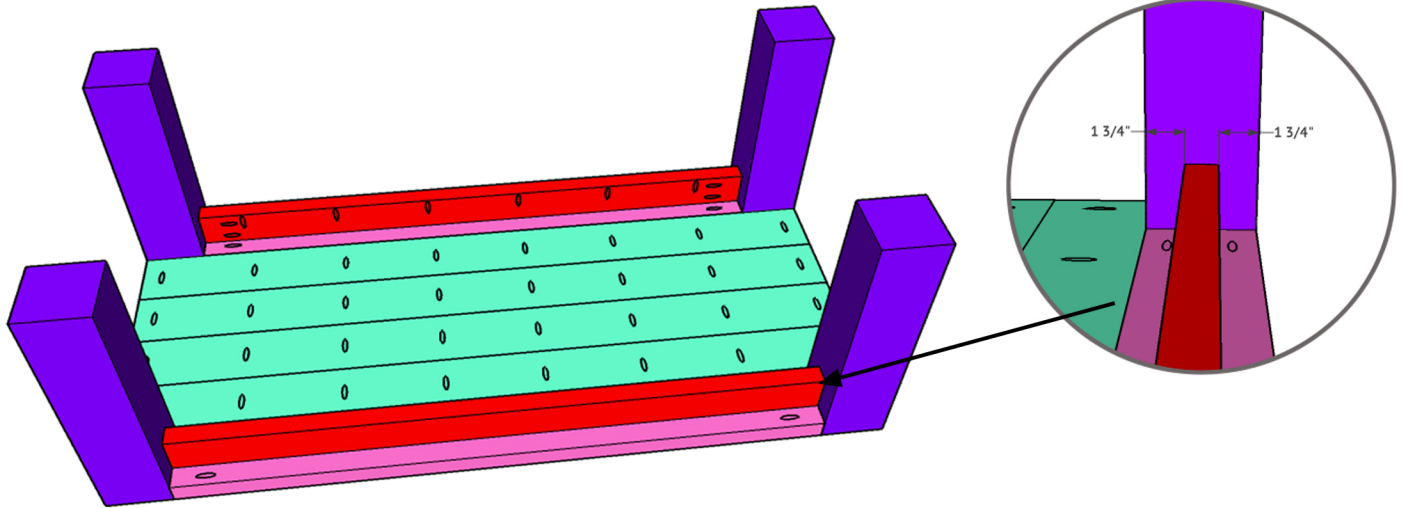


5

Cut the short apron pieces to fit, drill 1 1/2" pocket holes and attach them to the legs and long planks with 2 1/2" pocket hole screws.

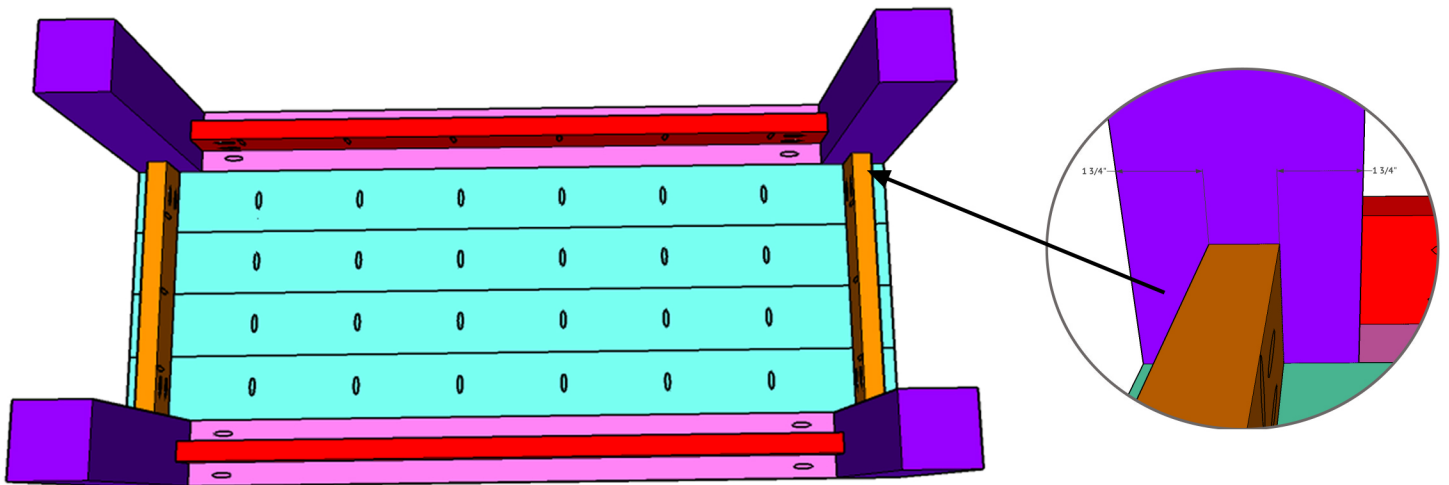




Cut the supports to size, drill 1 1/2" pocket holes and attach them to the long aprons and planked top with 2 1/2" pocket hole screws.

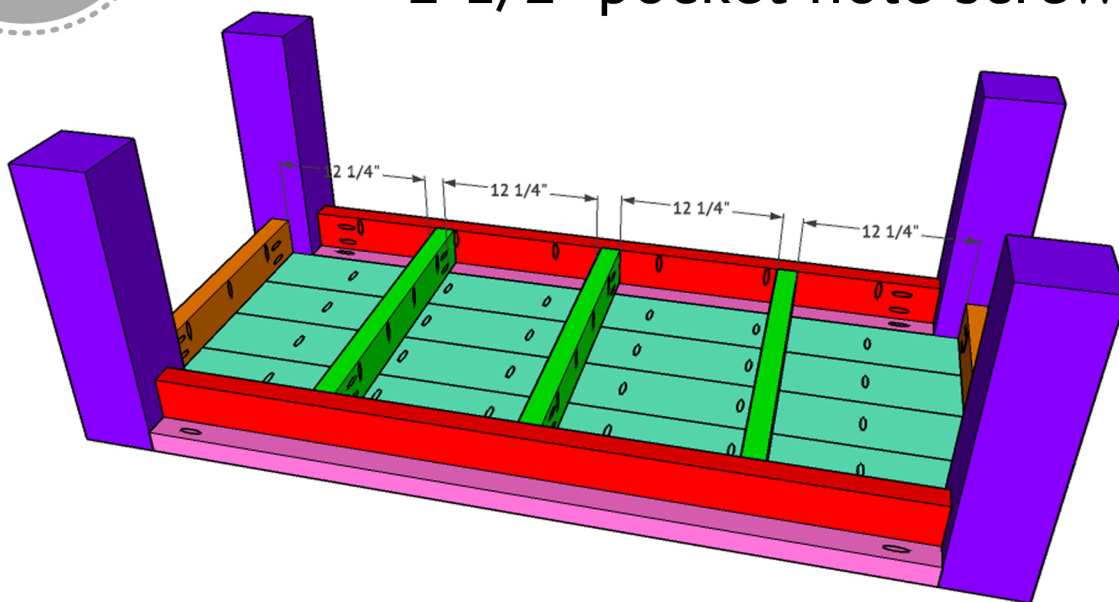

Add decorative hardware!

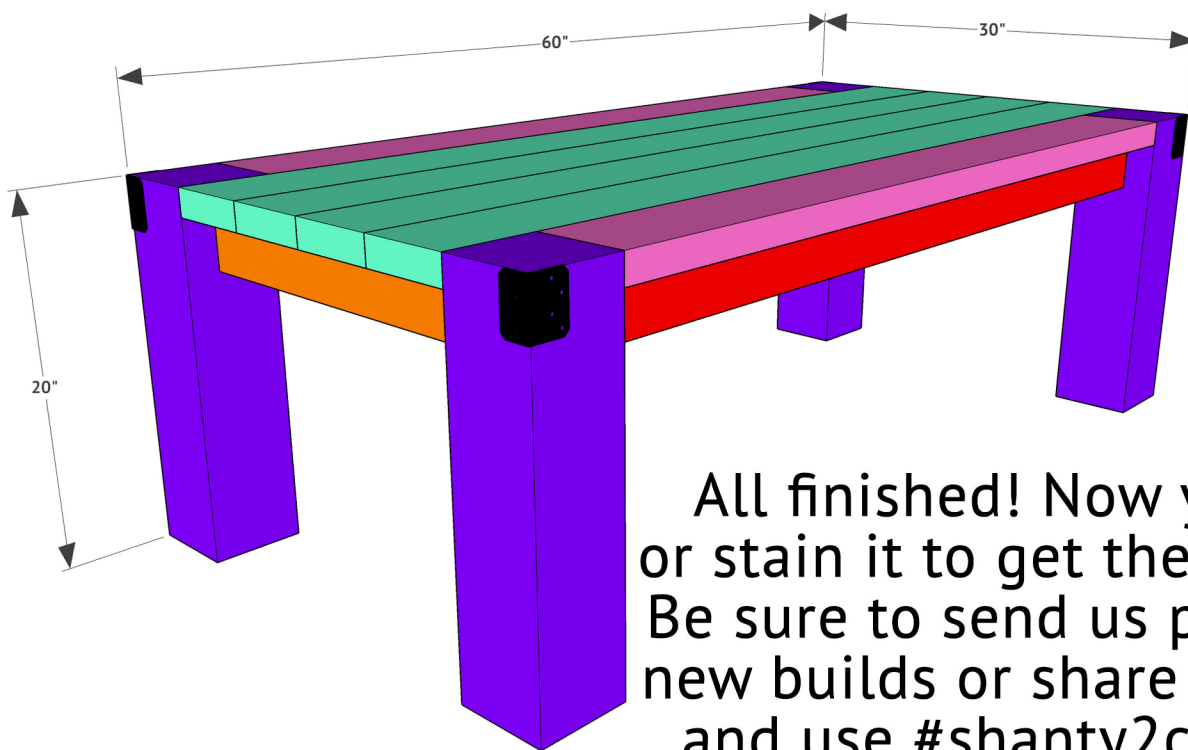

All finished! Now you can paint or stain it to get the look you want. Be sure to send us pictures of your new builds or share them on social and use #shanty2chic so we can share them to!