


## WOOD PLANKED CHARGERS


## **SUPPLY LIST**

Item	Quantity	Description
1x6x6	1	pine or whitewood
1/4" x 2.5" x 48"	1	craft board
wood glue		
5/8" nails		
decorative corners	4	link in plans

## **CUT LIST**

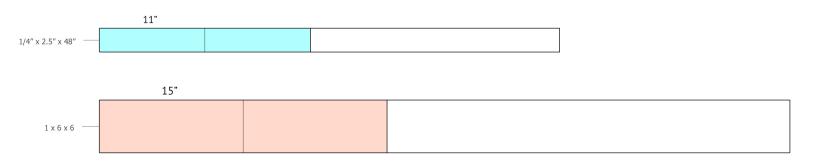


\*\* This is the cut list for 1 charger

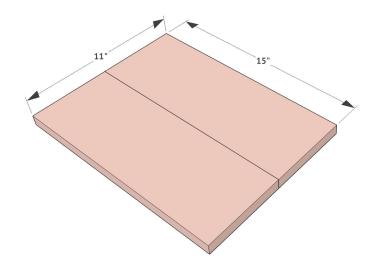



After making all your cuts, line up the two 1x6 planks together on a flat surface.



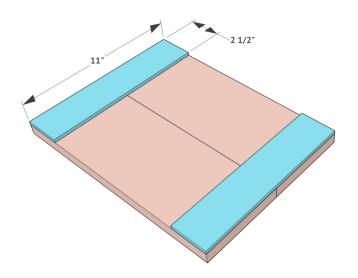

Now attach the craft boards to
each end using wood glue
and 5/8" nails. This will hold the
planks together. Final step is painting
or staining your chargers to fit your style. Once
dry, attach the metal corners to each charger
using a drill. Be sure to share your finish shots
with us and tag us on social! We love seeing them!