




©2016 WWW.SHANTY-2-CHIC.COM



RUSTIC CORBEL

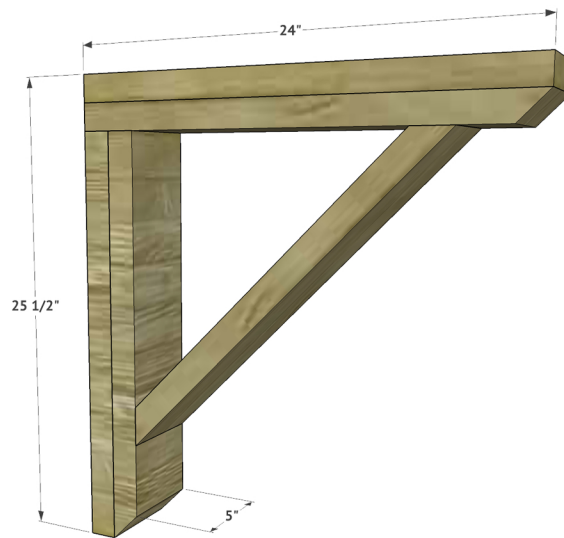

SUPPLY LIST


Item	Quantity	Description
2x6x10	1	Pine
2" Brad Nails		
2 1/2" pocket hole screws		
Wood Glue		

Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!




CUT LIST

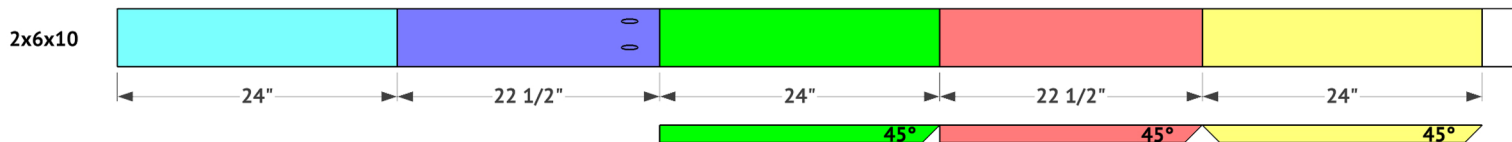

Note: We ripped the rounded edges off of the 2x6 boards. This made the boards 5" wide. This is not a necessary step but gives a smooth transition when we stack the boards.

1

First, cut the pieces for the back and top of the corbel. Drill 1 1/2" pocket holes into one end of the piece that does not have a miter cut. Lay the back angle cut piece on top of the piece with pocket holes. The pocket holes should face down. Attach with wood glue and 2" brad nails.

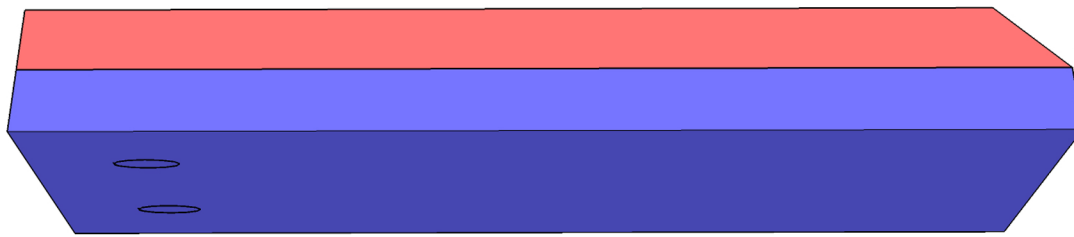


45°


pocket holes

Now lay the top angle piece on top of the top straight piece. Attach them with wood glue and 2" brad nails

2


45°

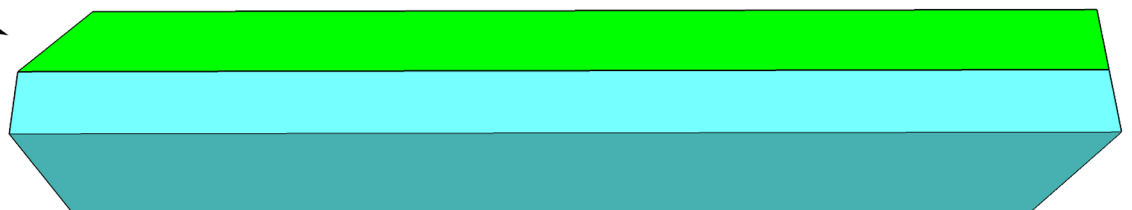

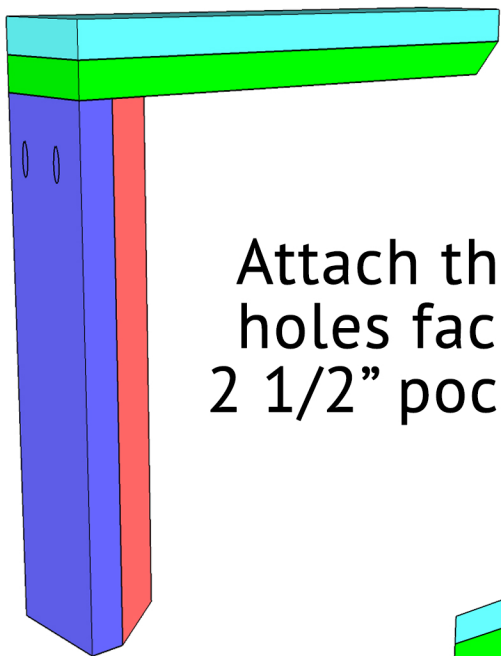


3

Attach the back pieces (with the pocket holes facing out) to the top pieces with 2 1/2" pocket hole screws and wood glue.

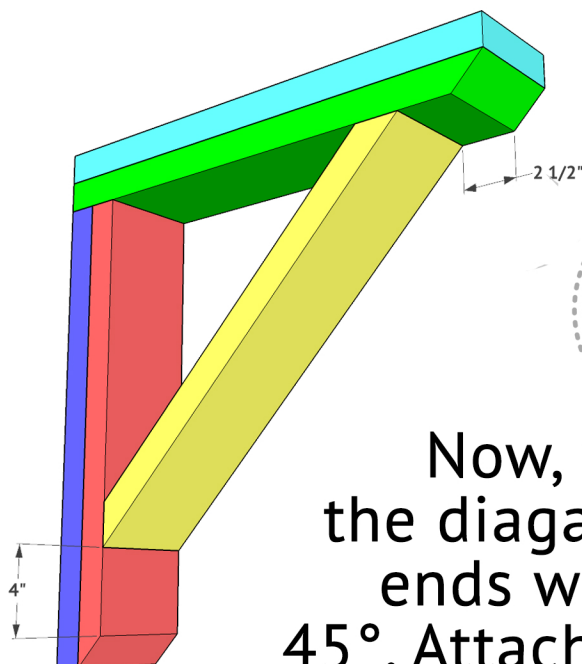

4

Now, measure for the diagonal piece. Both ends will be cut at a 45°. Attach with wood glue and 2" brad nails.

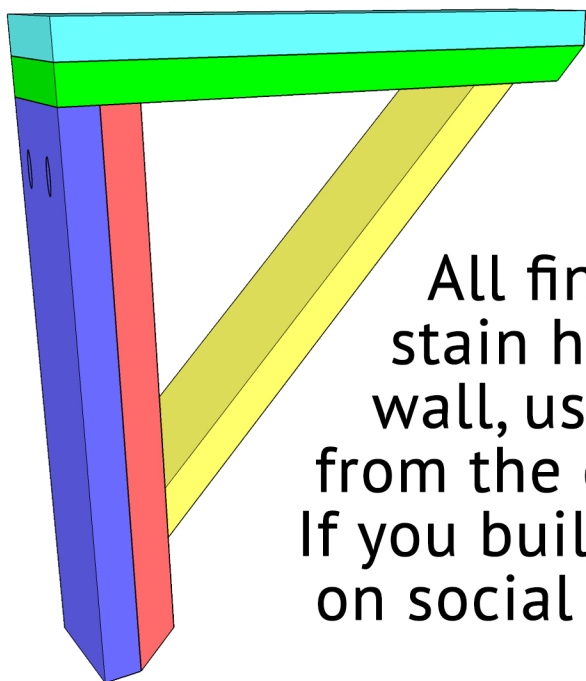

All finished! Now you can paint or stain how you like! To hang it on the wall, use 3 1/2" wood screws and drill from the corbel into the studs in the wall. If you build your own make sure to share it on social and use #shanty2chic so we can share it too!