




©2016 WWW.SHANTY-2-CHIC.COM

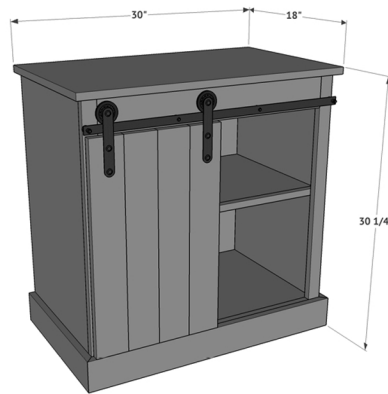

BARN DOOR NIGHTSTAND



Item	Quantity	Description
3/4" 4'x8' plywood	1	Birch
1/4" 4'x4' plywood	1	Birch
1x4x10	1	Pine
1x4x8	1	Pine
1x2x8	1	Pine
3/4"x1/2" trim	8 ft.	Pine
Barn Door Hardware		Supplies on the tutorial on our site
1 1/4" Brad Nails		
1 1/4" pocket hole screws		
3/8" staples		
Wood Glue		


Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!




CUT LIST


3/4" 4'x8' plywood

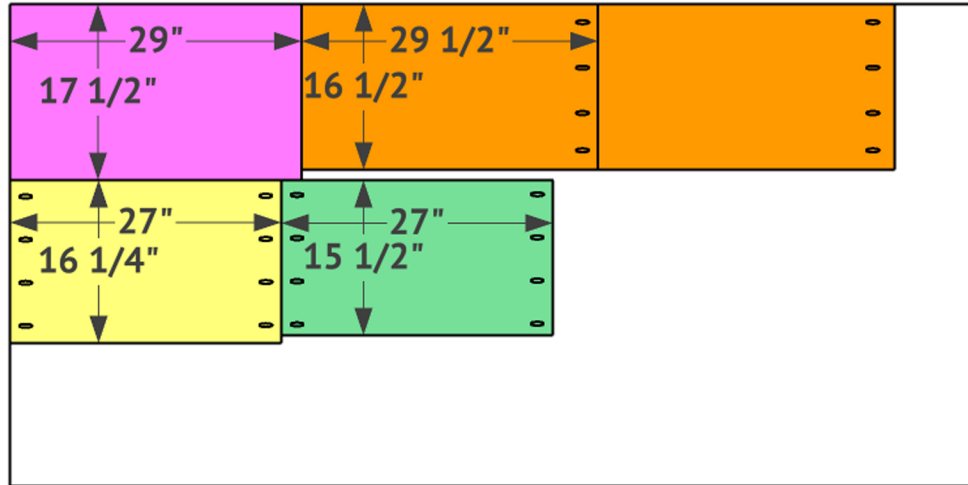


1/4" 4'x4' plywood

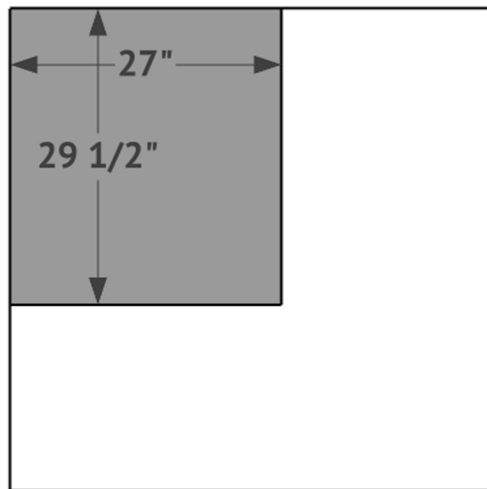


1x4x10

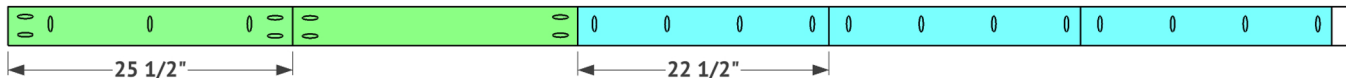


1x4x8

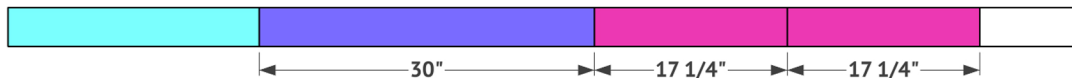

1x2x8

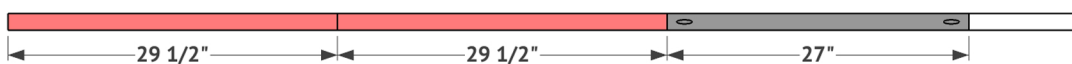


1/2" x 3/4" x 96" Trim





1

Make cuts for the side and bottom pieces. Drill $\frac{3}{4}$ " pocket holes in the top ends of each side piece and on each end of the bottom piece.


Attach the bottom to the sides with $1\frac{1}{4}$ " pocket hole screws and wood glue. *Tip: make sure to note which direction the pocket holes should face before assembly.*

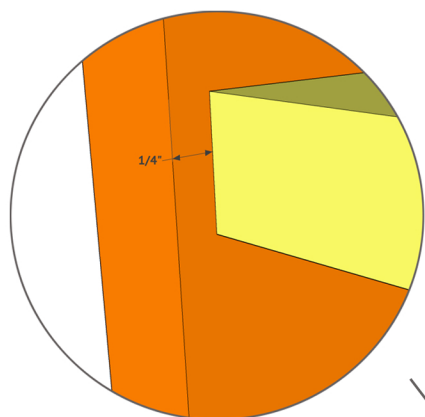

The bottom should be flush with the front of the sides and the back should be inset $\frac{1}{4}$ ".

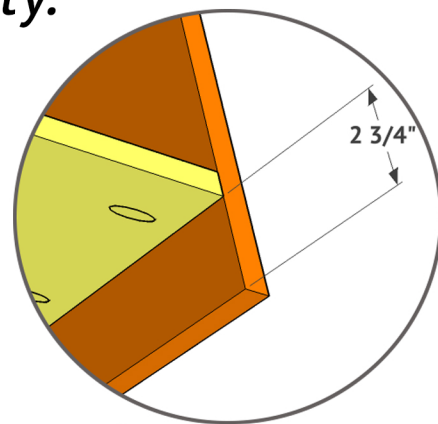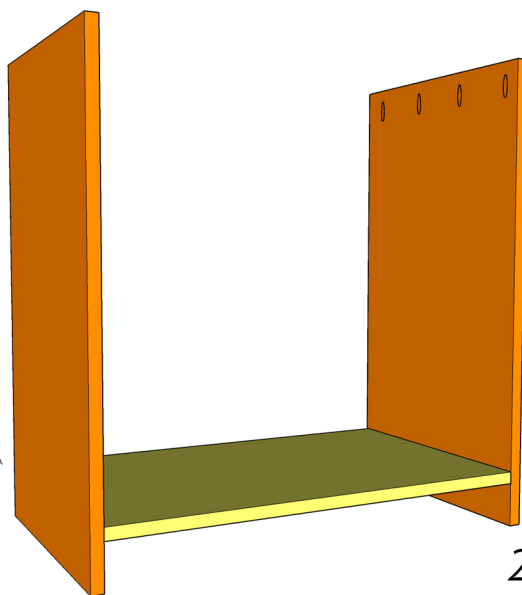



Attach the bottom $2\frac{3}{4}$ " up from the bottom.

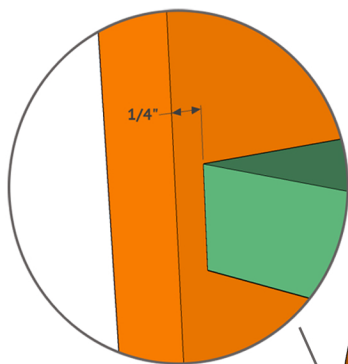

$\frac{1}{4}$ " gap on back.


2

Now, drill $\frac{3}{4}$ " pocket holes into each end of the shelf piece. Attach it to the side pieces with $1\frac{1}{4}$ " pocket screws and wood glue.

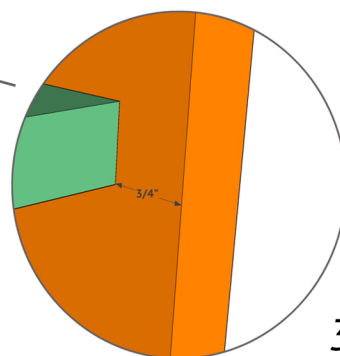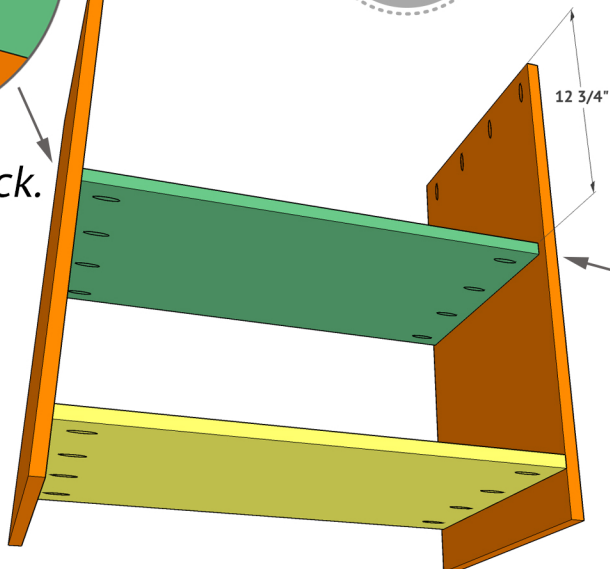


$\frac{3}{4}$ " gap on front.

3 Cut the back support to size. Drill 3/4" pocket hole screws and attach it to the top of the nightstand with 1 1/4" pocket screws and wood glue.

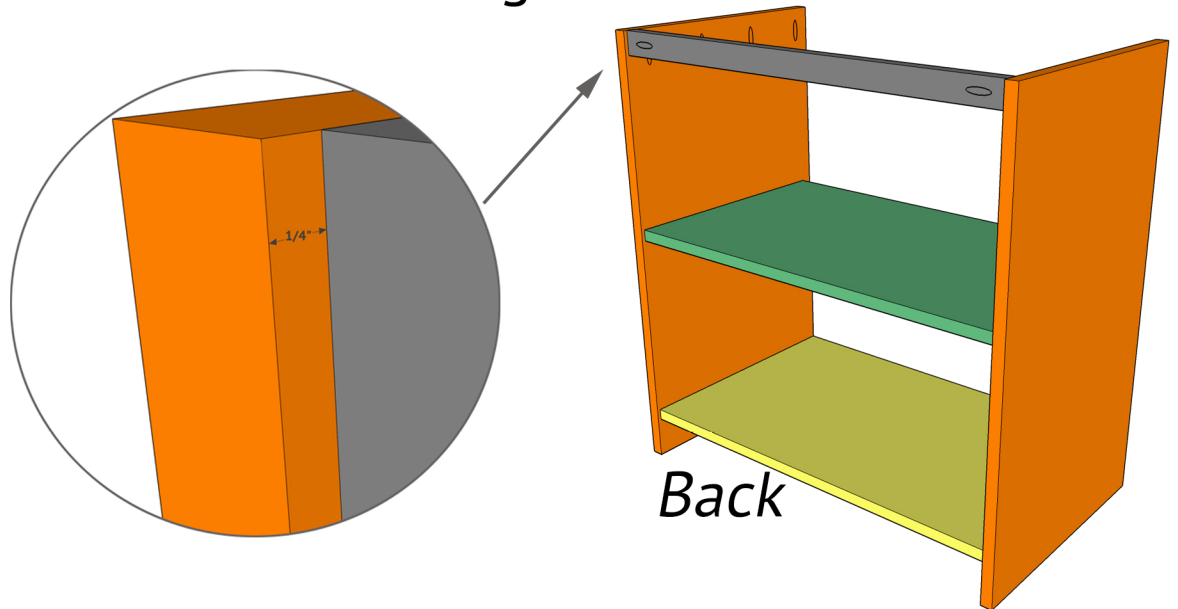


4

Cut the shelf trim to fit. Attach with 1 1/4" brad nails and wood glue.

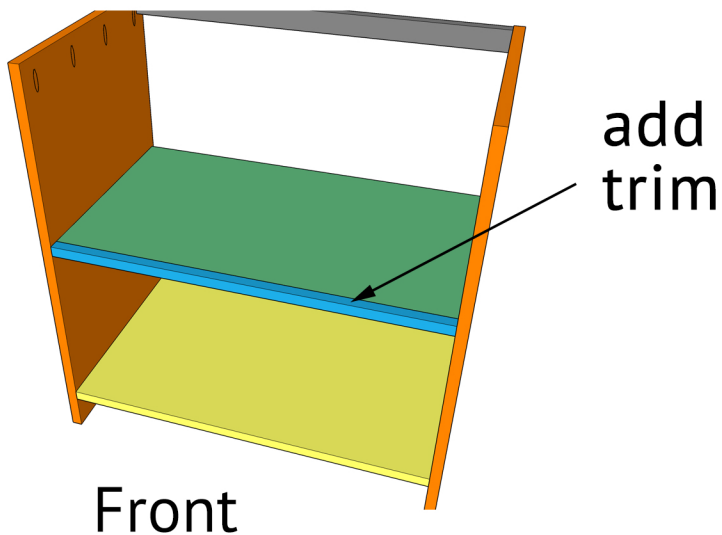


5

Cut the face frame piece to fit. Drill 3/4" pocket holes, where noted. Attach the side pieces to the top and bottom pieces with 1 1/4" pocket screws and wood glue.

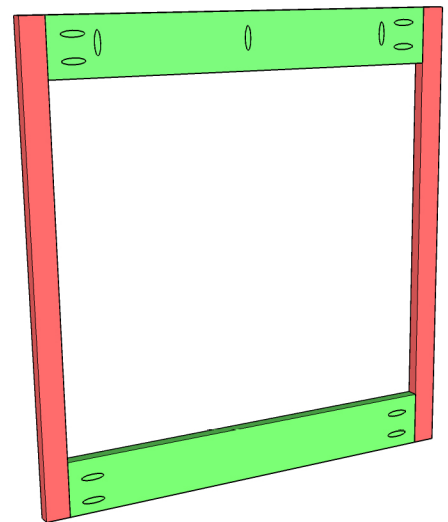


6

Attach the face frame to the nightstand with 1 1/4" brad nails and wood glue. The edges of the face frame should be flush with the edges of the nightstand.


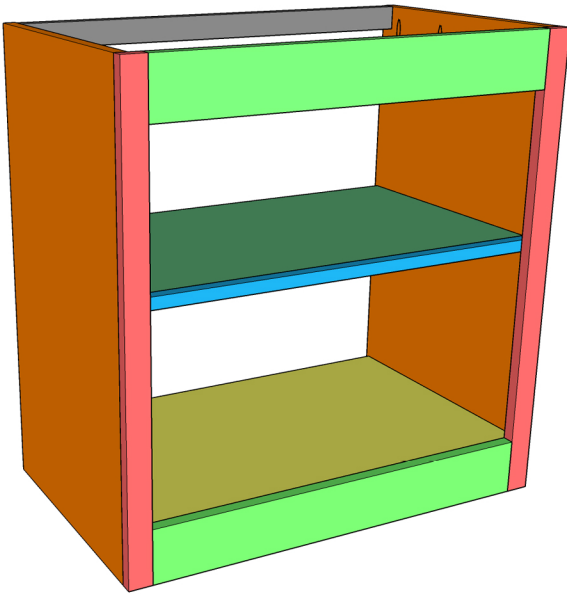


7

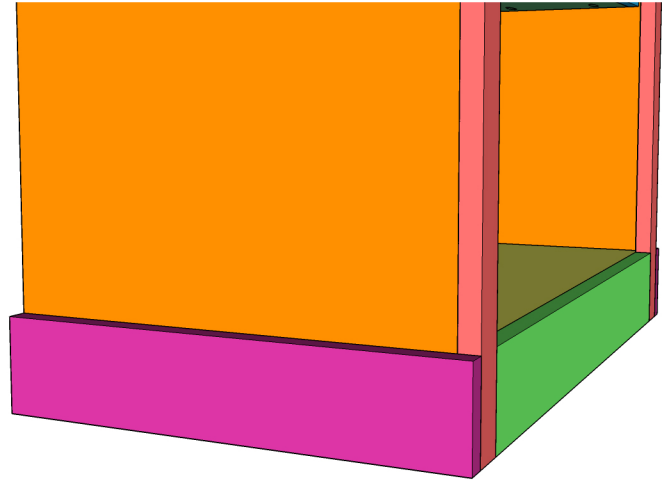

Measure for the bottom side pieces of trim, first. Attach it to the bottom of the nightstand with 1 1/4" brad nails and wood glue. The edges of the trim should be flush with the back and front of the nightstand. Do this to both sides.


8

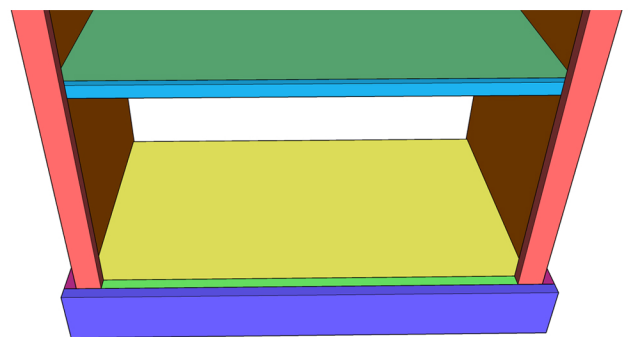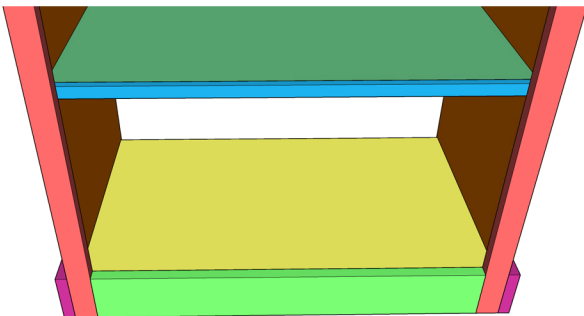


Once both side pieces are attached, measure and cut the front piece to fit. Attach the front piece with 1 1/4" brad nails and wood glue.

9

Flip the nightstand over to attach the top piece. Use the pocket holes that you drilled into the side pieces to attach the top. Make sure to use wood glue.

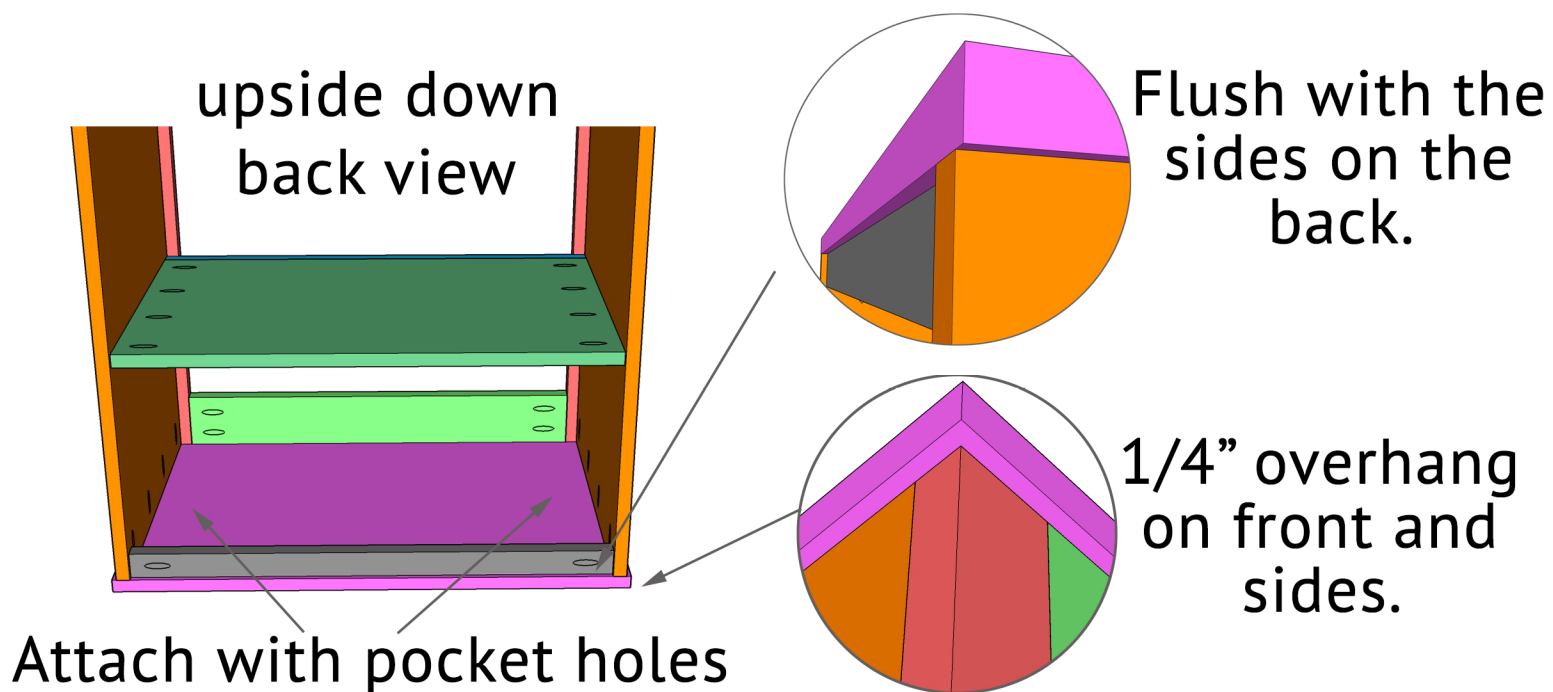


Measure and cut the top trim to fit. Start with the side pieces. They will be flush with the sides of the top. Then you can measure for the front trim piece. Attach with 1 1/4" brad nails and wood glue.

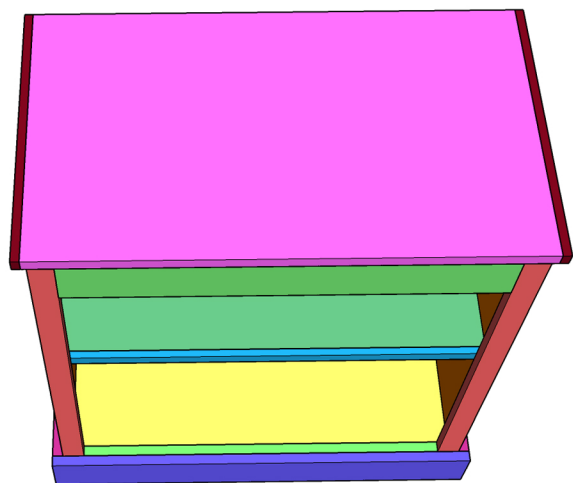


Side Trim

10

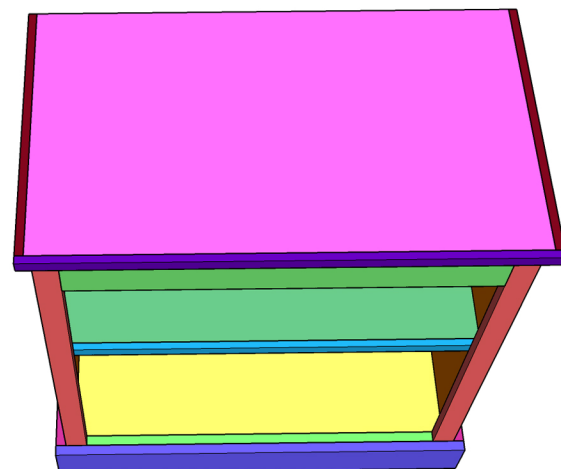

Front Trim


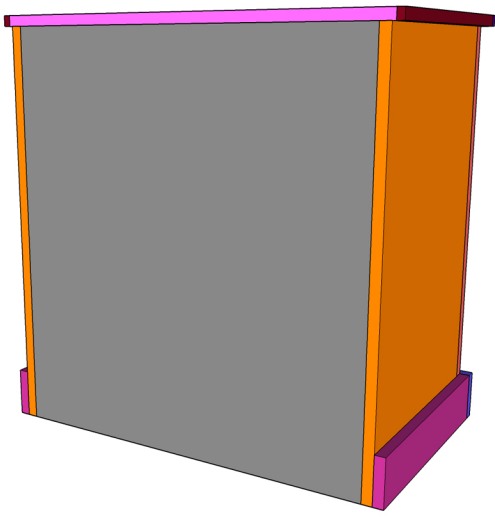


11

Measure and cut the 1/4" plywood to fit the back of the nightstand. Attach with 3/8" staples. The plywood should sit inside the 1/4" gap created on the back.

12

Cut the barn door pieces to size and drill 3/4" pocket holes in three of the boards. Attach the boards together with 1 1/4" pocket screws.

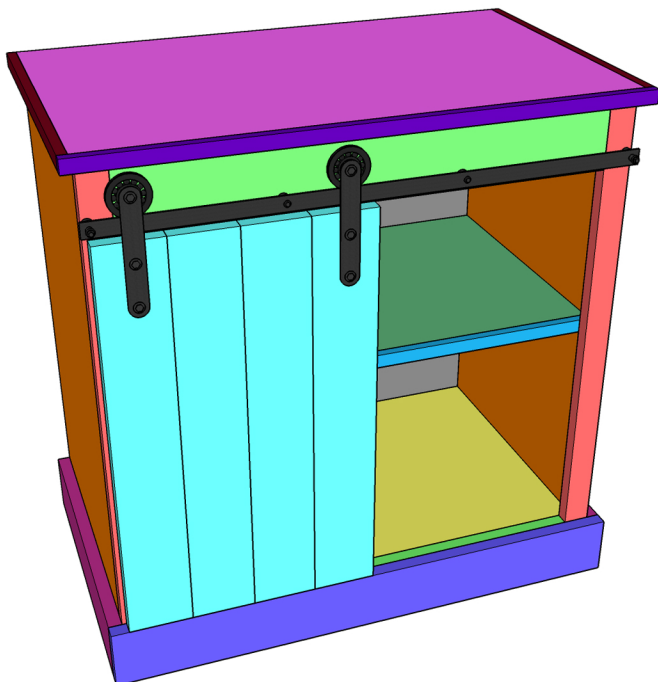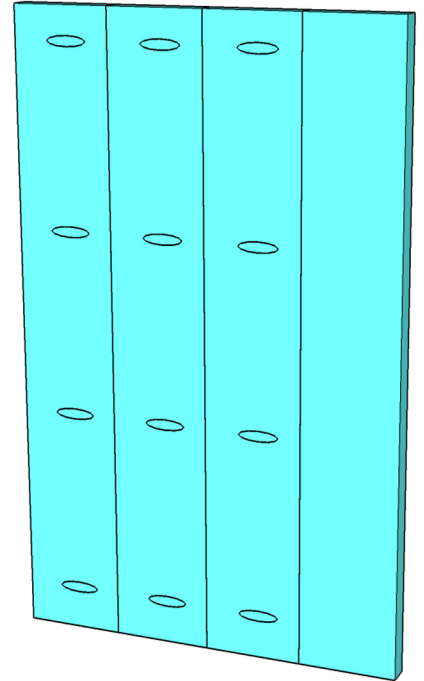

Now, add a finish and attach the barn door hardware. You can purchase barn door hardware online or you can head over to our site to get the tutorial for the DIY version that we created. Make sure to share your builds with us on social and use #shanty2chic so we can share them too!