



©2016 WWW.SHANTY-2-CHIC.COM



# CORBEL SCONCE LIGHT



## SUPPLY LIST


Item	Quantity	Description
2x4x4	1	Pine or Douglas Fir
Decorative Cage Light	1	Linked on website tutorial
Corded Pendant	1	Linked on website tutorial
2 1/2" Pocket Hole Screws	2	
3" Wood Screws	2	
1 1/4" Brad Nails		

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!




## CUT LIST

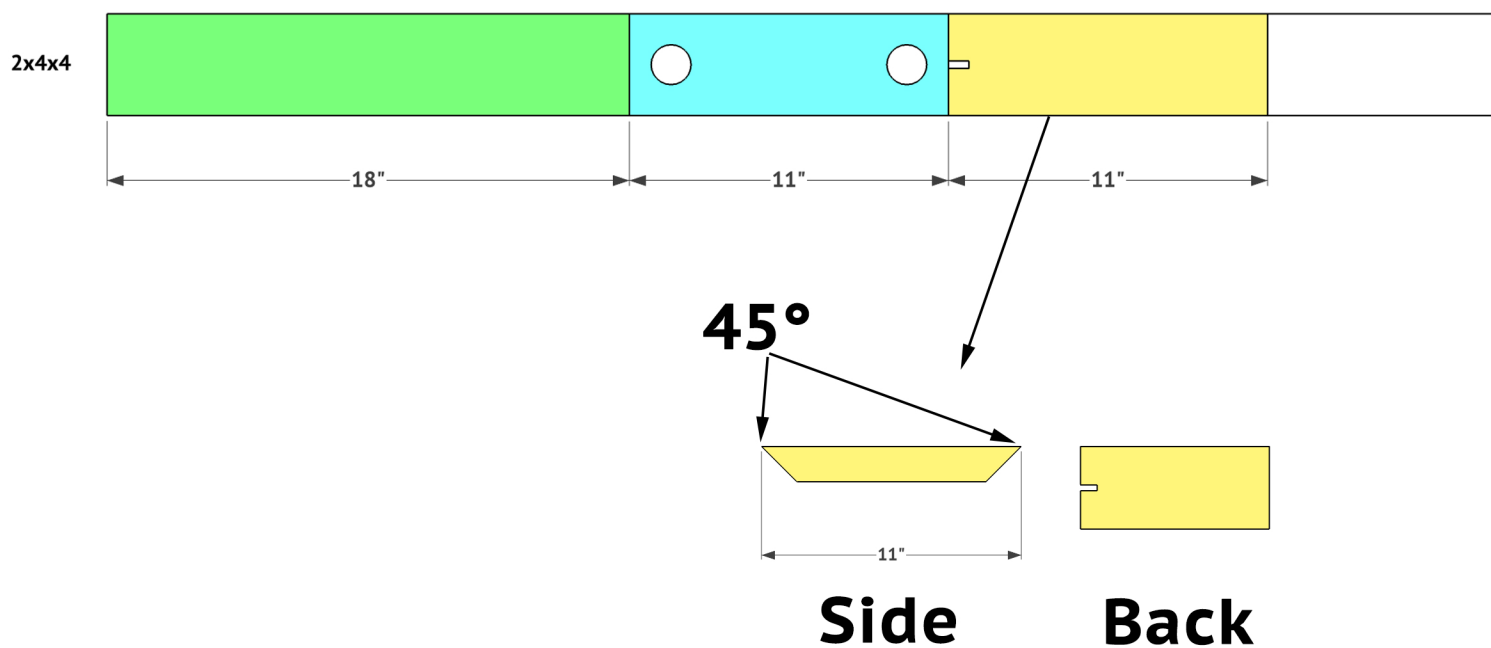


*Note: I ripped the rounded edges off of the 2x4 board. This is not a necessary step.*

1

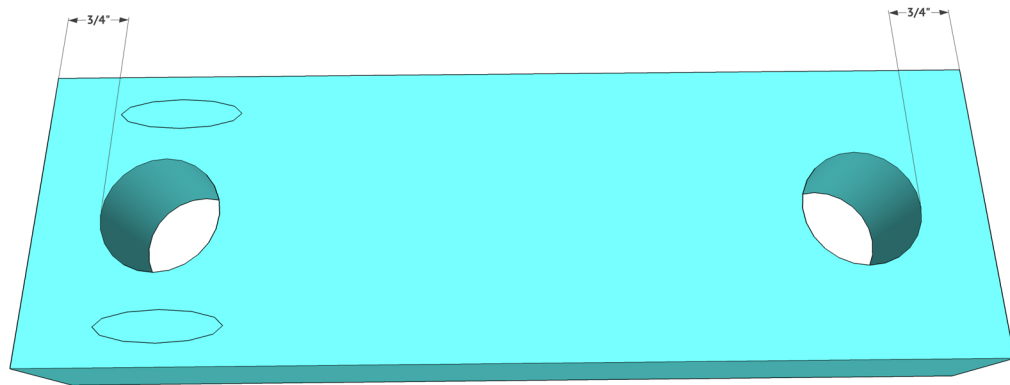


After making all of your cuts, drill two, 1 1/2" pocket holes on one end of the top arm piece. Make sure to place the pocket holes wide enough apart so that you have room to drill the hole for your cord. Then, using a 1 3/8" forstner bit, drill a hole on each end of the top arm. I centered my holes and placed them 3/4" from each end.

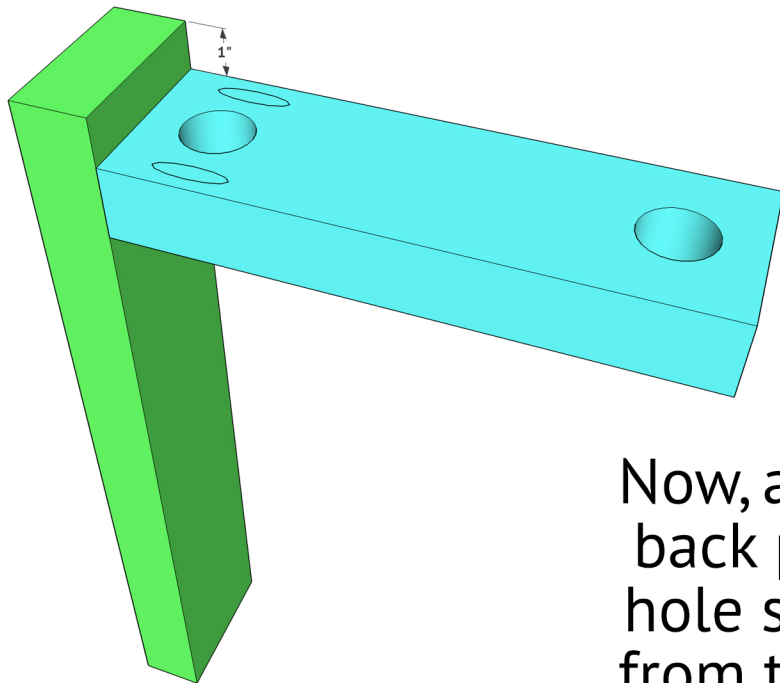


2

Now, attach the top arm to the back piece with 2 1/2" pocket hole screws and wood glue, 1" from the top of the back piece. Make sure the pocket holes are facing up.

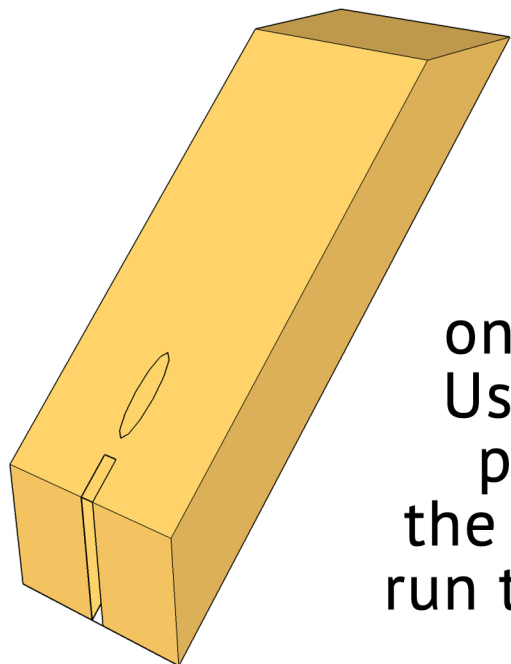

Now, drill a 1 1/2" pocket hole on the back side of the cross piece. Use a 3/4" drill bit to drill from the pocket hole through to the end of the board. This will give you a spot to run the cord. You can clean the hole up with a chisel and a sander.

*Note: Now is a good time to put a finish on your corbel scone!*

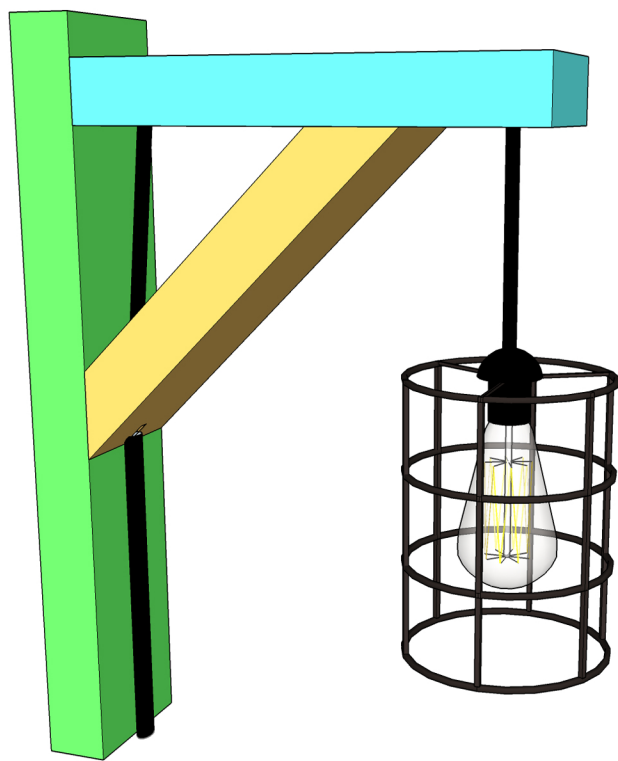

Run the cord through the holes, then attach the cross piece with wood glue and 1 1/4" brad nails.

To hang, use 3" wood screws and drill from the front of the corbel into the studs behind the wall. If you don't have a stud to drill into, use wall anchors.

Make sure to share your builds on social media and use #shanty2chic so we can share them too!