




©2016 WWW.SHANTY-2-CHIC.COM

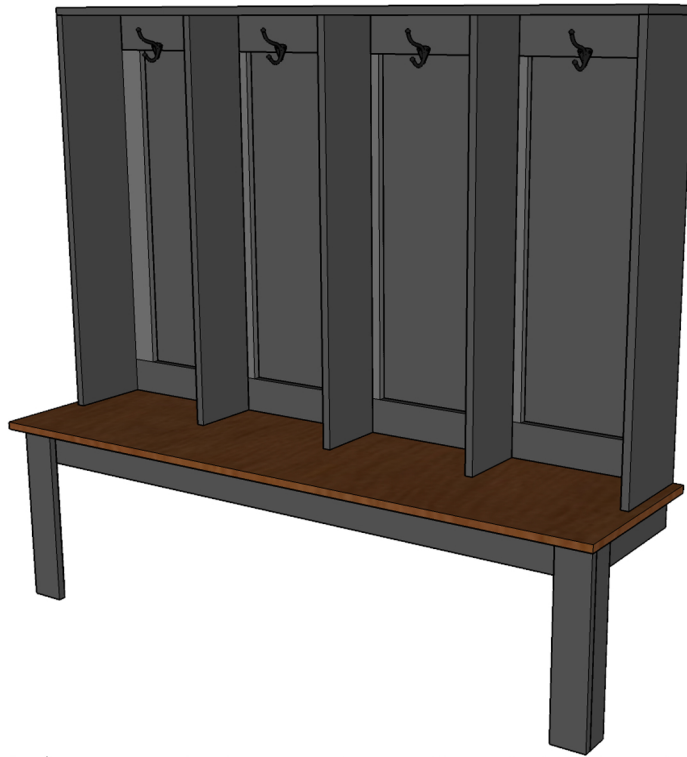

# WALL LOCKER

## SUPPLY LIST


Item	Quantity	Description
2x4x8	2	Whitewood or Pine
1x4x8	2	Whitewood or Pine
1x3x8	3	Whitewood or Pine
1x10x8	2	Whitewood or Pine
1x8x8	2	Whitewood or Pine
18"x72"x3/4" Project Panel	1	Laminated Pine
48"x96"x1/4" Plywood	1	Birch
1 1/4" pocket hole screws		
2 1/2" pocket hole screws		
1 1/4" brad nails		
3/4" staples (optional)		
1 1/2" Wood Screws		
3 1/2" Wood Screws		
Wood Glue		

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!




## CUT LIST

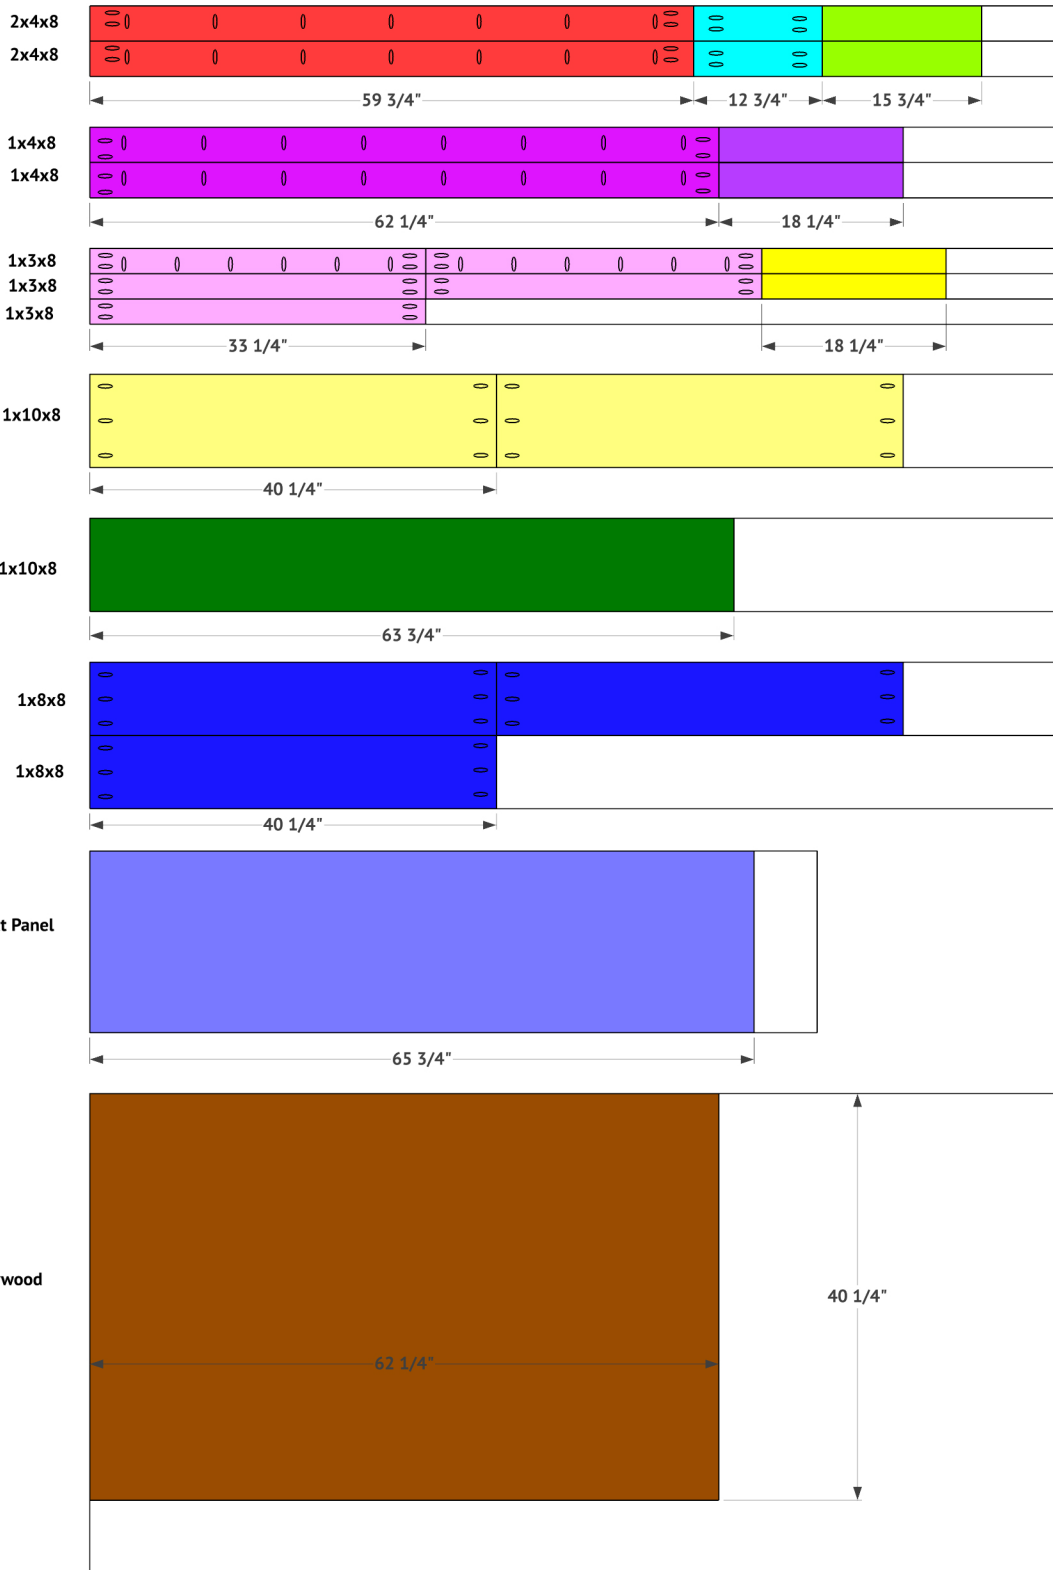


**1** First, build the frame of the bench. Drill 1 1/2" pocket holes at the ends of the long boards and 3/4" pocket holes along the length of the boards. Attach the long boards to the short side boards with 2 1/2" pocket hole screws and wood glue.


Make sure pocket holes are facing the same direction on both boards.

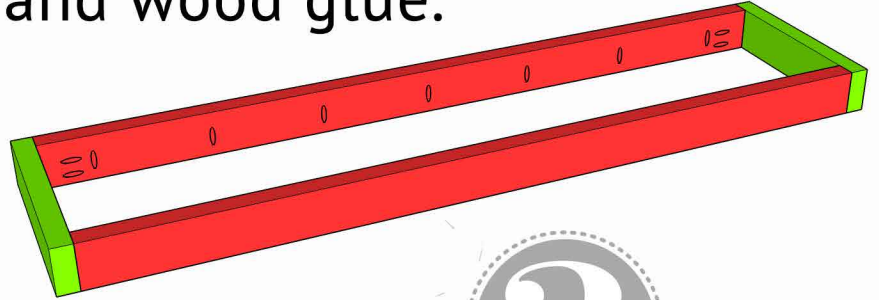

**2** Cut the center supports to fit, Drill 1 1/2" pocket holes and attach them to the bench frame with 2 1/2" pocket hole screws and wood glue.


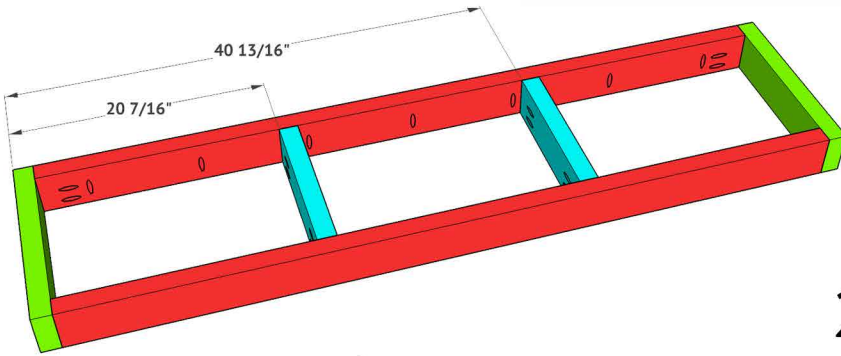


**3** Build the bench legs by attaching a 1x4 piece to a 1x3 piece with 1 1/4" brad nails and wood glue. Attach a leg to the front corners of the bench frame with 1 1/2" wood screws and wood glue, from the inside of the frame. Keep legs flush with frame.

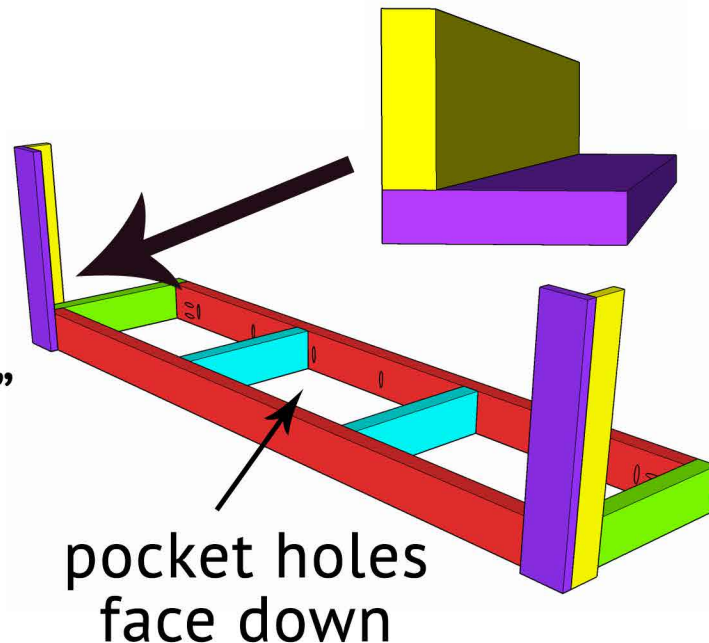


4

Lay the bench frame on top of the bench top and attach it to the bench top with 1 1/4" pocket hole screws. The back of the bench top should be flush with the back of the frame and there should be a 1 1/2" overhang on the front and sides of the bench frame.

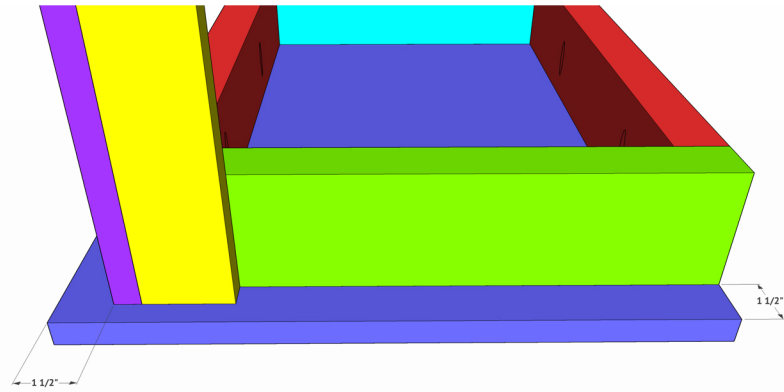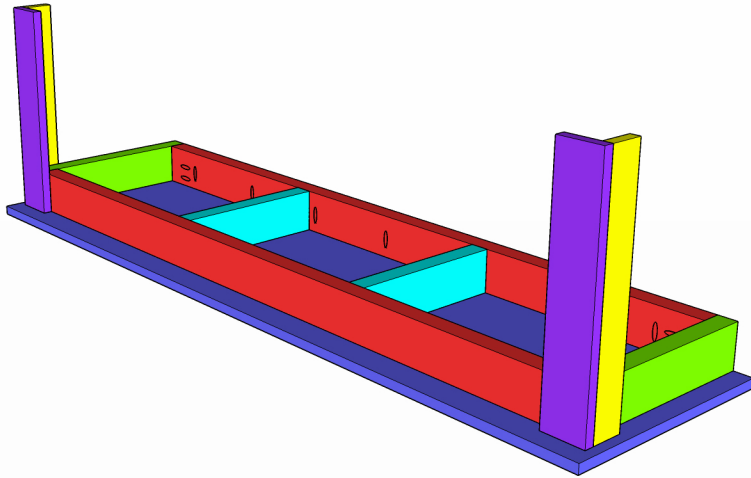

5

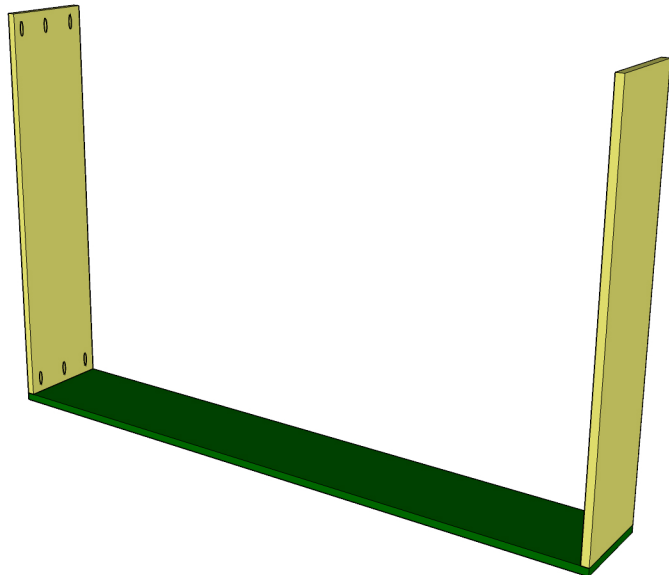


To assemble the locker hutch, start by drilling 3/4" pocket holes into the ends of both side boards. Then, attach the side boards to the top board with 1 1/4" pocket hole screws and wood glue. The side boards should be flush with the ends of the top board.







Drill  $\frac{3}{4}$ " phocket holes into the ends of the locker dividers and attach them to the center of the top board with  $1 \frac{1}{4}$  pocket hole screws and wood glue.

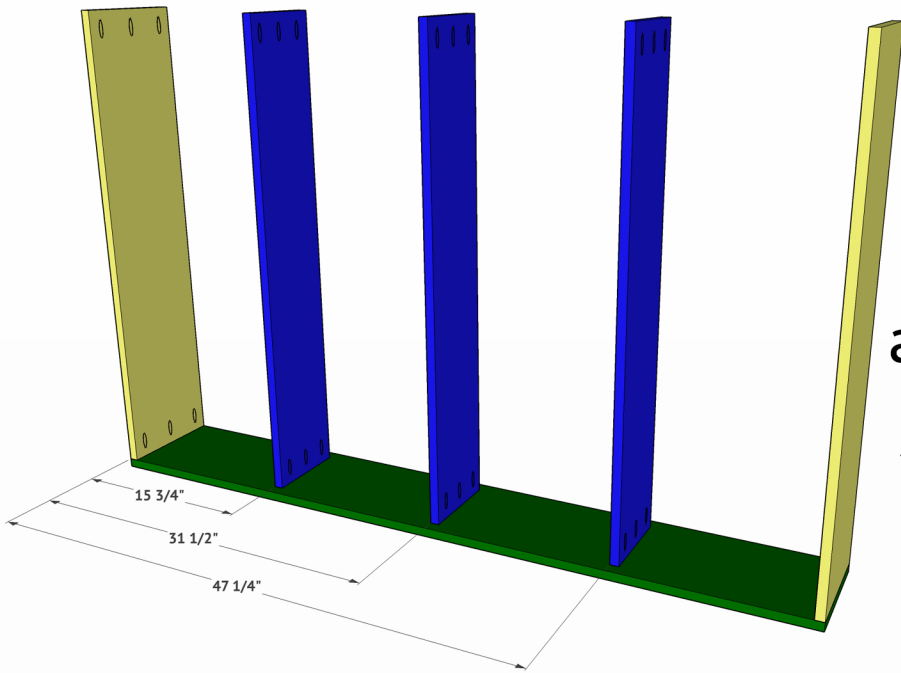

Top of Locker

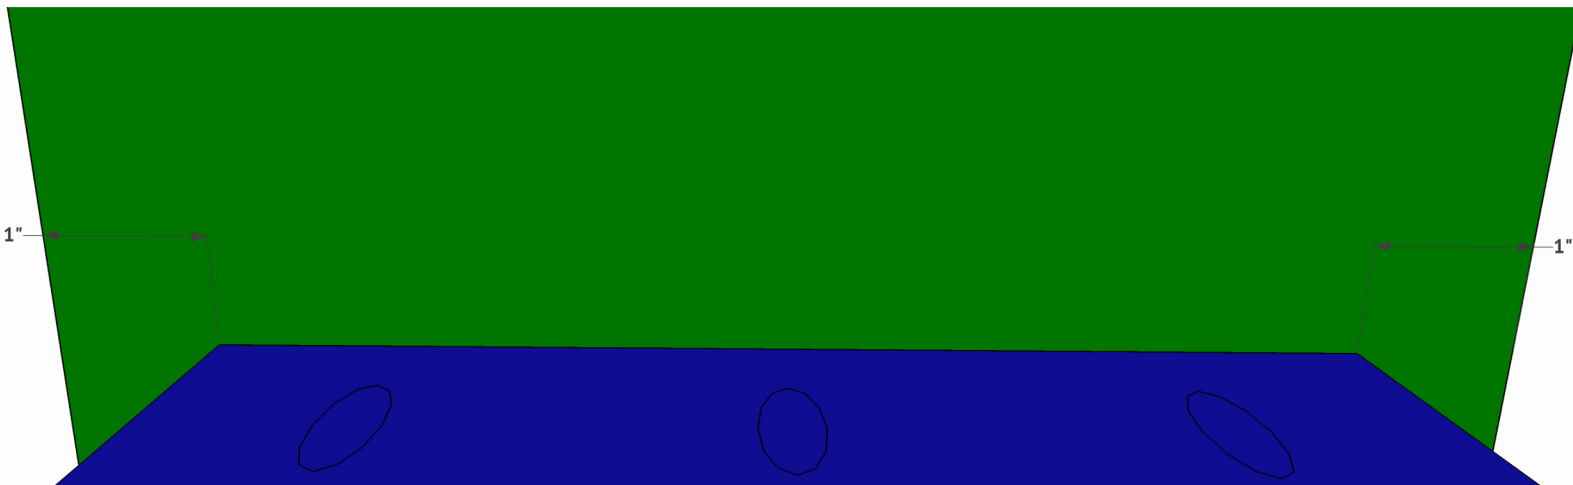

The locker dividers should side 1" from each end of the top board.

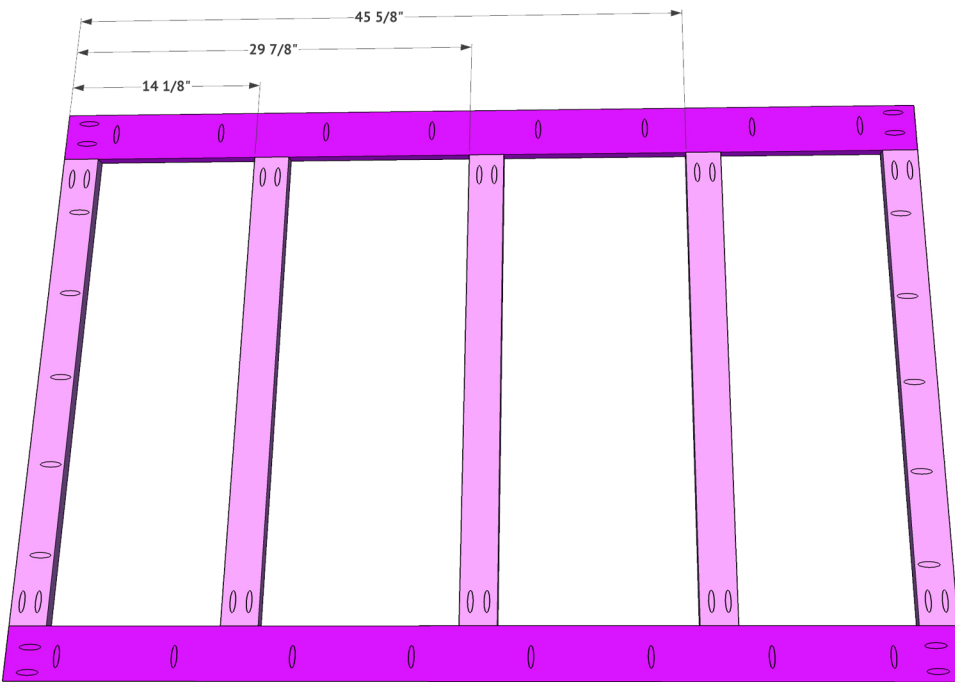


To build the frame for the hutch, drill 3/4" pocket holes into the ends of all the 1x3 boards and drill 3/4" pocket holes along the length of the two outside 1x3 boards.

Drill 3/4" pocket holes into the ends of the 1x4 boards and attach the 1x3 boards to the 1x4 boards with 1 1/4" pocket hole screws and wood glue. *Make sure that the pocket holes on the outside 1x3 boards are facing out so that the frame can be attached to the inside of the locker hutch.*




Attach the back frame to the back of hutch, 1/4" from the back of the side pieces. Use 1 1/4" brad nails and wood glue to attach the frame to the locker dividers and 1 1/4" pocket hole screws and glue around the top and sides of the hutch.

1/4" inset

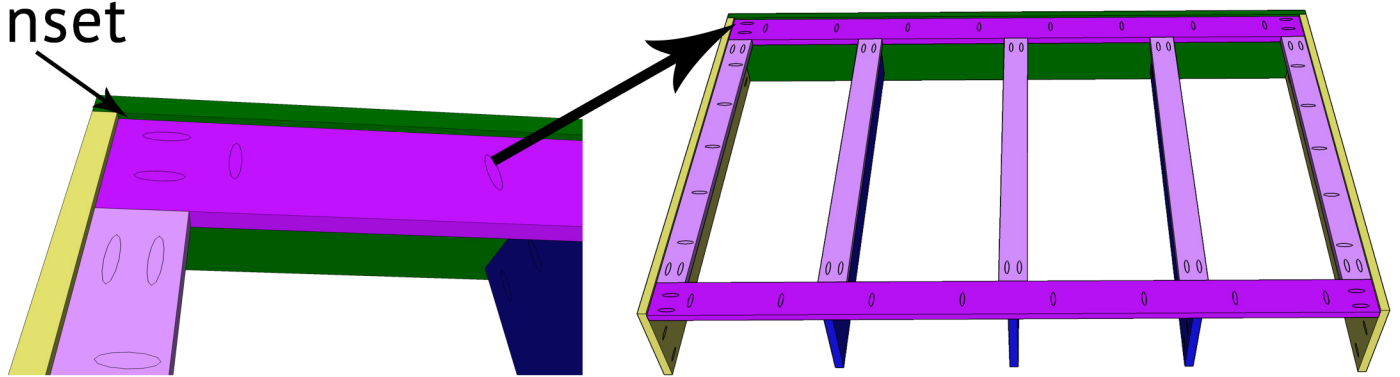


9

Attach the 1/4" plywood sheet to the back of the hutch and attach it with 3/4" staples and wood glue. (You can also use brad nails).

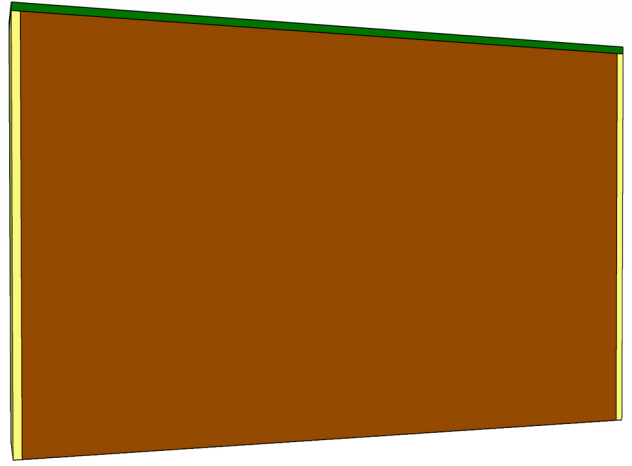


10

Attach the bench to the wall from the inside of the bench frame into studs behind the wall. Use 3 1/2" wood screws.

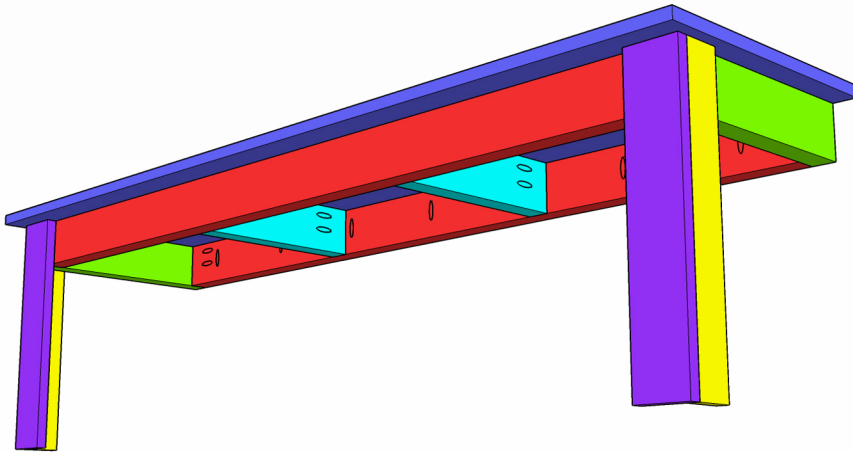

11

Center the hutch so that it sits 1" from each end of the bench. Attach it to the bench with 1 1/4" pocket hole screws and wood glue. The back of the hutch should be flush with the back of the bench.

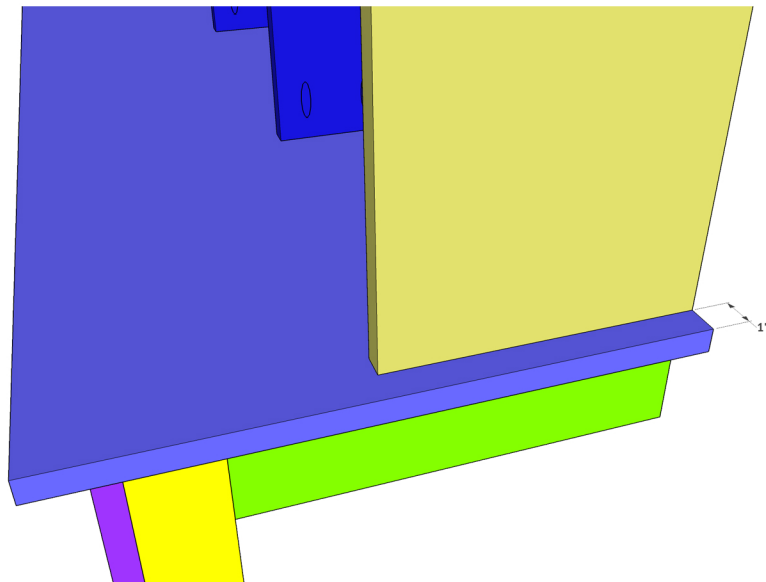

Finally, fill your pocket holes and add a finish and hooks to make it your own! Make sure to share your builds, on social media, with us and use #shanty2chic so we can share them too!

