



©2016 WWW.SHANTY-2-CHIC.COM



WALL ORGANIZER

SUPPLY LIST

Item	Quantity	Description
24"x48"x1/2" plywood	2	Hardwood Plywood
1x2x8	2	Whitewood or Pine
1x2x10	1	Whitewood or Pine
1/4"x2"x48" craft board	7	Pine or Poplar (both stain fine)
1 1/4" pocket hole screws		
5/8" brad nails		
1 1/4" brad nails		
3" Wood Screws for Hanging		
Dry Erase Board	1	Linked on Website Tutorial
Cork Tile	1	Linked on Website Tutorial
Wood Glue		


Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!




CUT LIST

24" x 48" x 1/2" plywood

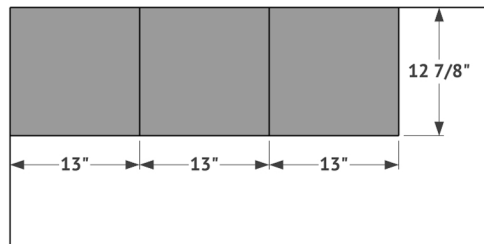


24" x 48" x 1/2" plywood

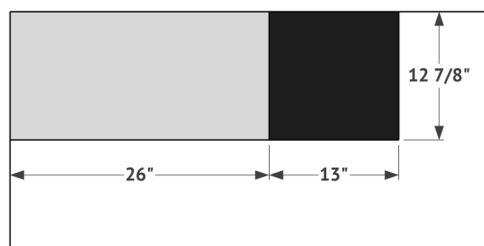


1x2x8




1x2x8





1x2x10




1/4" x 2 x 48"
1/4" x 2 x 48"
1/4" x 2 x 48"

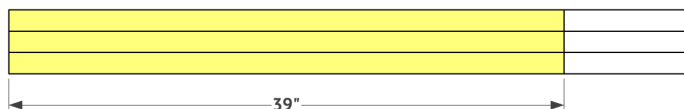


1/4" x 2 x 48"
1/4" x 2 x 48"
1/4" x 2 x 48"
1/4" x 2 x 48"

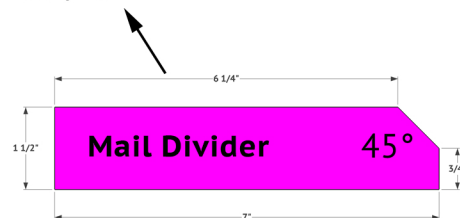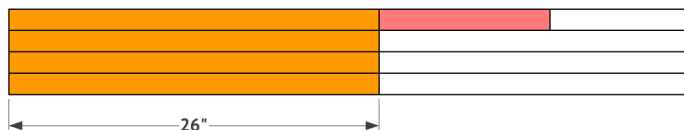


Dry Erase

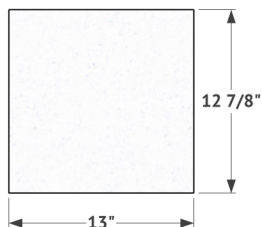

Cork Board

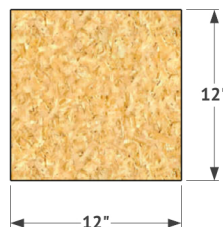


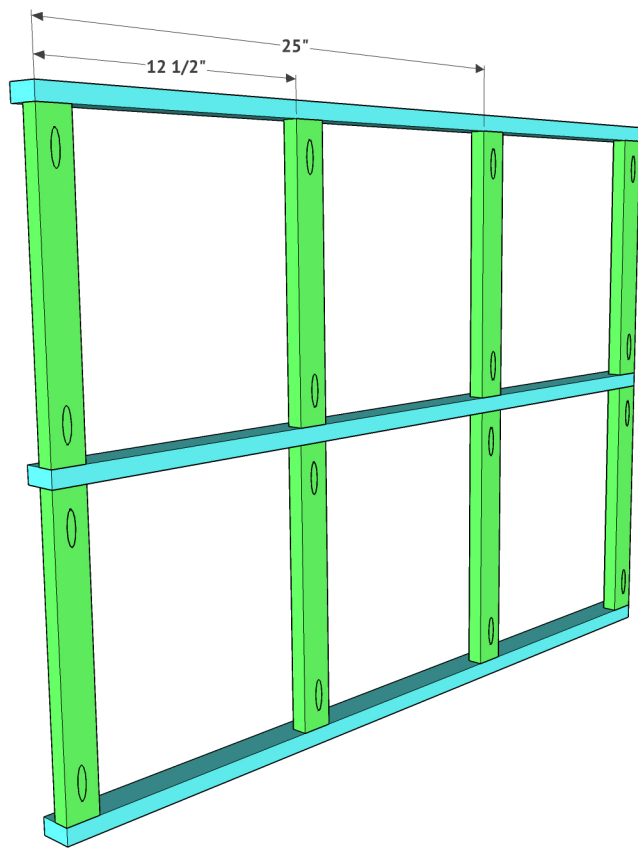


1

Cut the boards for the back frame and drill $\frac{3}{4}$ " pocket holes into each end of the short pieces. Attach the short pieces to the long pieces with $1\frac{1}{4}$ " pocket hole screws and wood glue.

2

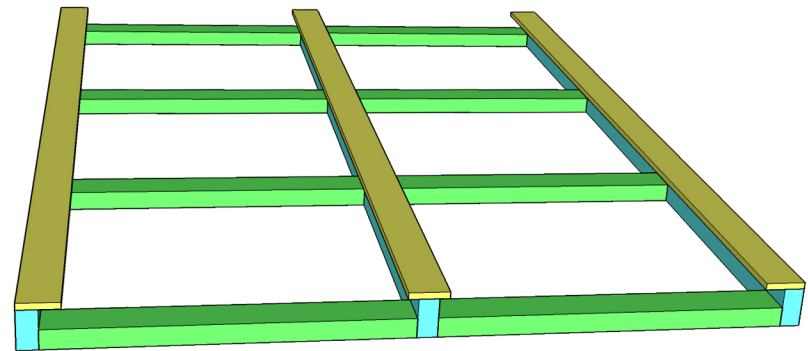


Cut the front slats, to size, and attach them to each of the three 1x2 slides with $\frac{5}{8}$ " brad nails and wood glue. The top and bottom slats should be flush with the top and bottom of the frame. The middle slat should center over the middle slide, so that there is a $\frac{3}{8}$ " overhang on each side.

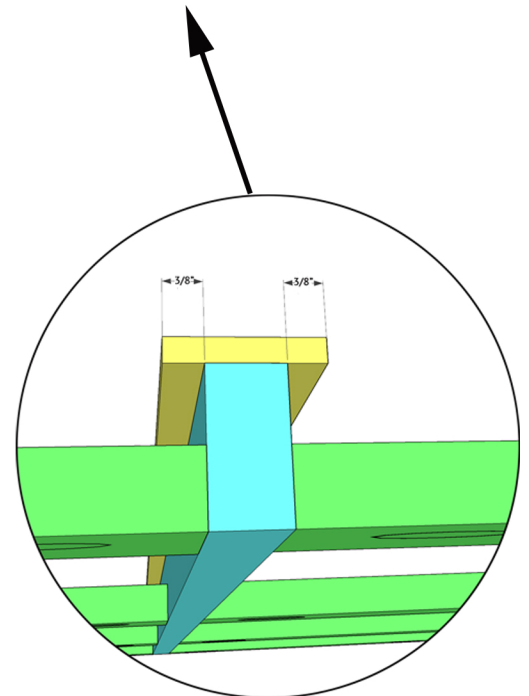


3

Cut the mailbox bottom and the mail dividers. Attach each divider to the mailbox bottom with 1 1/4" brad nails and wood glue.

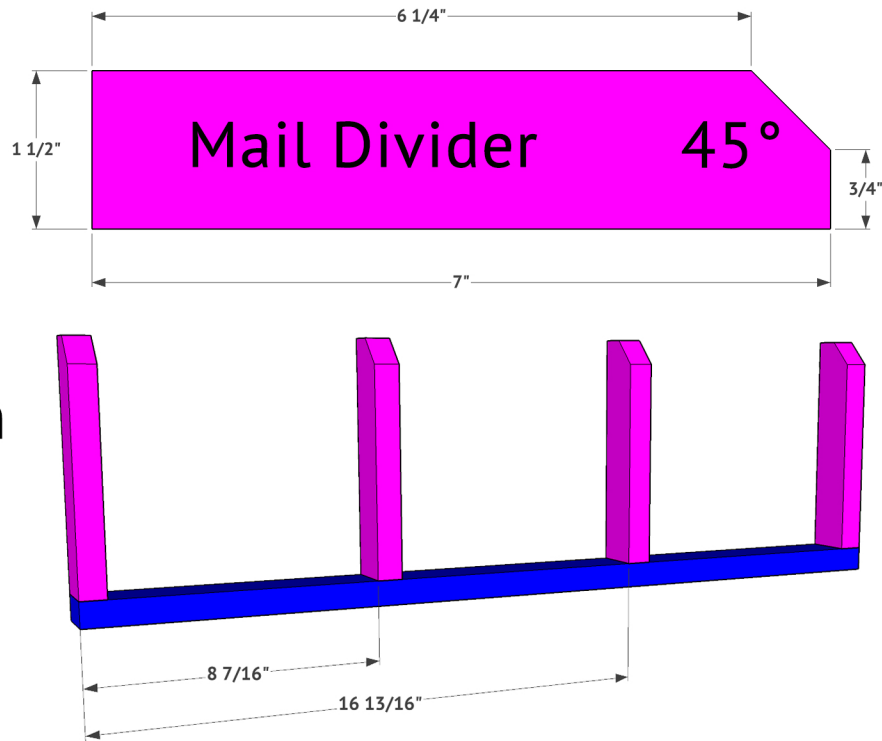


4

Attach the mail sorter to the mailbox tile, 1" from the bottom. Use 1 1/4" brad nails and wood glue, through the back of the mailbox tile, into the mail dividers and mailbox bottom.

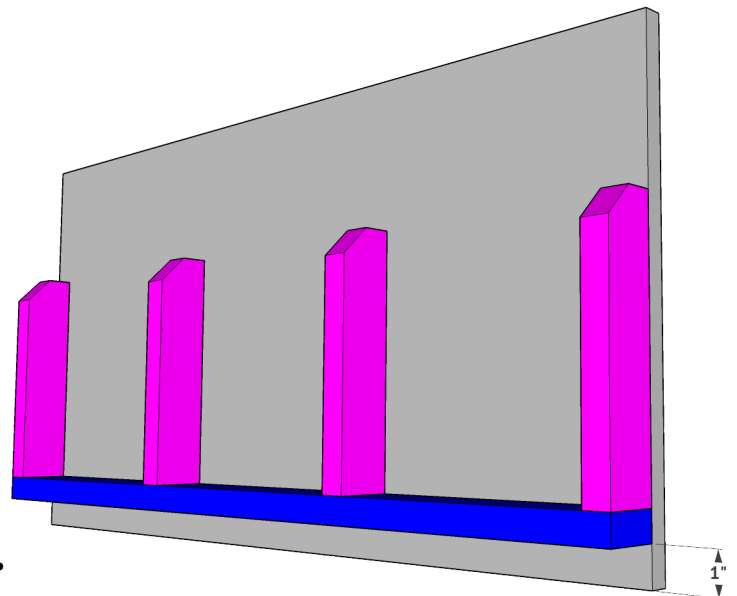



5

Cut the mail sorter slats to fit and attach them to the front of the mail dividers with 5/8" brad nails and wood glue.

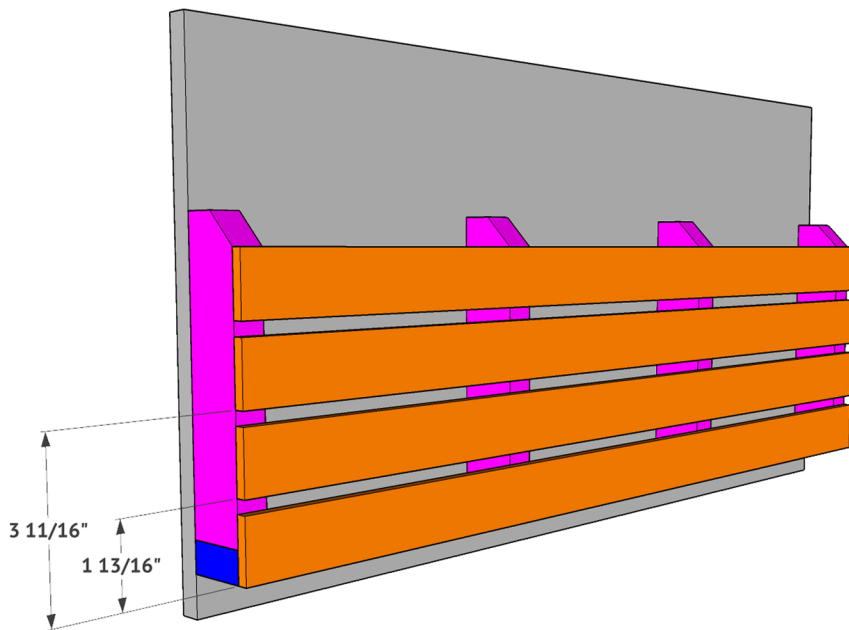


6

Cut the tiles for the cork, chalk and dry erase boards. Cut the dry erase board to size. Spray the chalkboard tile with chalkboard paint and attach both the cork and dry erase boards, to the wood tiles, with wood glue. Set the tiles aside to dry. (Tip: add a finish to the cork board tile before attaching the cork).

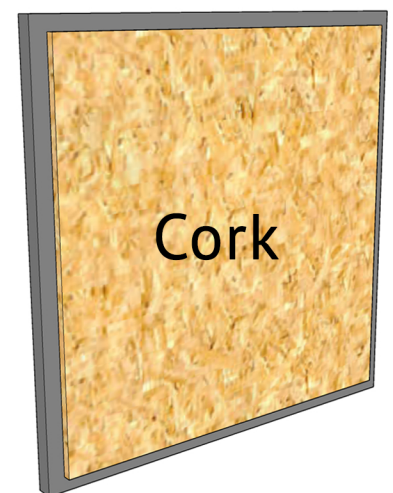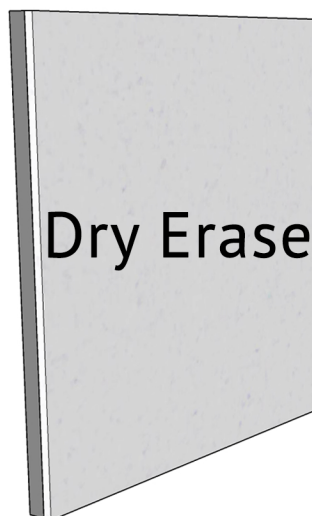





Cut the iPad tile. Then, cut the bottom piece for the iPad holder and attach it to the iPad tile, 1" from the bottom. Use 1 1/4" brad nails and wood glue, from the back of the iPad tile. There should be a 1/2" gap on both sides of the bottom piece.

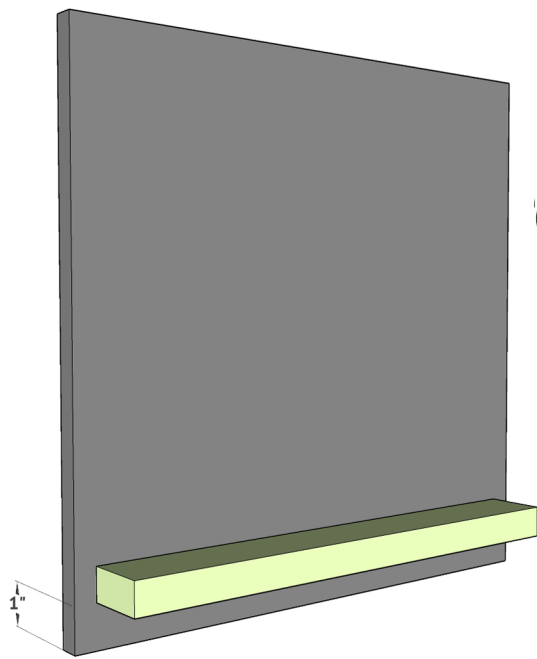

Cut the front piece, of the iPad holder, to size and attach it to the front of the bottom piece. Use 5/8" brad nails and wood glue.

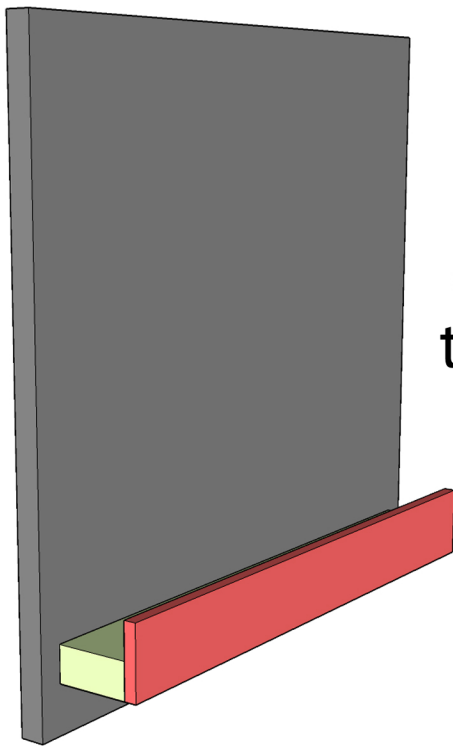

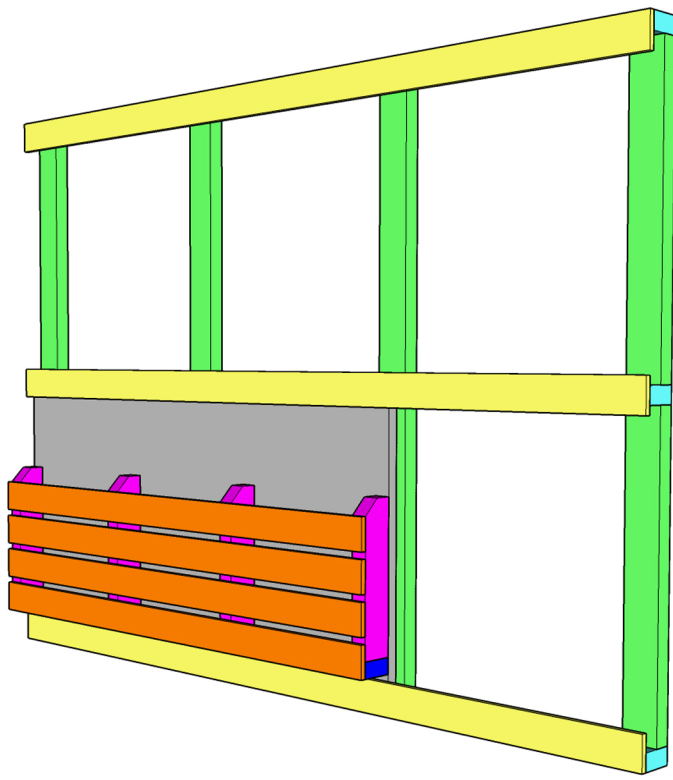

Add a finish to everything,
let it dry then slide the tiles
in where you want!

All finished!

This is the perfect project
to customize! You can
place the tiles where
you want, double up on
the tiles or invent new
tiles to fit suite your
orgainzational needs!
Make sure to share your
builds with us on social
media and use
#shanty2chic
so we can share them too!

