



©2016 WWW.SHANTY-2-CHIC.COM



# PLANKED HEADBOARD (TWIN)

## SUPPLY LIST


Item	Quantity	Description
1x6x10	3	Whitewood or Pine
1x4x6	1	Whitewood or Pine
1x2x6	2	Whitewood or Pine
1 1/4" pocket hole screws		
1 1/4" brad nails		
3" Spax screws (for attaching cleats to wall)		
wood glue		
NOTE: I ripped 2 1x2x6 from a 1x4x6 to save money.		

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!



## CUT LIST

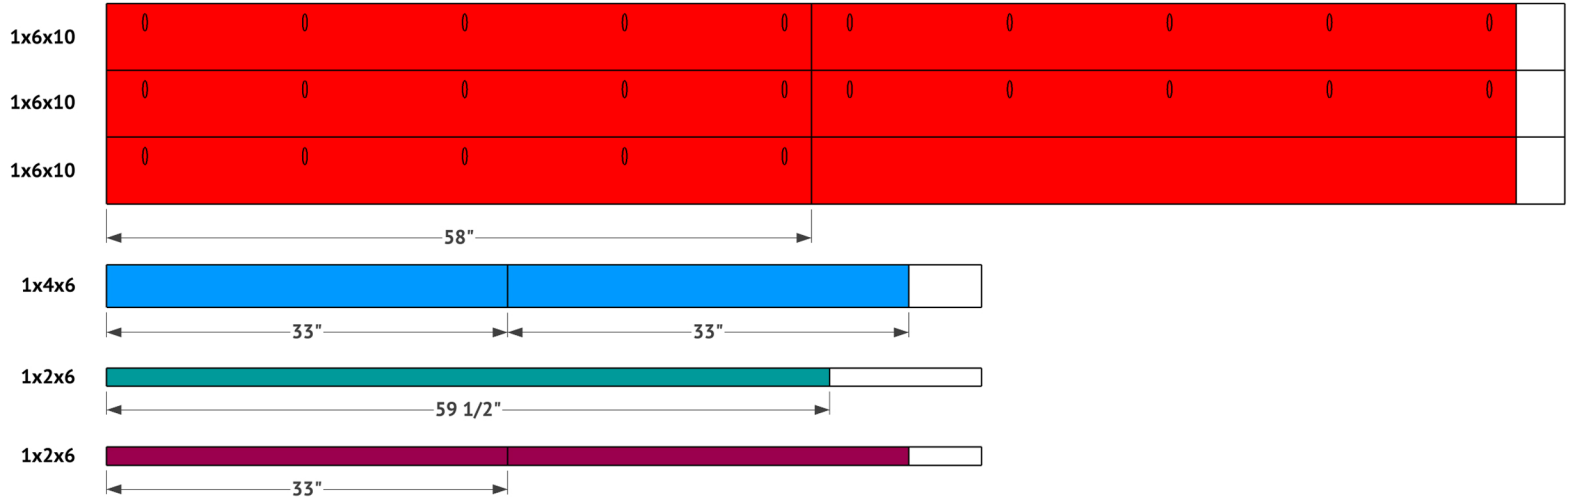


1

Cut the headboard slats and drill  $\frac{3}{4}$ " pocket holes in 5 of the boards. Then, attach the slats together with  $1 \frac{1}{4}$ " pocket hole screws.





2

Measure and cut the side trim pieces to fit and attach them to the planks with  $1 \frac{1}{4}$ " brad nails and wood glue. The front of the trim should be flush with the planks.

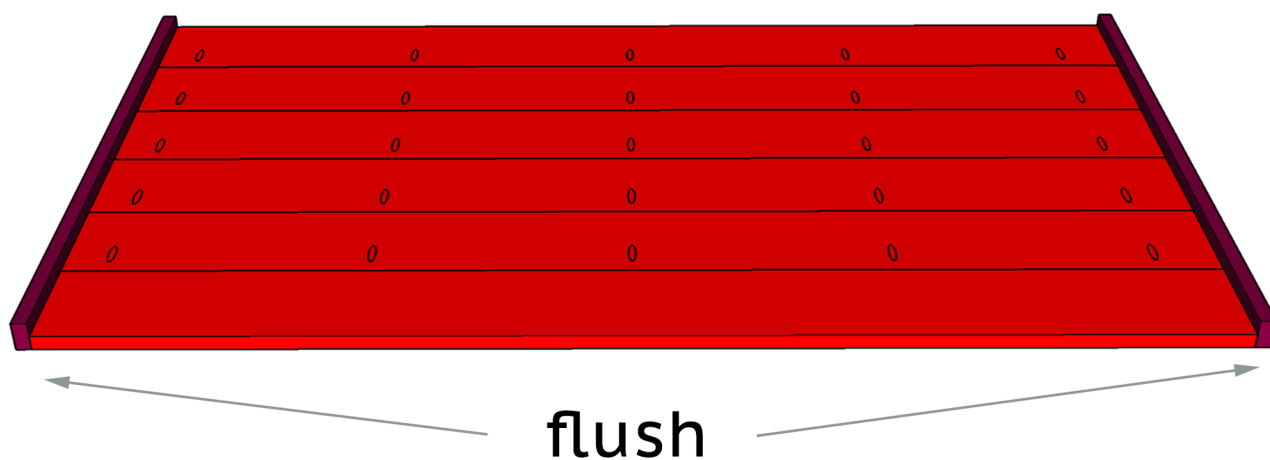



Measure and cut the top trim piece to fit. Attach it to the top of the planks with 1 1/4" brad nails and wood glue. The front of this trim piece should also be flush with the front of the planks.

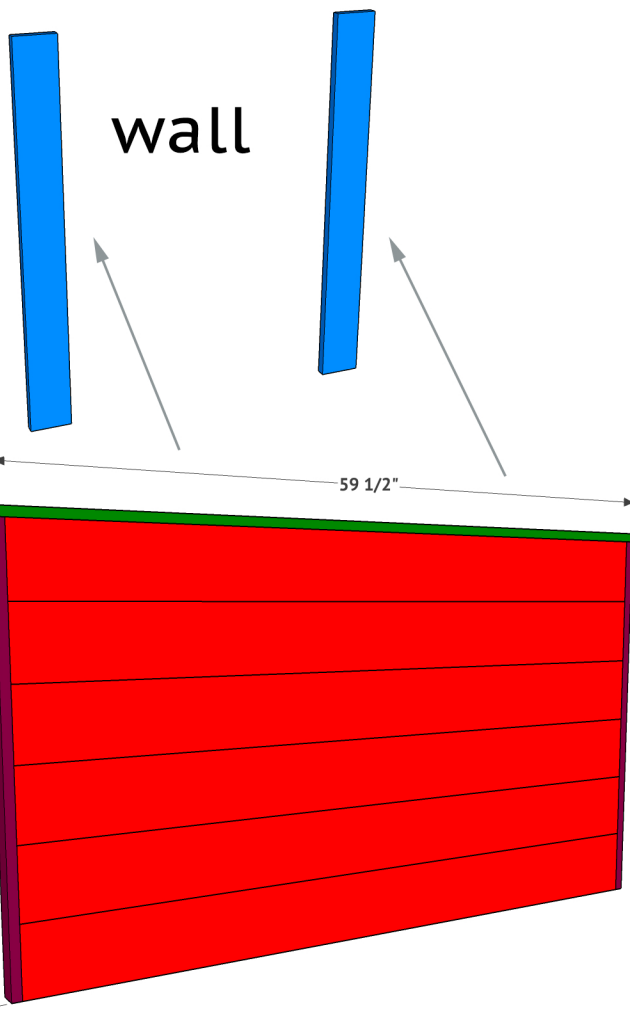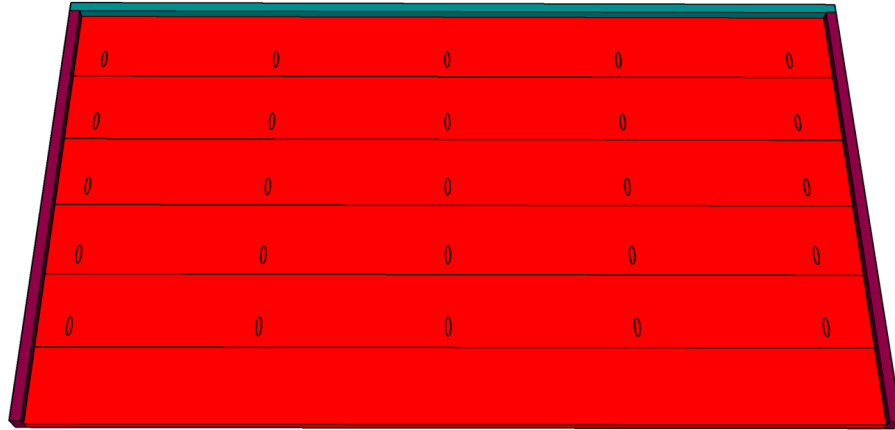

Add a finish to the headboard and attach the cleats to the studs behind the wall. Attach the headboard, to the slats, with 1 1/4" brad nails. The nails should go into the front of the headboard and into the cleats. Make sure to share your builds on social media and use #shanty2chic so we can share them too!