



©2017 WWW.SHANTY-2-CHIC.COM



FARMHOUSE COFFEE TABLE

SUPPLY LIST


Item	Quantity	Description
2x4x8	4	framing lumber- ripped to 3"
2x6x8	4	framing lumber - ripped to 5"
wood glue		
2.5" pocket hole screws	several	
2.5" wood screws	several	



Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

CUT LIST

**** We ripped all of these boards before building. The 2x4 are ripped to 3" wide each and the 2x6 are ripped to 5" each. If you choose not to do this step, you will need to modify the cuts of your table!!****

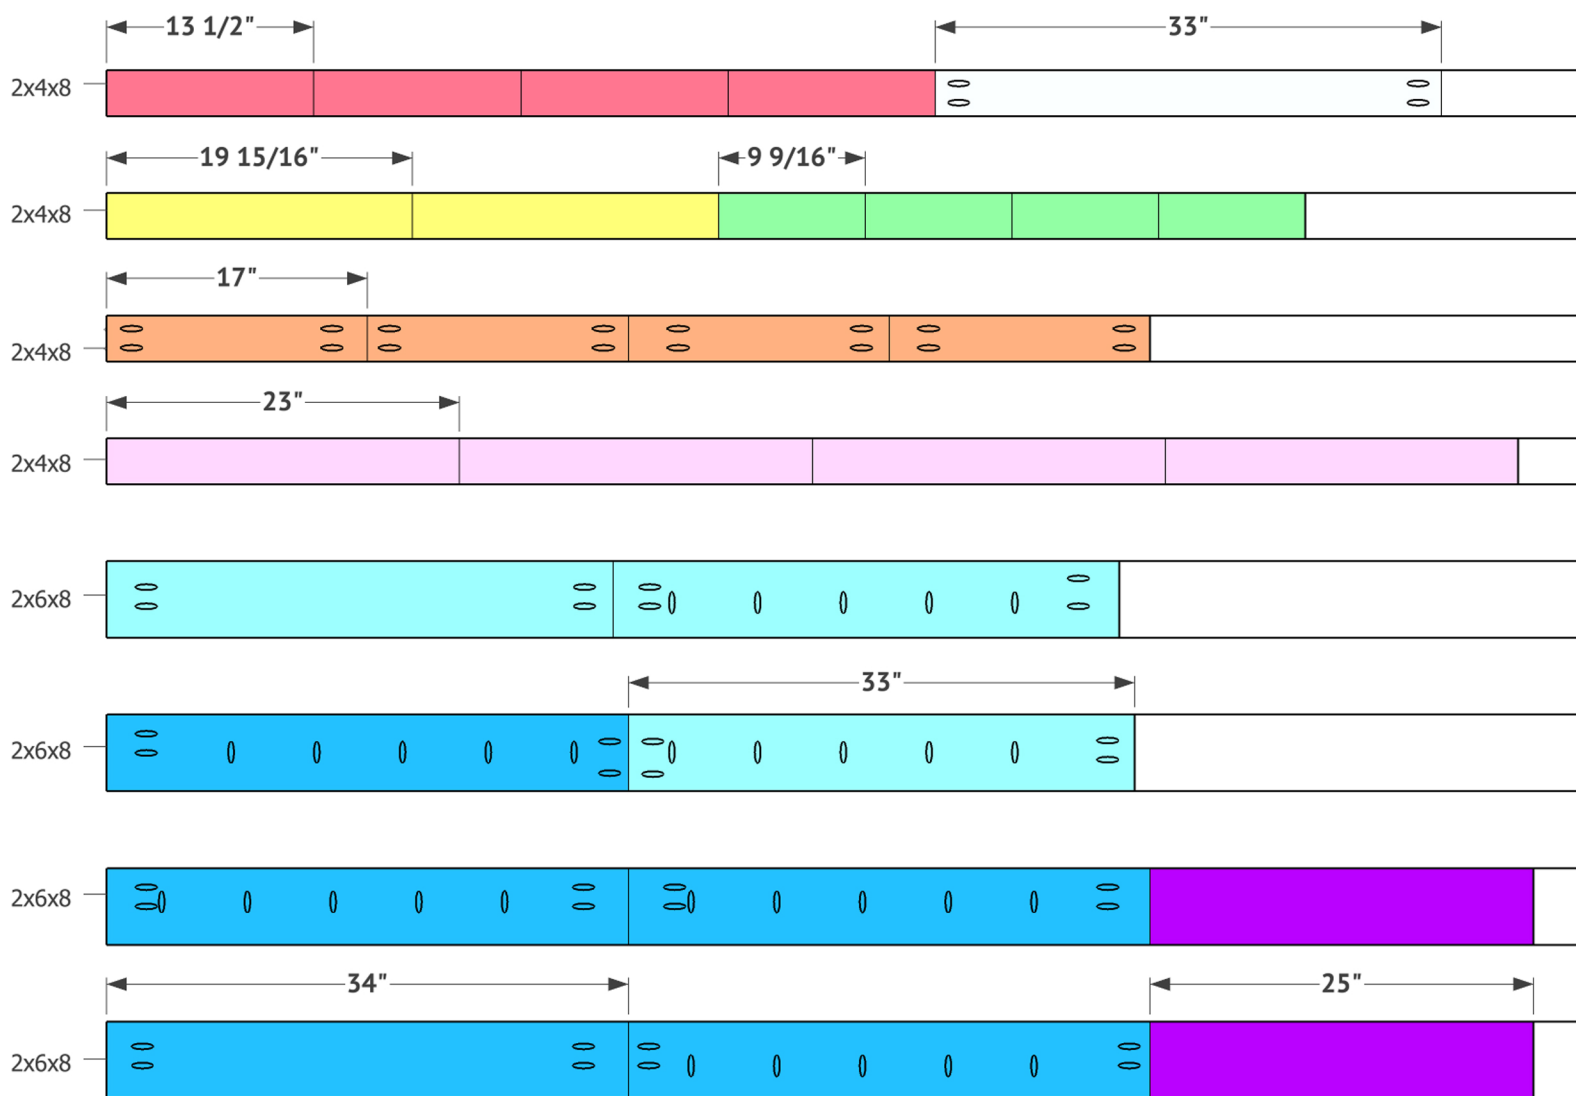

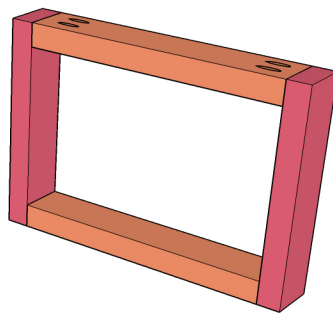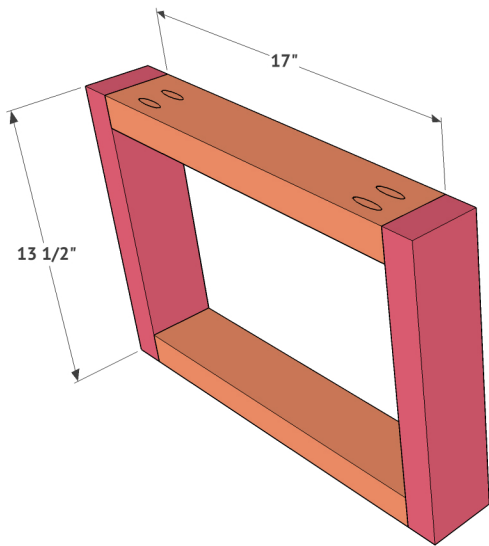



1

First, build two boxes for each leg assembly. These are attached using wood glue and 2.5" pocket hole screws through the horizontal boards and into the vertical boards.

You want your pocket holes facing the outside of the box on this part because we will cover them with another board on the next part.


Now add the decorative pieces to the top and bottom. These edges are cut at a 45° angle and are attached to each assembly with wood glue and 2.5" wood screws through each decorative piece and into the leg assembly.

2

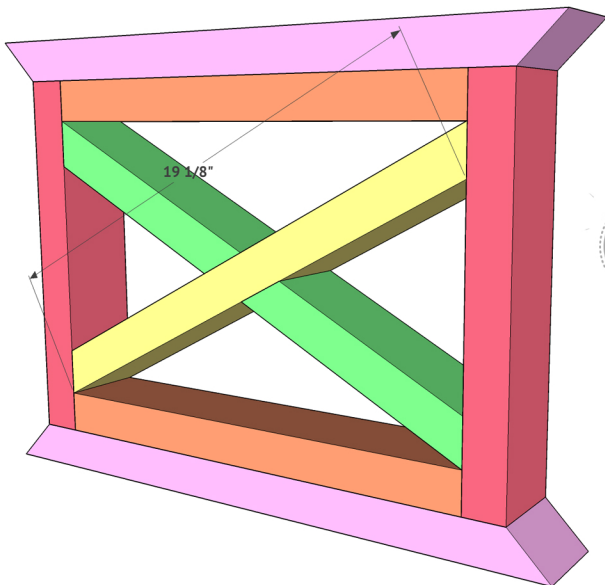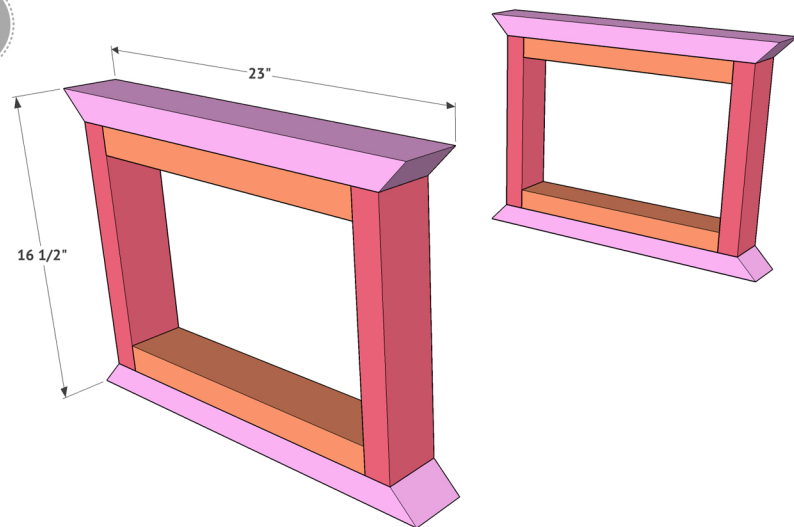


3


We cut the decorative diagonal pieces to fit on this part. Mark each board with your pencil and cut them to fit exact. You can check out the video if you have questions about this part! We walk you through it. Cut the diagonal pieces to fit first, then mark and attach them to each other using wood glue and nails. Then, fit them in the box and attach them with wood glue and nails through the box and into each end of the X piece.

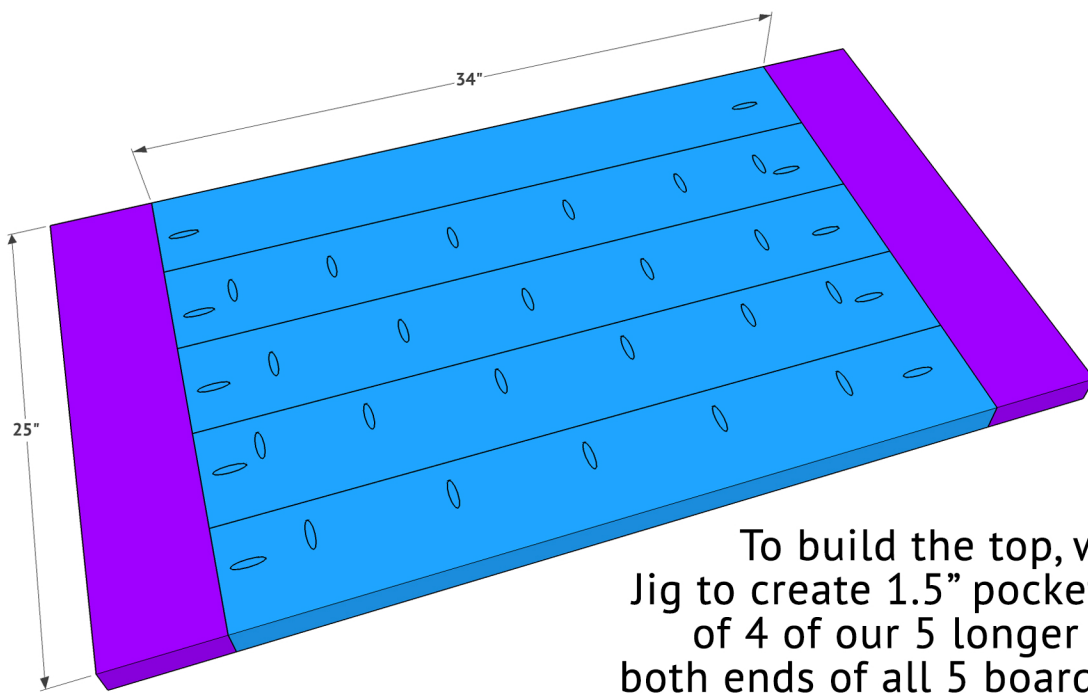



To build the top, we used our Kreg Jig to create 1.5" pocket holes down one side of 4 of our 5 longer boards, and also at both ends of all 5 boards. Attach the 5 boards to each other first with 2.5" pocket hole screws, and then attach the breadboards with 2.5" pocket hole screws.

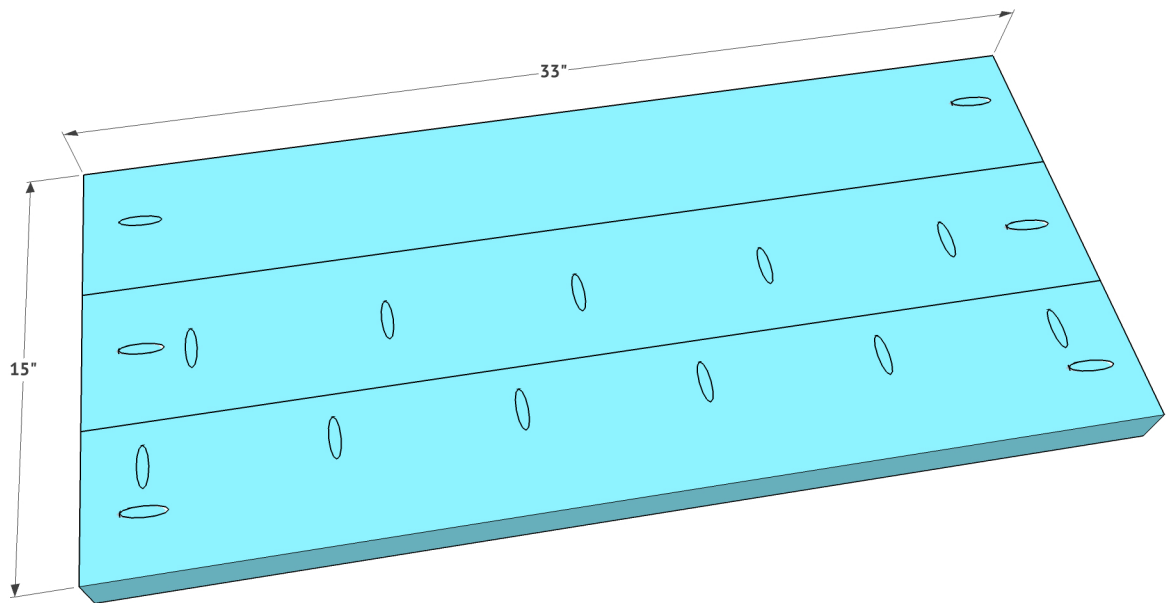

Create the shelf assmebly of the table the same way! Attach the three boards to each other using 2.5" pocket hole screws. Don't forget to add the pocket holes on each end to attach this to the leg assembly later.

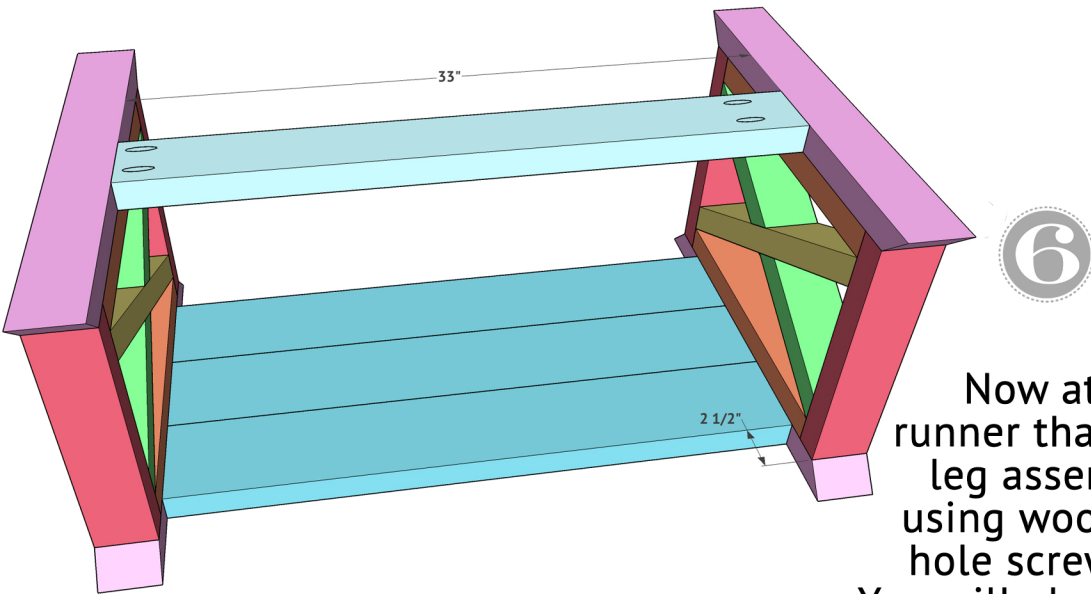

Now attach the horizontal runner that will go between each leg assembly. This is attached using wood glue and 2.5" pocket hole screws into each assembly. You will also attach the bottom shelf to both sides on this part. Make sure your pocket holes are facing down.

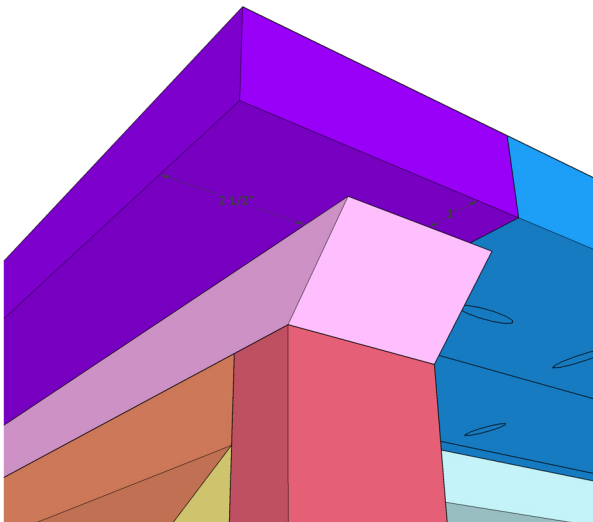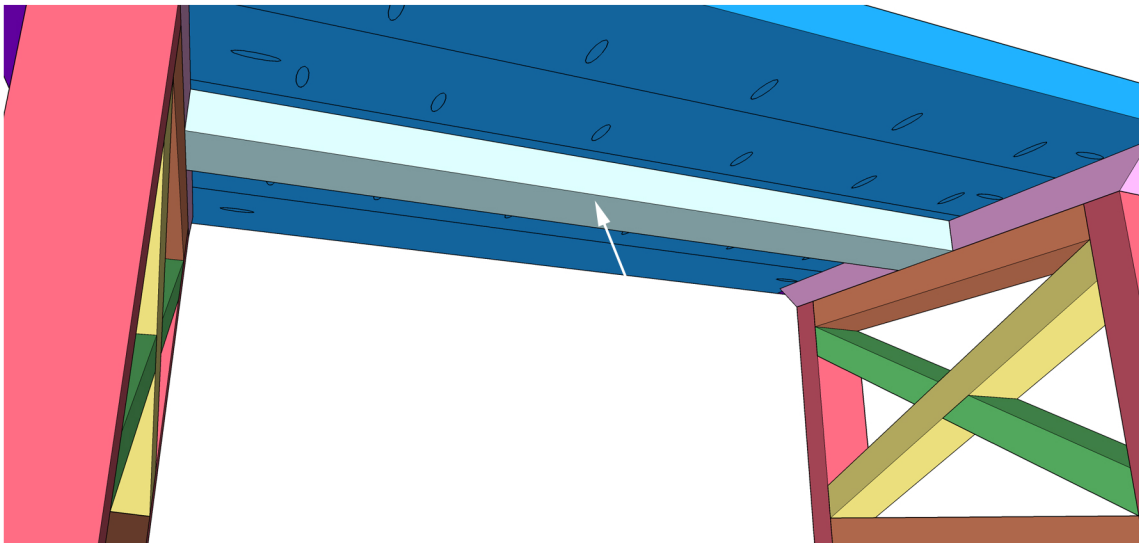

Final step is attaching the top! Line the top up evenly on the base. Set the top face down on the ground and attach the base through the horizontal runner using wood glue and 2.5" wood screws.. You can also add a few 2" nails through the top and into the bases.