



©2017 WWW.SHANTY-2-CHIC.COM



# MODERN COW PRINT

## SUPPLY LIST (FOR ONE PRINT)


Item	Quantity	Description
48"x24"x1/2" Plywood	1	Hardwood Plywood (Birch)
1x2x8	1	Pine or Common Board
Laser Print		
Mod Podge		Matte
Foam Brush		
Cloth		
1 1/4" Brad Nails		
Wood Glue		

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST

48" x 24" Hardwood Plywood

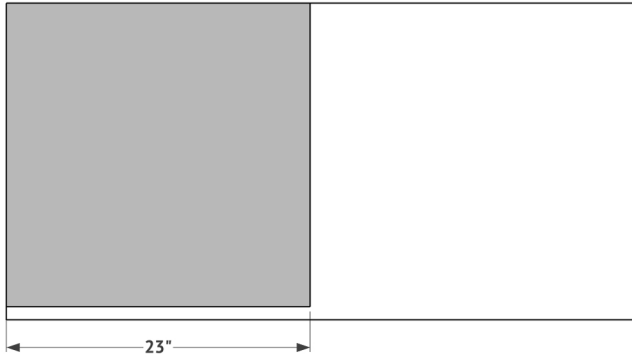

1x2x8



1

Cut the plywood to size. This is when you should paint the plywood. Once the paint is dry, apply the laser print with the mod podge.




2

While the mod podge is drying, cut the trim pieces to size and stain them. Once the trim is dry, begin by attaching the two side pieces of trim to the plywood. The front of the trim should be flush with the front of the plywood. Attach with 1 1/4" brad nails and wood glue.





Next, measure and cut for the top and bottom trim. Attach the top and bottom trim with 1 1/4" brad nails and wood glue. The ends of the top and bottom trim should be flush with the ends of the side trim.

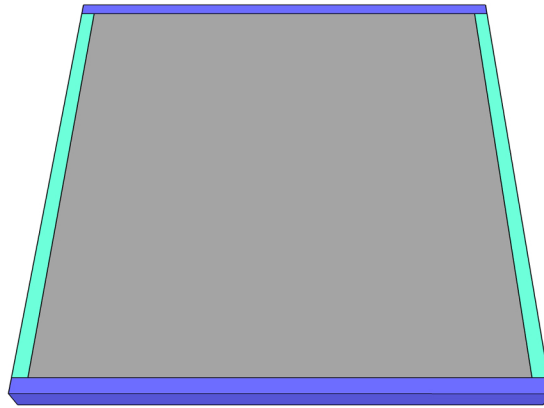

All finished! Use the overhang on the back to hang the frame on the wall! Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

