



©2017 WWW.SHANTY-2-CHIC.COM



FARMHOUSE TRUNK

SUPPLY LIST



Item	Quantity	Description
48" x 96" x 3/4" Plywood	1	Hardwood Plywood
1x4x8	4	Whitewood or Common Board
1x3x8	1	Whitewood or Common Board
1x2x8	1	Whitewood or Common Board
1 1/4" pocket hole screws		
1 1/4" finish nails		
2" finish nails		
wood glue		
Hinges	2	
Clasp	1	
Handles	2	

Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!


CUT LIST

3/4" 48" x 96" Plywood

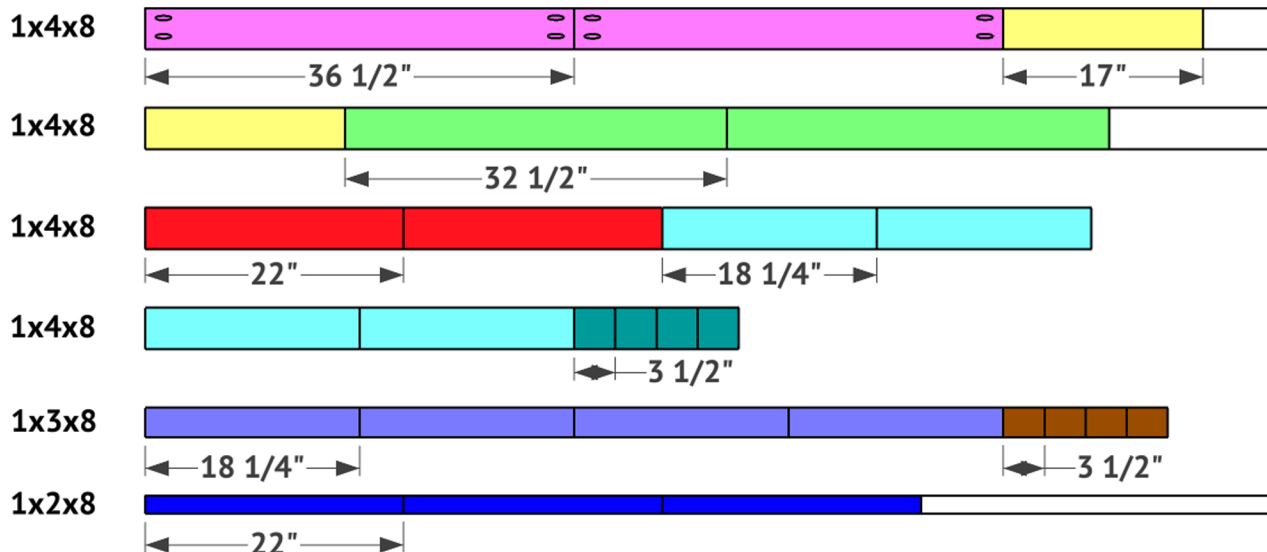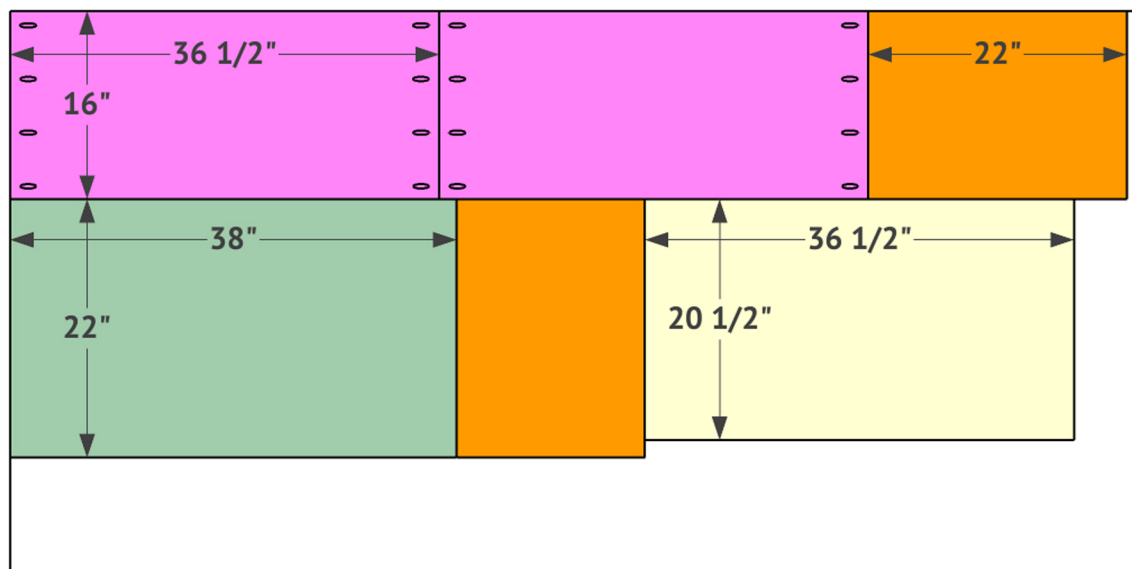


1

Cut the front, back and side pieces and drill 3/4" pocket holes in the ends of the front and back pieces. Attach them to the side pieces with 1 1/4" pocket hole screws and wood glue. The pocket holes can face out.

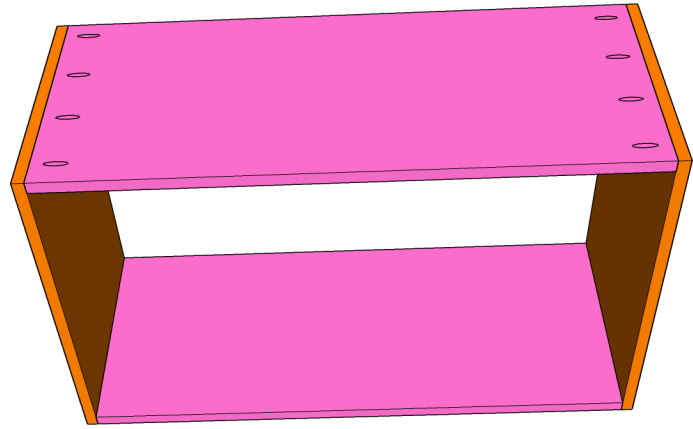


2

Cut the bottom and bottom support pieces. Attach the support pieces to the bottom of the bottom piece with 1 1/4" brad nails and wood glue.

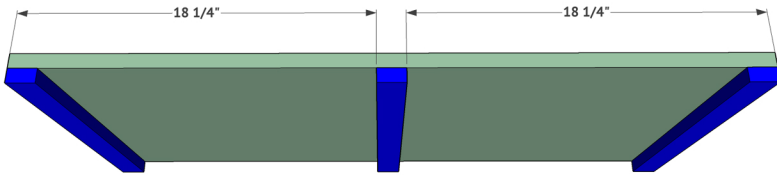


3

Attach the bottom assembly to the bottom of the trunk box with wood glue and 1 1/4" brad nails. You can use 2" brad nails through the supports and into the box, as well.

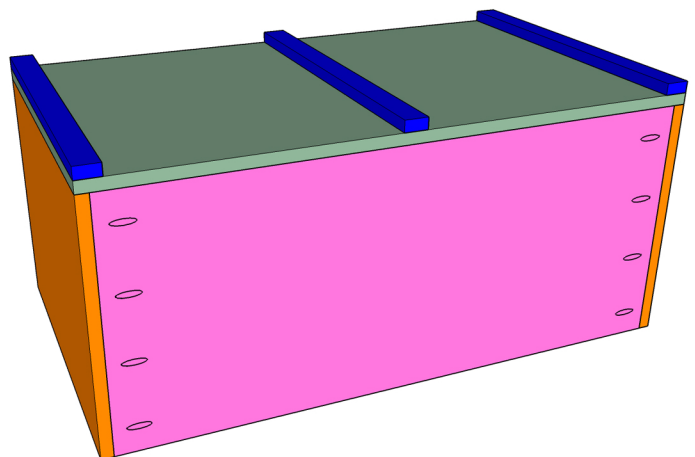


4

Cut the trim pieces to size and attach them to the sides of the trunk with 1 1/4" brad nails and wood glue. The trim should be flush with the top and sides of the trunk. Do this on both sides.

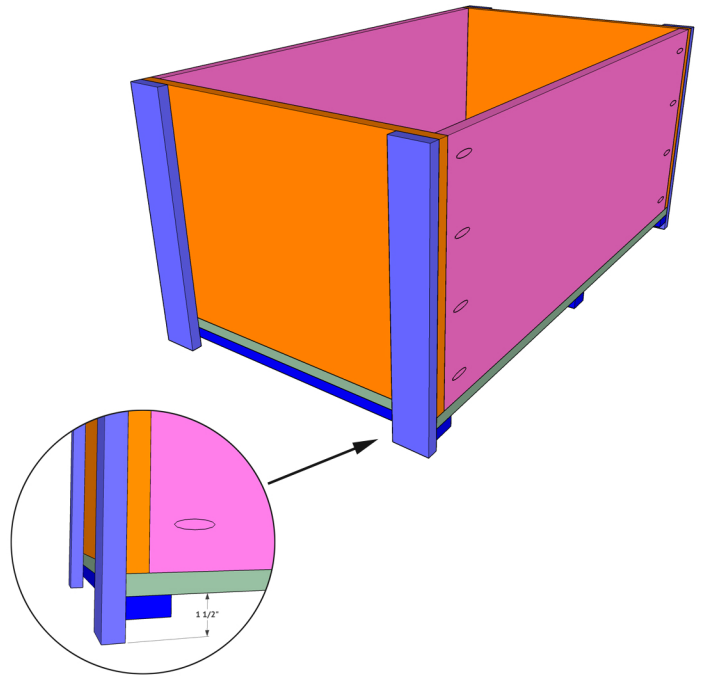


5

Cut the front and back trim pieces to size and attach them to the front and back of the trunk with 1 1/4" brad nails and wood glue. The trim should be flush with the side trim pieces, so that they cover the side pieces.

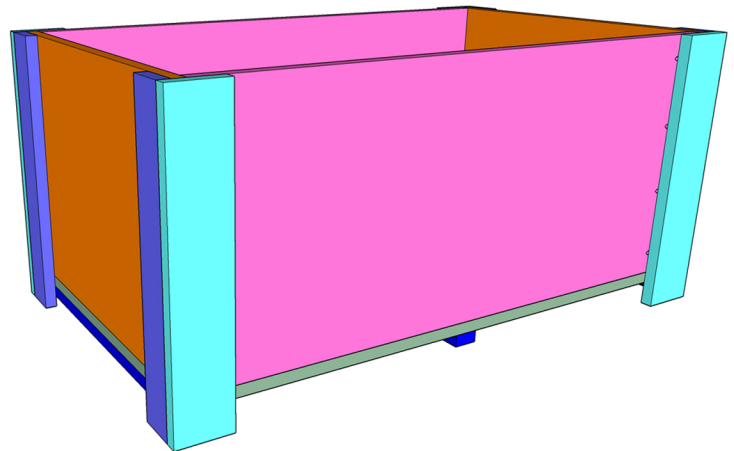


6

Cut the bottom trim, for the front and back of the trunk, to size. Attach them with 1 1/4" brad nails and wood glue.

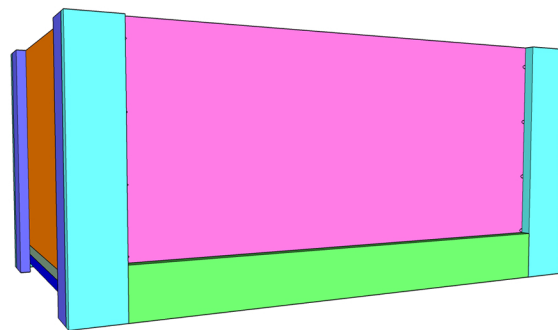


7

Cut the bottom trim, for the side pieces of the trunk, to size. Attach them with 1 1/4" brad nails and wood glue.

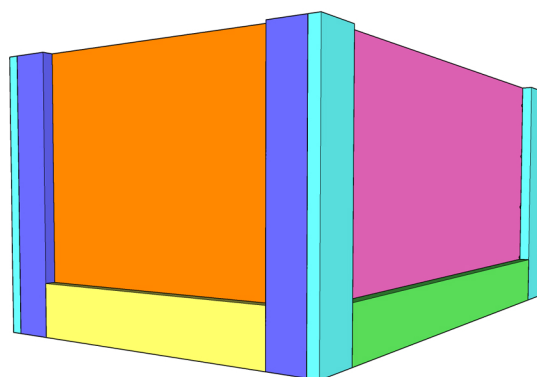

8

Cut the lid frame pieces and drill 3/4" pocket holes into the ends of the long pieces. Attach them to the short pieces with 1 1/4" pocket hole screws and wood glue.

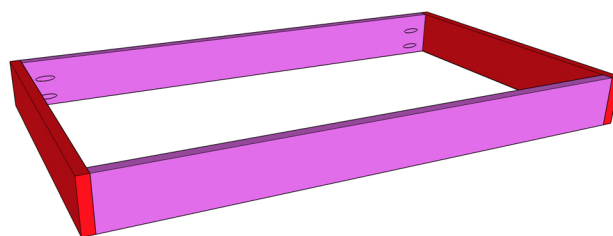


9

Cut the lid panel to size and drill 3/4" pocket hole screws around the edges.


Attach the lid frame to the lid panel with 1 1/4" pocket hole screws and wood glue.

The panel should be flush with the top of the lid. Make sure pocket holes are inside the lid.

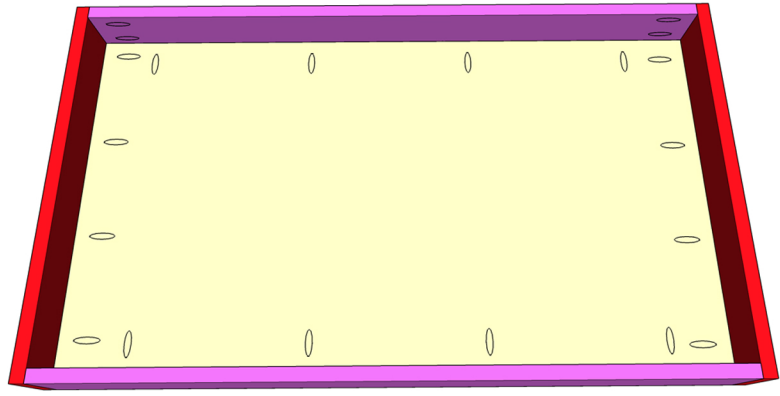


10

Cut the side trim pieces to size and attach them to the side corners of the lid with 1 1/4" pocket hole screws and wood glue. Do this on both sides.

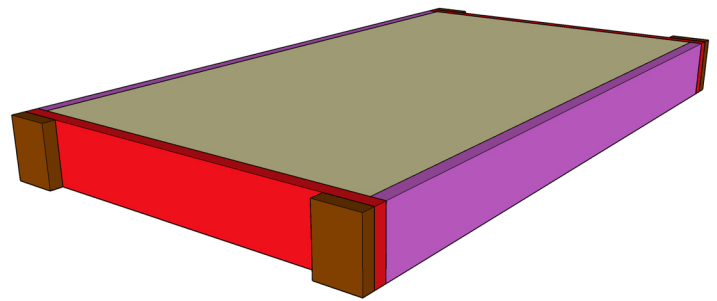


11

Cut the front and back trim pieces to size and attach them to the lid with 1 1/4" brad nails and wood glue. They should be flush with the side trim pieces.

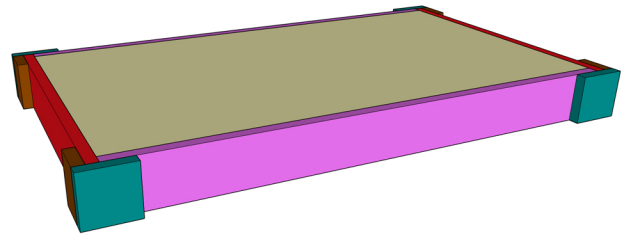

12

Add a finish before adding the hardware. The hinges will attach on the back, on top of the side trim of the lid and the trunk box.

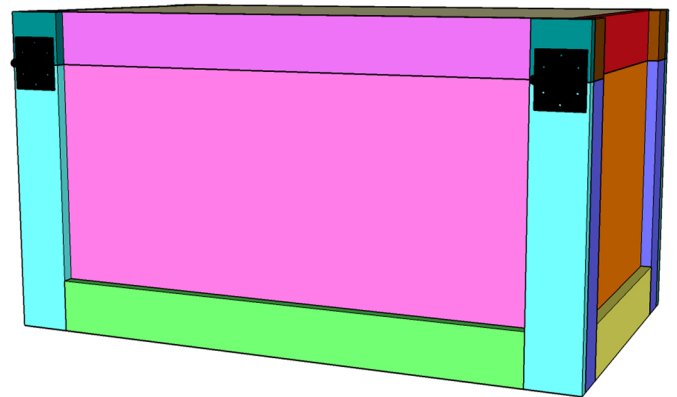

Once you have added a finish, you can add the hardware! This is where you can get creative and make it your own! Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

