



©2017 WWW.SHANTY-2-CHIC.COM



# PEW BENCH FARMHOUSE TABLE

## SUPPLY LIST


Item	Quantity	Description
2X12X8	3	Pine or Framing Lumber
2x10x8	2	Pine or Framing Lumber
2x8x8	1	Pine or Framing Lumber
2x4x10	2	Pine or Framing Lumber
2 1/2" Pocket Hole Screws		
2" Brad Nails		
Wood Glue		

*Remember!*


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

*Note: I ripped the rounded edges off of all of the boards. This is not a necessary step but if you don't make sure to adjust the plan accordingly.*

## CUT LIST

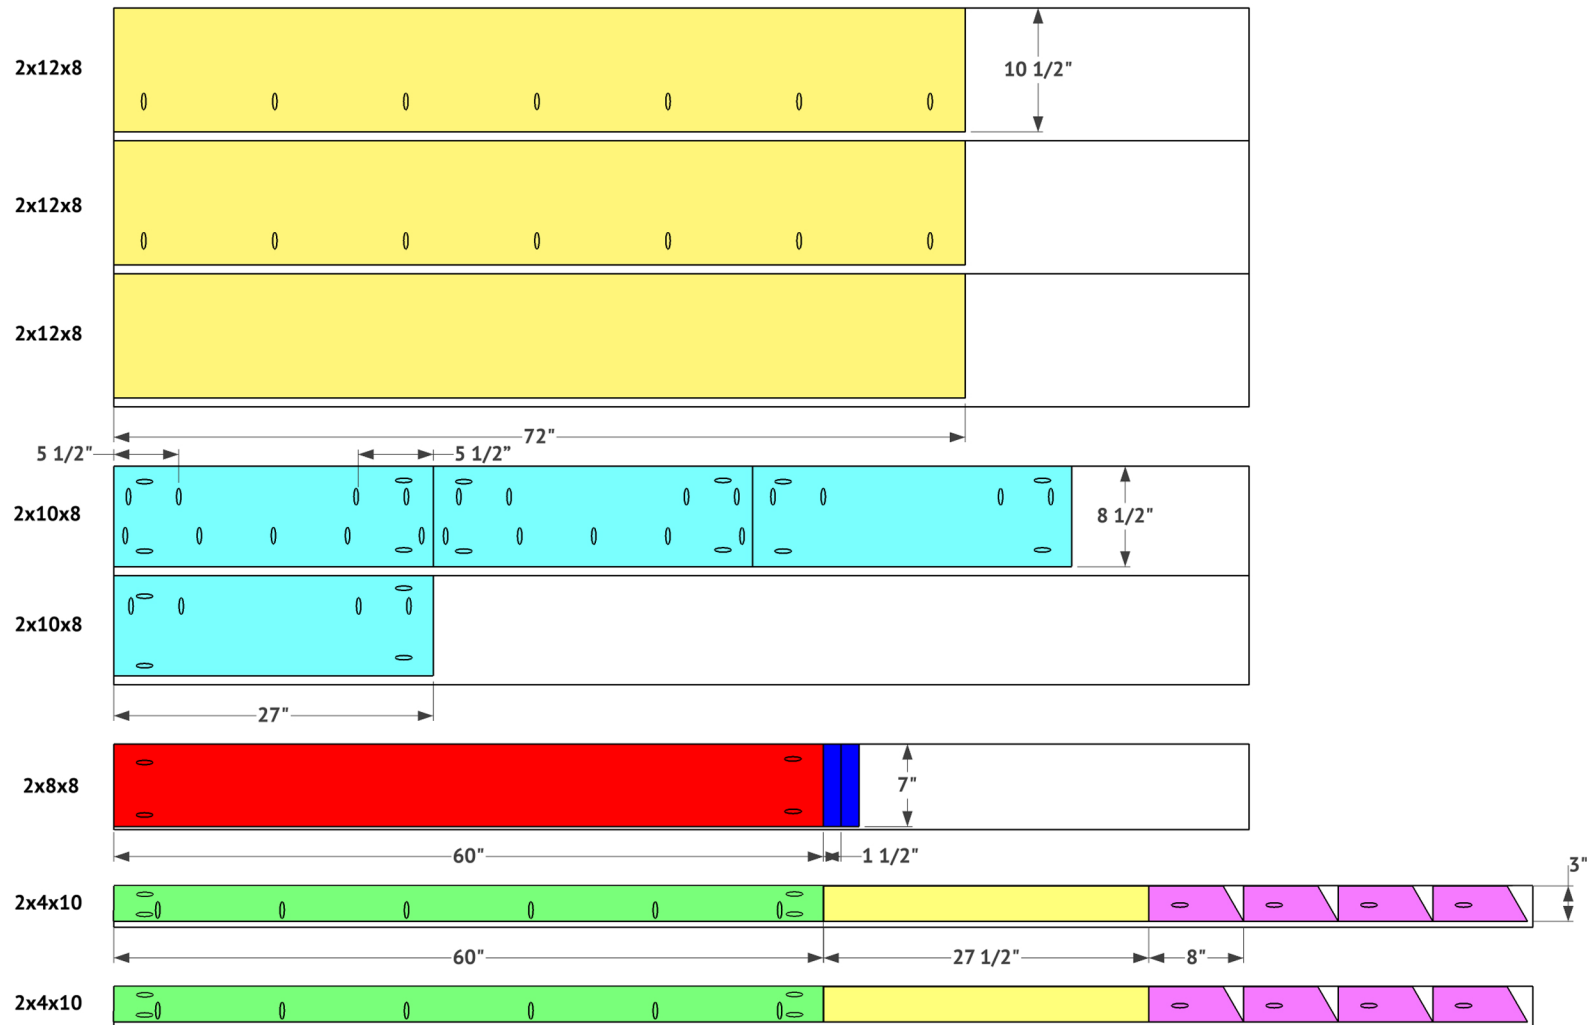


## MITER CUT DETAIL:

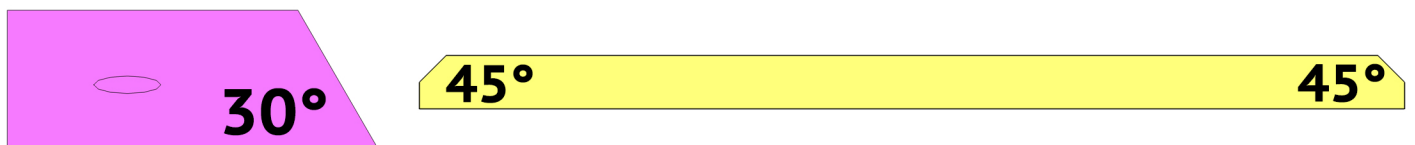

1


Cut the planks for the table top and drill 1 1/2" pocket holes into two of the boards. Attach the planks with 2 1/2" pocket hole screws.

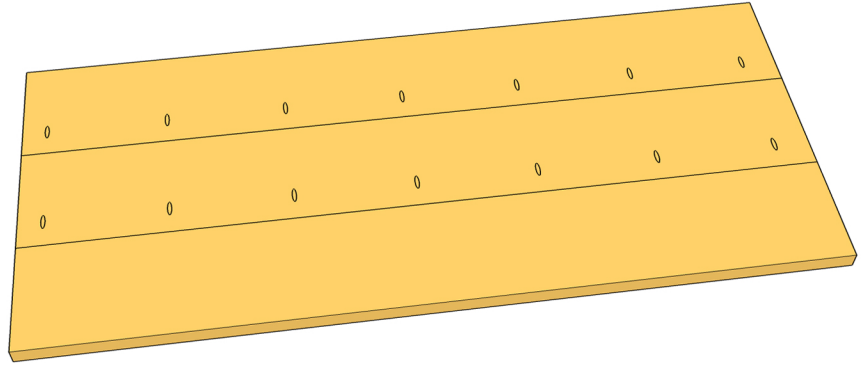

x2

2

Cut the side base planks to size and drill 1 1/2" pocket holes, as noted. Attach two side planks together with 2 1/2" pocket hole screws. Do this for both bases.

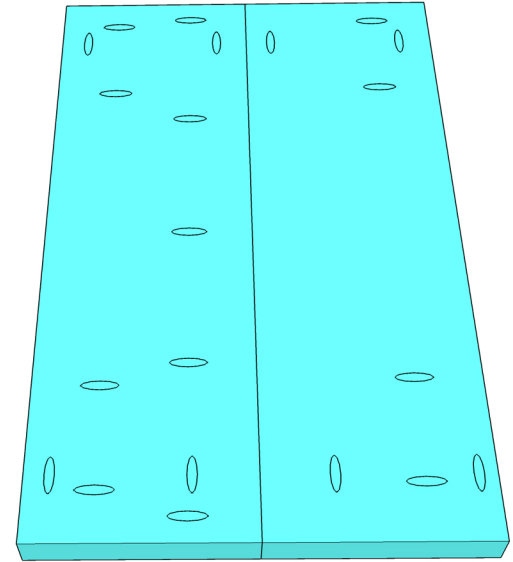


3

Cut the side trim pieces to size and drill 1 1/2" pocket holes on the straight ends. Attach them to the base with 2 1/2" pocket holes through the base and into the side pieces. Do this to both bases.


x2

Note pocket hole placement on cut list

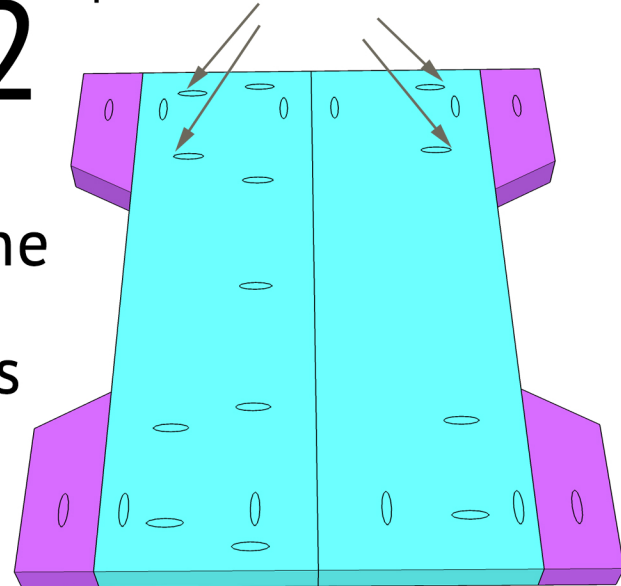


4

Cut the feet to size, center and attach them to the end of each base. Use 2 1/2" pocket hole screws and wood glue. Do this to both bases.

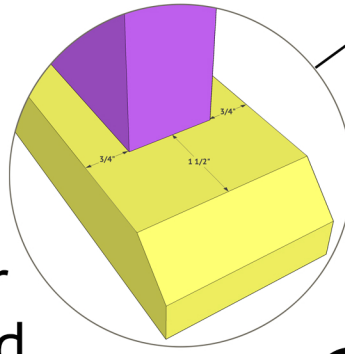


x2

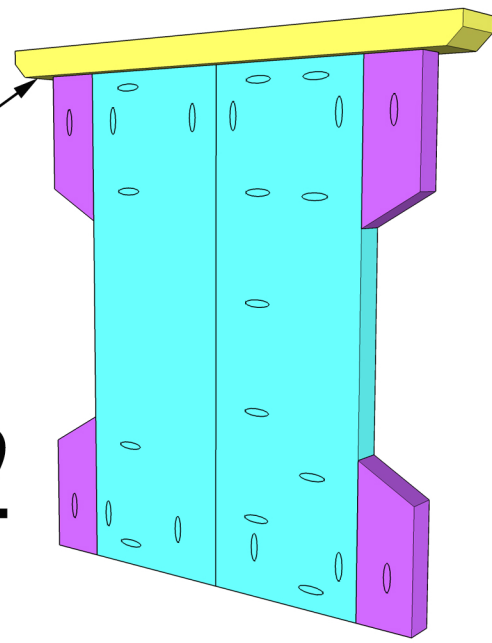

5



Cut the apron pieces to size and drill 1 1/2" pocket hole along one edge and both ends. Attach them to the bases with 2 1/2" pocket hole screws and wood glue. The top of the aprons should be flush with the top of the bases and pocket holes should face in.

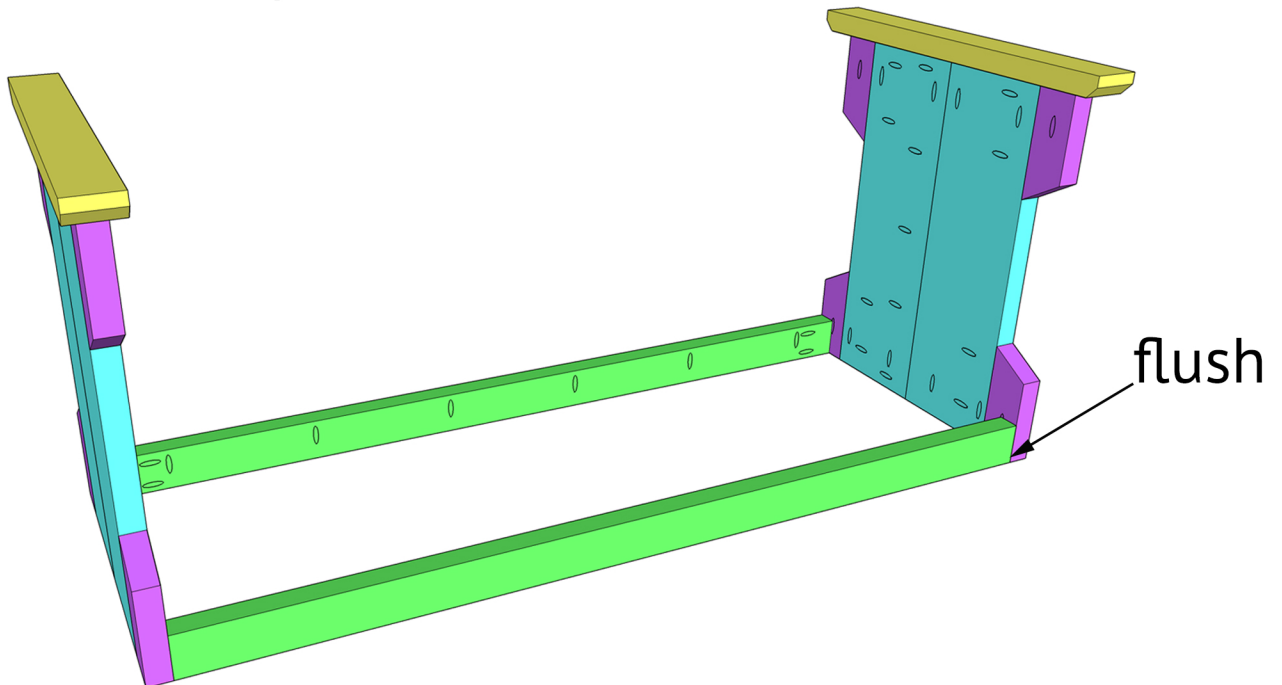





6

Cut the runner to size and drill 1 1/2" pocket holes into both ends. Center it on the bases, as shown, and attach it with 2 1/2" pocket hole screws and wood glue.

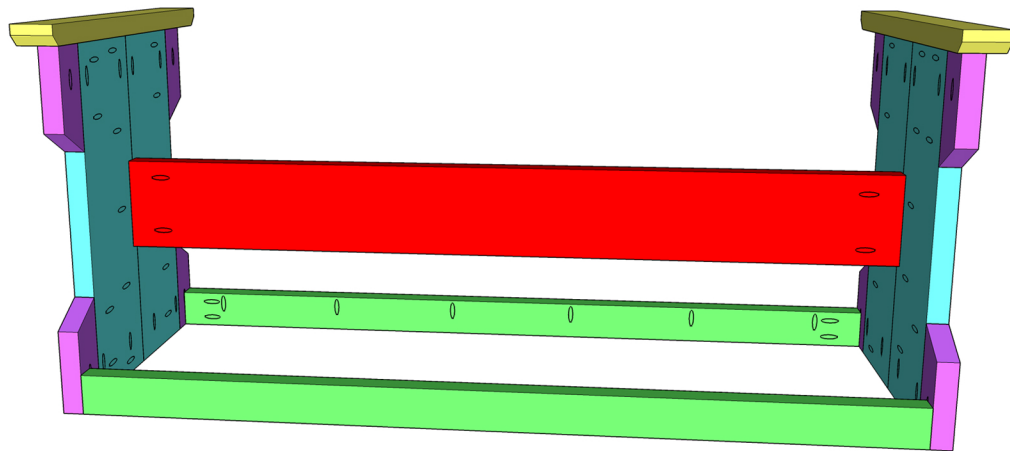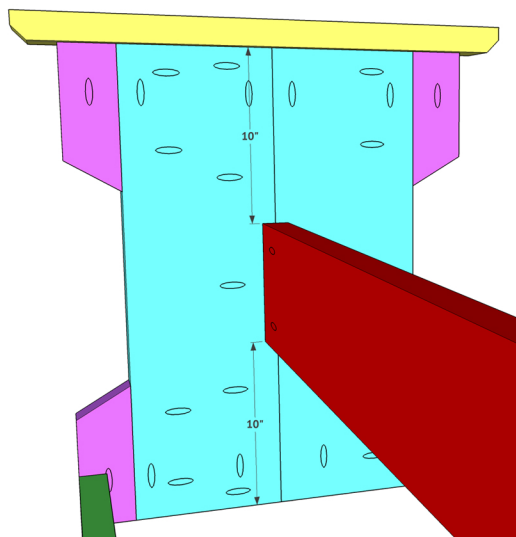


7

Center the table base on top of the table top and attach the base to the top with 2 1/2" pocket hole screws, from the aprons and bases, into the bottom of the table top.

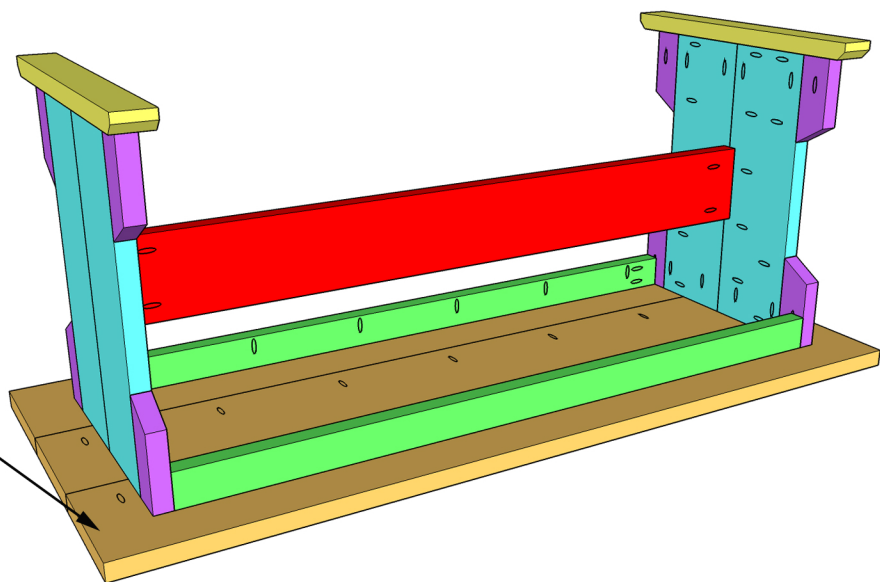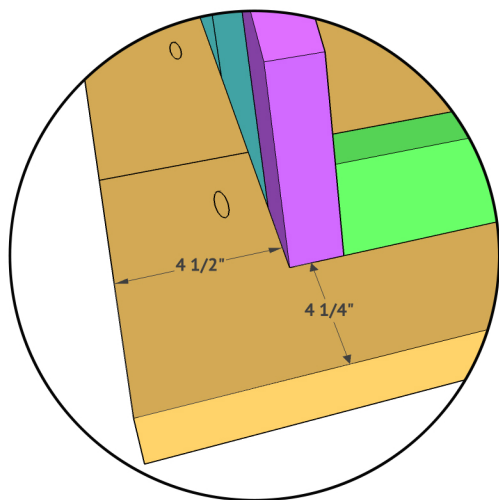



Cut the end runners to size, center them on the outside of the bases and attach them with 2" brad nails and wood glue.

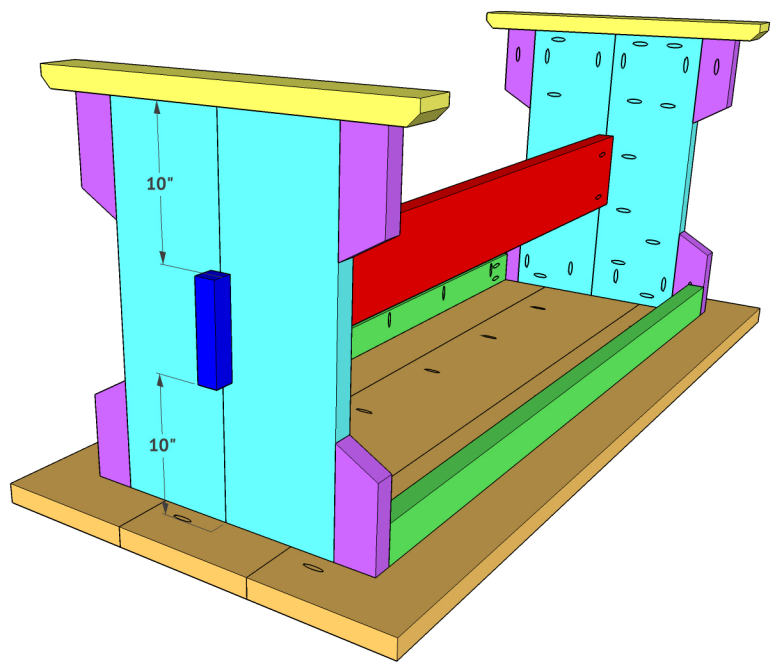

All finished! Fill all of the pocket holes with wood filler and add a finish! Make sure to share your builds with us, on social media, and use #shanty2chic so we can share them too! Happy building!

