




©2017 WWW.SHANTY-2-CHIC.COM

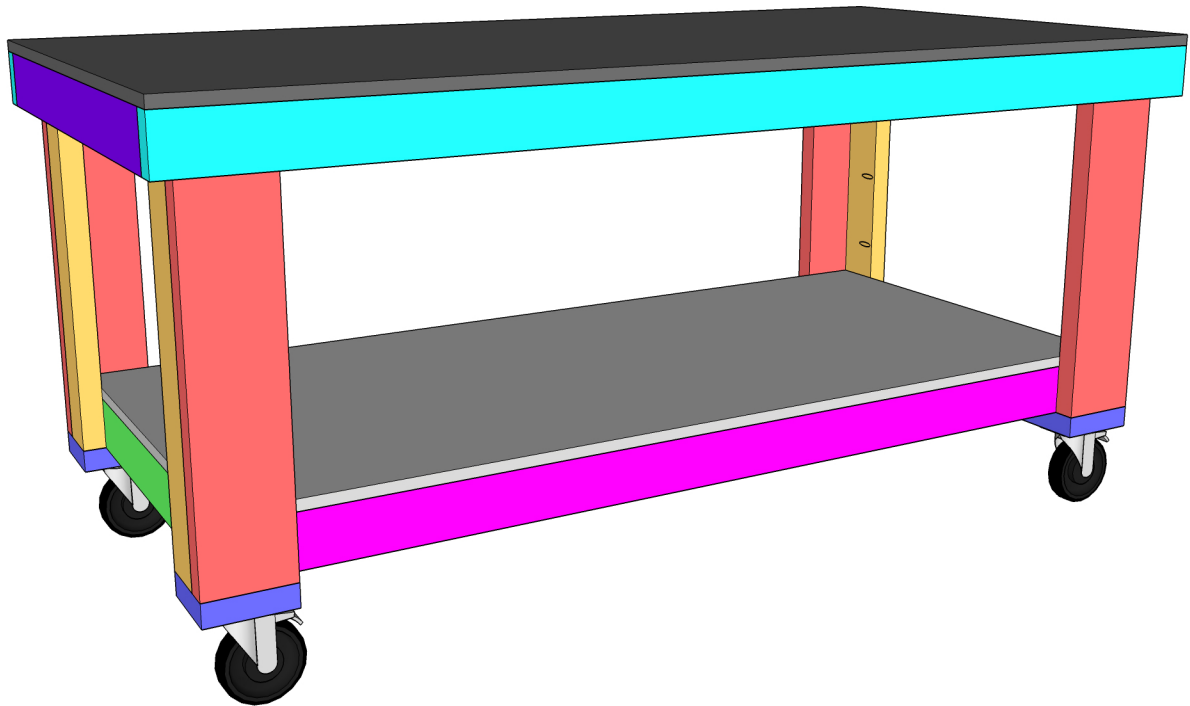

# LARGE WORKBENCH


## SUPPLY LIST

| Item                      | Quantity | Description            |
|---------------------------|----------|------------------------|
| 2x6x8                     | 2        | Pine or Framing Lumber |
| 2x4x8                     | 7        | Pine or Framing Lumber |
| 4'x8'x3/4" MDF            | 2        |                        |
| 2" brad nails             |          |                        |
| 2 1/2" wood screws        |          |                        |
| 2 1/2" pocket hole screws |          |                        |
| 5" Locking Swivel Casters | 4        |                        |

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST PAGE 1

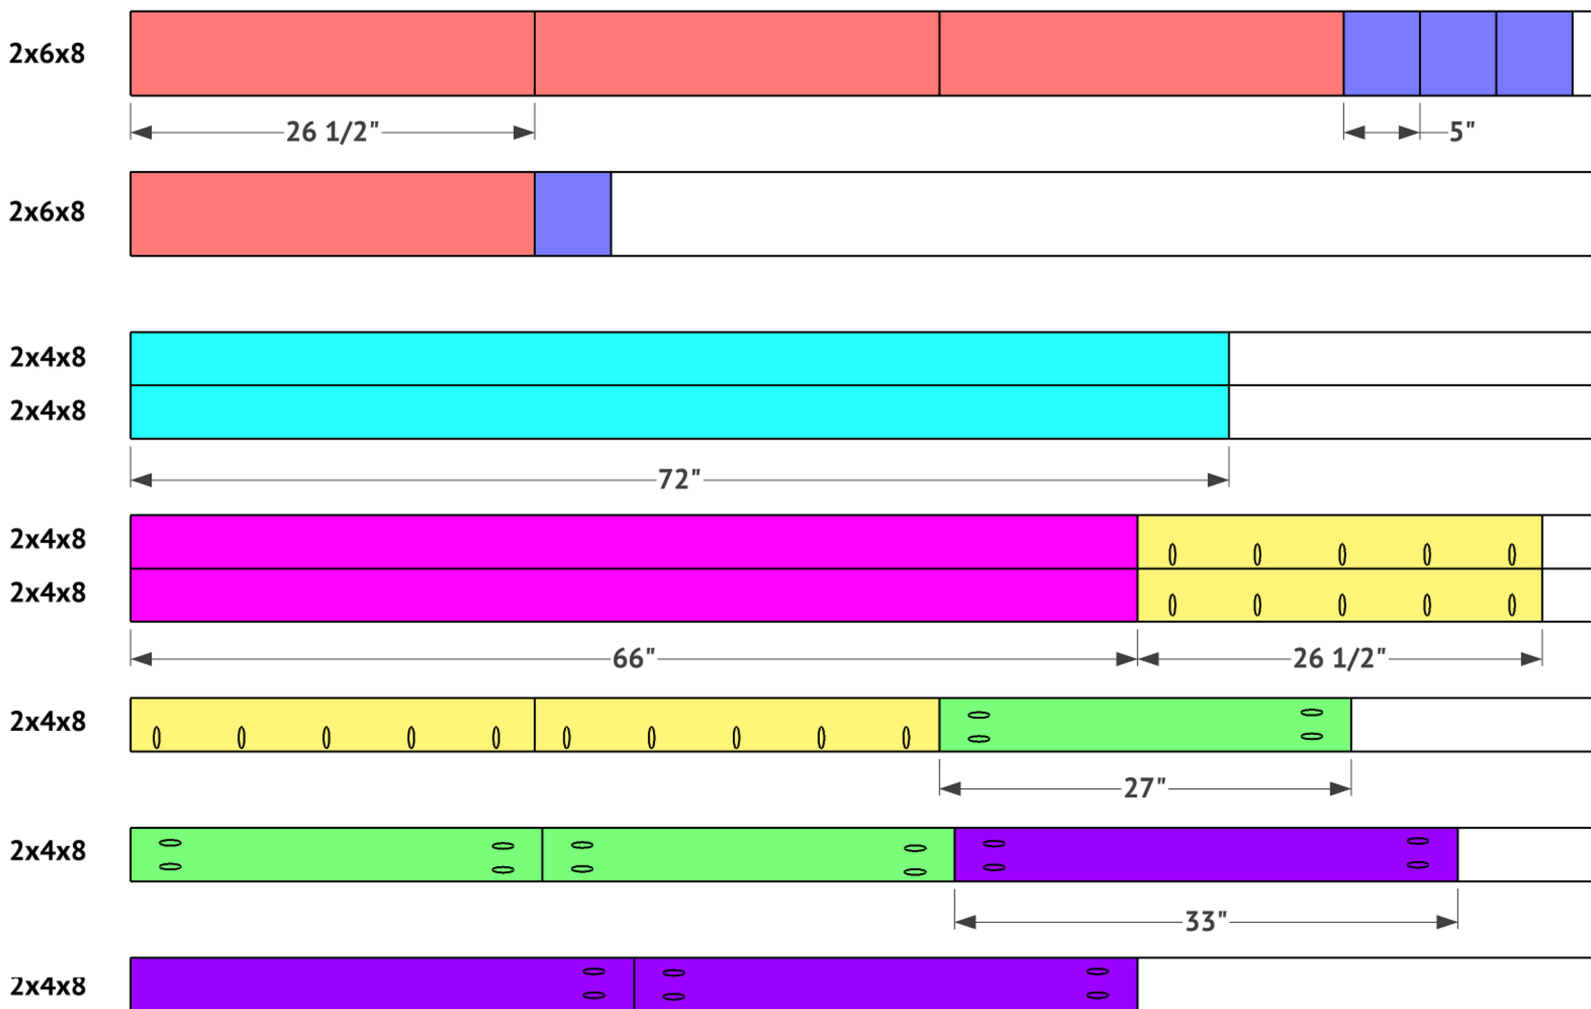


*Remember!*


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST PAGE 2


4'x8'x3/4" MDF

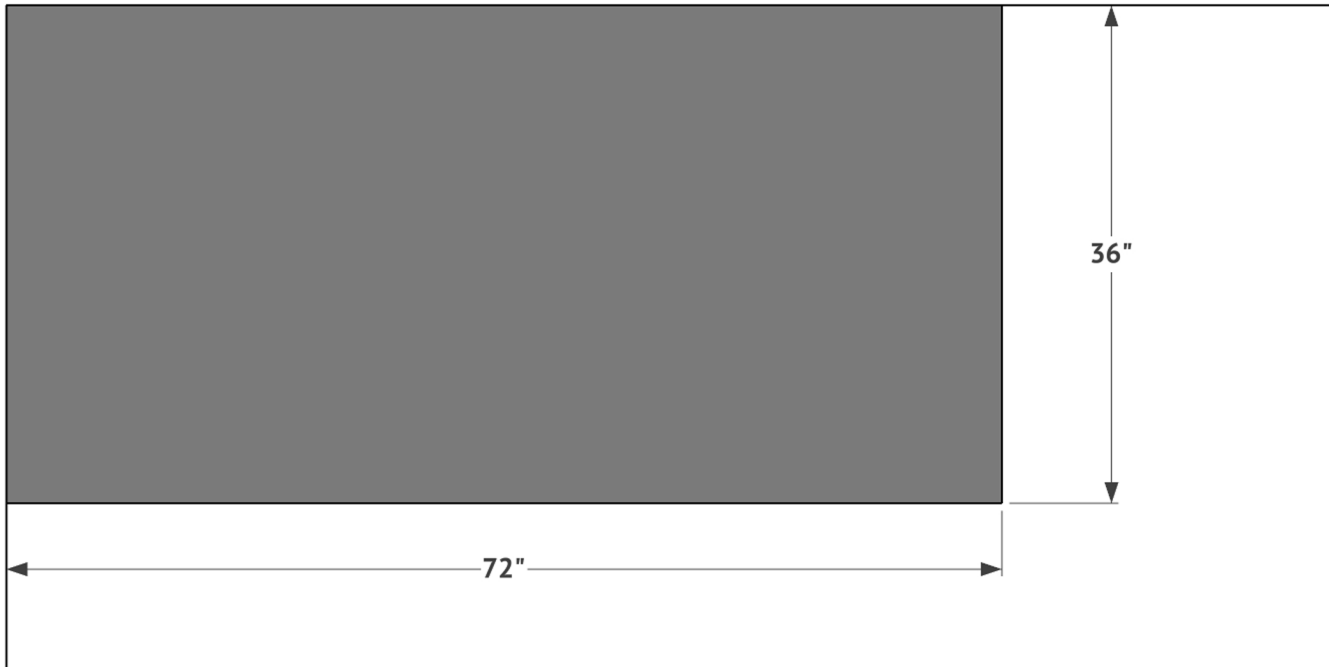


4'x8'x3/4" MDF

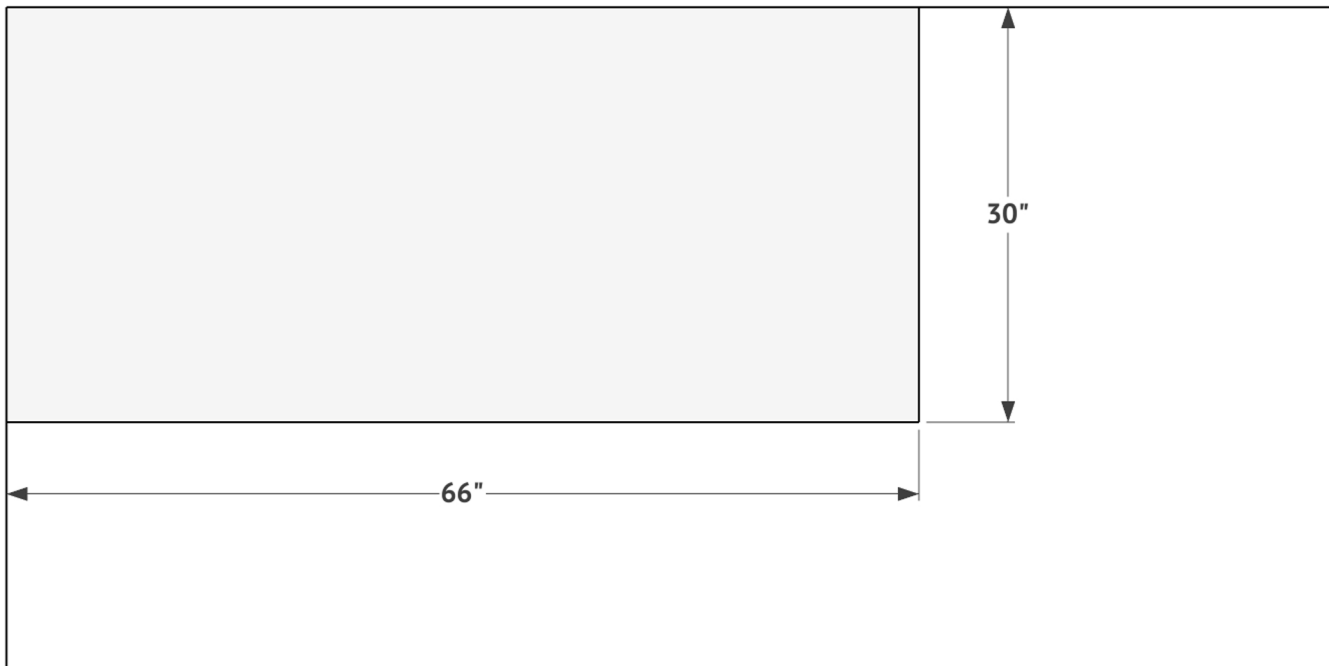

**1** After making all of the cuts, drill 1 1/2" pocket holes into the short pieces of the frames. Build the top and bottom frame by attaching the short pieces to the long pieces with 2 1/2" pocket hole screws and wood glue.

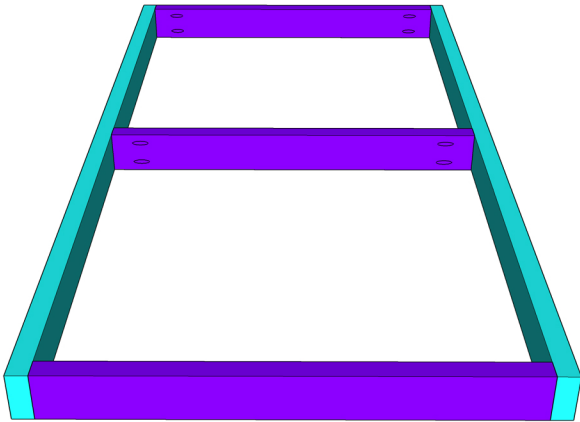


Top Frame

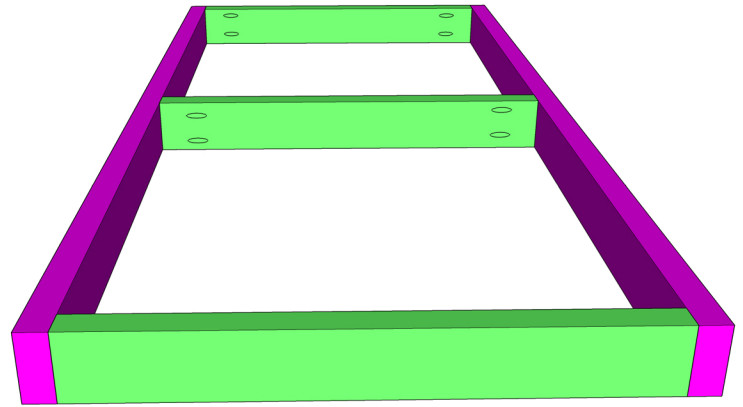

Bottom Frame


**x4**

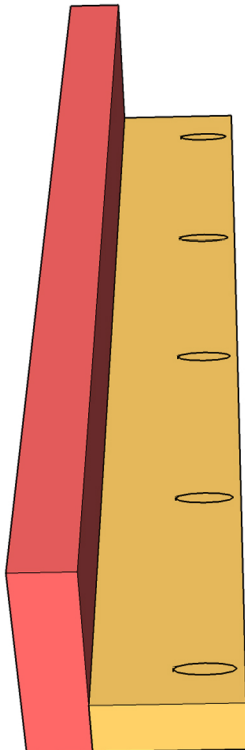

Drill 1 1/2" pocket holes into the 2x4 leg pieces and attach them to the 2x6 pieces with 2 1/2" pocket hole screws and wood glue. Do this for all 4 legs.


3

Attach the legs to the outside corners of the bottom shelf with 2 1/2" wood screws and wood glue, from the inside of the frame, into the legs. The bottom of the legs should be flush with the bottom of the frame.

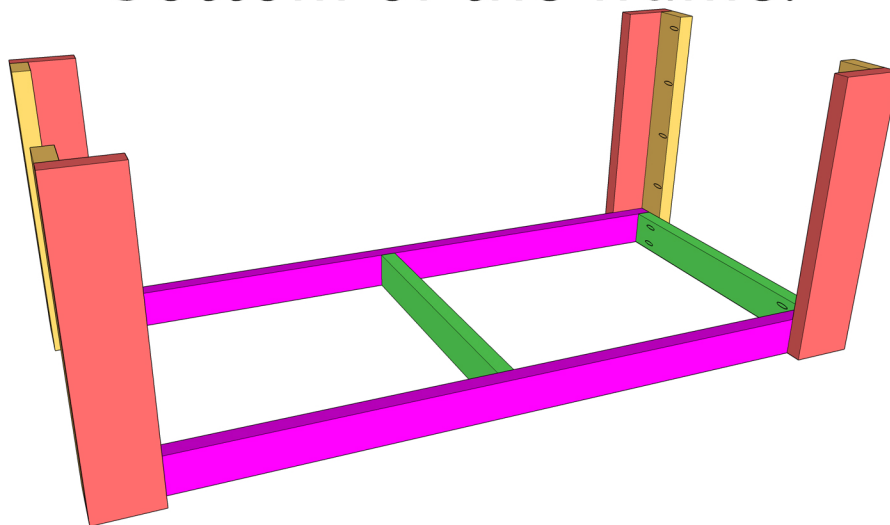


4

Flip the bench over and slide the top frame over the legs. Attach them with 2 1/2 wood screws and wood glue, through the legs and into the frame. The top of the legs should be flush with the top of the frame.

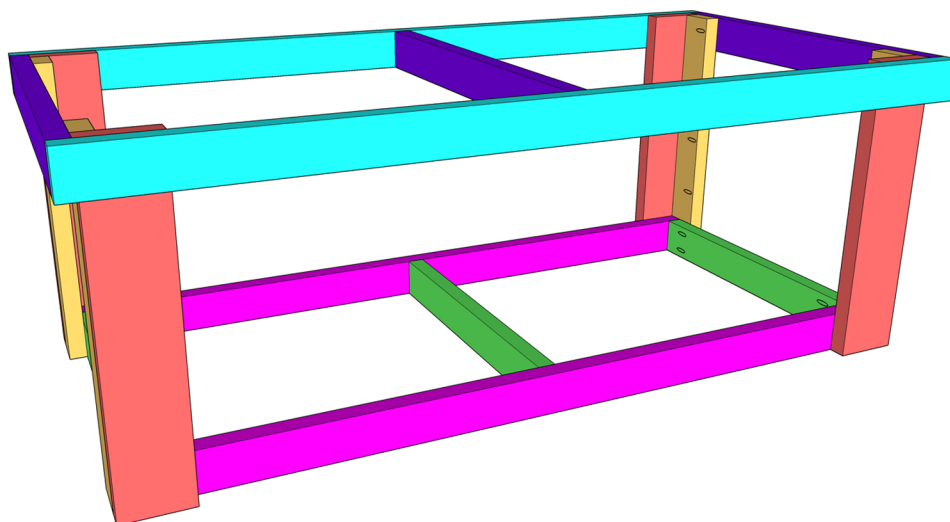


5

Attach the feet to the bottom of the frame with 2 1/2" wood screws and wood glue.

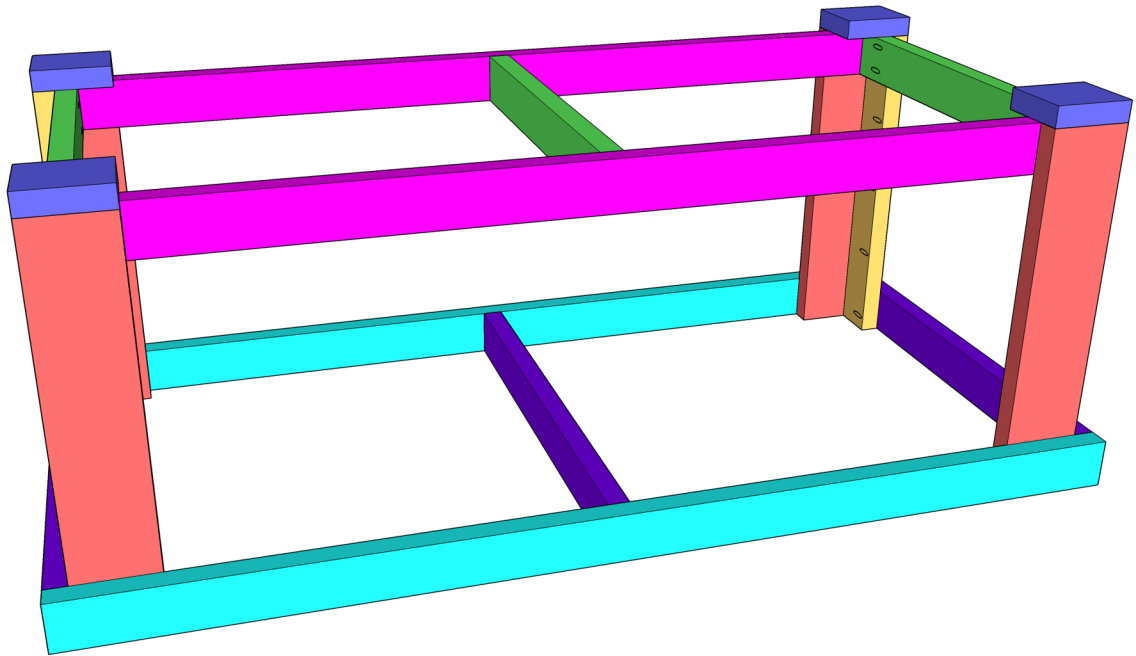


6

Attach the casters to the center of each foot.

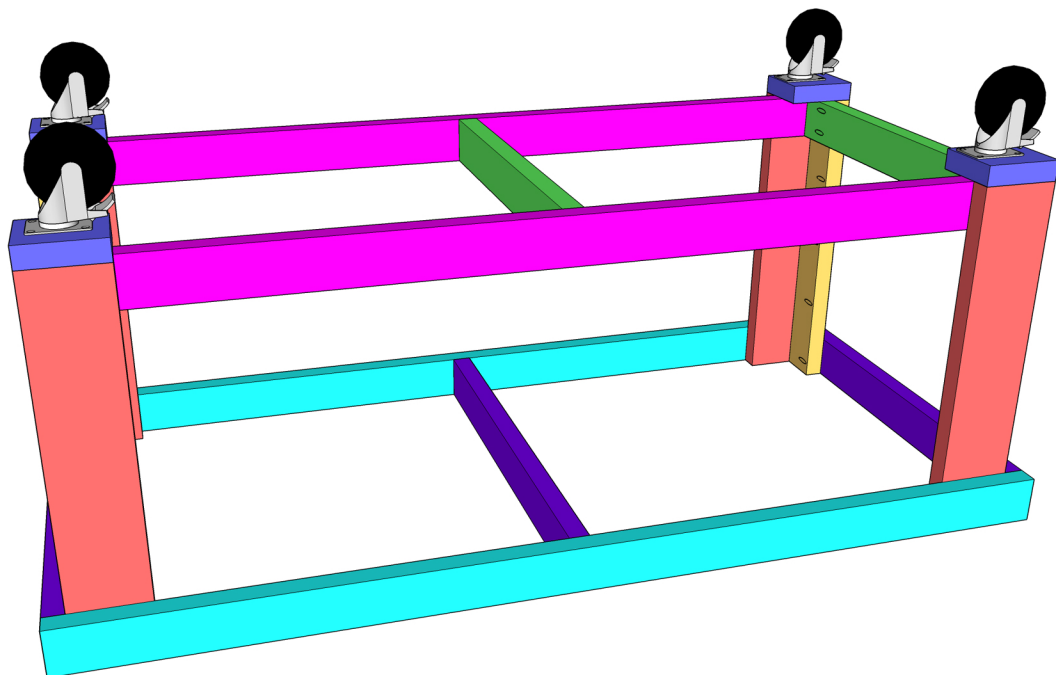



Attach the bottom and top shelves with wood glue and 2" brad nails.

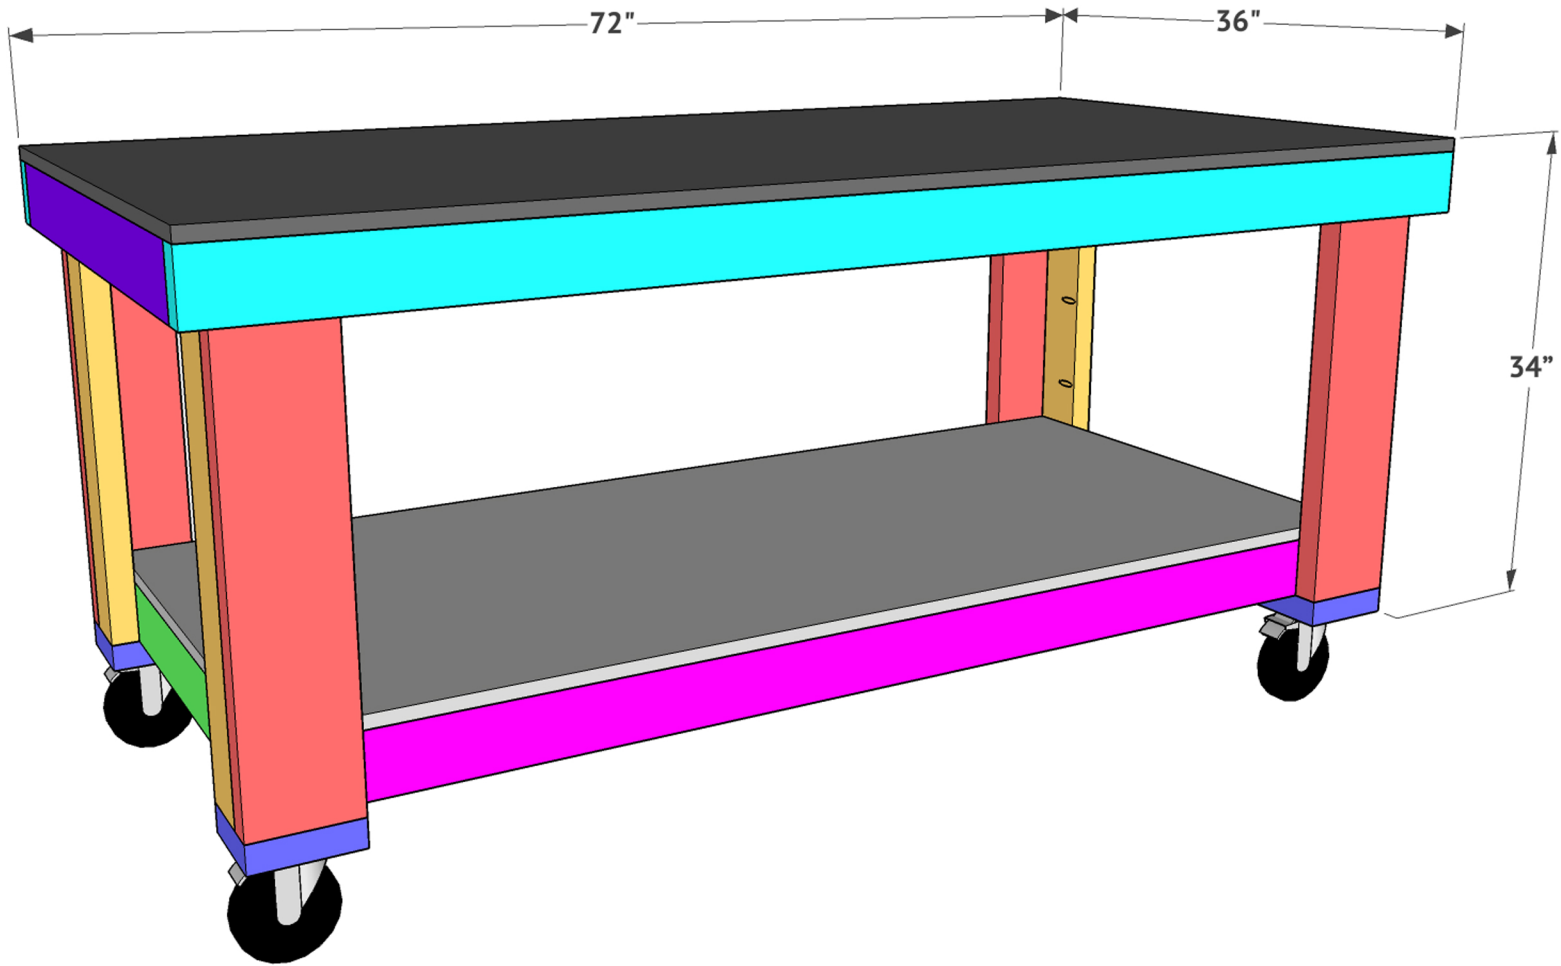

All finished! At this point you can add a finish or leave it bare. Make it your own and be sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!