



©2017 WWW.SHANTY-2-CHIC.COM



FARMHOUSE DOG BED


SUPPLY LIST

Item	Quantity	Description
1x4x8	7	Pine or Common Boards
1X2X8	4	Pine or Common Boards
1 1/4" Finish Nails		
2 1/2" Finish Nails		
Wood Screws		
Wood Glue		

Remember!


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

CUT LIST

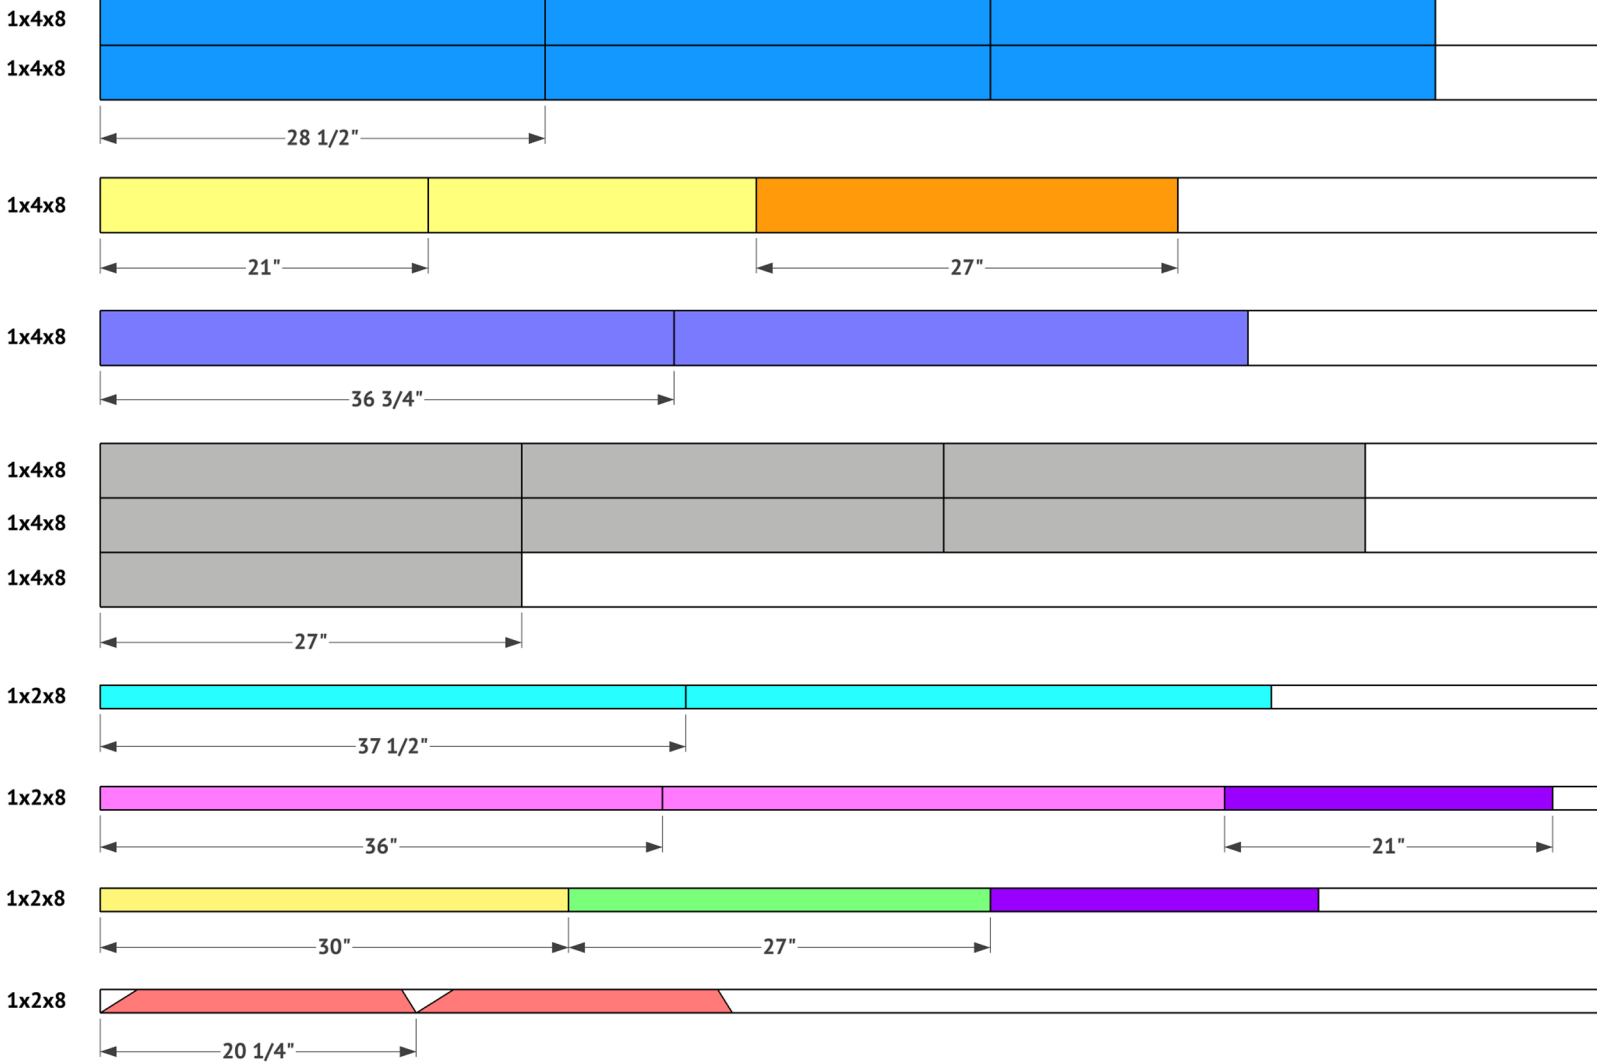

1

x2

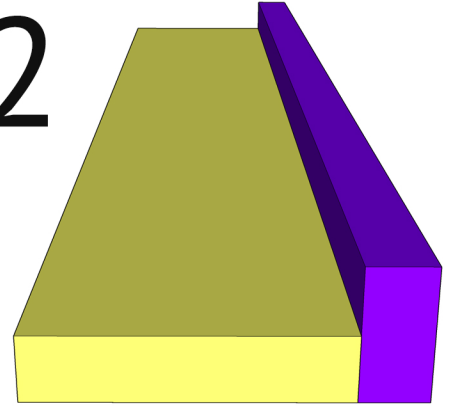

Attach a 1x2 to a 1x4 to create an “L”. Use wood glue and 1 1/4” finish nails.

Do this 2 times.

2


Measure and cut the headboard slats to fit. Attach them to the back of the “L” pieces with 1 1/4” finish nails and wood glue.



3


Flip the headboard over. Measure and cut the top trim to size.

Attach it to the top of the headboard with 1 1/4" finish nails and wood glue.

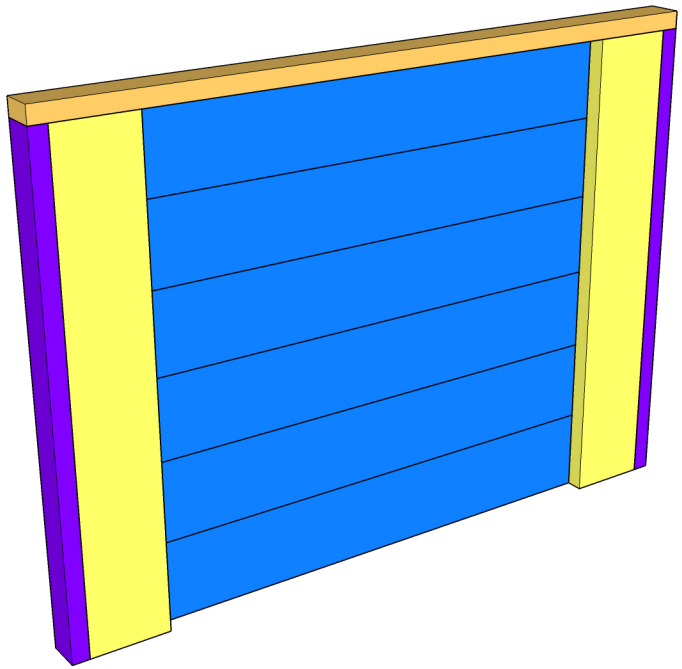

4

Measure and cut the diagonal trim pieces to size. Center them on the top of the headboard and attach with 1 1/4" finish nails and wood glue.

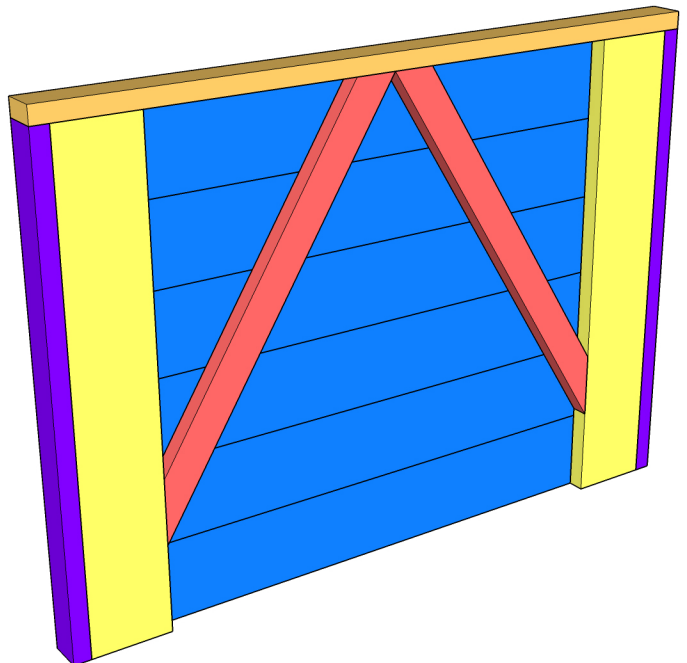


5

Attach a cleat to a side piece with 1 1/4" finish nails and wood glue. The headboard end should be flush. Do this for both sides.


Note: These assemblies should be mirror images of each other.

x2

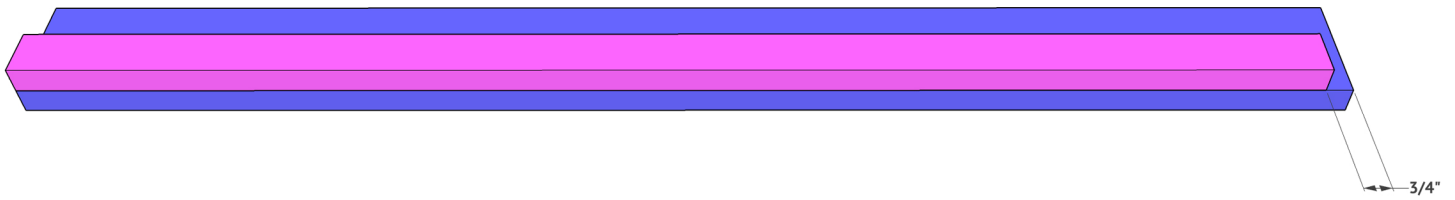


6

Attach the foot board piece to the end of the side pieces. Use 1 1/4" finish nails and wood glue.

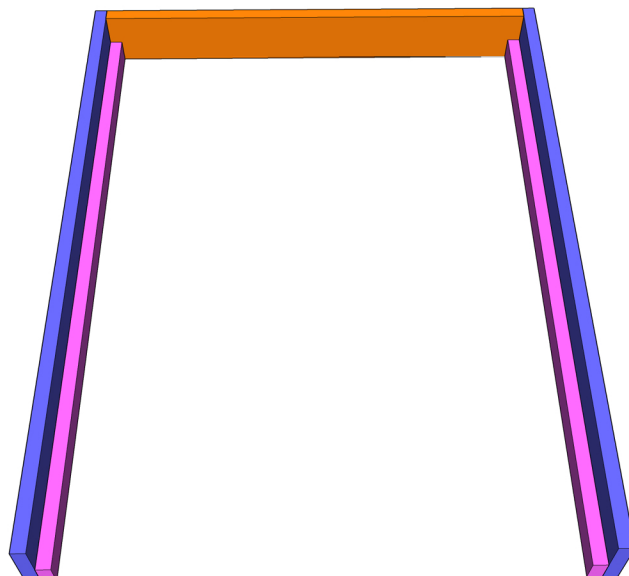




Attach the mattress slats to the cleats with 1 1/4" finish nails and wood glue. The end pieces should be flush and you can space the rest out evenly.

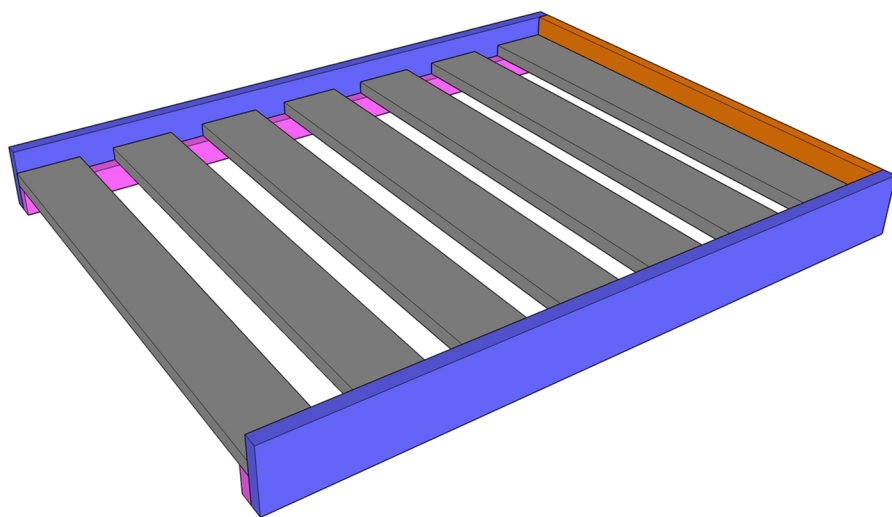


Attach the end trim piece with 1 1/4" finish nails and wood glue. The inside of the trim piece should be flush with the inside of the bed frame.

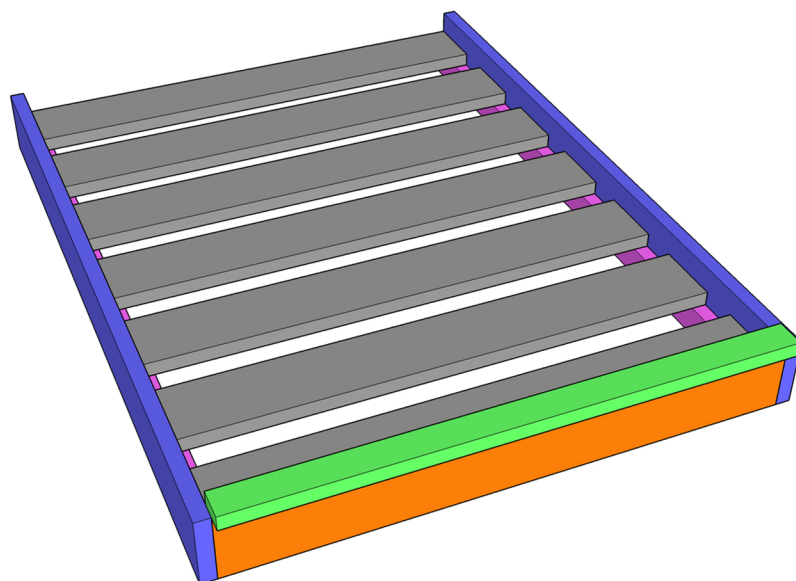


9

Measure and cut the side trim pieces to fit and attach them with 1 1/4" finish nails and wood glue.

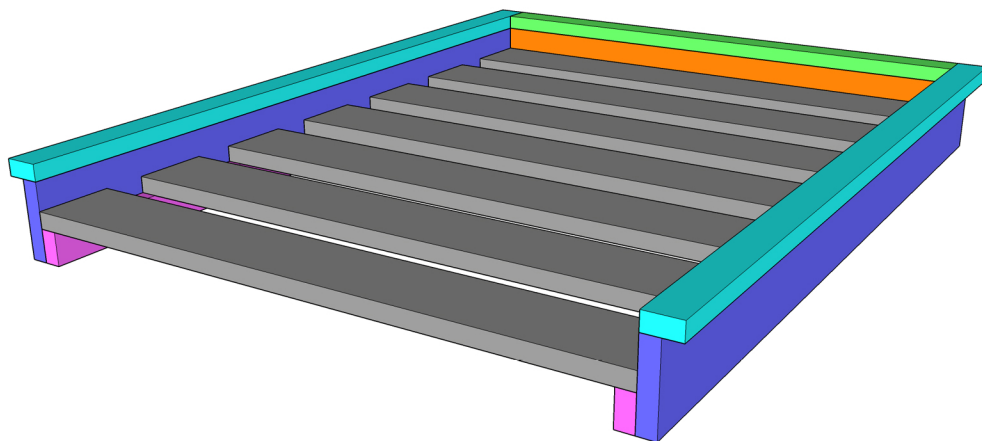

Attach the headboard to the bed frame with 2 1/2" finish nail, from the back of the headboard and into the bed frame.

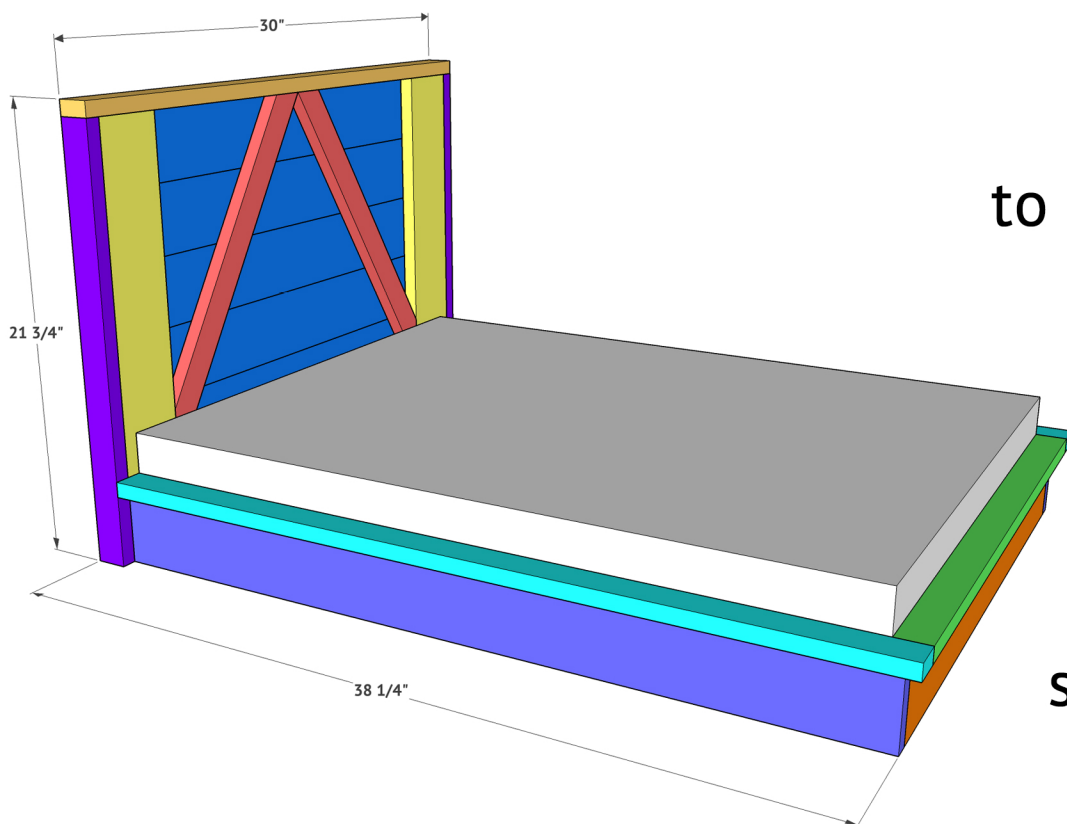

Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!