



BARN DOOR


SUPPLY LIST

Item	Quantity	Description
1x2x8	7	White Wood or Common Boards
1x4x8	1	White Wood or Common Boards
1/4"x48"x96" Hardwood Plywood	2	Birch or Similar
Driftwood Tongue and Groove Kit	2-3	Link in Post on our Site
3/4" Staples		Can use Brad Nails
1 1/4" Brad Nails		
1" Pin Nails		
Wood Glue		
Barn Door Track and Hardware		Link in Post on our Site
1x6x8	1	Optional if you have existing trim



Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!


CUT LIST

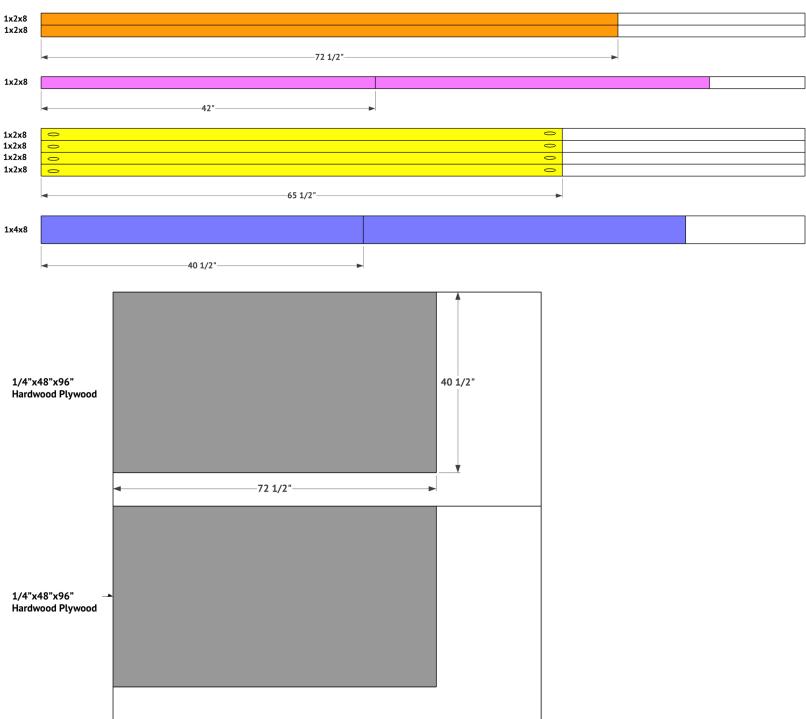

* - tongue and groove planks cut to random lengths.




Cut the frame piece to size and drill 3/4" pocket holes into each end of the 1x2's. Attach the 1x2's to the 1x4's with 1 1/4" pocket hole screws and wood glue.

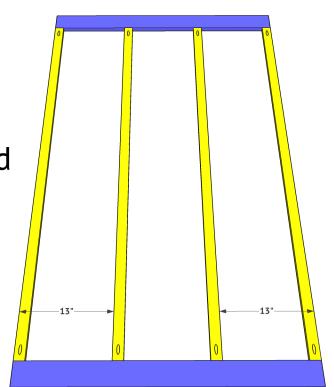




Cut the 1/4" plwyood boards to size and attach them to the front and back of the frame with wood glue and 3/4" staples.

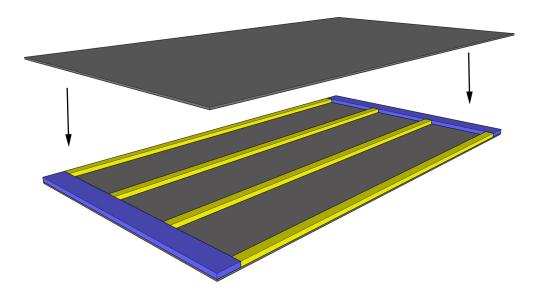




Cut the side trim pieces to size and attach them to the side of the barn door with 1 1/4" brad nails and wood glue. The trim pieces should be flush with the plywood.

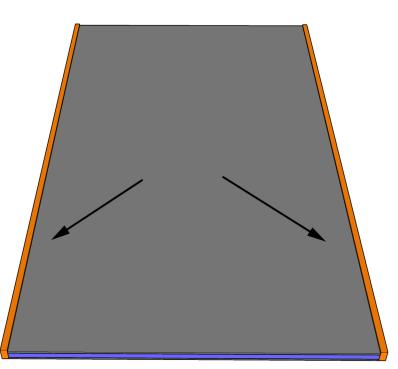





Cut the top and bottom trim pieces to size and attach them to the top and bottom of the barn door with 1 1/4" brad nails and wood glue. The top and bottom tri pieces should be flush with the side trim pieces.

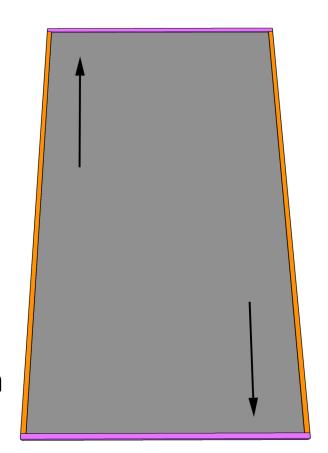



Attach the planks to the plywood with 1" pin nails and wood glue. Start with the top left corner and work your way to the other end. Cut the tongue and groove edge off of the first board, so that it is flush with the trim. Fit and arrange the pieces so that the seams stagger between each row.

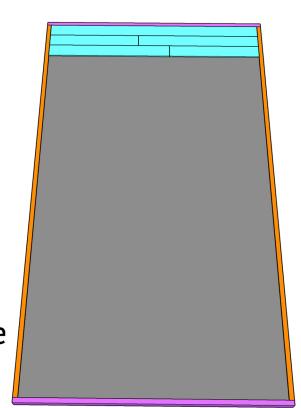

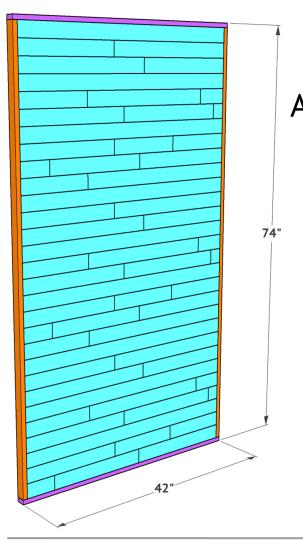

All finished! We used a flat, white paint on the trim, to match the planks and added a protective finish to the planks! Just attach the hardware and hang the barn door track and you're done! Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!