



©2018 WWW.SHANTY-2-CHIC.COM



# Farmhouse Baby Gate


## Supply List


Item	Quantity	Description
1x6x8	3	pine or white wood
1/2" x 4" x 36"	2	pine craft board
1/2" x 3" x 36"	1	pine craft board
1/2" x 2" x 48"	2	pine craft board
3/4" brad nails	several	
wood glue		
hardware		check website for details

*Remember!*


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!


## CUT LIST

1/2"x2x48 

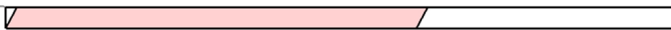1/2"x2x48 

26" 


1x2"x3x36 

1/2"x4x28 

33" 

1/2"x4x36 

1/2"x4x36 

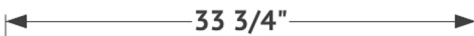33 3/4" 

1/2"x4x36 


1x6x8 

1x6x8 

40 3/4" 

1x6x8 

Kreg Pocket Hole 3/4"  
Make sure these are lined  
up in the center of each board  
so that they are covered with  
trim in a later step.

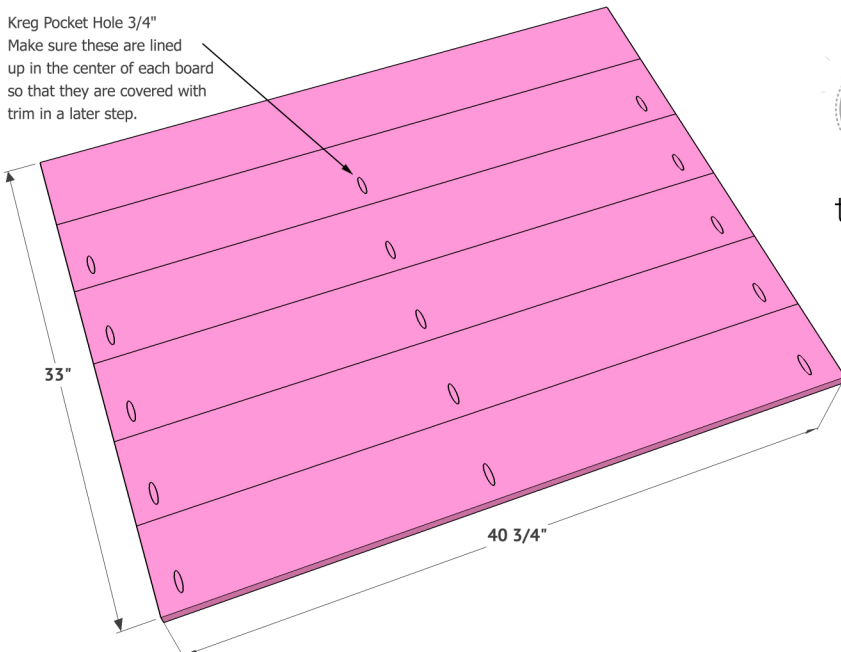

1


Cut all the 1x6 boards to size first. These measurements are for my stairs, so it probably won't fit your opening. Whatever your opening is, cut these boards 1/4" smaller than your opening. Add a pocket hole 1" from each end of 5 of the 6 boards, and make one at the center of each board as well. These are 3/4" pocket holes and attach the boards with 1.25" pocket hole screws.

Attach side trim on both sides.  
These are 1/2" pine craft boards.  
Attach these boards using wood  
glue and 3/4" brad nails and they  
will line up flush with the outsides  
of the 1x6 boards.


2

Now cut and attach your vertical side trim pieces. These are 1/2" x 4" pine craft boards. Add a line of glue and attach the craft boards using 3/4" brad nails.

Be sure to line up the craft boards flush with each end of the 1x6 boards.

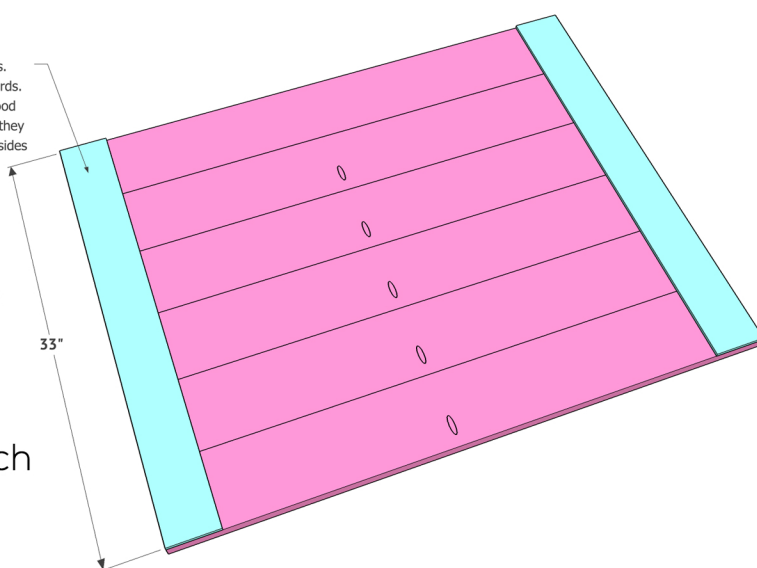


Now attach top and bottom boards. These are also 1/2" x 4" pine craft boards. Attach them using wood glue and 3/4" brad nails.

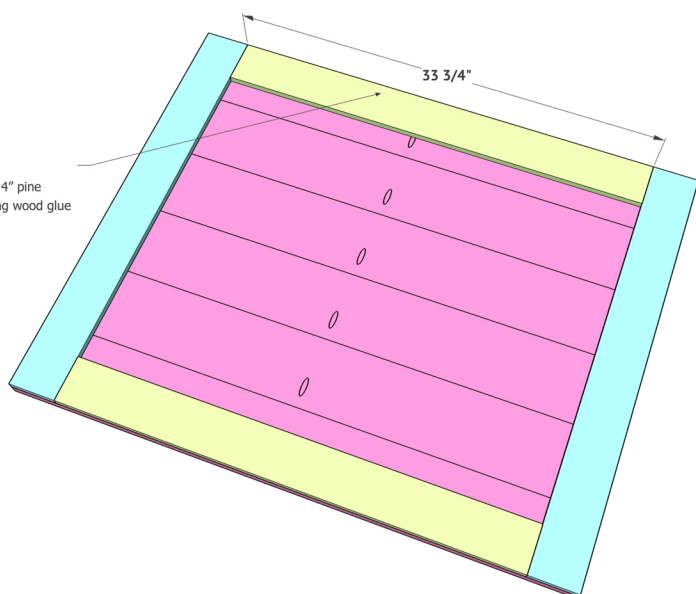

3


Measure and cut for the top horizontal trim. These are also 1/2" x 4" craft boards. Attach each board flush with the top and bottom of the 1x6 boards with wood glue and 3/4" brad nails.

Now cut and attach the middle board. This is a 1/2" x 3" craft board. Attach it using wood glue and 3/4" brad nails.

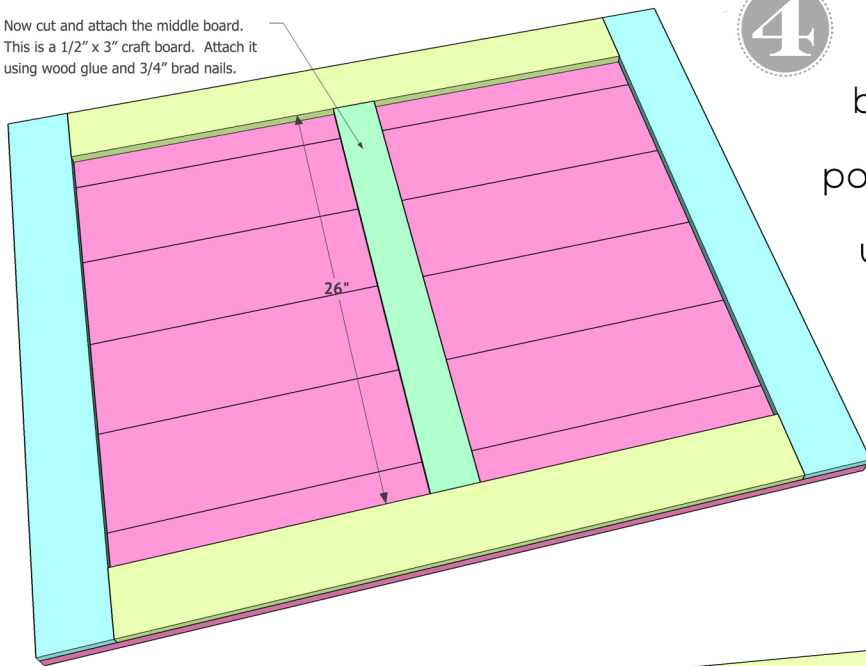

4

Now it's time for the middle trim board. This is a 1/2" x 3" craft board. Line it up in the center of the 1x6 boards which will cover the pocket holes you made down the center of the boards. Attach this board using wood glue and 3/4" brad nails.

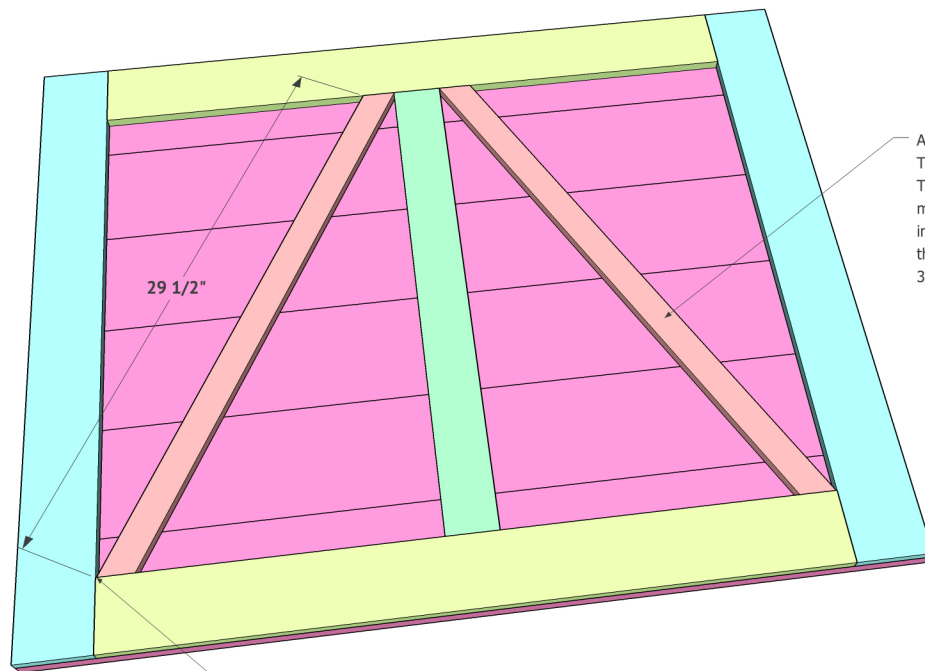

Attach the diagonal pieces last. These are 1/2" x 2" craft boards. The easiest way to get this measurement is to hold the board in place and mark for exact cuts. Attach these boards using wood glue and 3/4" brad nails.

5

61.9° angle on each end but we suggest measuring and cutting to get the exact measurement

The final step is to make the diagonal cuts. These are 1/2" x 2" craft boards. I did add cut lengths and angles, but the very best way to get these measurements is to hold these boards in place and mark for your cuts. Attach each board using wood glue and 3/4" brad nails. Now you are ready for paint or stain! Once it dries, you can attach your hardware. Check out our website to see what hardware we chose to use!