



©2017 WWW.SHANTY-2-CHIC.COM



# MIRROR EASEL


## SUPPLY LIST

Item	Quantity	Description
1x3x8	2	White Wood or Common Boards
1x2x8	2	White Wood or Common Boards
2x2x8	2	white Wood or Common Boards
1/4"x15"x51" Hardwood Plywood	1	Purebond Plywood (Birch)
3/4" Staples		Can use Brad Nails
1 1/4" Brad Nails		
2 1/2" Pocket Hole Screws		
Wood Glue		
Construction Adhesive		
48" Mirror	1	Link in Post on our Site
3" Hinges	2	Link in Post on our Site
Decorative Corner Hardware	4	Link in Post on our Site
Hook and Eye Hardware (optional)	2	Link in Post on our Site


*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST

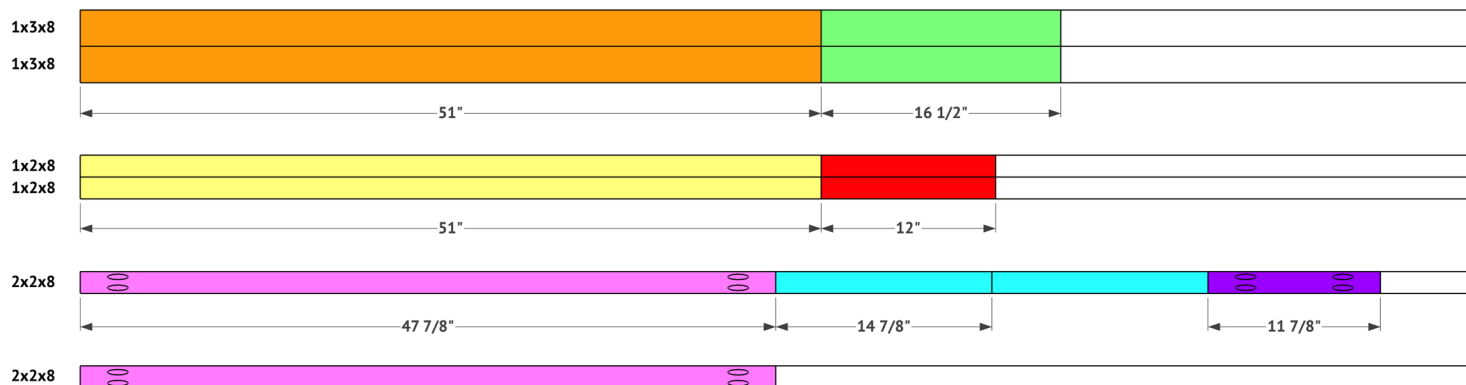


1/4"x15"x51"  
Hardwood Plywood

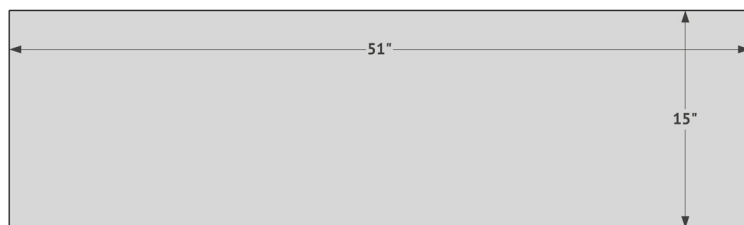


1

**Cut the 1/4" plywood and side frame pieces to size. Lay the plywood over the back of the side trim pieces and attach with wood glue and 3/4" staples.**

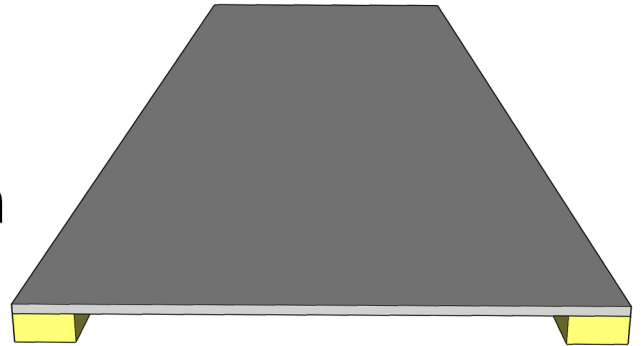


2

**Cut the top and bottom frame pieces to size. With the piece still upside down, attach the top and bottom trim pieces with wood glue and 3/4" staples.**

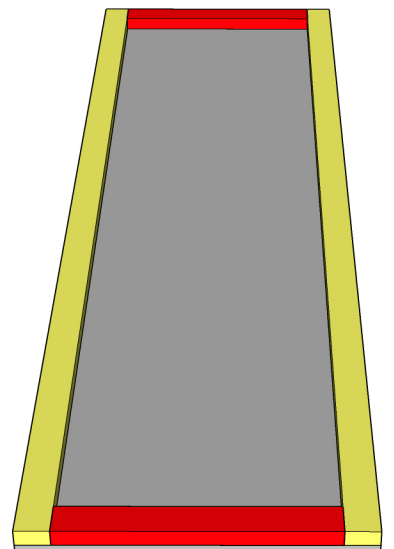


3

**Cut the ladder frame pieces to size and drill 1 1/2" pocket holes at the ends of both of the long pieces. Attach the long pieces to the short pieces with 2 1/2" pocket hole screws and wood glue.**

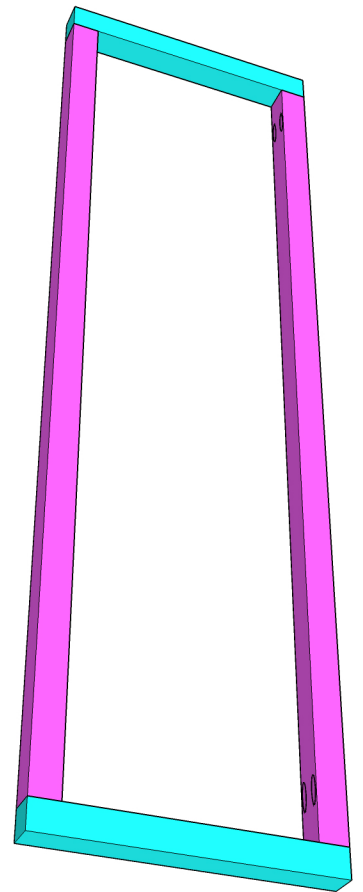



4

**Cut the ladder support piece to size and drill 1 1/2" pocket holes at both ends. Center it inside the ladder frame and attach it to the long ladder frame pieces with 2 1/2" pocket hole screws and wood glue.**

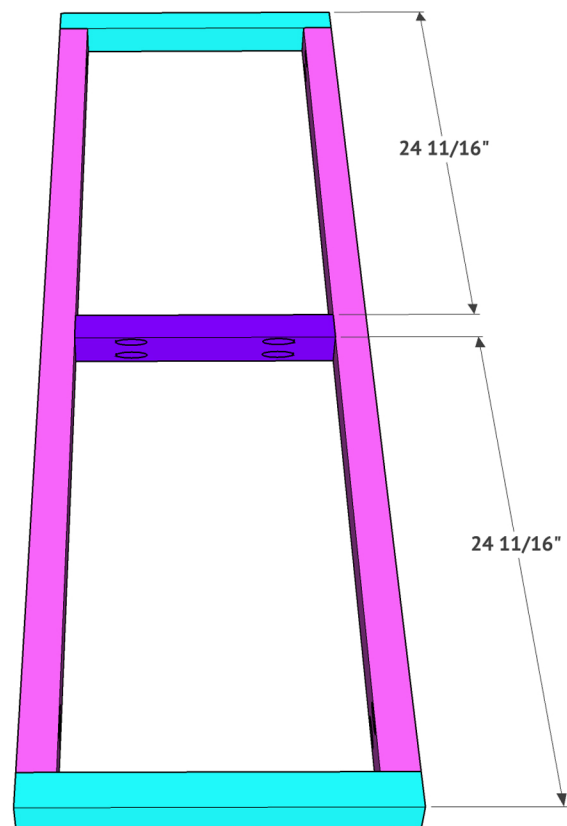


5

**Lay the mirror frame on top of the ladder frame. Cut the side trim pieces to size and attach them to the mirror frame with 1 1/4" brad nails and wood glue. The front of the side trim pieces should be flush with the front of the mirror frame.**

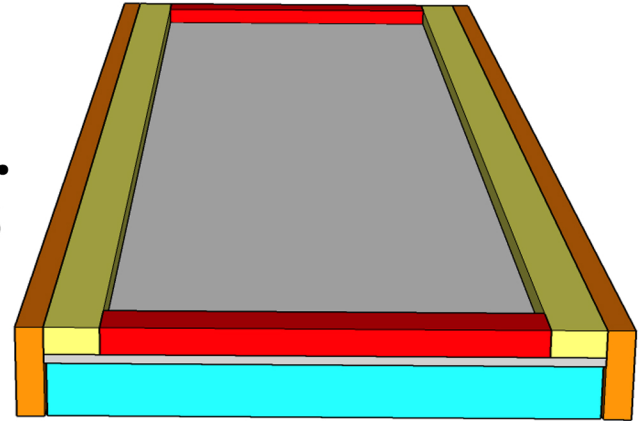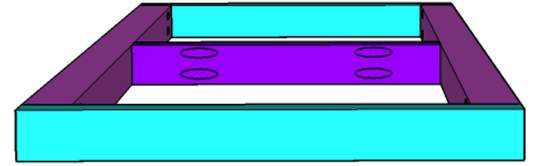


6

**Cut the top and bottom trim pieces to size and attach them to the top and bottom of the mirror frame with 1 1/4" brad nails and wood glue.**

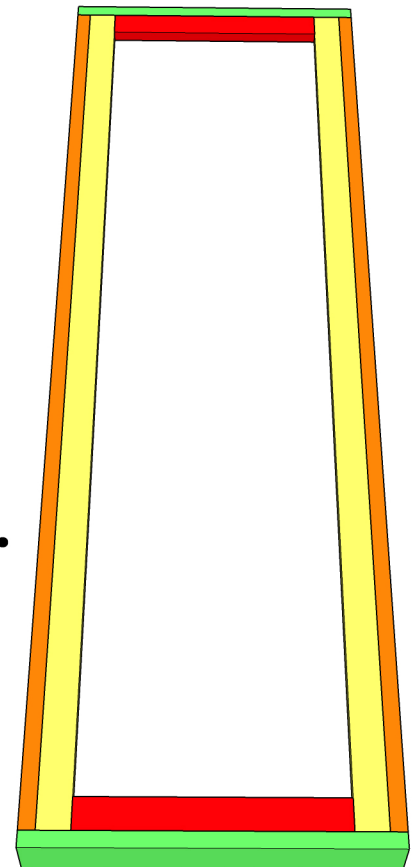



**Flip the easel upside down and attach the hinges to the top of the trim and the top of the ladder frame. Now is a good time to add the finish!**

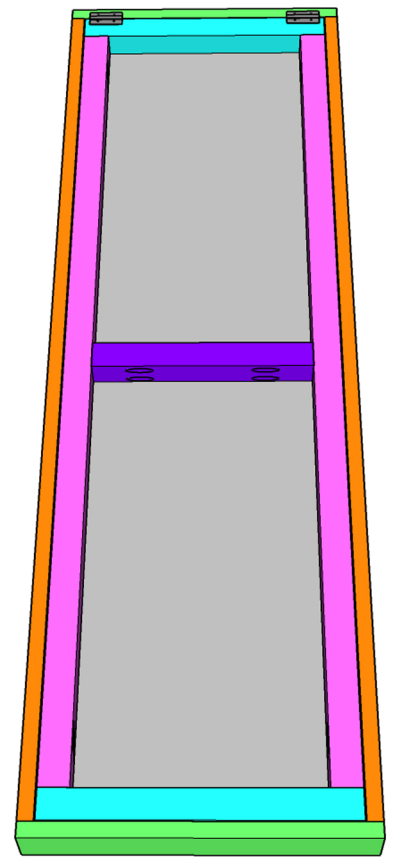

**Once the finish is dry, attach the mirror with construction adhesive, attach the decorative hardware and you're all finished!**

**Make sure to share your projects with us on social media and use #shanty2chic so we can share them too!**

**Happy Building!**