



©2017 WWW.SHANTY-2-CHIC.COM



# FARMHOUSE VANITY


## SUPPLY LIST

| Item                          | Quantity | Description                               |
|-------------------------------|----------|---|
| 2x4x8                         | 4        | Framing Lumber                            |
| 1x4x8                         | 1        | White Wood or Common Boards               |
| 1x3x8                         | 1        | white Wood or Common Boards               |
| 1x2x6                         | 1        | Purebond Plywood (Birch)                  |
| 1/4"x2x48" Craft Boards       | 6        | Poplar                                    |
| 3/4"x48"x96" Hardwood Plywood |          | Birch or Similar                          |
| 1/2"x24"x48" Hardwood Plywood | 1        | Birch or Similar                          |
| 1/4"x48"x48" Hardwood Plywood | 1        | Birch or Similar (this piece is optional) |
| 1 1/4" Brad Nails             |          |   |
| 5/8" Brad Nails               |          |   |
| 3/4" Staples                  |          | (if attaching a back)                     |
| 1/4" Pocket Hole Screws       |          |   |
| 2 1/2" Pocket Hole Screws     |          |   |
| Wood Glue                     |          |   |
| Vanity Top                    | 1        | Link in Post on our Site                  |
| 3" Hinges                     | 2        | Link in Post on our Site                  |
| Hardware                      |          | Link in Post on our Site                  |

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST PAGE 1

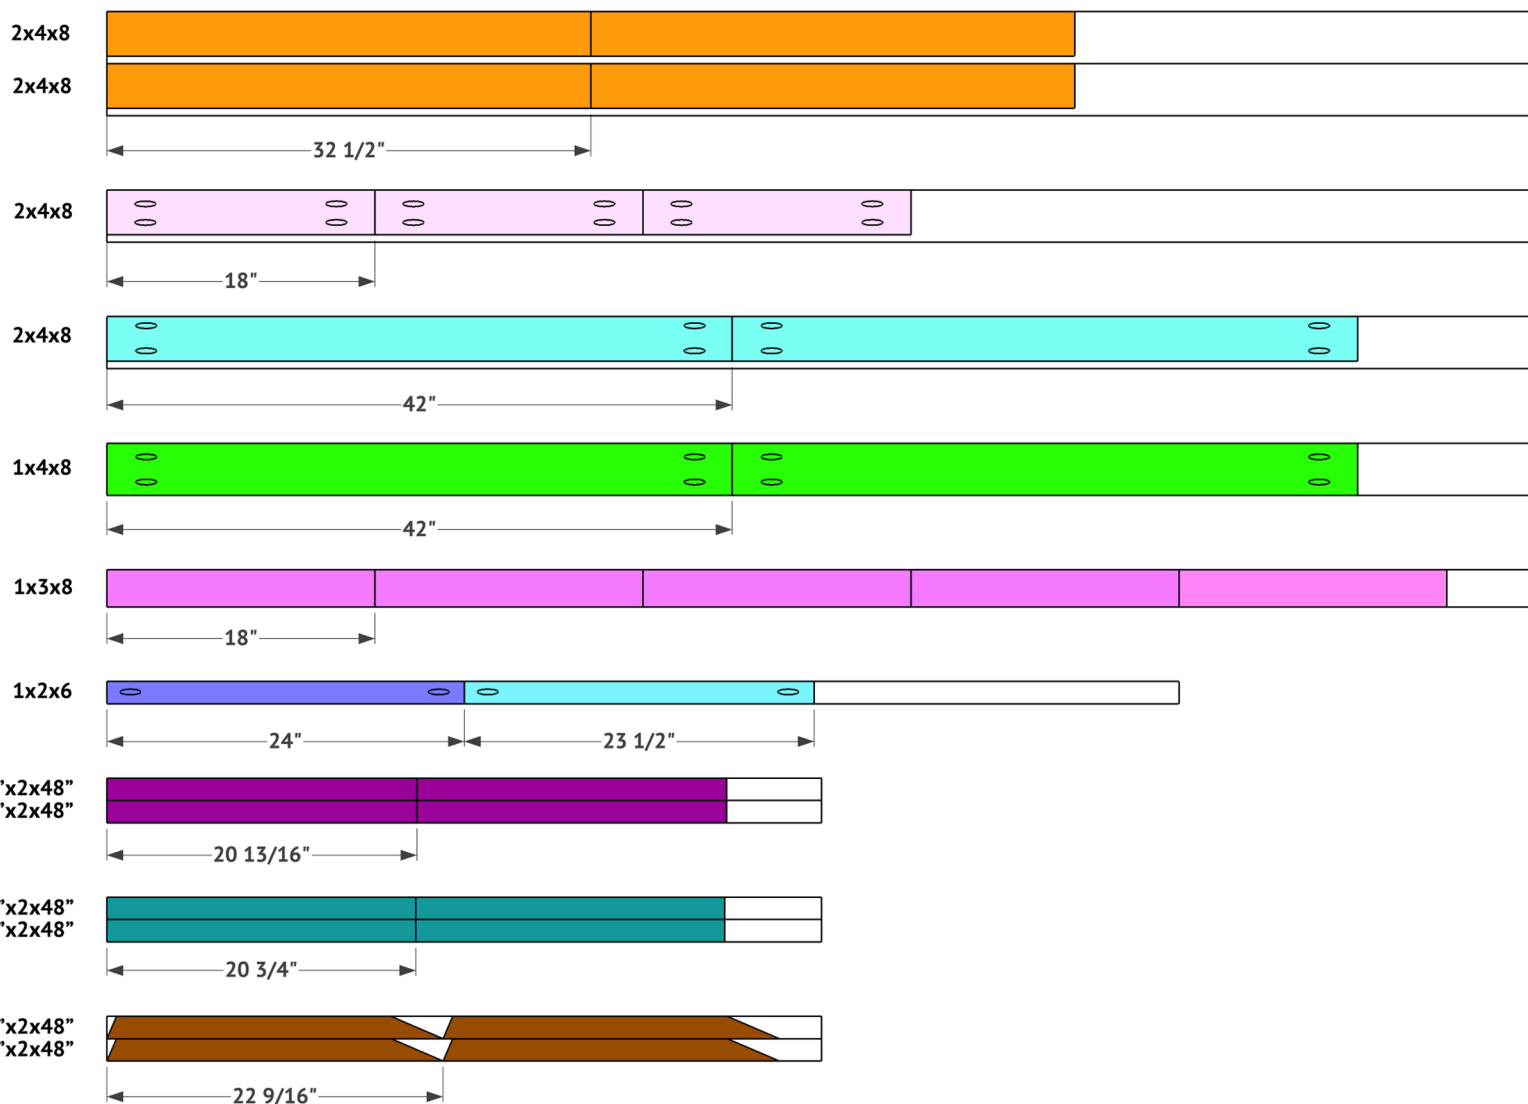


*Remember!*


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST PAGE 2


3/4"x48"x96" Hardwood Plywood

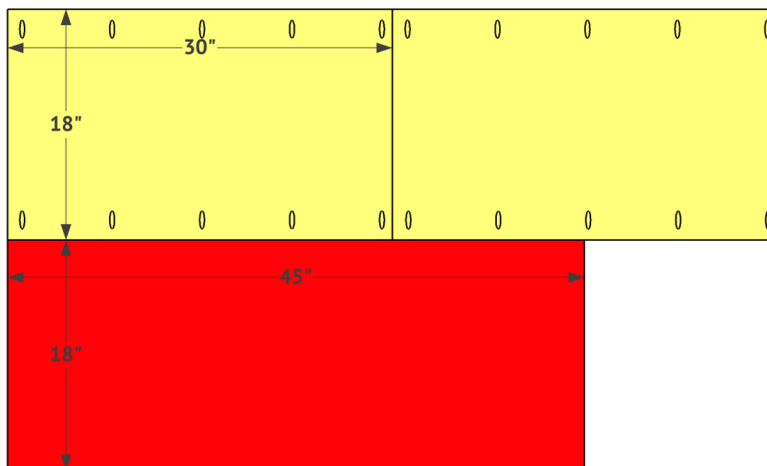

1/2"x24"x48" Hardwood Plywood

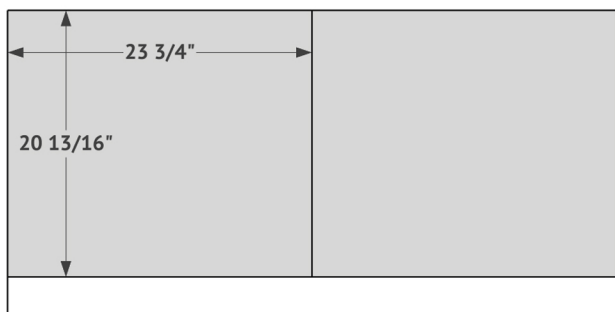



1/4"x48"x48" Hardwood Plywood

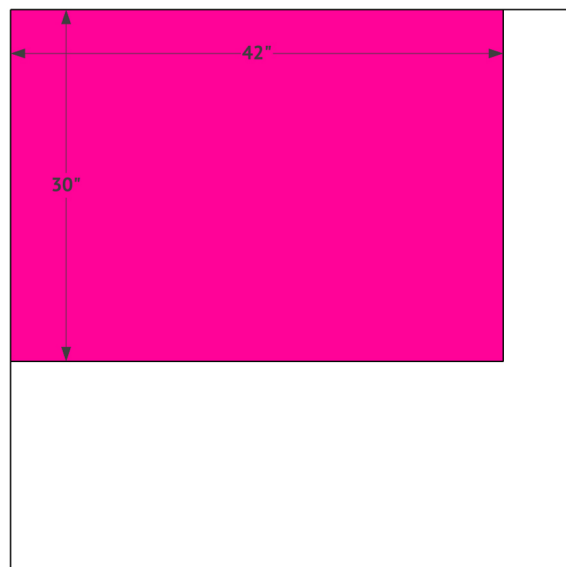

***Note: We ripped the round edges off of the 2x4 boards, to make them 3" wide. This is not a necessary step but if you choose not to rip your boards, make sure to adjust the measurements.***

**1**

**Cut the plywood and legs to create the side panels. Drill  $\frac{3}{4}$ " pocket holes into each side of the plywood. Attach a leg to each side with  $1\frac{1}{4}$ " pocket hole screws and wood glue. The top of the legs should be flush with the top of the plywood and there should be a  $\frac{3}{4}$ " gap on the front of the panels and a  $1\frac{1}{2}$ " gap on the back. Build two of these assemblies.**

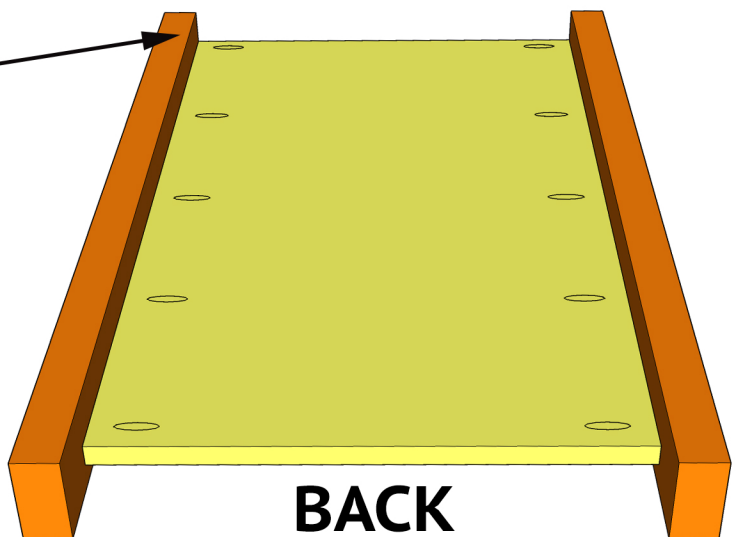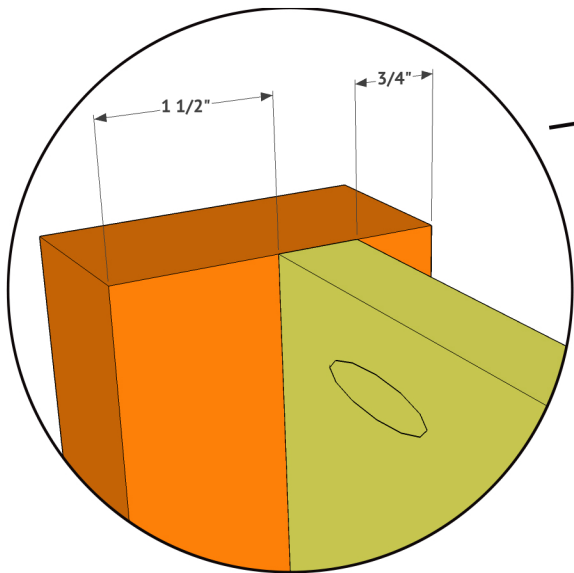


**x2**






**Measure and cut the top and bottom, side panel trim to size. Flip the side panels right-side-up and attach the trim pieces to the front of the side panels with 1 1/4" brad nails and wood glue.**


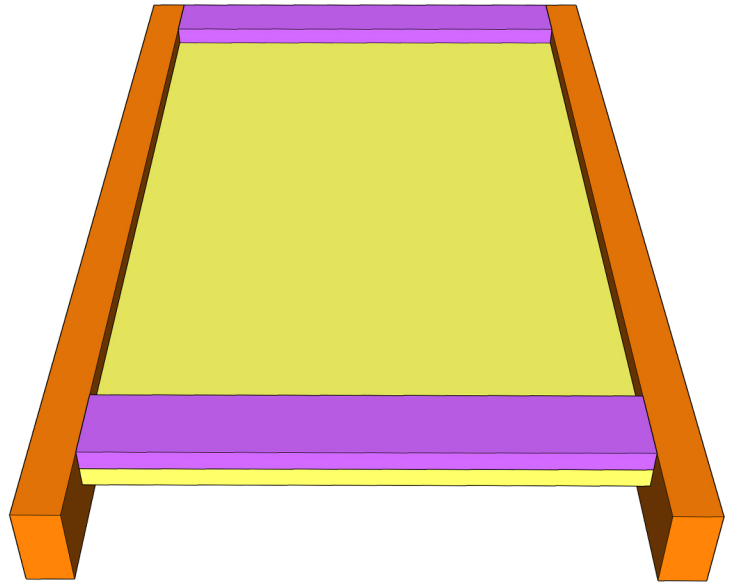


**Cut the back aprons to size and drill 3/4" pocket holes into both ends. Attach them to the back legs with 1 1/4" pocket hole screws and wood glue, flush with the inside of the legs. The bottom apron should be 2" from the bottom of the legs and the top apron should be flush with the top of the legs.**

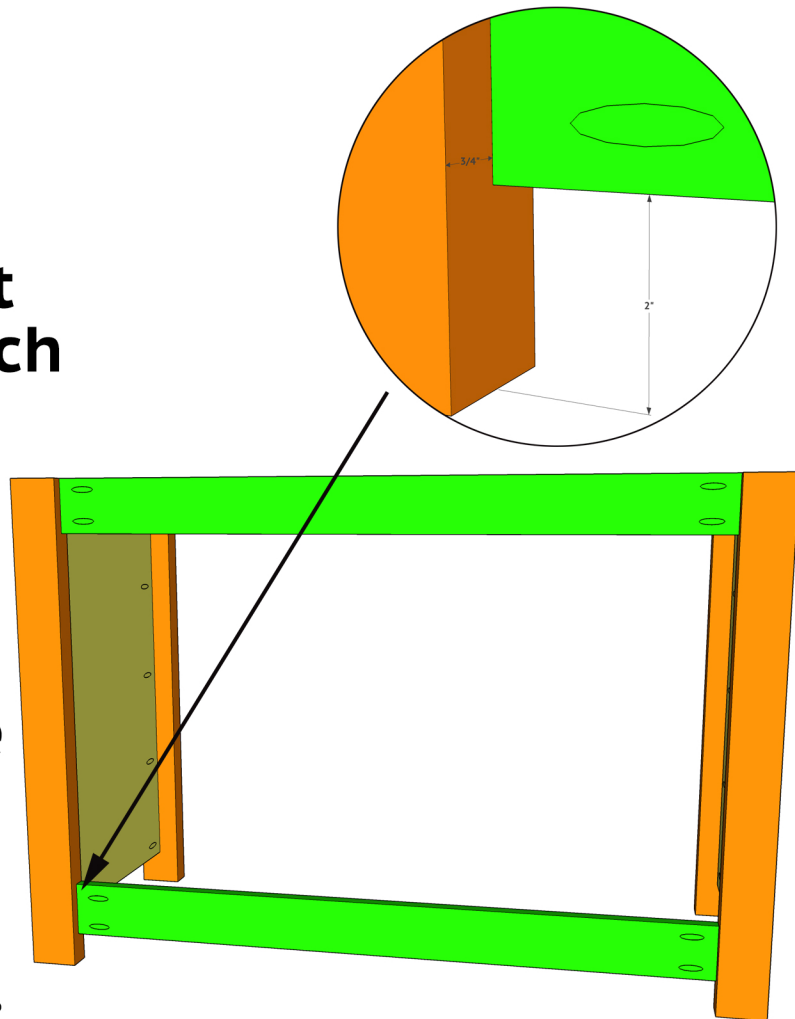


4

Cut the front aprons to size and drill 1 1/2" pocket holes into each end. Attach the aprons to the front legs with 2 1/2" pocket hole screws and wood glue. The top apron should be flush with the top of the legs and the bottom apron should be attached 2 1/2" from the bottom of the legs.

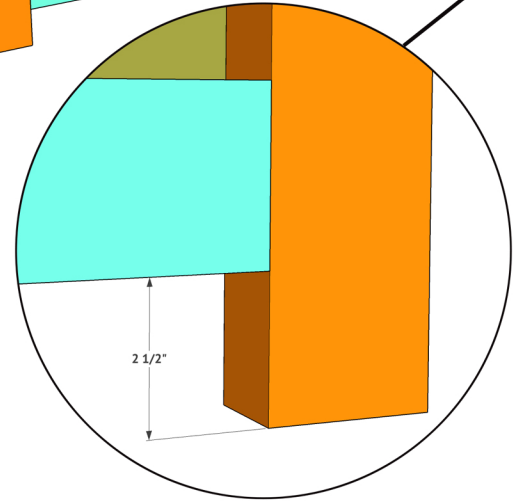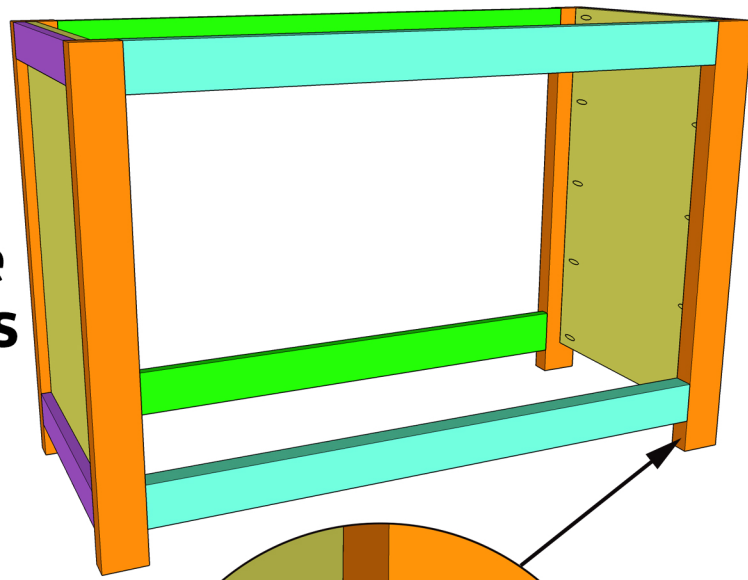


5

Cut the bottom support pieces to size and drill 1 1/2" pocket holes into the ends that will attach to the front apron. Drill 3/4" pocket holes on the other ends. Attach the supports with 1 1/4" and 2 1/2" pocket hole screws and wood glue.

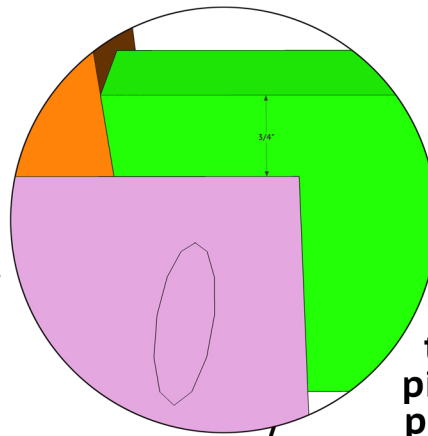


Notice the outside support pieces have one 1 1/2" pocket hole drilled on the back.

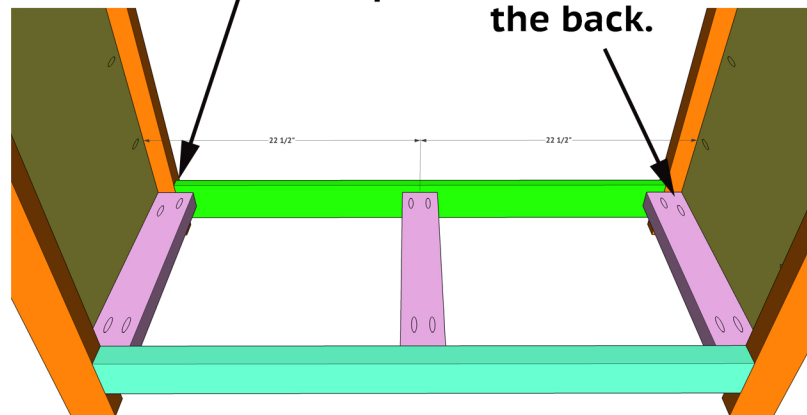


6

**Cut the plywood for the bottom of the vanity. Apply wood glue to the top of the bottom support pieces, lay the plywood on top of the supports and attach it to the supports with 1 1/4" brad nails.**

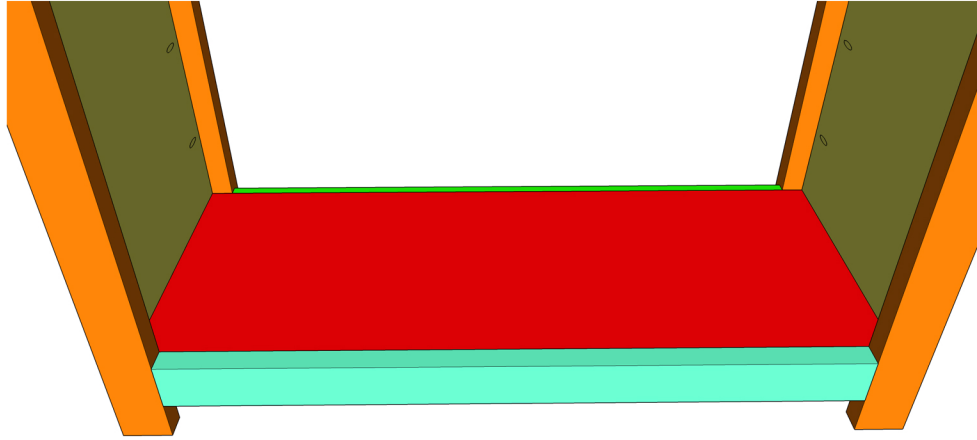


7

**Cut the back support piece to size and drill 3/4" pocket holes into both ends. Center it on the back aprons and attach it to the back aprons with 1 1/4" pocket hole screws and wood glue.**

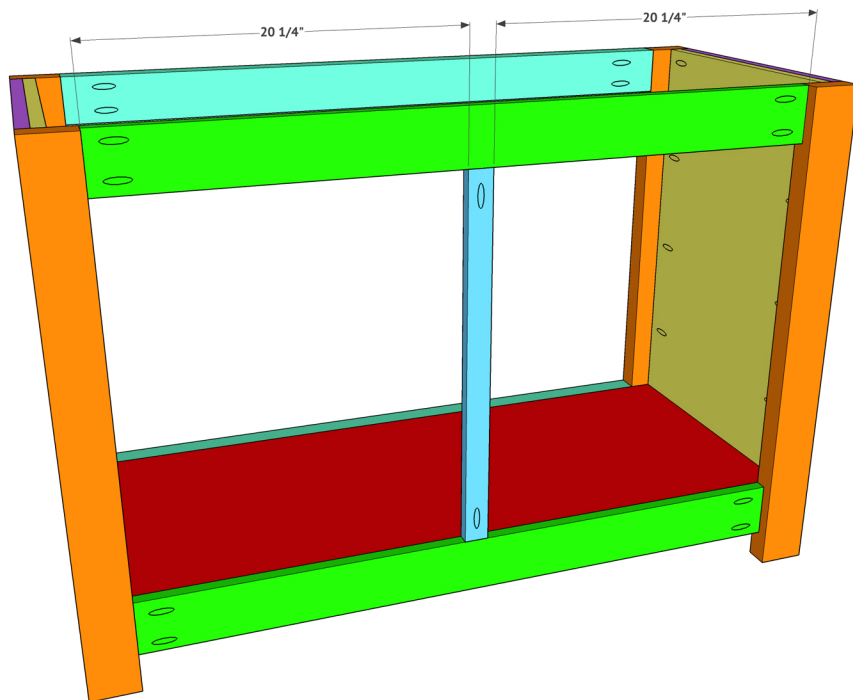




**Cut the front divider to size and drill 3/4" pocket holes into each end. Center it on the front aprons and attach it to the front aprons with 1 1/4" pocket hole screws and wood glue. The back of the divider should be flush with the back of the aprons and set back 3/4" from the front.**

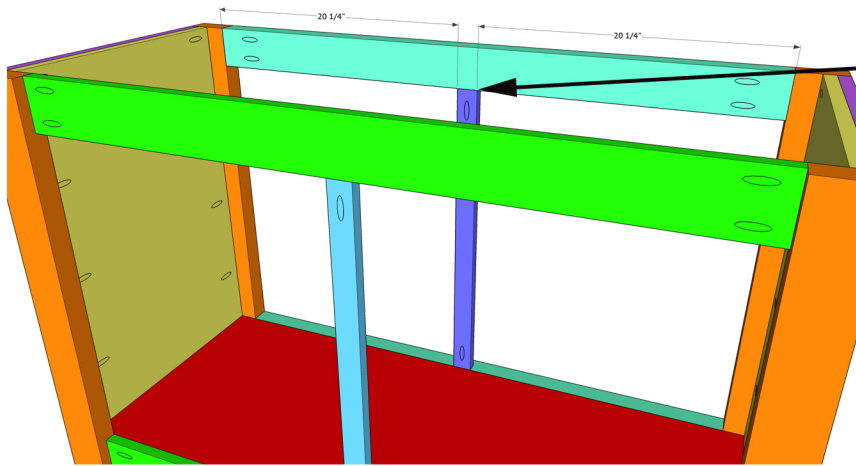


**BACK**

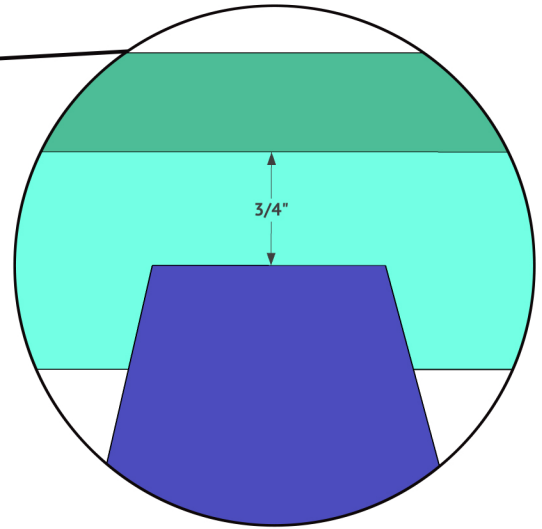

**FRONT**



**If you choose to have a back on your vanity, this is the time to attach it. Cut the 1/4" plywood to size and attach it to the back aprons and back divider with 3/4" staples and wood glue.**

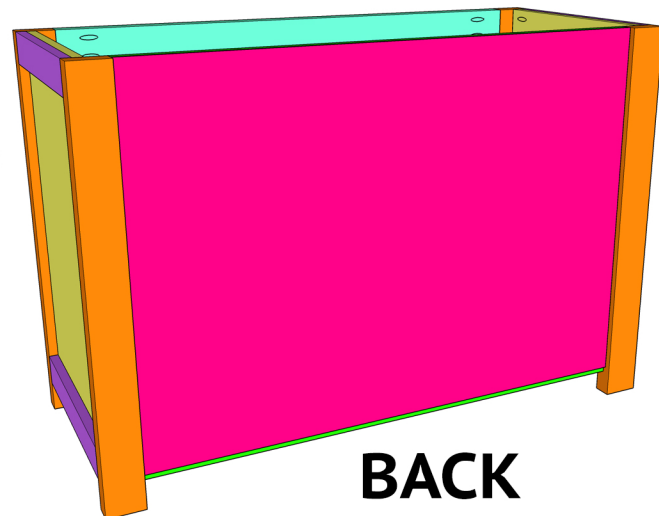

**BACK**

# DOORS


10

**Cut the 1/2" plywood and top and bottom craft boards to size. Attach the craft boards to the plywood with 5/8" brad nails and wood glue.**




11

**Measure for the side trim pieces and cut the craft boards to size. Attach them to the plywood with 5/8" brad nails and wood glue.**

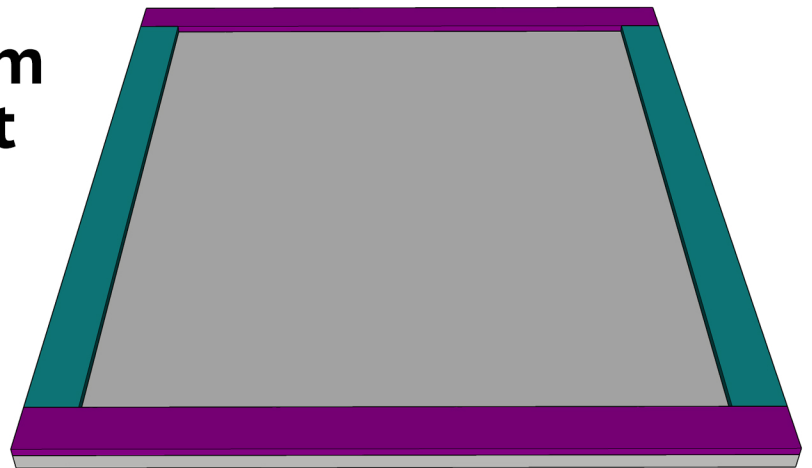


12

**Cut the diagonal trim pieces to size. Center them and attach them to the plywood with 5/8" brad nails and wood glue.**

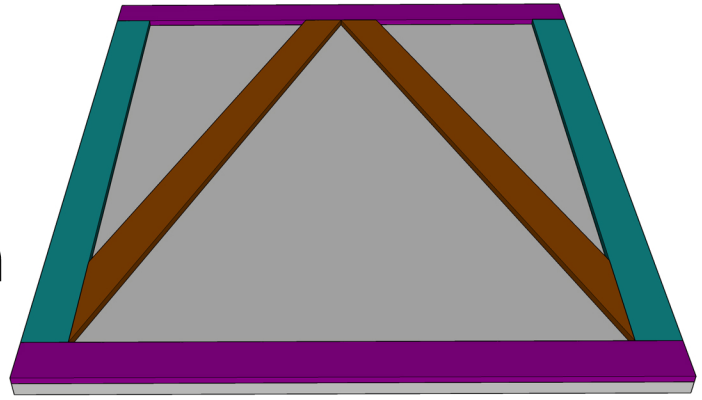

**Attach the doors to the vanity with, the hinges, add a finish and attach the vanity top and hardware! If you aren't experienced with plumbing, hire a plumber to install!**

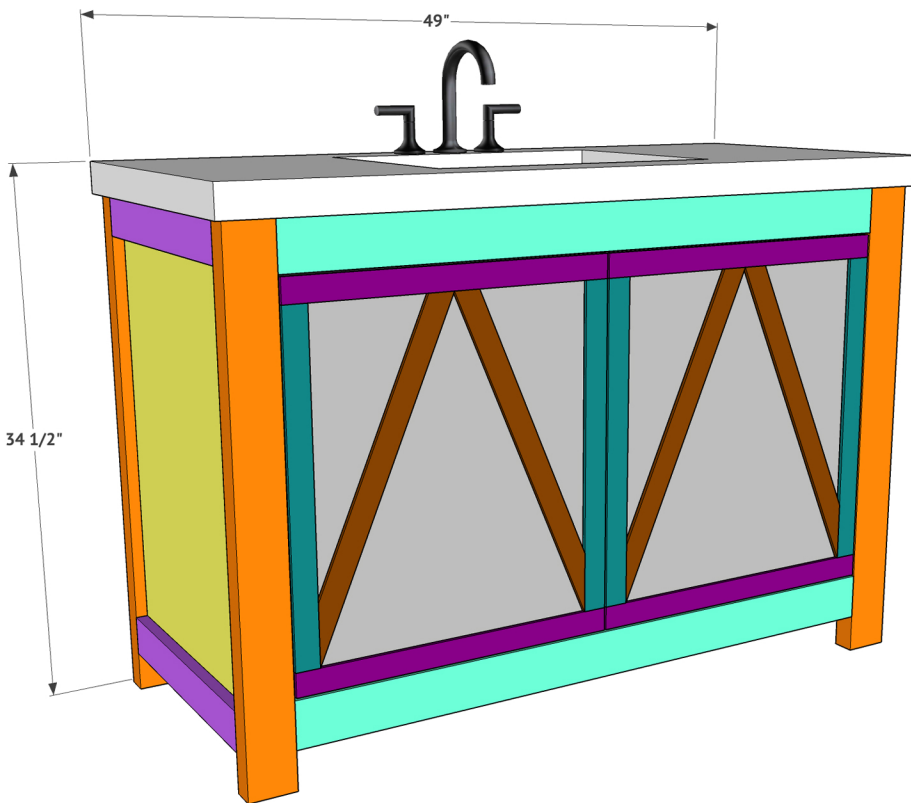

**That's it! Make sure to share you builds with us on social media and use #shanty2chic so we can share them too!**