

©2018 WWW.SHANTY-2-CHIC.COM





Broom Storage Cabinet


Supply List

Item	Quantity	Description
1x6x8	2	pine or white wood
1x4x8	2	pine or white wood
1x2x8	2	pine or white wood
1x4x4	1	pine or white wood
1x3x4	1	pine or white wood
1/4" hardwood plywood sheet (4'x8')	1	cut to size
faux tin panels	3	check website for details
hardware		check website for details
1.25" pocket hole screws	several	

CUT LIST

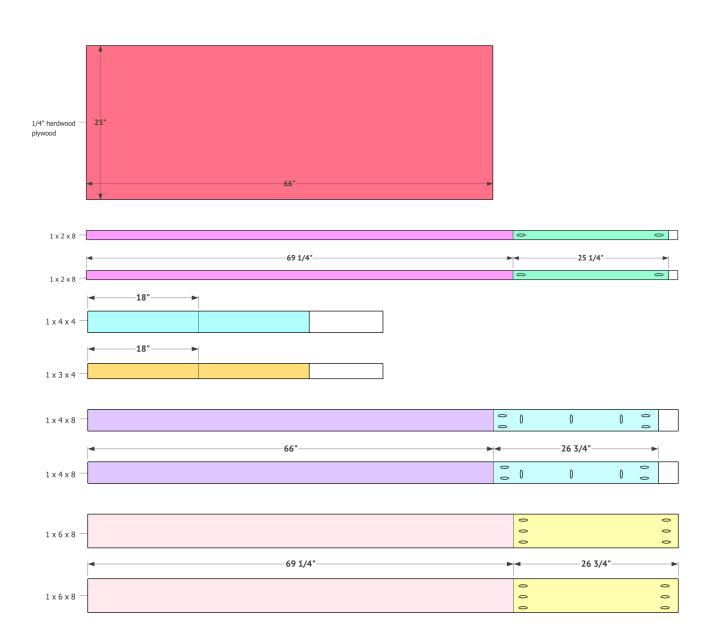


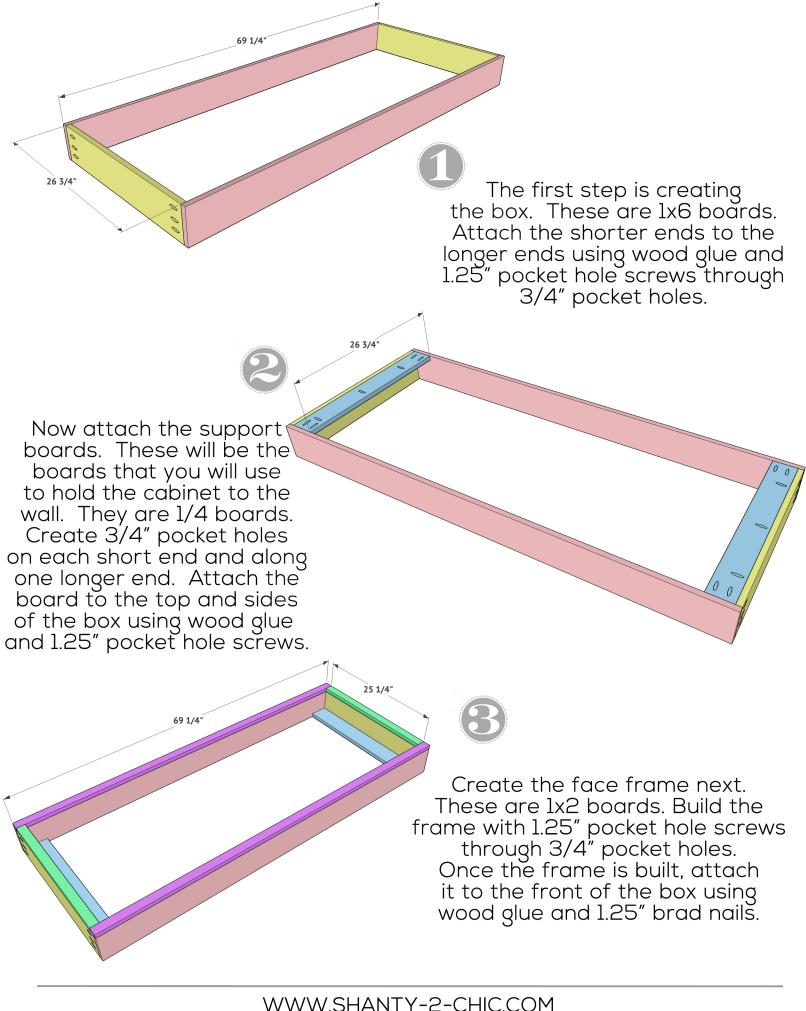


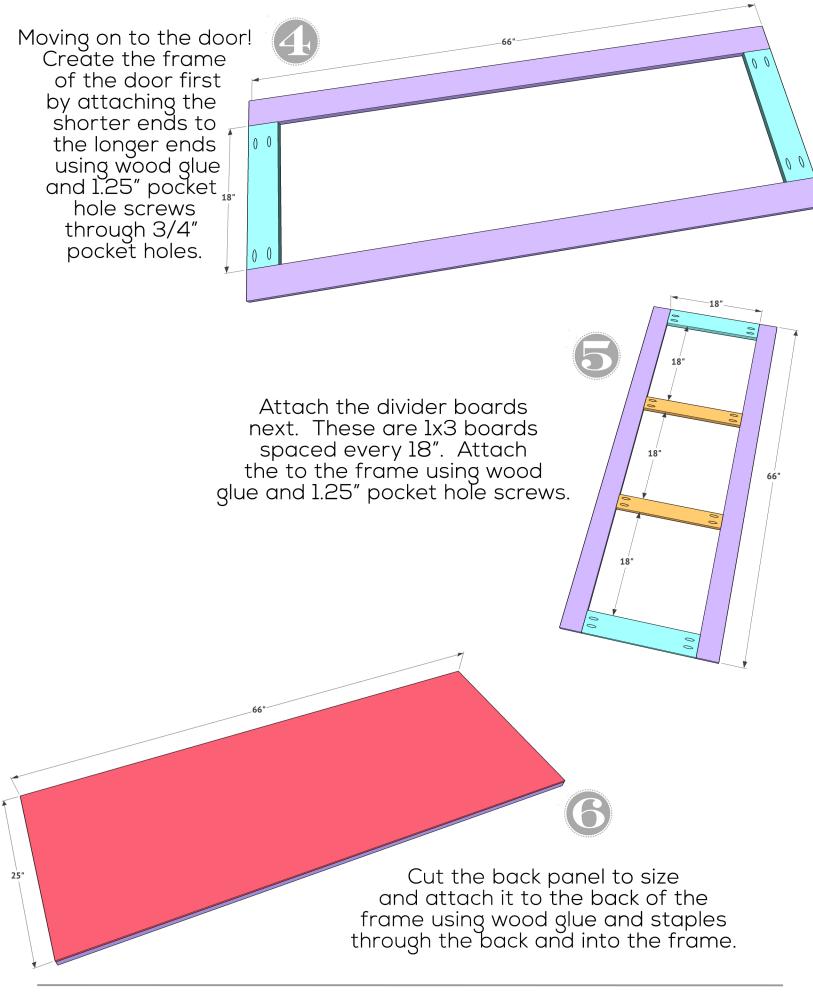



The final step before attaching the door is adding the tin panels.
These are faux tin panels that you can find the link to on our website.
They come in black, but check our website for details on how we finished ours.
Attach the panels using hot glue or strong craft glue.

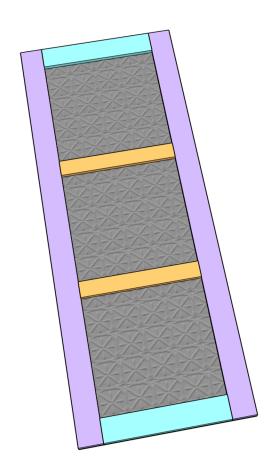

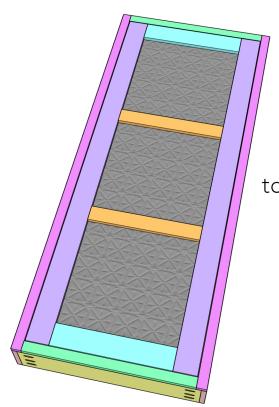

Check our website for links to the hardware and details on attaching the door!

Make sure to share your builds with us on social media! Use hashtag #shanty2chic Happy Building!