




FANCY "V" DINING BENCH

SUPPLY LIST

Item	Quantity	Description
2x4x8	9	Framing Lumber
2 1/2" Pocket Hole Screws		
2 1/2" Wood Screws		
Wood Glue		
Hardware		Linked in Post on our Site

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

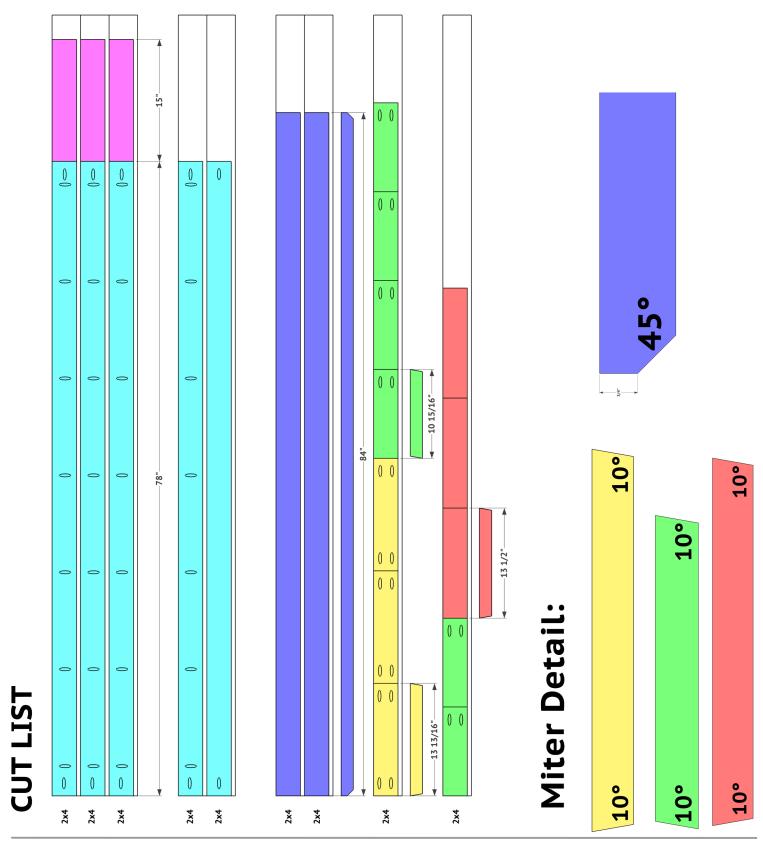

WWW.SHANTY-2-CHIC.COM

Note: We ripped the round edges off of our boards to make them 3" wide. This is not a necessary step but if you choose not to rip your boards, make sure to adjust the plan measurments accordingly.



Cut the bench planks to size and drill 1 1/2" pocket holes at each end and across the sides of four of the planks. Attach them together with 2 1/2" pocket hole screws.

0	0	0	0	0	0 =
0	0	0	0	0	0 -
0	0	0	0	0	0 0
0	0	0	0	0	0 0




Measure and cut the breadboard pieces to size and attach them to the end of the planks with 2 1/2" pocket hole screws.

		0	0	0	0	0	0 =
,	=0	0	0	0	0	0	0 0
	=0	0	0	0	0	0	0 =
	=0	0	0	0	0	0	0 =
$\langle - \langle$							





Cut the legs and the top of the leg base pieces to size and drill 1 1/2" pocket holes into the top ends of the legs. Attach the legs to the top leg base with 2 1/2" pocket hole screws and wood glue. Make sure the pocket holes face in. Build 3 leg base assemblies.

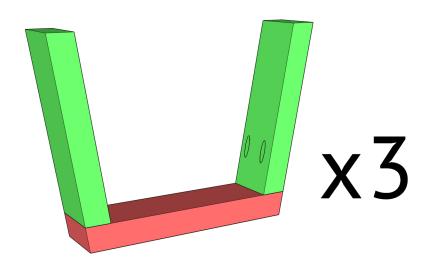



Measure and cut the leg runners to size. Drill 1/2" pocket hole screws in the bottom ends of the runners. Attach the runners to the legs, 1" from the bottom of the legs. Use wood glue and 2 1/2" pocket hole screws. Do this for all 3 leg base assemblies.

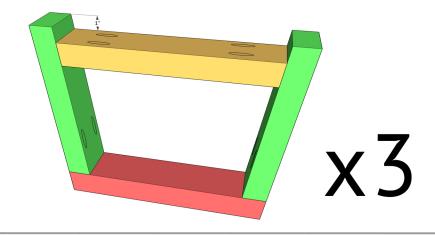

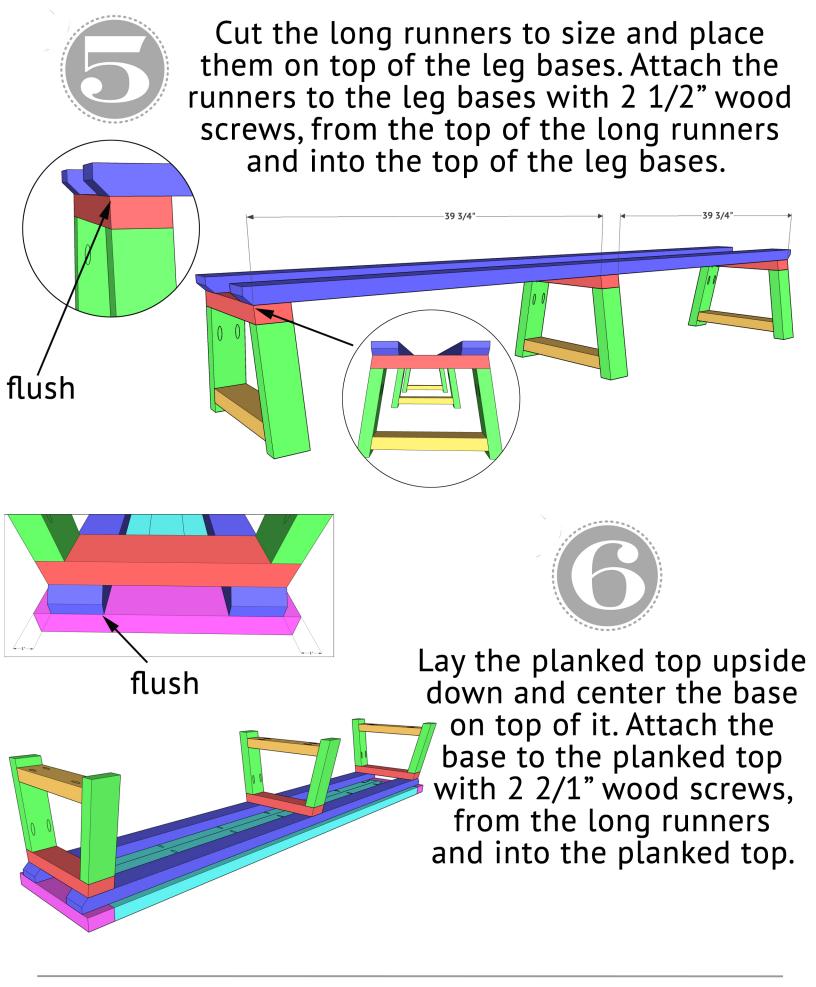

FILL all of your pocket holes with wood filler, sand and add a finish! Don't forget to add a protective finish, as well! We added decorative nail heads to the legs but you can make it your own!

Make sure to share your builds with us and use #shanty2chic so we can share them too!

Happy Building!

