



©2019 WWW.SHANTY-2-CHIC.COM



# Double Bypass Closet Doors

Supply List

THIS IS THE SUPPLY LIST FOR 1 DOOR!



Item	Quantity	Description
1 x 2 x 8	3	pine or white wood
1 x 4 x 6	4	pine or white wood
1 x 4 x 8	2	pine or white wood
1/4" hardwood plywood 48"x96"	1	cut to size
wood planks for door facing		refer to website for information on our material used
barn door hardware		refer to website for information on our material used
wood glue		
brad nails		
1.25" pocket hole screws		

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST


This is the cut list for 1 door and it does not include the wood planks!

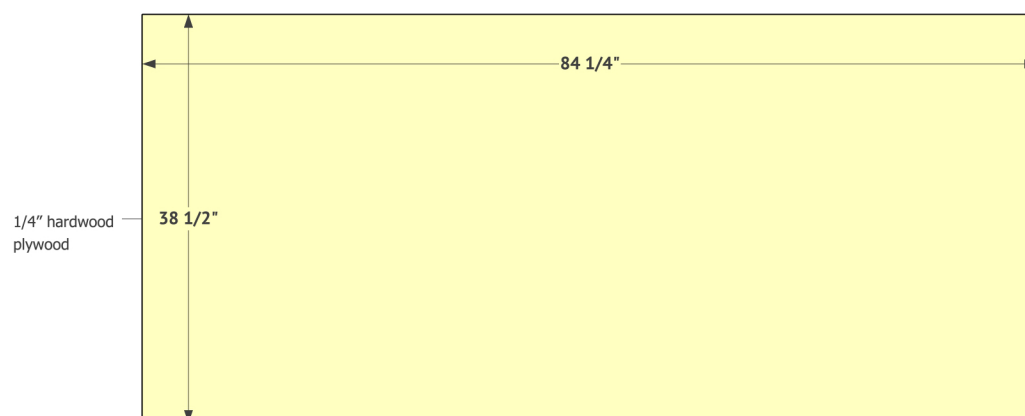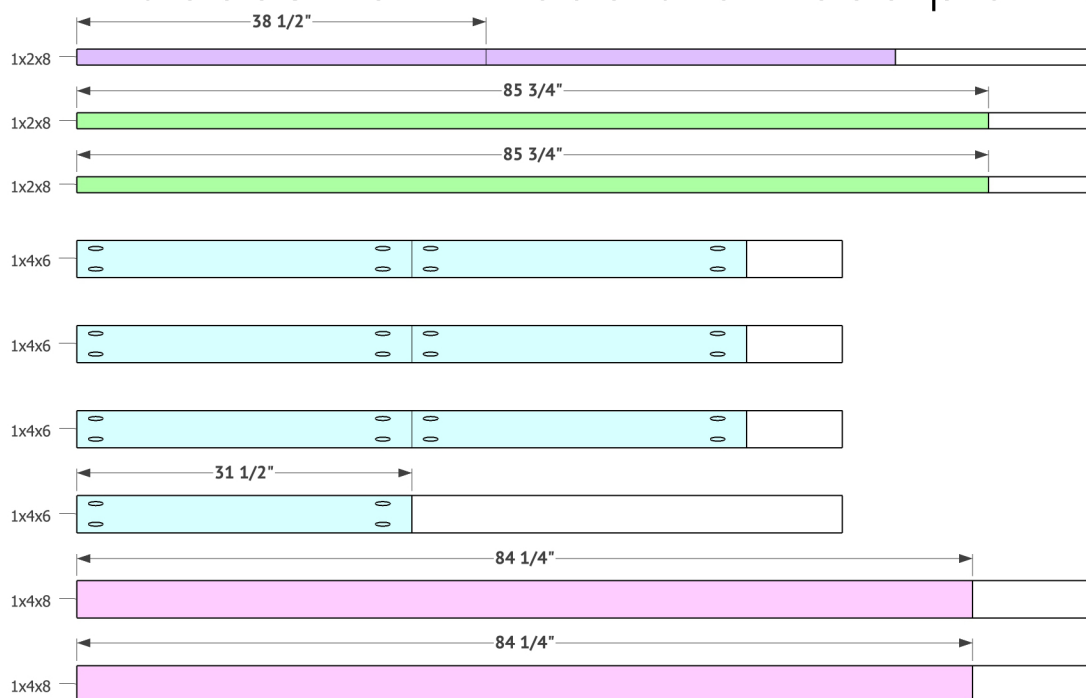

\* This plan makes doors for 6.6' barn door hardware with an 8ft ceiling. Make sure to measure your own space and modify dimensions and hardware to fit your opening.


1

The first step is to build the frame of the doors. These are 1x4 boards. Add 3/4" pocket holes to each of the shorter horizontal boards, and attach them to the longer boards using wood glue and 1.25" pocket hole screws. Your spacing on these do not have to be exact.

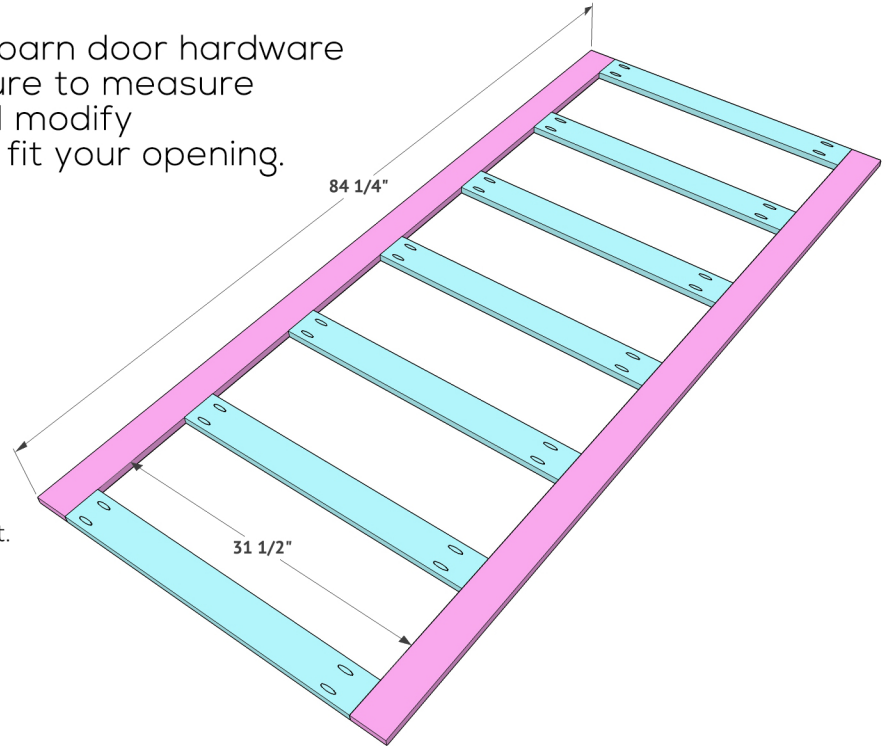

2

Next, attach the 1/4" plywood to the top of your frame. Use wood glue and 3/4" staples to attach this. The plywood will create the stable surface for you to attach the wood planks.

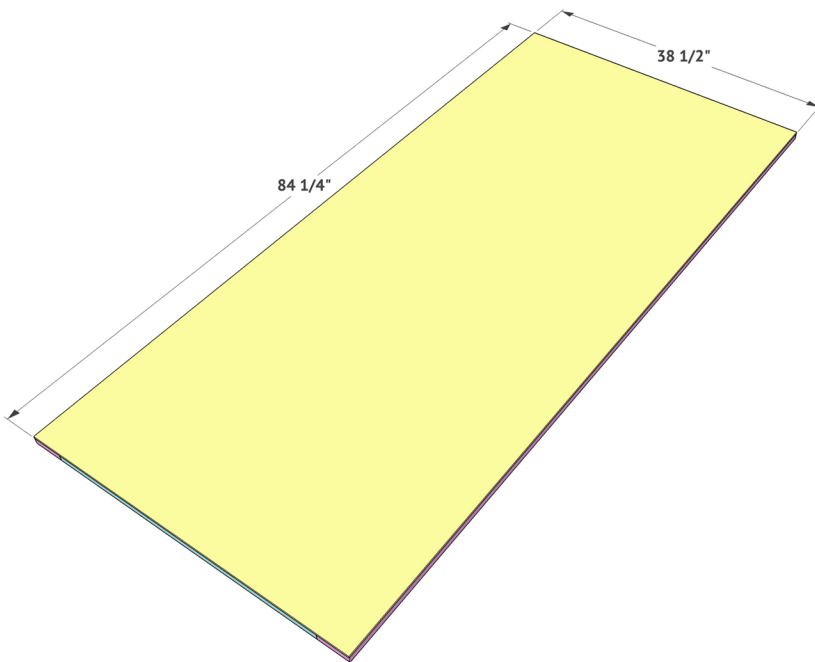



3

Attach the wood planks next. Refer to our website for information on the wood I used for my doors. Attach the wood planks using wood glue and brad nails. Make sure to use brad nails short enough to not go through the plywood back. Work your way down and measure and cut as you go.



4

Attach the trim boards next. These are 1x2 boards and they will have a slight overhang on the back of the door. You want the front of the 1x2 to line up flush with the front of the wood planks. Attach the trim boards using wood glue and 1.25" brad nails. Attach the top and bottom trim boards first.

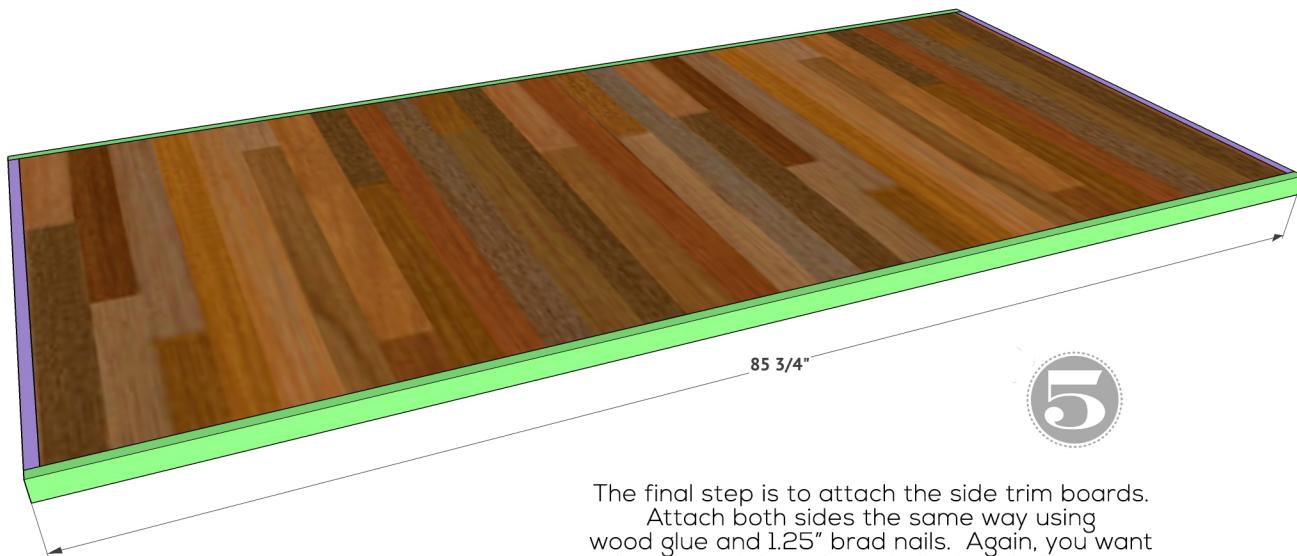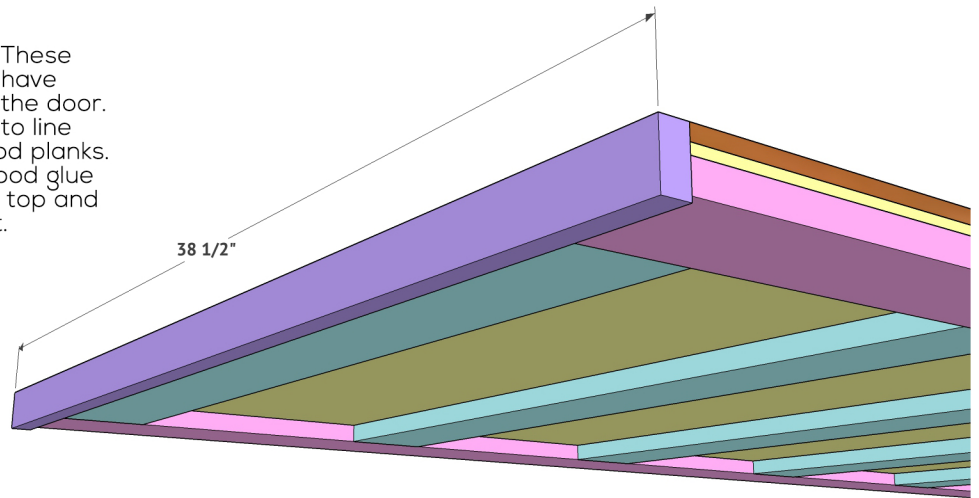

5

The final step is to attach the side trim boards. Attach both sides the same way using wood glue and 1.25" brad nails. Again, you want the front of these boards flush with the front of the wood planks.

After building both doors, you are ready to install the hardware. Refer to our website for tips on how I installed mine, and which hardware I used! Be sure to share all of your builds on social media with us using #shanty2chic so we can see and share them!

