



©2019 WWW.SHANTY-2-CHIC.COM



# Rustic Chic Full Length Mirror


## Supply List


Item	Quantity	Description
3/4" laminated pine project panel	1	cut to 24" x 68"
1.25" wide pine casing or molding	2	96" long
3/4" wide basic pine trim	2	96" long
1" half circle pieces	2 bags	check website for link
1 x 2 x 8	2	pine or white wood
wood glue		
16" x 60" beveled frameless mirror	1	check website for link

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST

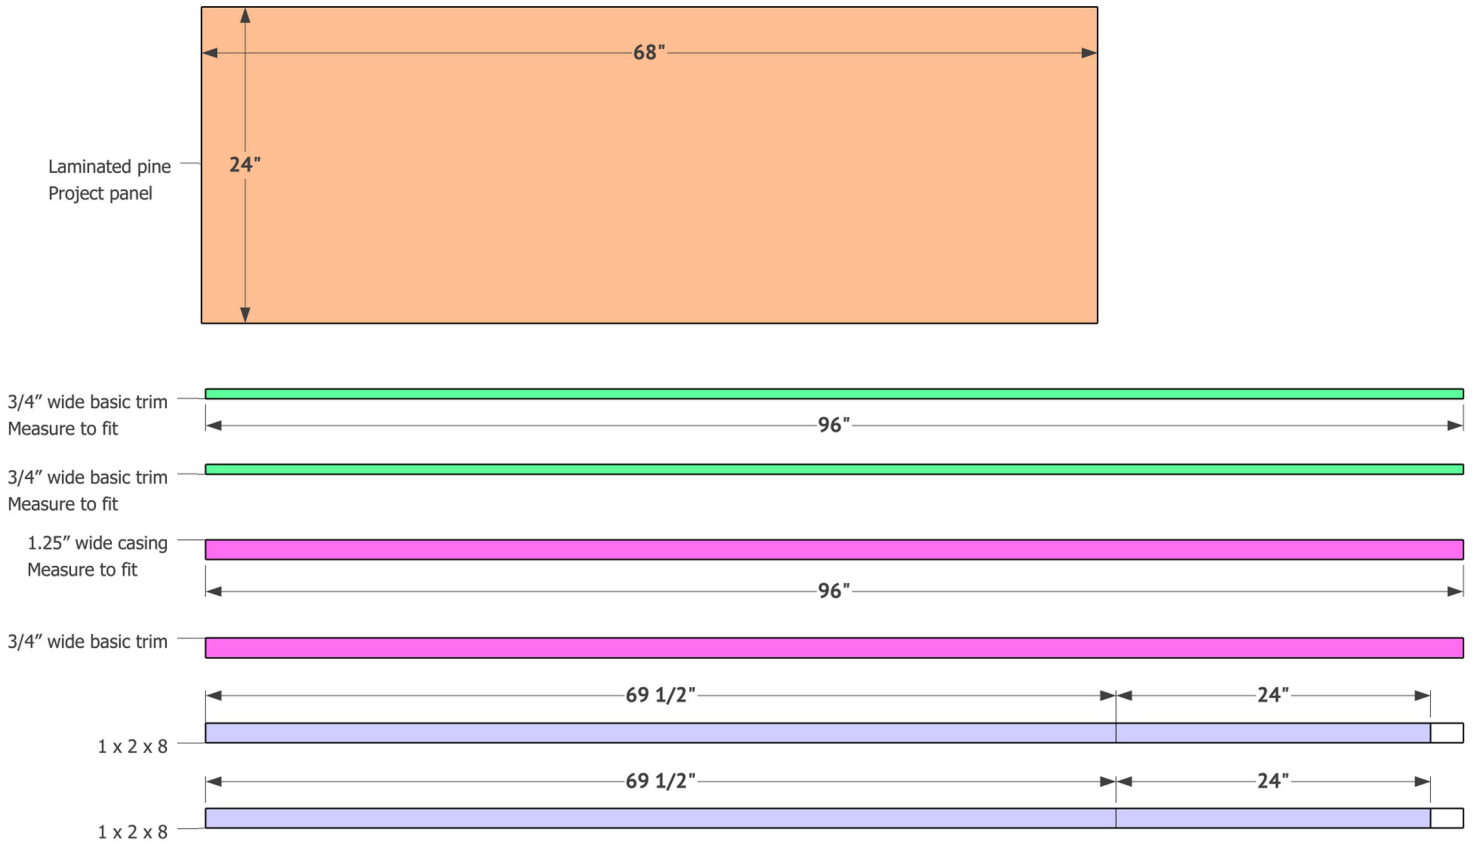

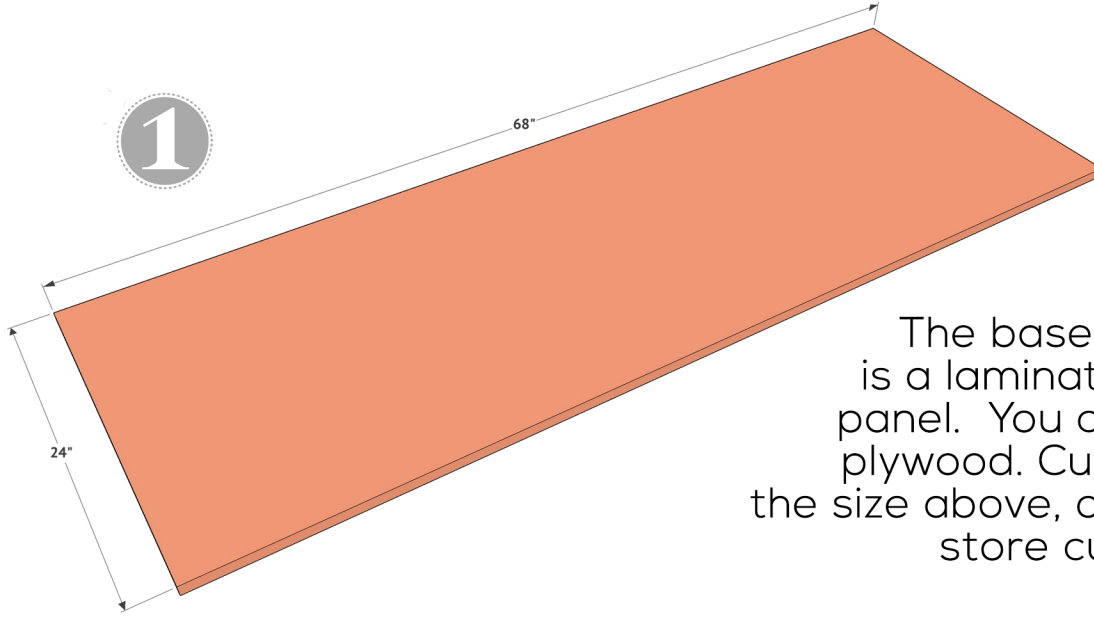



The base of this mirror is a laminated pine project panel. You can also use 3/4" plywood. Cut the plywood to the size above, or have the hardware store cut it for you.

2

Use a pencil to mark draw a line around the mirror. You want it to be evenly spaced both vertically and horizontally.


Add the first layer of trim on the outside of this line.

I used 1.25" pine casing from the hardware store. Any thin trim piece will work!

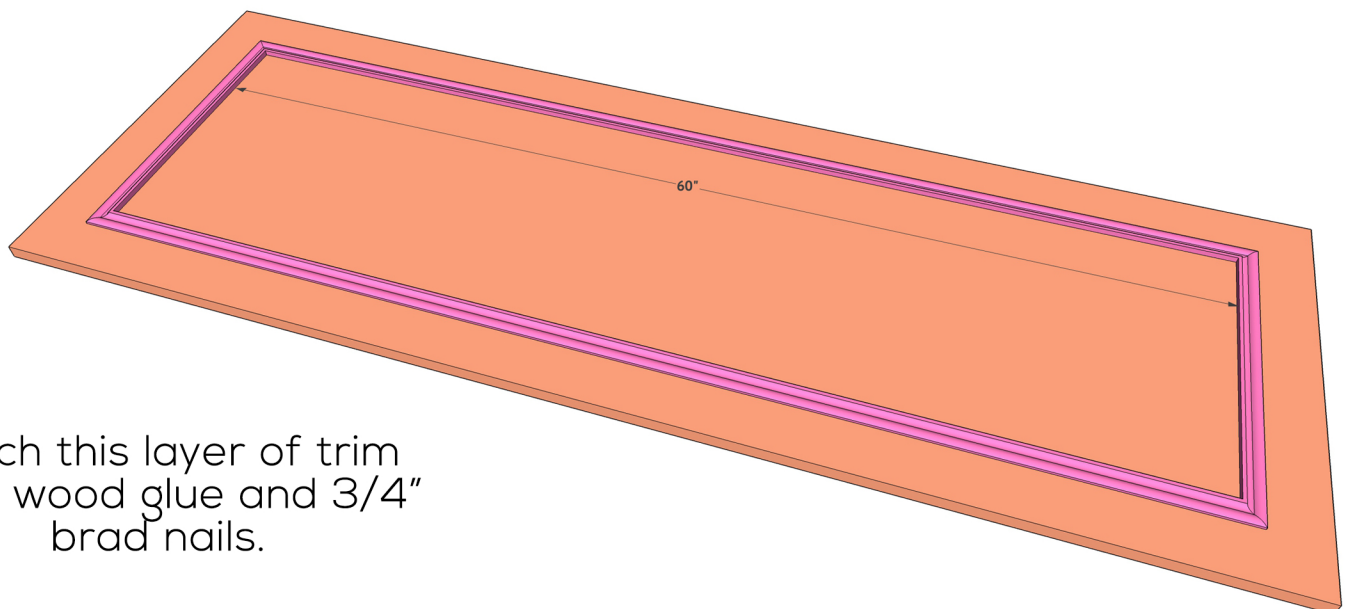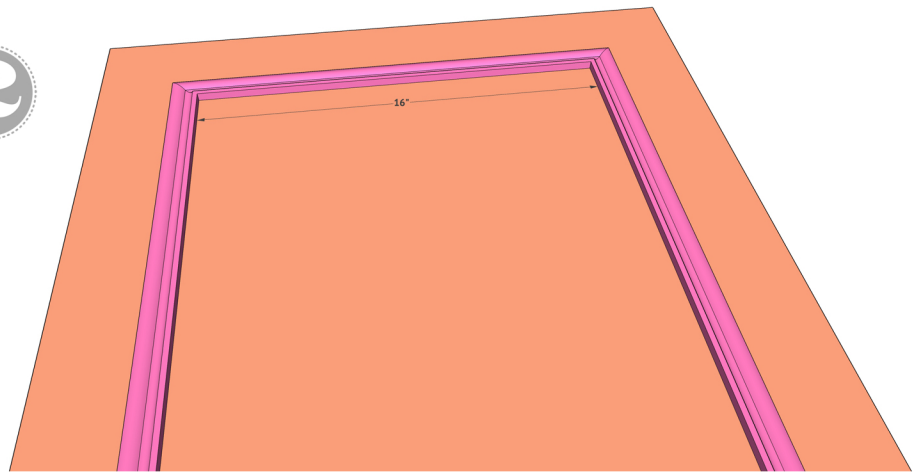


Attach this layer of trim using wood glue and 3/4" brad nails.

3

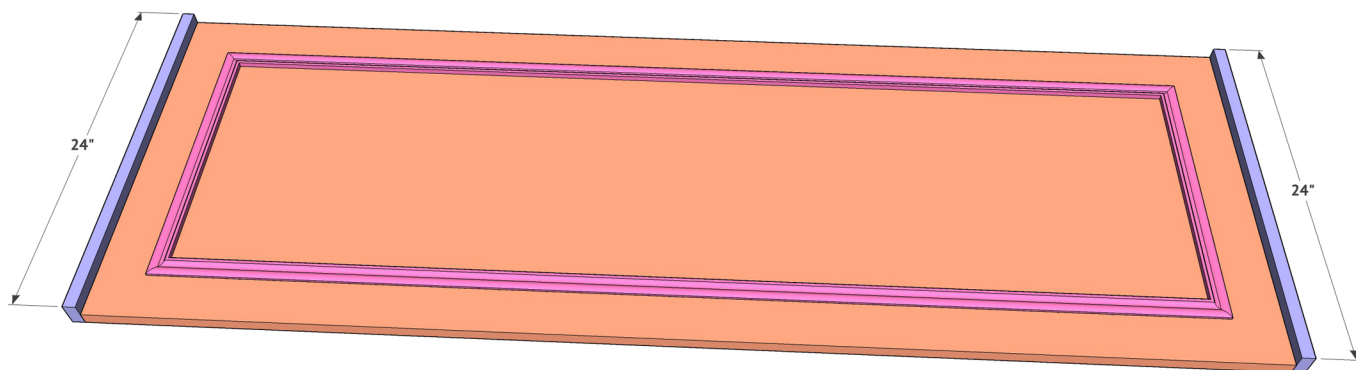


Attach the outside trim next. This is 1x2 boards.

Cut the short sides to size and attach using wood glue and 1.25" brad nails.

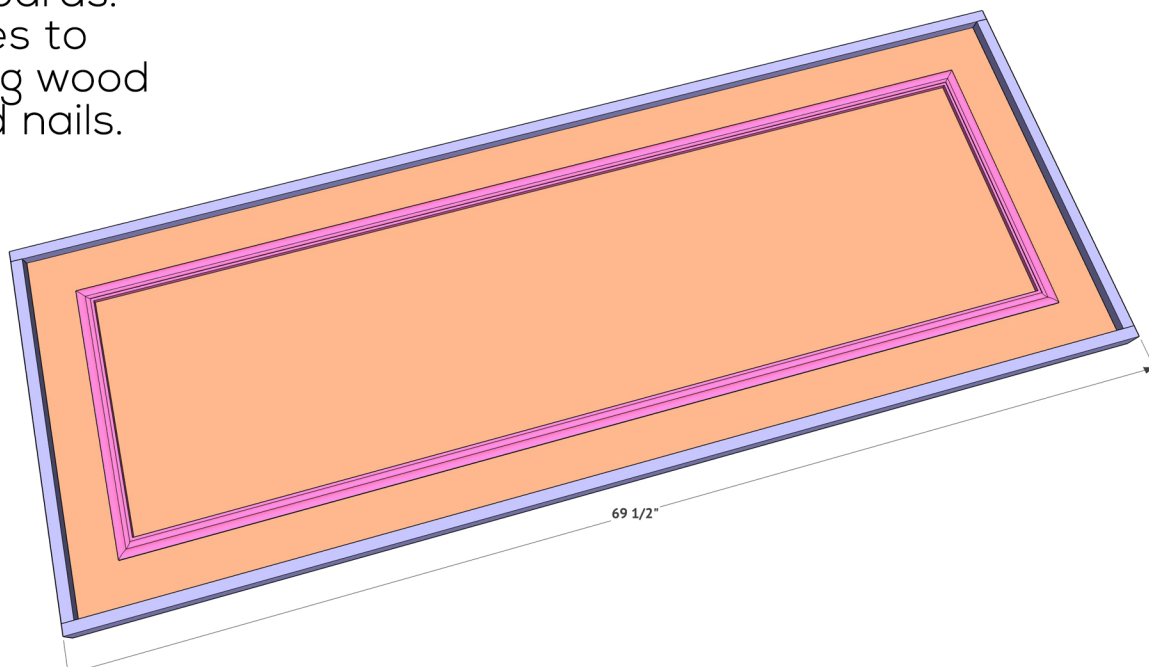

4

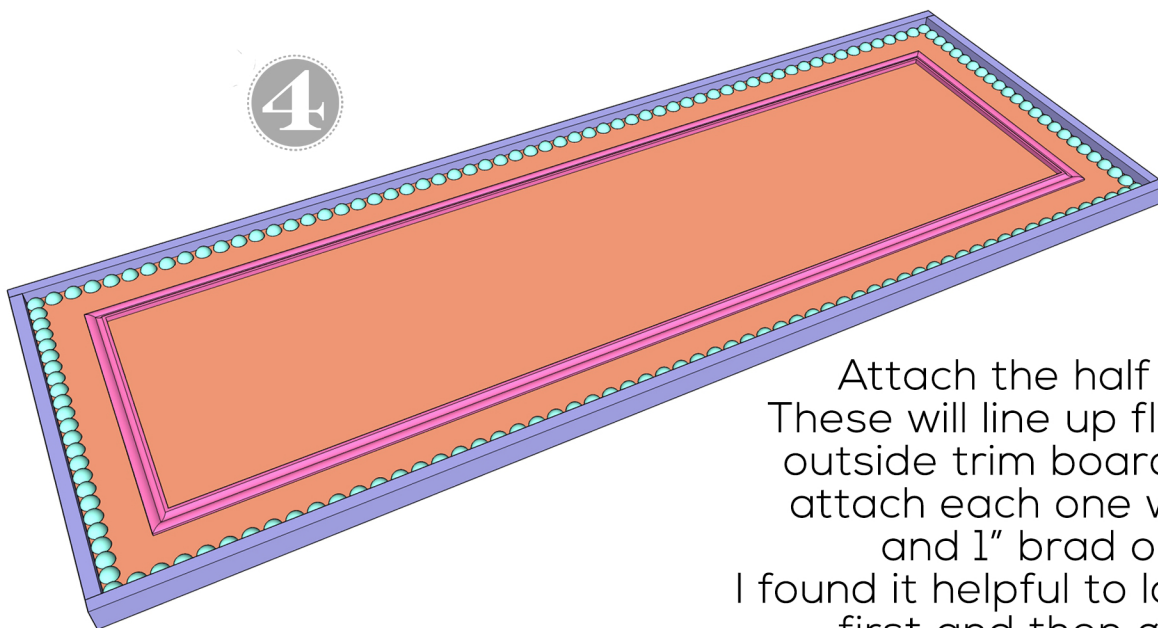


Attach the half circles next. These will line up flush against the outside trim boards, and you will attach each one with wood glue and 1" brad or pin nails.


I found it helpful to lay all of mine out first and then glue and nail.




5

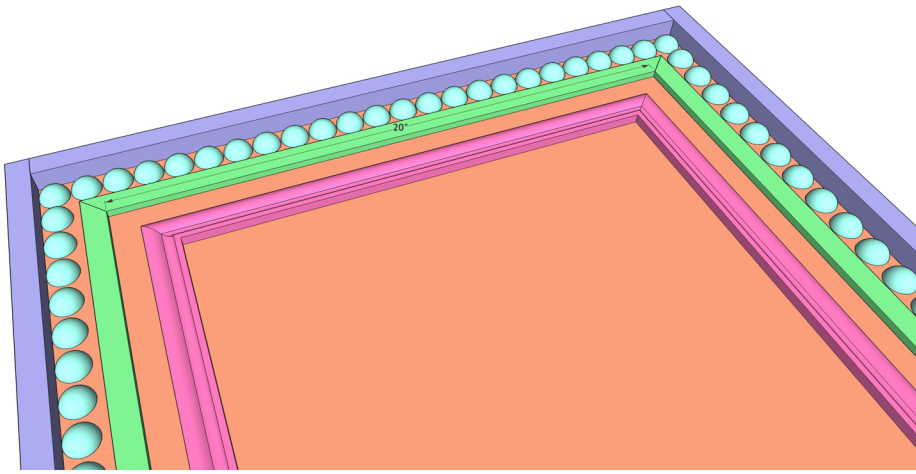

The final piece of trim to add is the small 3/4" trim. This will sit just to the outside of the half circles. If you can't find trim this size, you can easily create it by cutting a 1x4 or 1x6 board to 1/4" thick with a table saw. Attach each piece using wood glue and 3/4" brad nails.

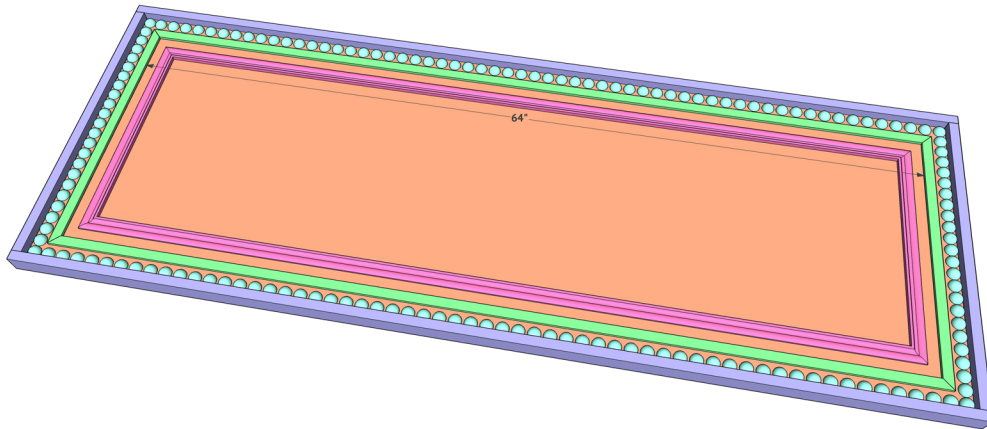

Repeat the same thing with the longer trim. Each of these trim pieces will be cut at a 45° angle.

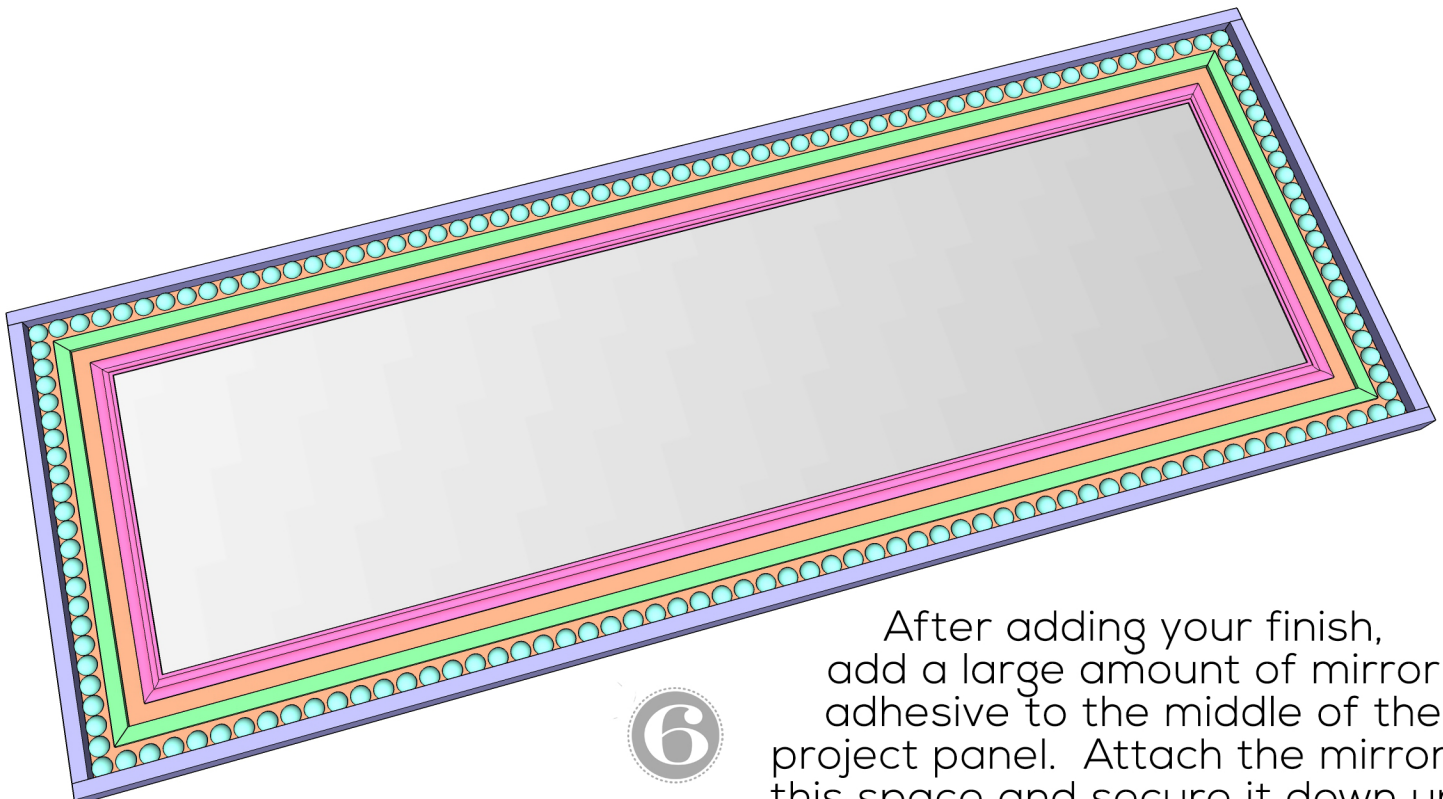

6

After adding your finish, add a large amount of mirror adhesive to the middle of the project panel. Attach the mirror in this space and secure it down until it dries.