



DIY ANGLED COFFEE TABLE


SUPPLY LIST

Item	Quantity	Description
1x4x8	4	Whitewood or Common Boards
1x6x8	1	Whitewood or Common Boards
2x4x8	3	
1 1/4" pocket hole screws		
2 1/2" pocket hole screws		
2 1/2" wood screws		
Wood Glue		

Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

CUT LIST

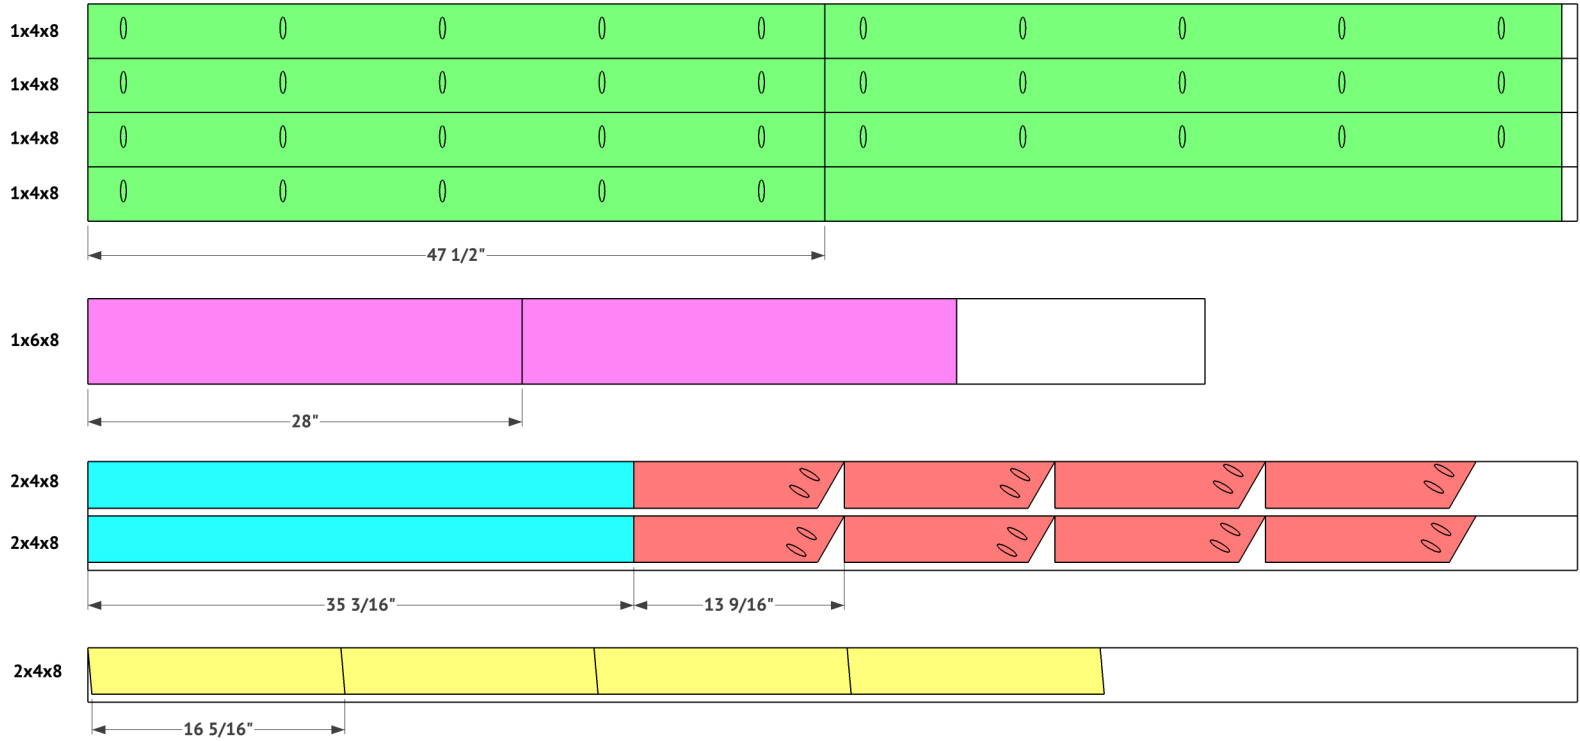


Miter Cut Details:



Note: I ripped the round edges off of all of the 2x4 boards to make them 3" wide. This is not a necessary step but if you choose not to rip your boards, modify the measurements accordingly.


1

Cut the table top planks and drill 3/4" pocket holes, as shown on the cut list. Attach the planks together with 1 1/4" pocket hole screws.

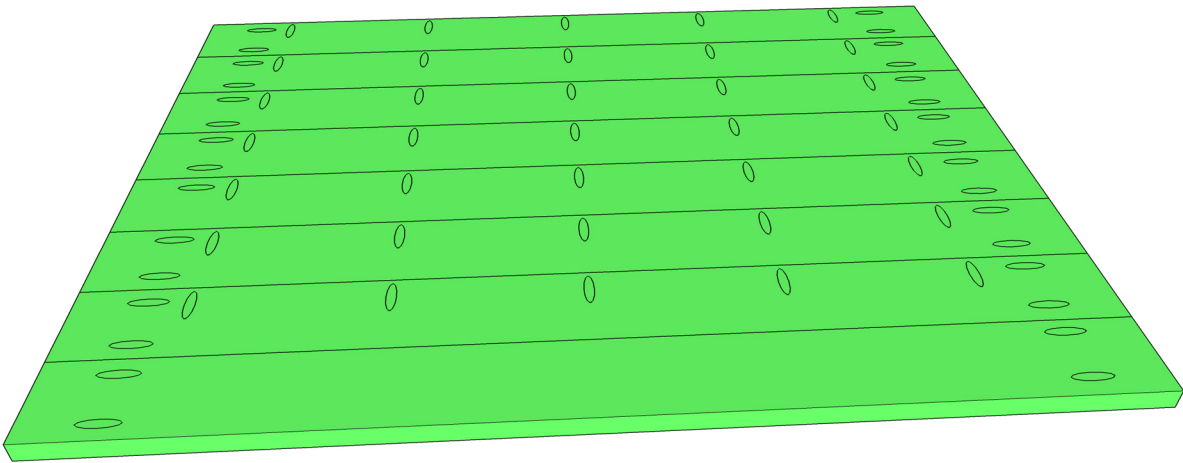


2

Measure and cut the breadboards to size. Attach them to the ends of the planks with 1 1/4" pocket hole screws.

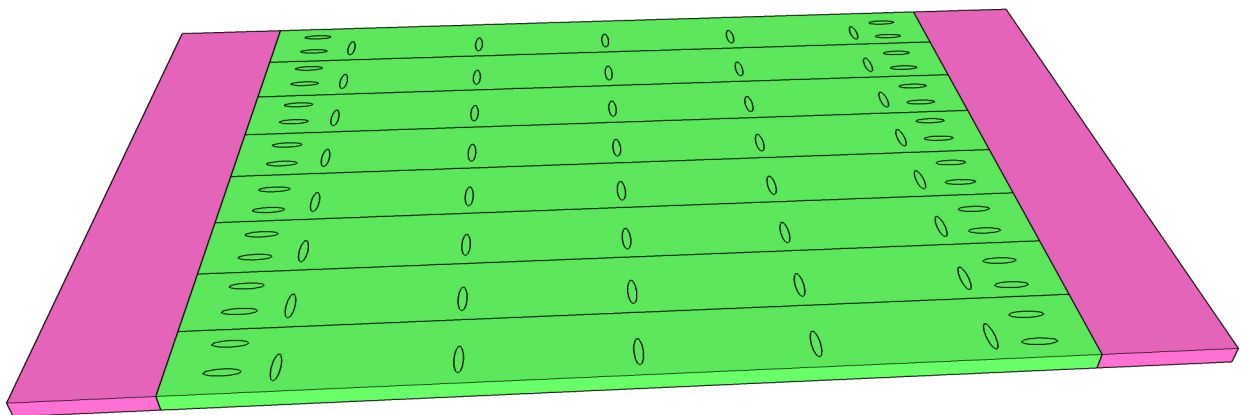


3

Cut the base pieces to size and drill 1 1/2" pocket holes into the angled ends of each foot. Attach the feet to the runner with 2 1/2" pocket hole screws and wood glue. Build two of these bases.

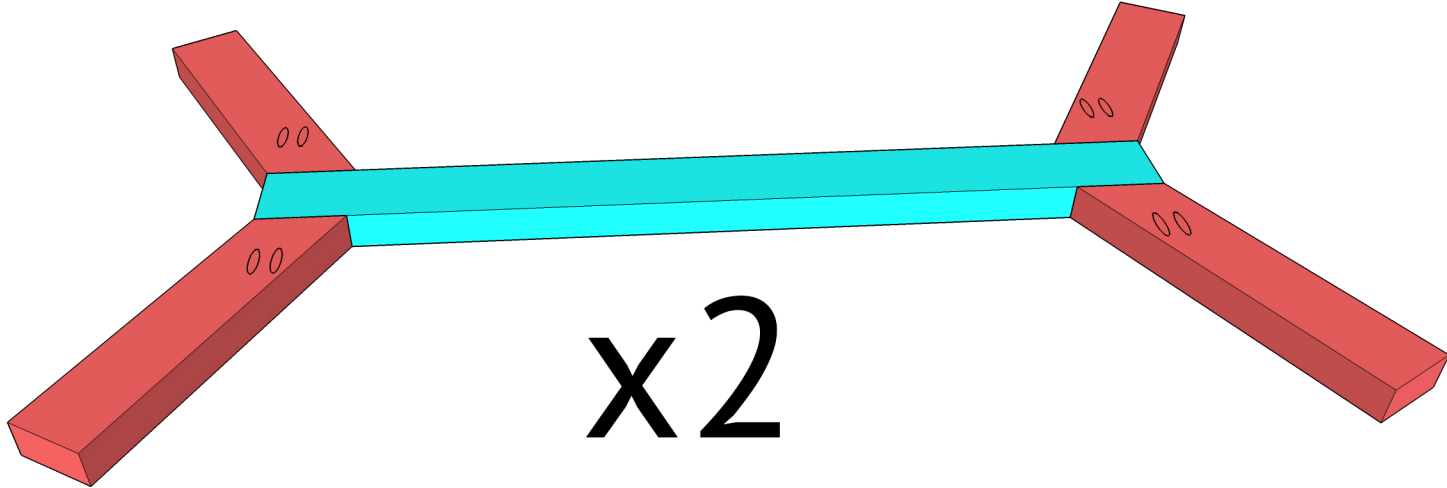


4

Cut the legs to size and attach them to the top base with 2 1/2" wood screws from the top of the base and into the legs. The pocket holes should face up.

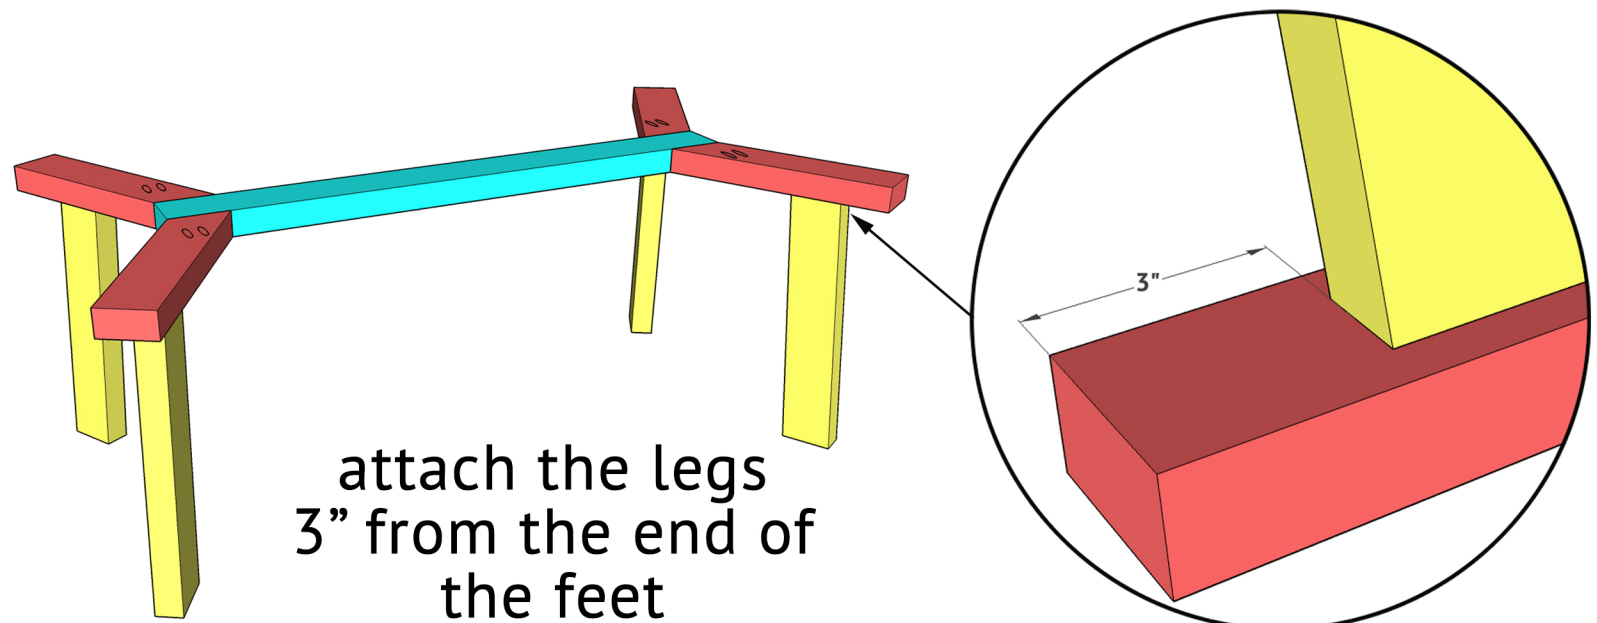


5

Flip the base over and attach the bottom base with wood glue and 2 1/2" wood screws from the bottom of the bottom base and into the legs. The pocket holes should face down.


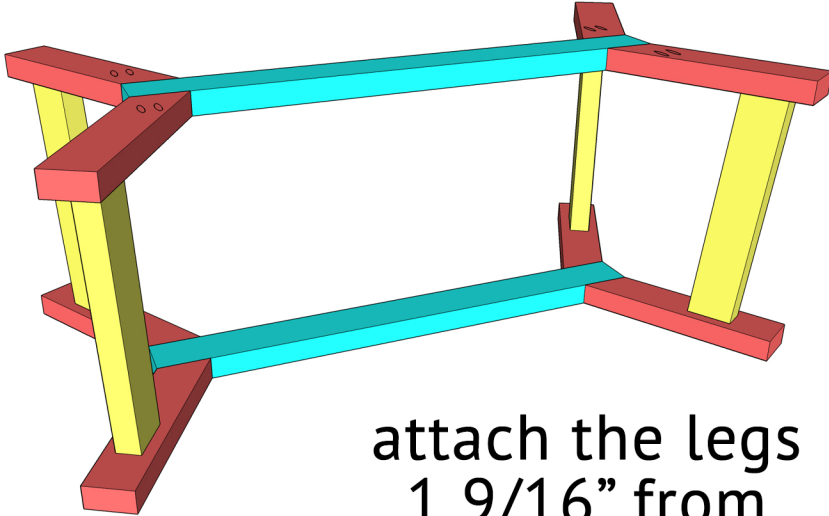


attach the legs
1 9/16" from
the end of the feet

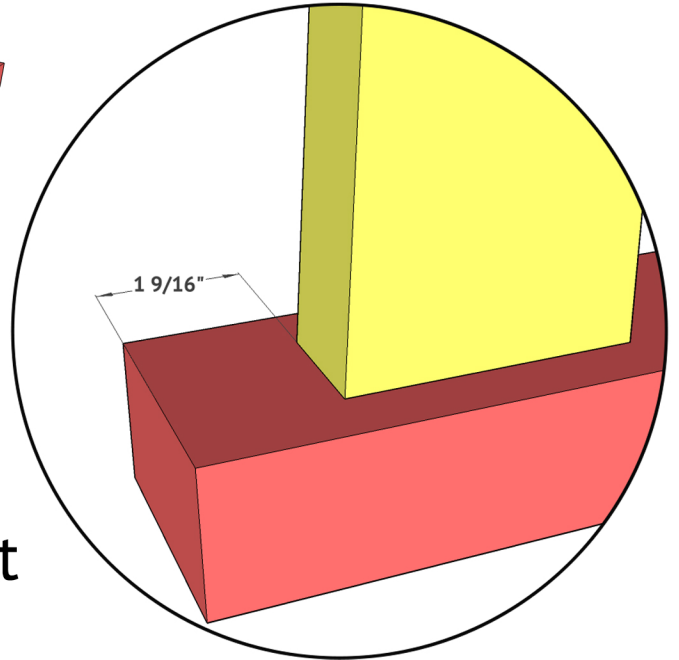

6

With the table top upside down, center the base on top of it. Attach the table base to the top with 2 1/2" wood screws from the top of the base and into the table top.

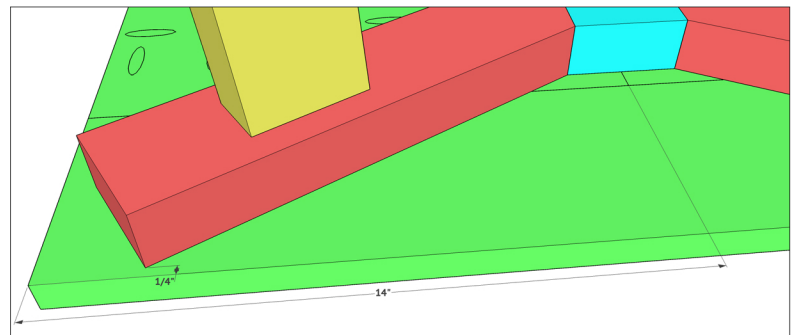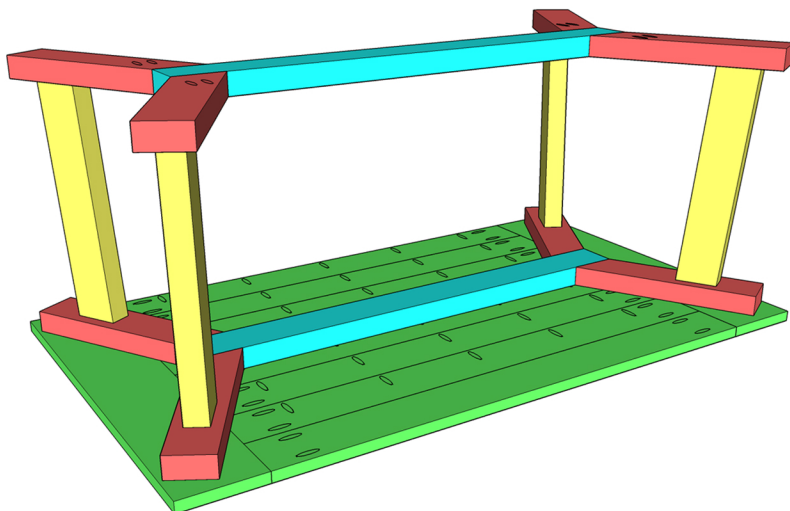

Now it's time to sand the table down and add a finish!

Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!

