



©2017 WWW.SHANTY-2-CHIC.COM



DIY DOG BED

SUPPLY LIST

Item	Quantity	Description
2x4x8	9	Framing Lumber
1x4x8	4	Pine or White Wood
1X2X8	2	Pine or White Wood
1 1/4" pocket hole screws		
2 1/2" pocket hole screws		
1 1/4" brad nails		
2" brad nails		
Wood Glue		
Dog Mattress		Link in Post

Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!


CUT LIST

2x4x8	0	0	0	0	0	0	0	0	0	
2x4x8	0	0	0	0	0	0	0	0	0	
2x4x8	0	0	0	0	0	0	0	0	0	
2x4x8	0	0	0	0	0	0	0	0	0	
2x4x8	0	0	0	0	0	0	0	0	0	
2x4x8	0	0	0	0	0	0	0	0	0	
2x4x8	0	0	0	0	0	0	0	0	0	
2x4x8	0	0	0	0	0	0	0	0	0	
2x4x8	0	0	0	0	0	0	0	0	0	
2x4x8	0	0	0	0						
	36"									
1x4x8										
1x4x8										
	27 11/16"								3 1/2"	
1x4x8	0	0	0	0	0	0	0	0	0	
	36"									
1x4x8	0	0	0	0						
					38 15/16"					
1x2x8										
	24 11/16"									
1x2x8										
					10 1/2"					

Note: We ripped the round edges off of the 2x4 boards making them 3" wide. This is not a necessary step but if you choose not to rip your boards, adjust the plans accordingly.


1

Cut the bottom planks to size and drill 1 1/2" pocket holes along one edge of all except one board. Attach them together using 2 1/2" pocket hole screws.

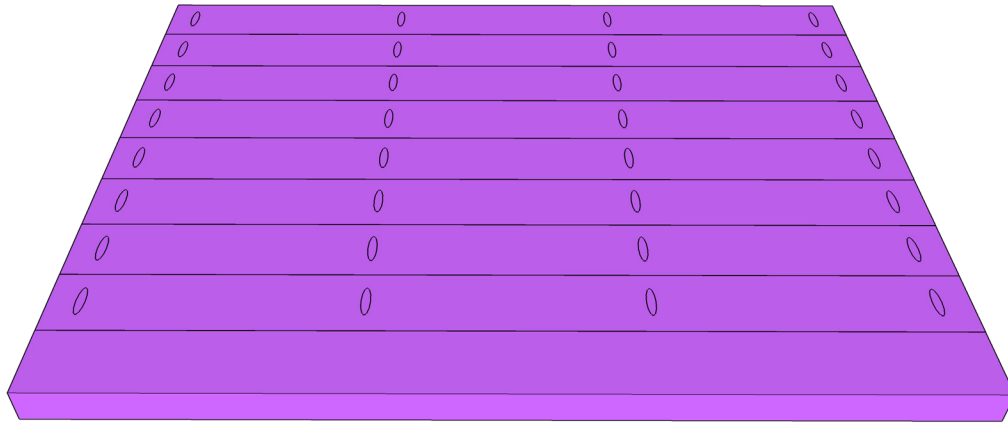


2

Cut the back planks to size and drill 3/4" pocket holes along one edge of two of the planks. Attach them together with 1 1/4" pocket hole screws.

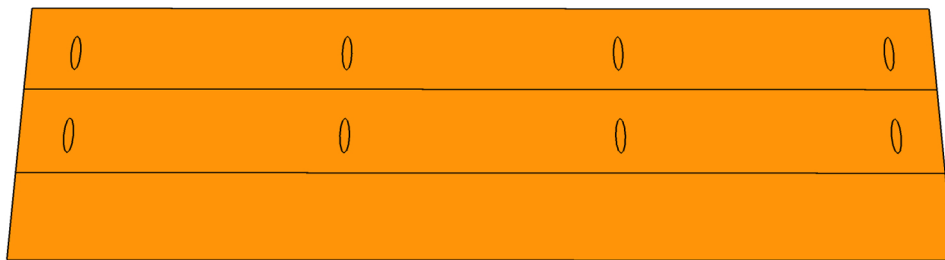

3


Attach the back planks to the bottom planks with 1 1/4" brad nails and wood glue. The bottom of the back planks should be flush with the bottom of the bottom planks.

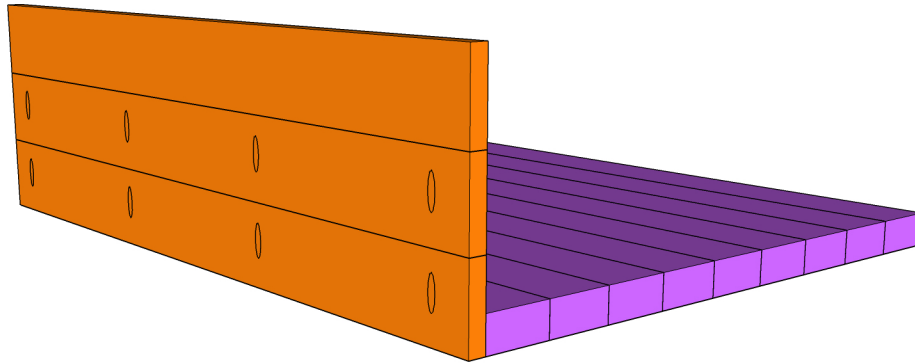


4

Cut the side planks to size. Measure and cut the vertical trim to fit. Attach the vertical trim to the ends of the planks with 1 1/4" brad nails and wood glue. Measure and cut the horizontal trim to size and attach it the same way. Build two assemblies.

1.

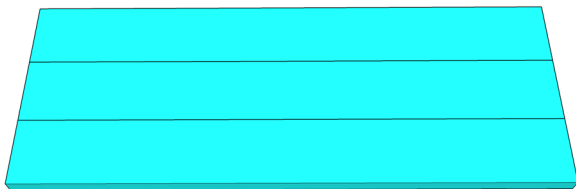

2.

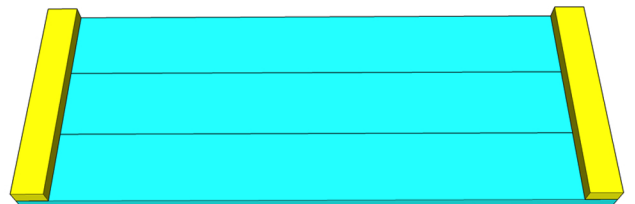


3.



x2


5

Attach the side assemblies to the dog bed with 2" brad nails and wood glue. The bottom of the side assemblies should be flush with the back of the back planks and the bottom of the side assemblies.

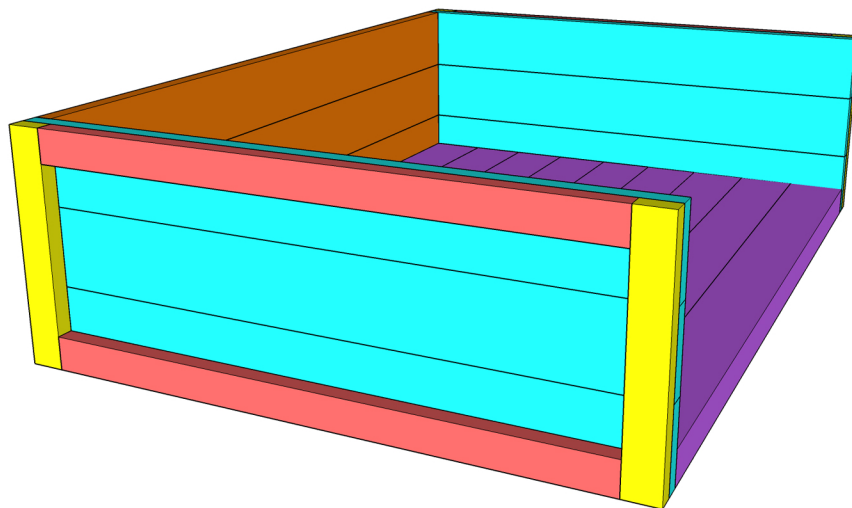


6

Cut the front trim piece to size and attach it to the front of the dog bed with 1 1/4" brad nails and wood glue. The side and bottom of the trim piece should be flush with the bottom and edges of the dog bed.

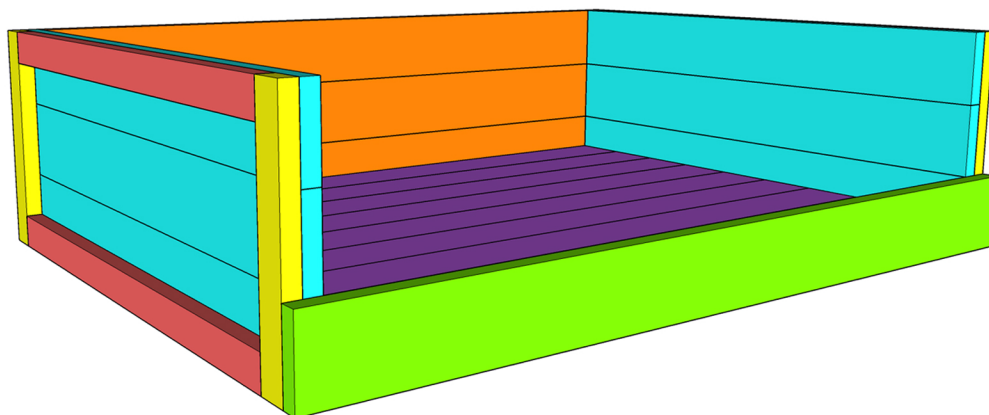



Flip the dog bed upside down and cut the foot pads to size. Attach them to the bottom of the dog bed with 1 1/4" brad nails and wood glue. They should be flush with the corners of the dog bed.

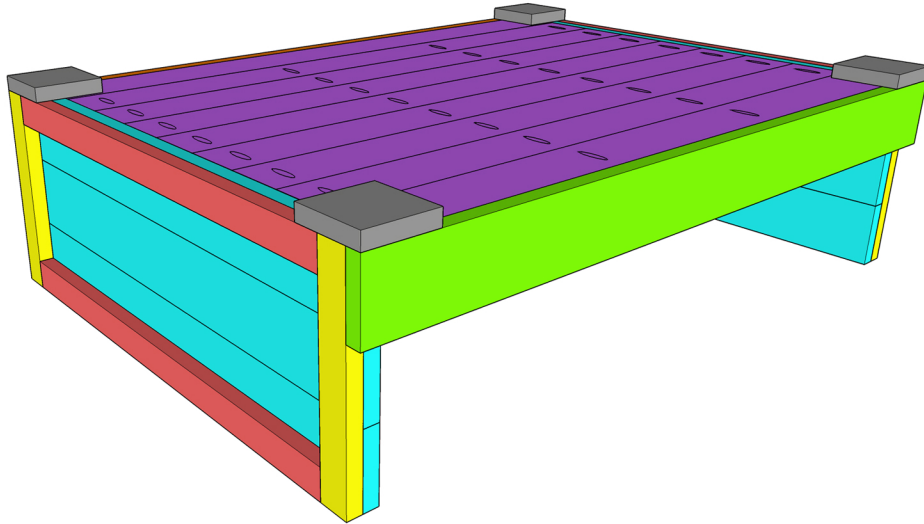

Now just sand it, add a finish and the mattress and you're done! Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!

