



©2017 WWW.SHANTY-2-CHIC.COM



# RUSTIC NIGHTSTAND WITH DRAWER




## SUPPLY LIST

Item	Quantity	Description
2x2x8	2	Framing Lumber (I ripped from 2x4)
1x2x8	1	Pine or Common Boards
1x5x8	2	Pine or Common Boards
1/2"x3.75"x8'	2	Hardwood Plywood (can be ripped from the 3/4")
1/2"x3/4"x8' Trim	5	Pine (I ripped mine from 1x boards)
1/4"x48"x48" Hardwood Plywood		Birch
3/4"x48"x96" Hardwood Plywood	1	Birch
1 1/4" pocket hole screws		
2 1/2" pocket hole screws		
1 1/4" brad nails		
1" pin nails		
1 1/2" wood screws		
wood glue		
Drawer Pulls	2	Linked on our Website

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST





ripped from 1x5

*Remember!*


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST

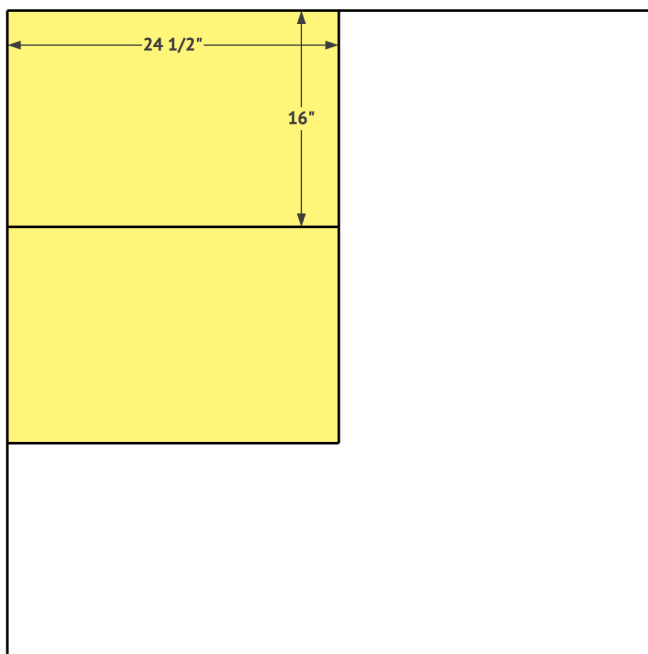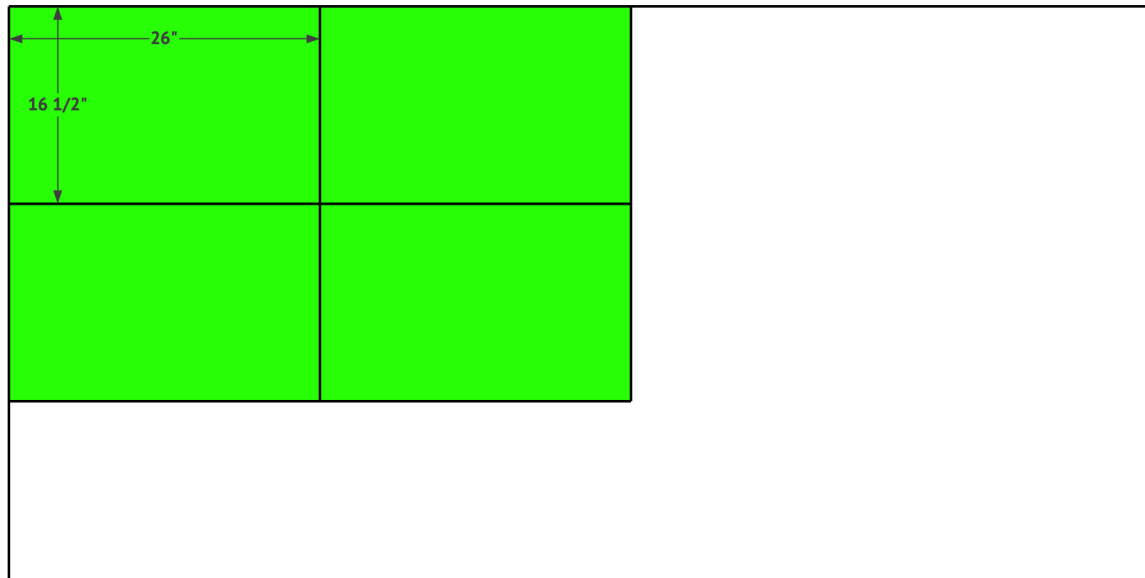


1

Cut the shelf pieces to size. Measure and cut the side trim pieces to size and attach them to the sides of the shelf with 1" pin nails and wood glue. Measure and cut the front and back trim pieces to size and attach them the same way. Build 4 shelves.

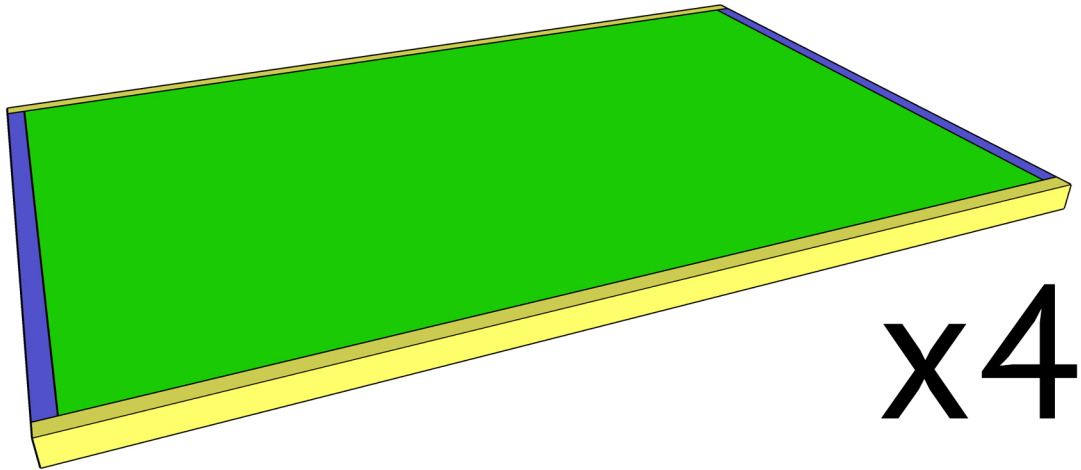

2

Cut the side shelf pieces to size, drill  $\frac{3}{4}$ " pocket holes in one side of each board and attach them to the sides of the bottom shelf with 1  $\frac{1}{4}$ " pocket hole screws and wood glue. Do this for both bottom shelves.

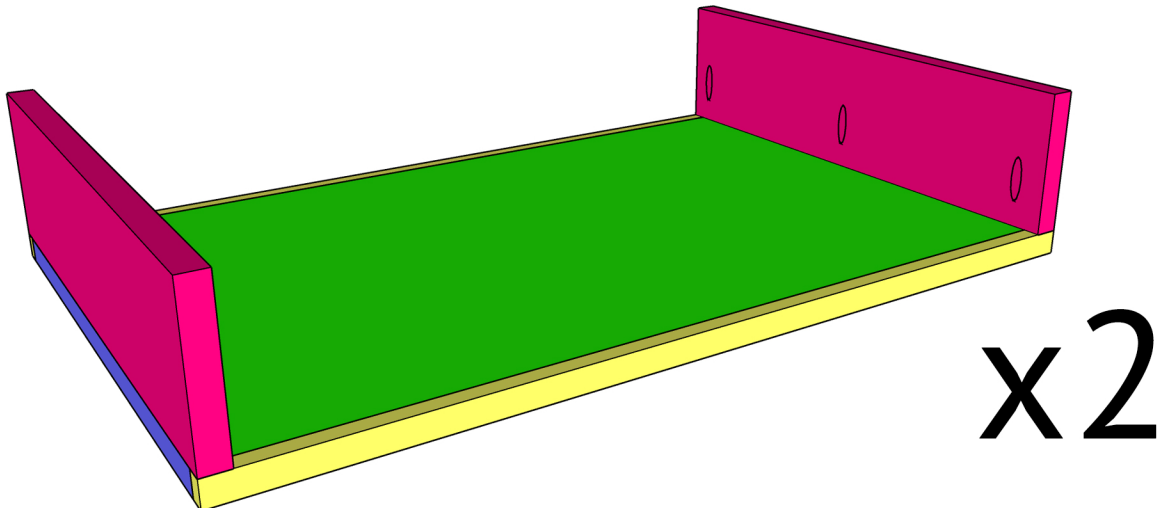




3


Cut the back shelf piece, drill  $\frac{3}{4}$ " pocket holes on one edge and both ends of the board. Attach it to the back of the bottom shelf, between the side pieces with  $1\frac{1}{4}$ " pocket hole screws and wood glue.

x2

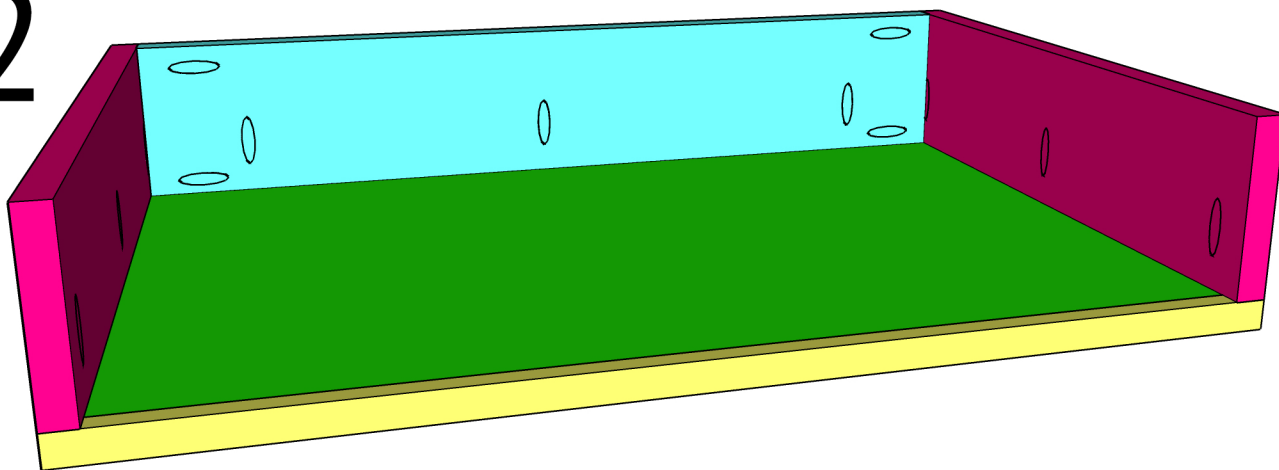

4



Cut the side frame and top frame pieces to size. Drill  $1\frac{1}{2}$ " pocket holes at the top of each side frame piece. Attach the side frame pieces to the top frame piece with  $2\frac{1}{2}$ " pocket hole screws and wood glue. Build 2 frames.

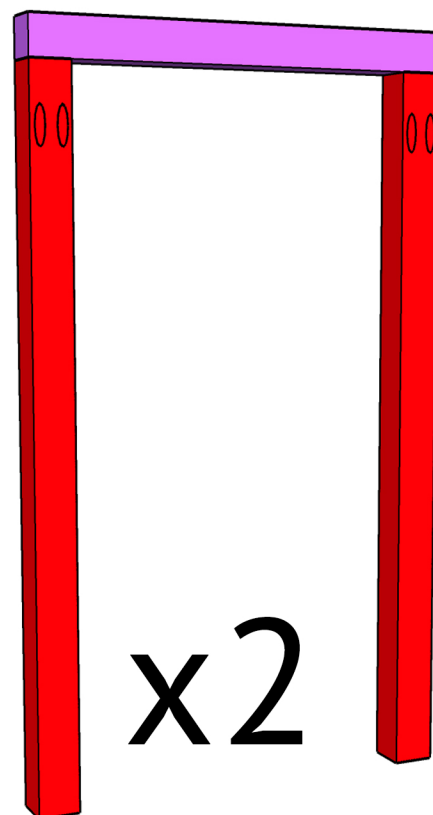

x2


5

Cut the bottom rails to size and drill  $\frac{3}{4}$ " pocket holes at both ends. Center the rails on the inside of the frames and attach them with  $1 \frac{1}{4}$ " pocket hole screws and wood glue.

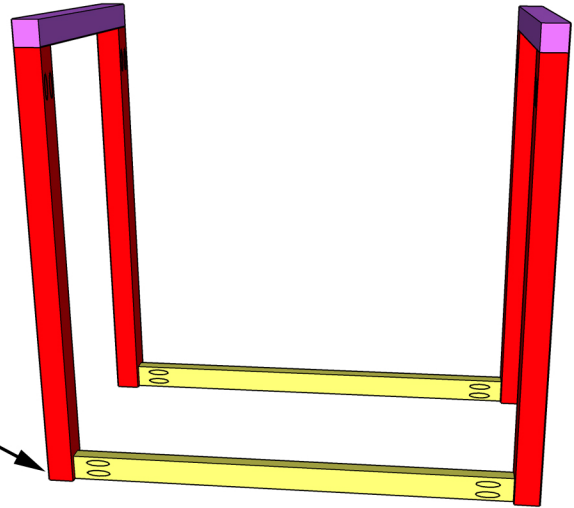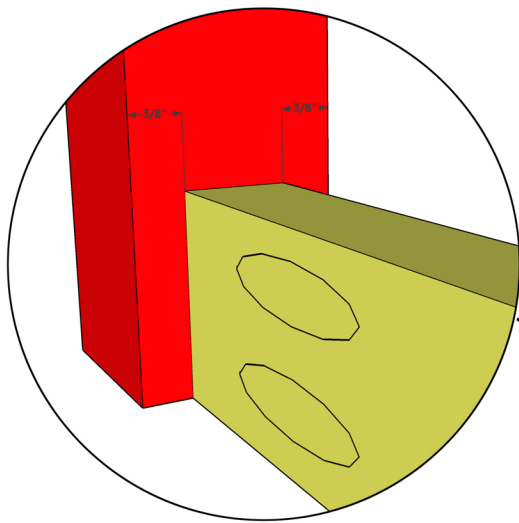


6


front

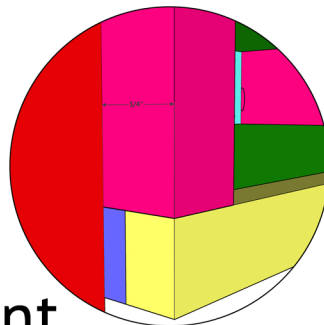

back

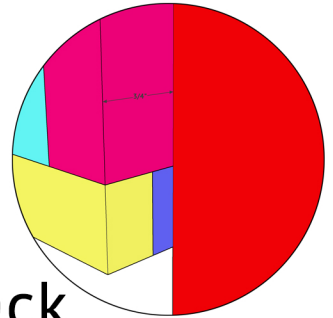


Attach the bottom shelf to the frame with  $1 \frac{1}{2}$ " wood screws from the inside of the shelf and into the frame. The shelf should over hang the frame  $\frac{3}{4}$ " on the front and back.

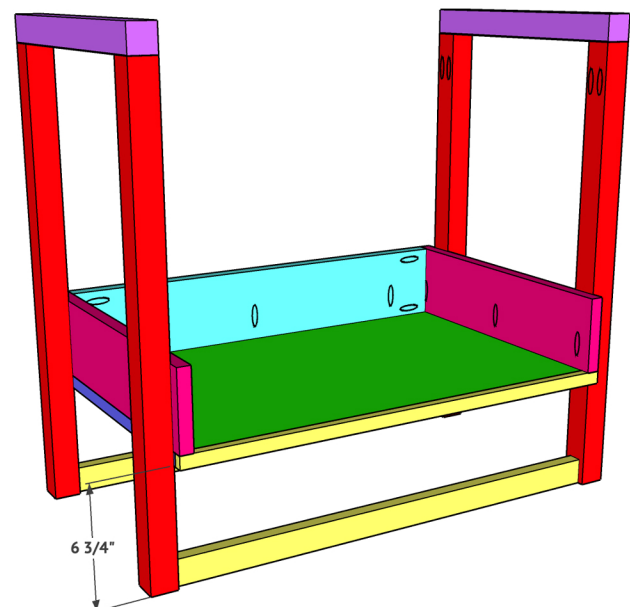




Attach the top shelf the same way making sure to allow a 3/4" over hang on the front and back, as well.

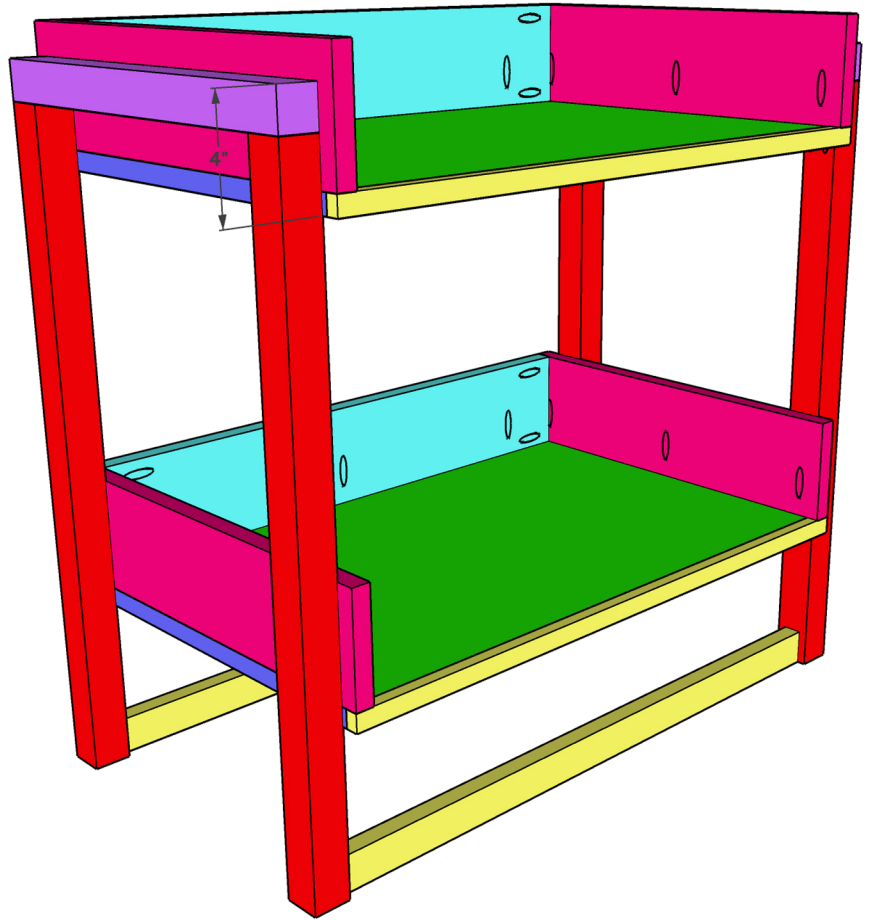


Cut the drawer frame pieces to size. Attach the short sides to the long pieces with 1 1/4" brad nails and wood glue. Build 2 frames.

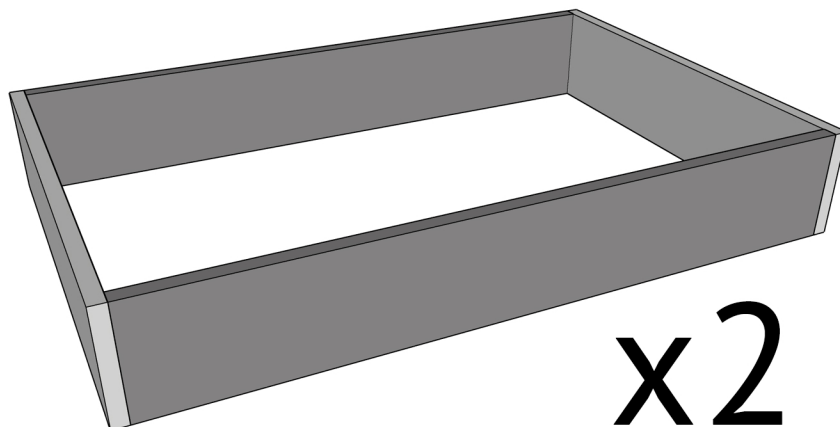

x2

9


Cut the bottom of the drawer to size and attach it to the bottom of the drawer frame with 3/4" staples and wood glue.

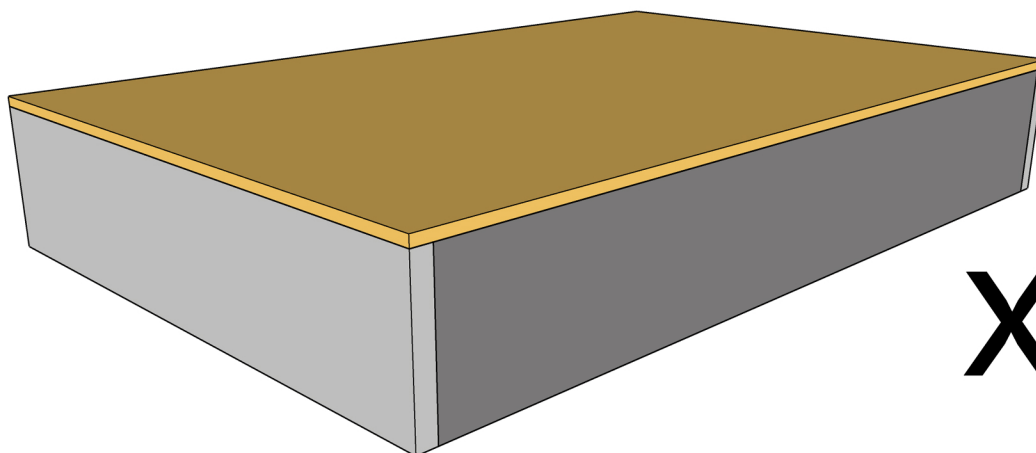

x2


10

Install the drawers in the shelves before attaching the top shelves. You can get detailed instructions on how we installed our drawers on our website.

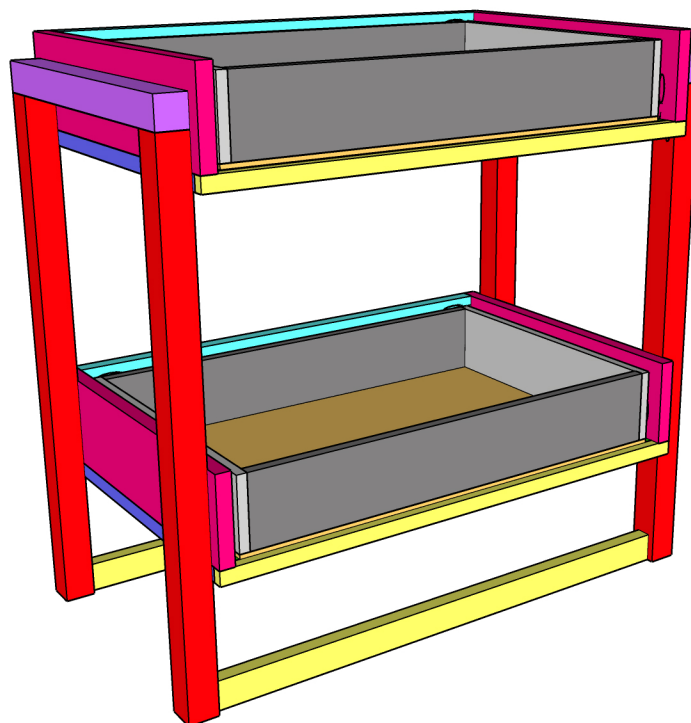


11

Attach the top shelf pieces to the top of the shelves with 1 1/4" brad nails and wood glue.

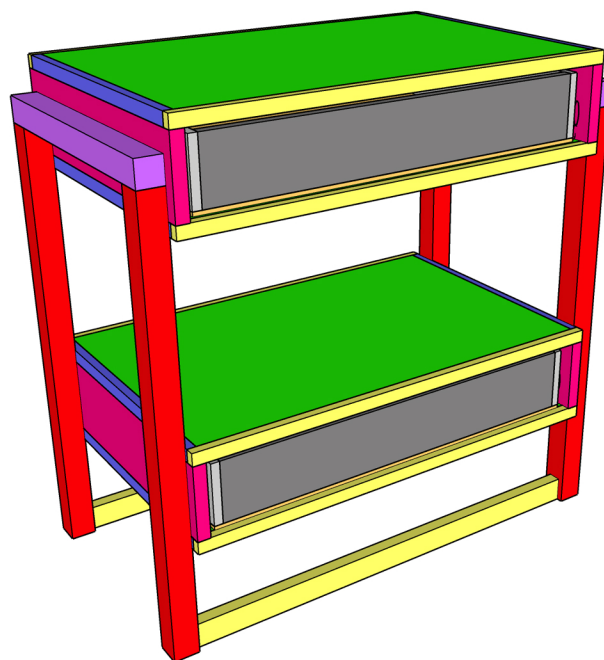

12

Cut the drawer faces to size and attach them to the drawers with 1 1/2" wood screws and wood glue, from inside the drawer and into the drawer face. *Tip: with the drawer closed, place the drawer face where you want and hold it in place with a couple of brad nails.*

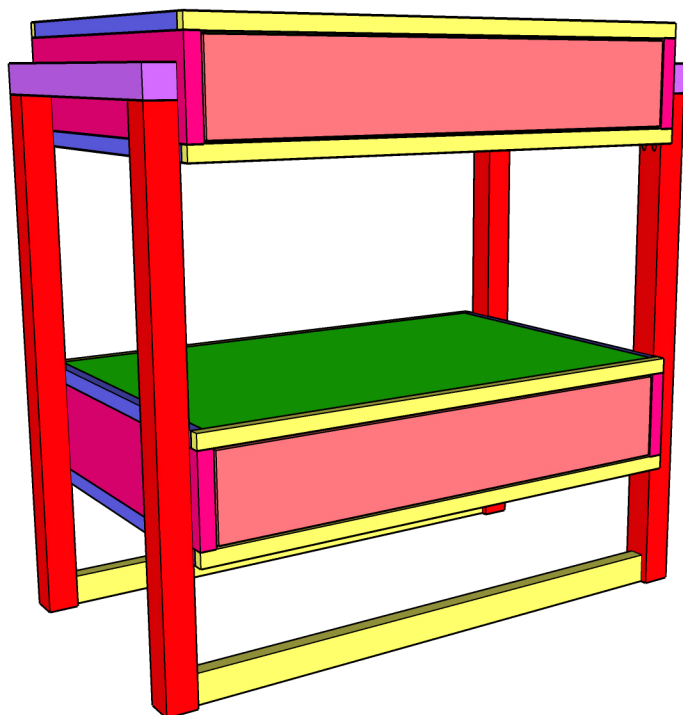

Now just add a finish and hardware and you're done! Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

