



©2017 WWW.SHANTY-2-CHIC.COM



ANGLED CONSOLE TABLE


SUPPLY LIST

Item	Quantity	Description
2x4x8	6	Framing Lumber (I ripped all boards from 2x4)
2 1/2" pocket hole screws		
2 1/2" wood screws		
2 1/2" finish nails		
Wood Glue		





Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

CUT LIST

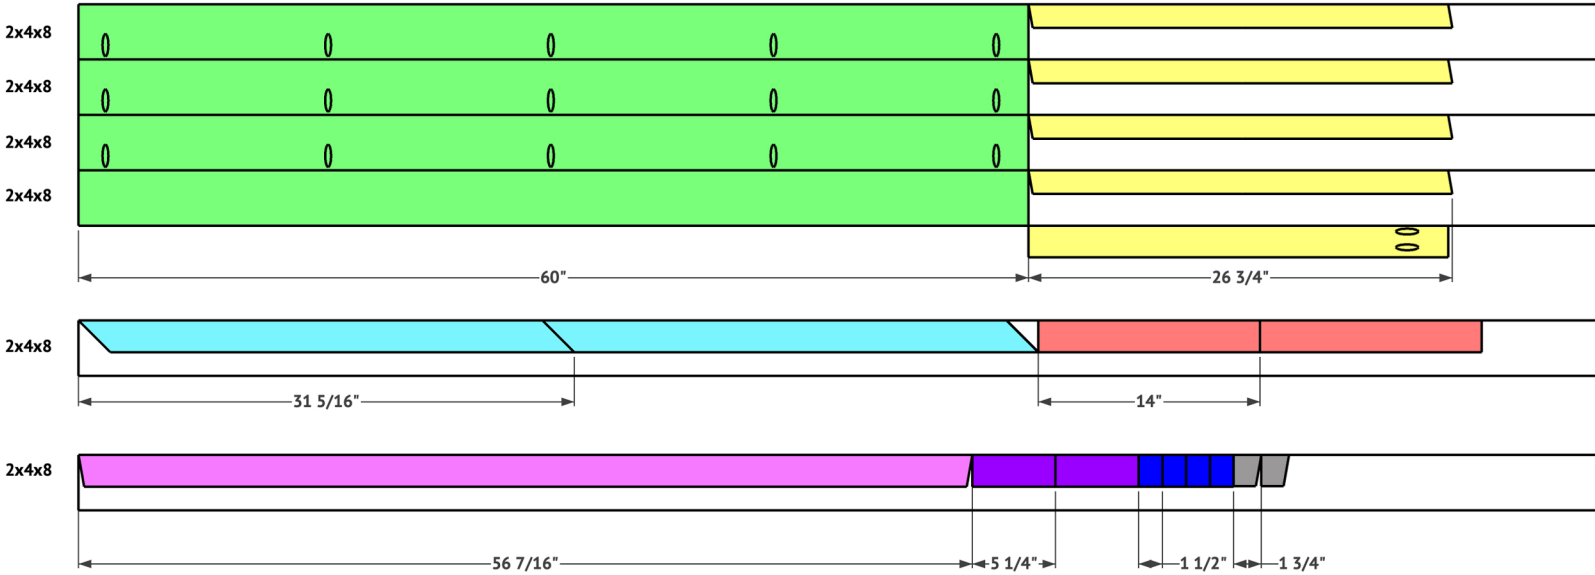


Miter Detail:

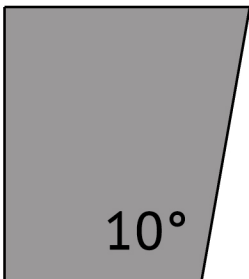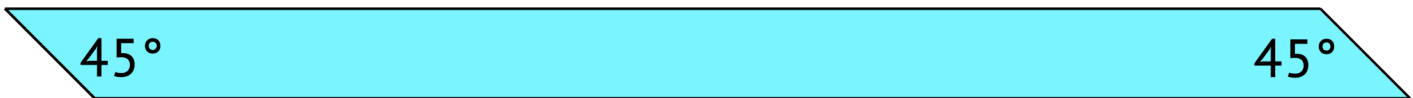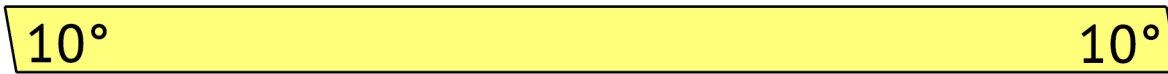

Note: I ripped the 2x4 boards down to remove the round edges and create the width boards that I wanted. This is not a necessary step but if you choose not to rip your boards adjust the plans accordingly.


1

Cut the planks to size and drill 1 1/2" pocket holes along one edge of 3 of the planks. Attach them together with 2 1/2" pocket hole screws and wood glue.

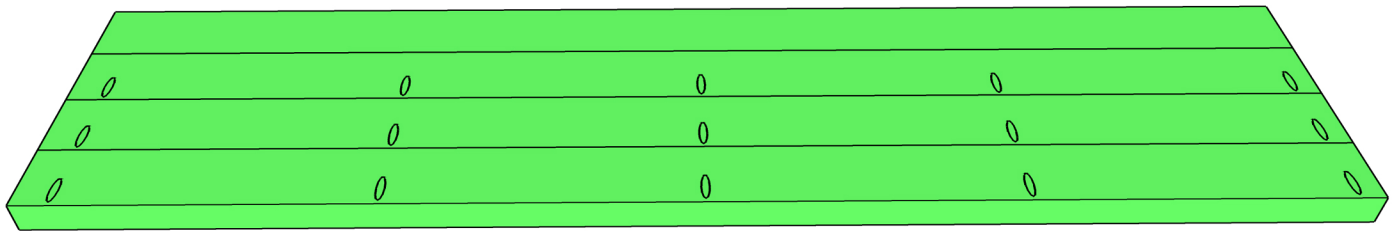


2

Cut the legs and top supports to size and drill 1 1/2" pocket holes at the long point ends of each leg. Attach them to the top supports with 1 1/2" pocket hole screws and wood glue. Build 2 leg assemblies.

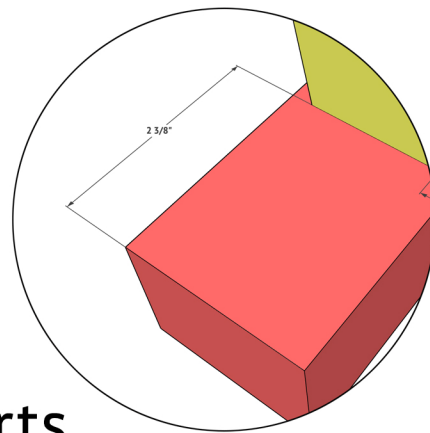


x2

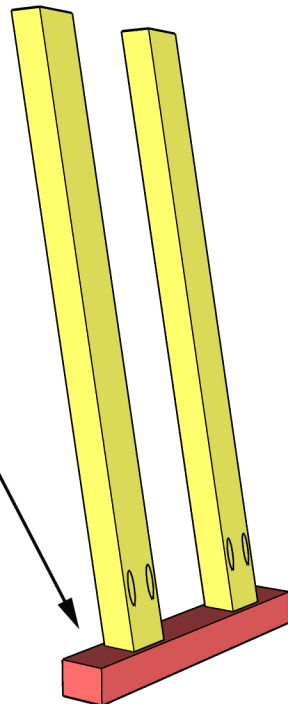


3

Cut the bottom supports to size and attach them between the legs with 2 1/2" wood screws and wood glue. Do this for both leg assemblies.


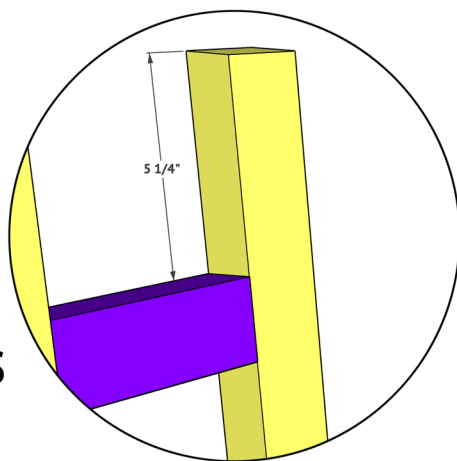


x2

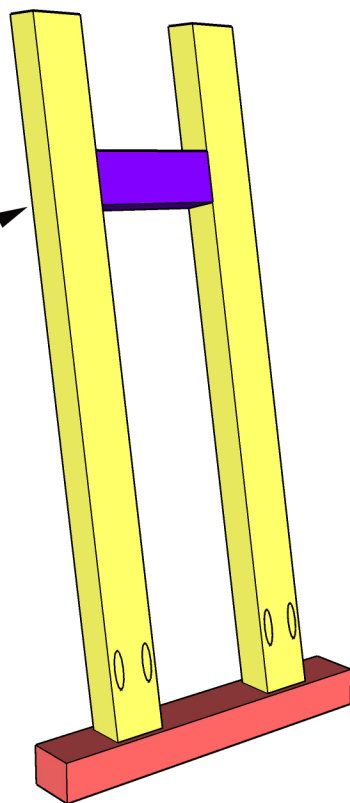


4

Attach the leg assemblies to the bottom of the planked top with 2 1/2" wood screws and wood glue.

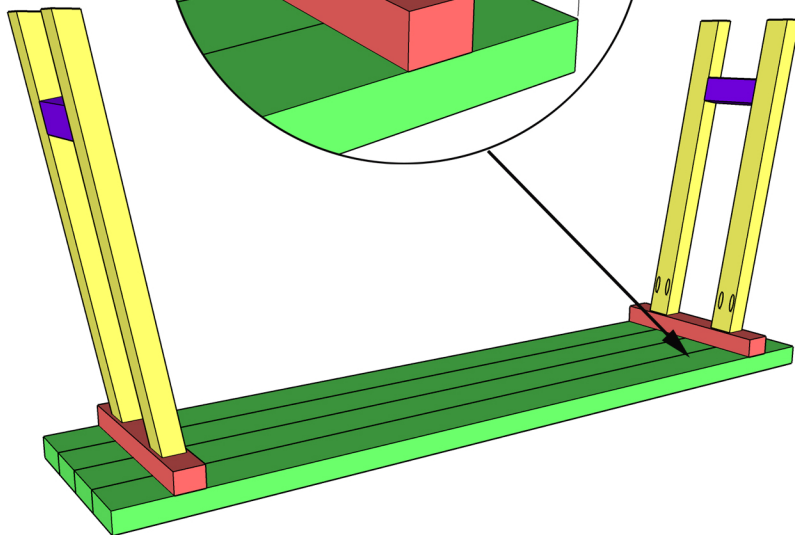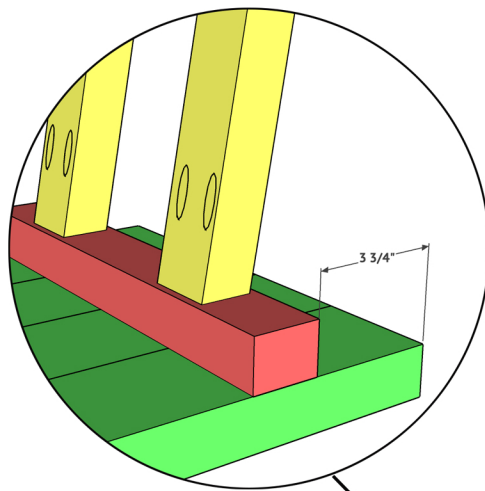



5

Cut the runner to size, center it on the bottom leg supports and attach it with 2 1/2" wood screws and wood glue from the outside of the supports and into the runner.

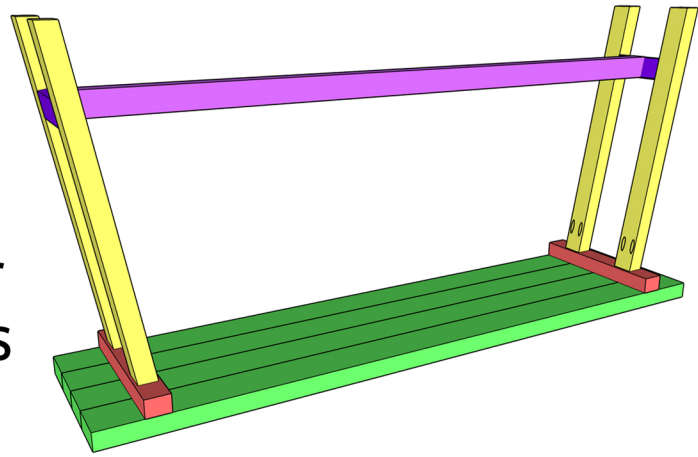


6

Cut the cross supports to size and attach them to the bottom of the planked top and the top of the runner with 2 1/2" wood screws and wood glue.

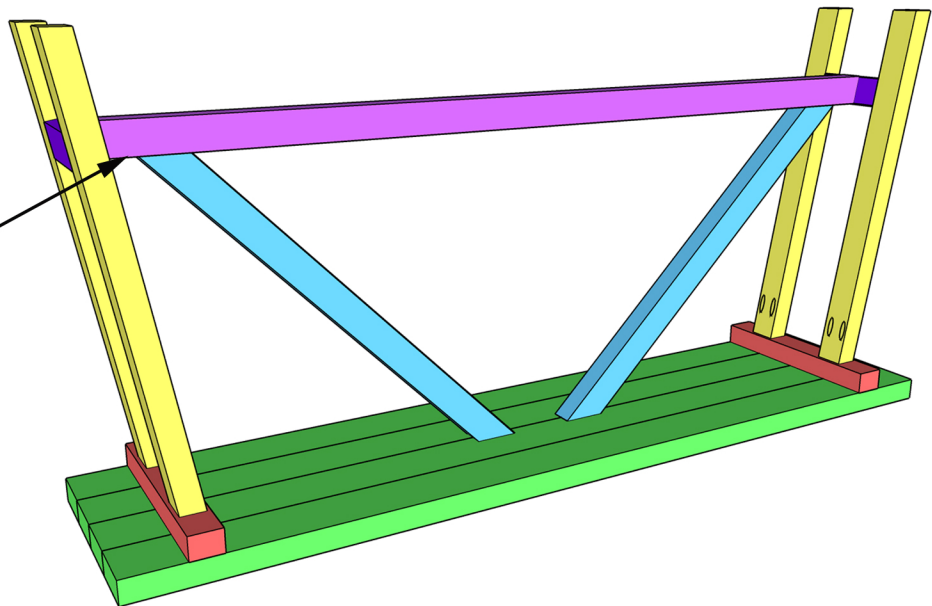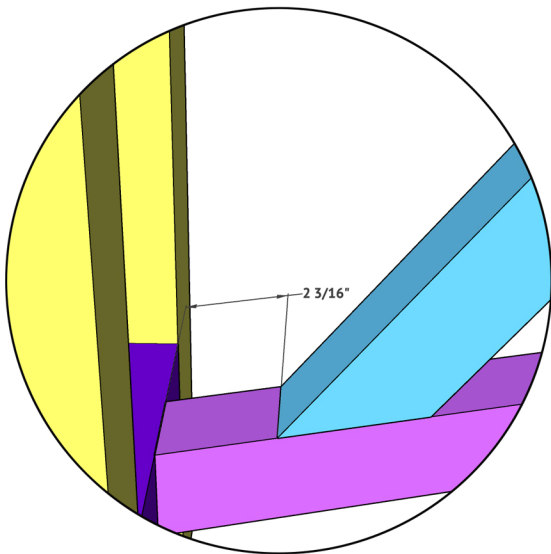




Cut the runner extensions to size, center them and attach them to the bottom leg supports with 2 1/2" finish nails and wood glue.

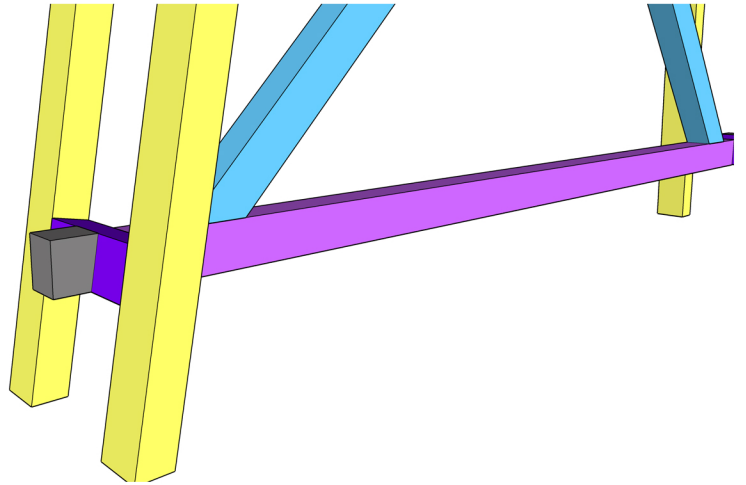

Cut the leg extensions to size and attach them to the outside of the legs with 2 1/2" finish nails and wood glue.

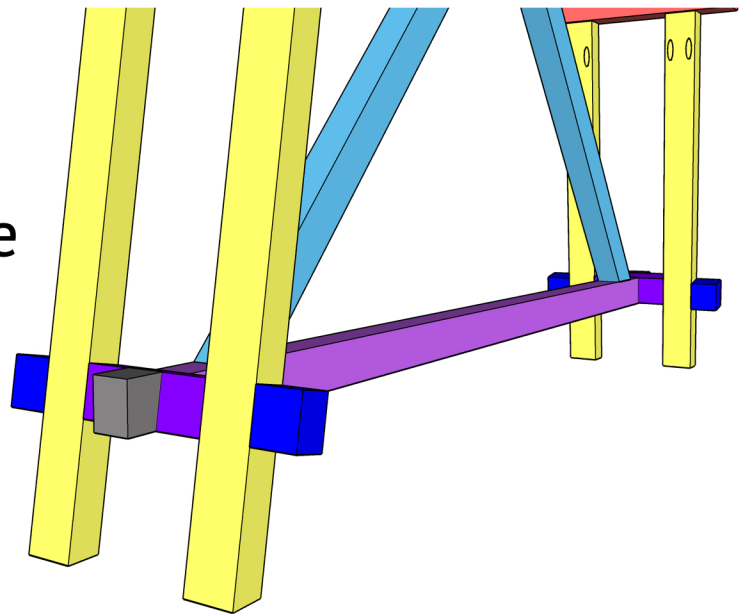

Now, just fill your nail and pocket holes, sand it down and add a finish!

Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

