



©2017 WWW.SHANTY-2-CHIC.COM



ROUND DINING TABLE


SUPPLY LIST

Item	Quantity	Description
2x4x8	1	Framing Lumber
2x6x8	9	Framing Lumber
1 1/4" Pocket Hole Screws		
2 1/2" Pocket Hole Screws		
2" Brad Nails		
3" Wood Screws		
Wood Glue		
Wood Filler		Linked in Post on our Site


Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

CUT LIST

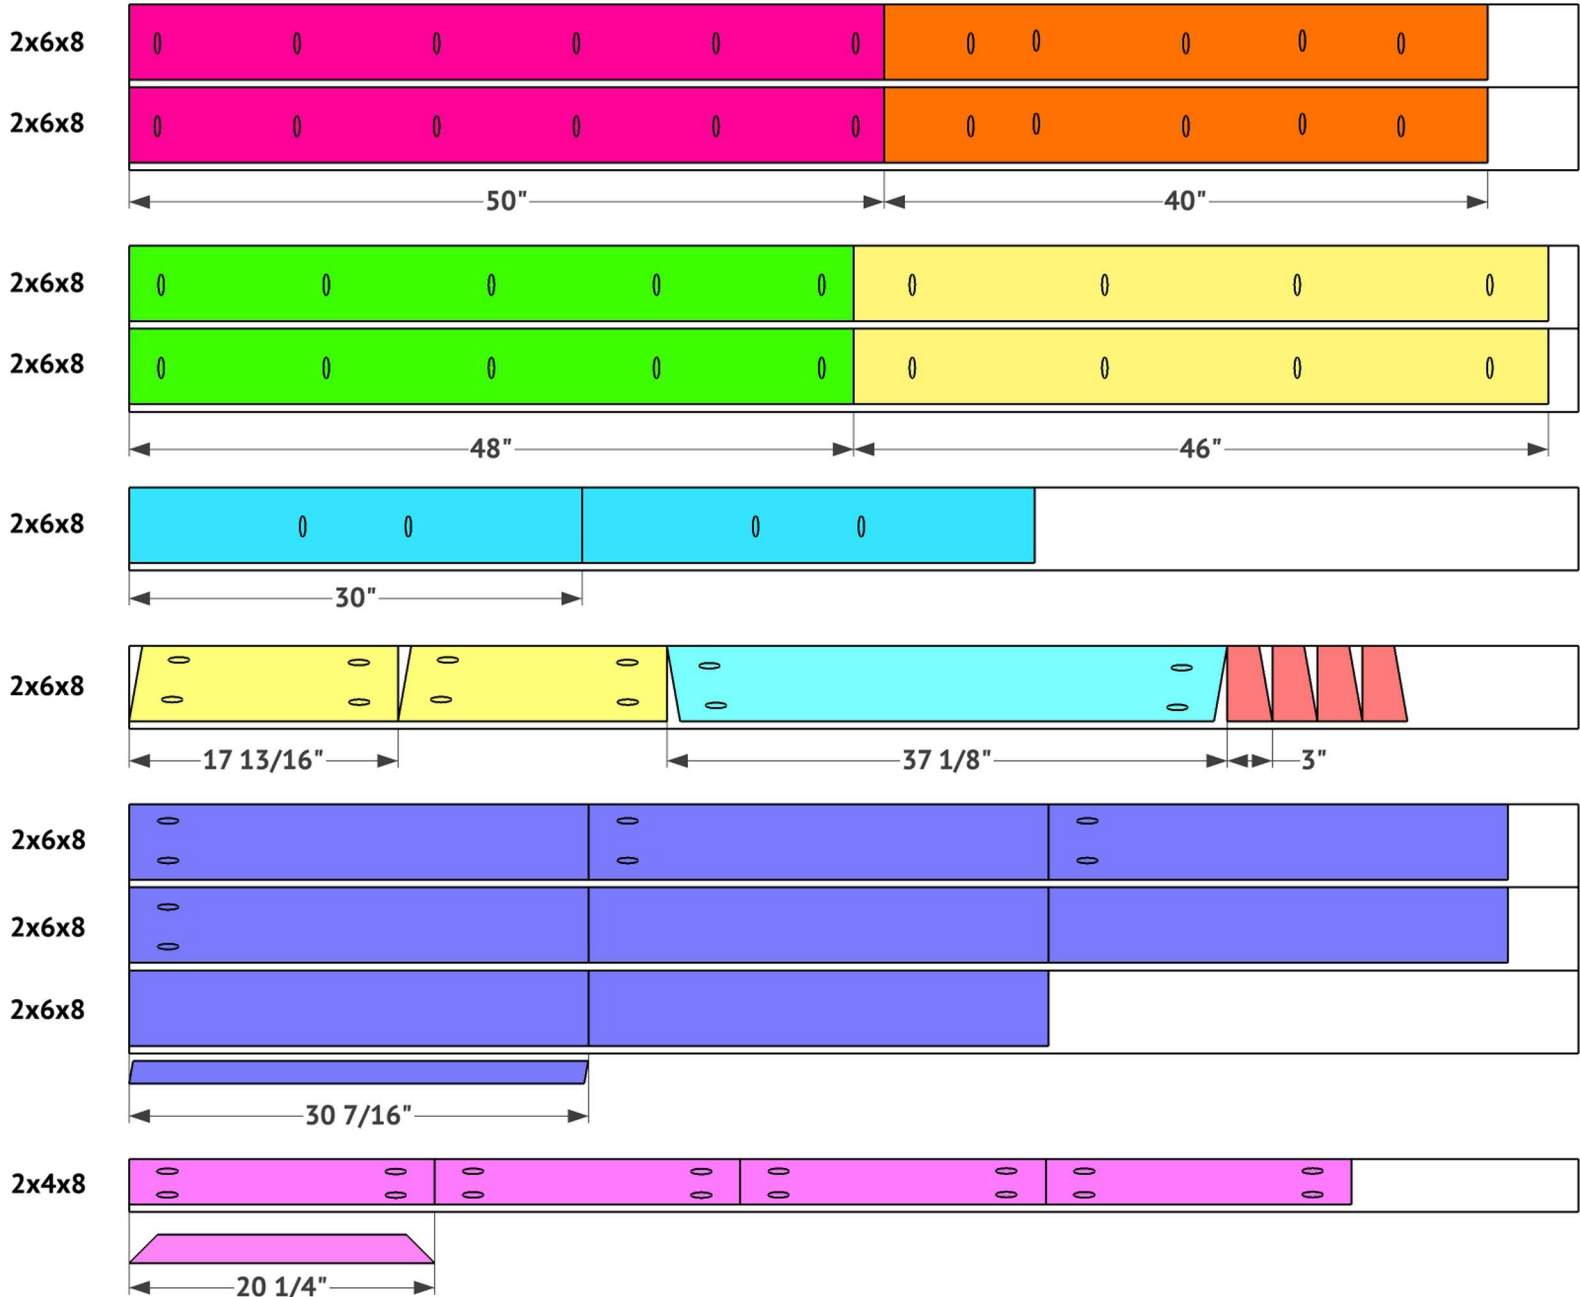



Miter Detail

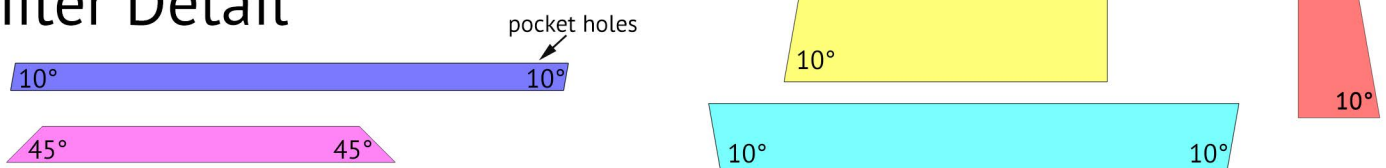


Note: I ripped the round edges off of all of the boards to make the 2x6's 5" wide and the 2x4 3" wide. This is not a necessary step but if you choose not to rip your boards, modify the plans accordingly.

1

Cut the table top planks to size and drill 1 1/2" pocket holes along the boards, according to the cut list. Attach the boards together with 2 1/2" pocket hole screws.

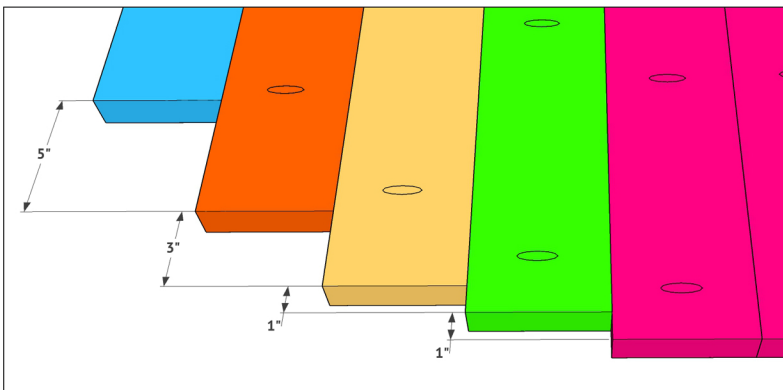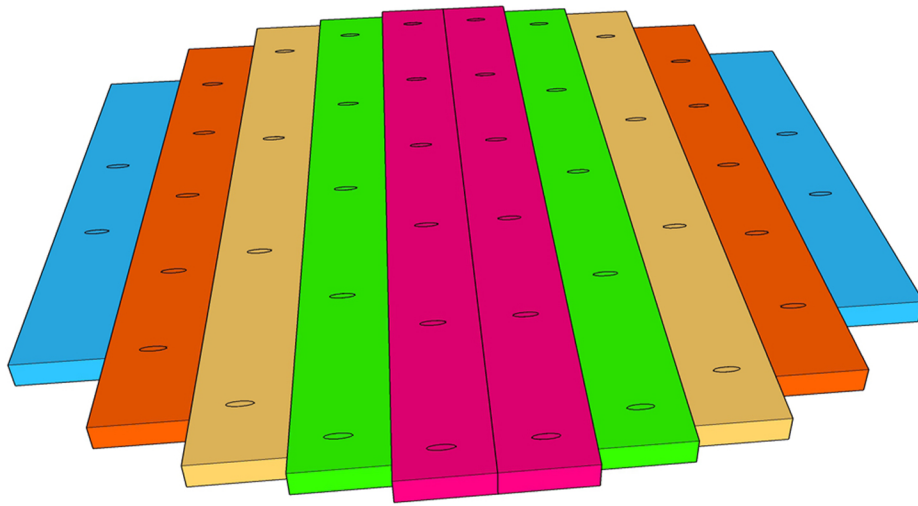


Board Placement

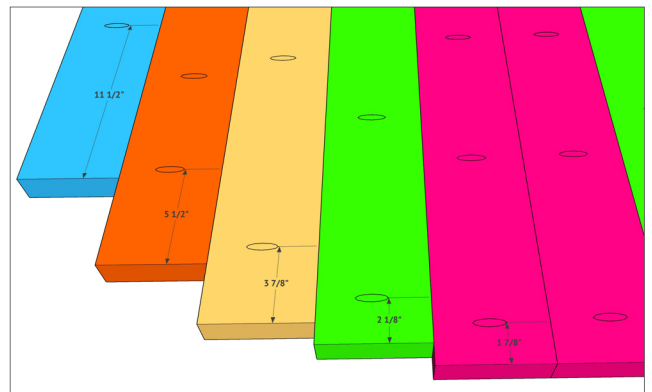

Pocket Hole Placement
(do from both ends)




Using a plunge router, cut a 48" circle out of the table planks. You can refer to the how-to video to see how I cut mine.

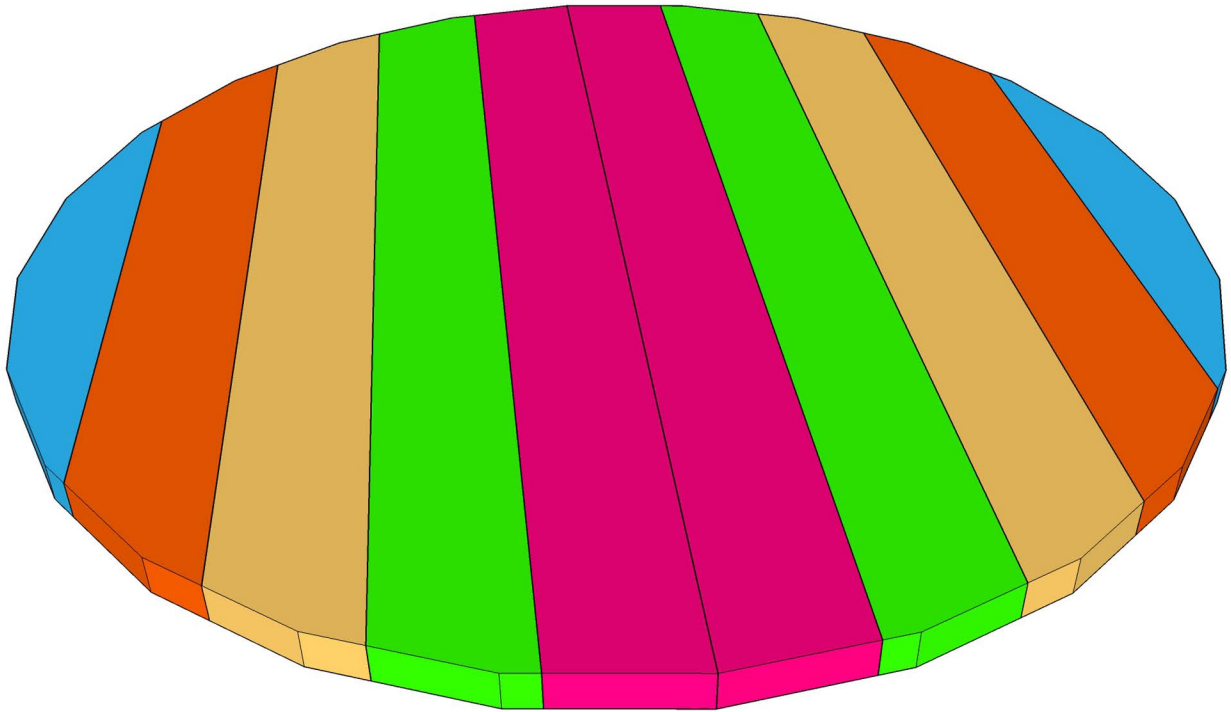

3



Cut the leg pieces to size and drill 1 1/2" pocket holes at the long end of 4 pieces. Attach two legs together with 2" brad nails and wood glue. Build 4 leg assemblies.

x4

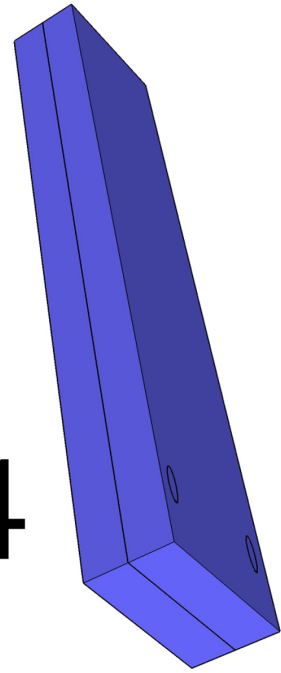




4

Cut the apron pieces to size and drill 1 1/2" pocket holes into both ends of the inside of the aprons and 3/4" pocket holes along one edge. Attach them to the legs with 2 1/2" pocket hole screws and wood glue.

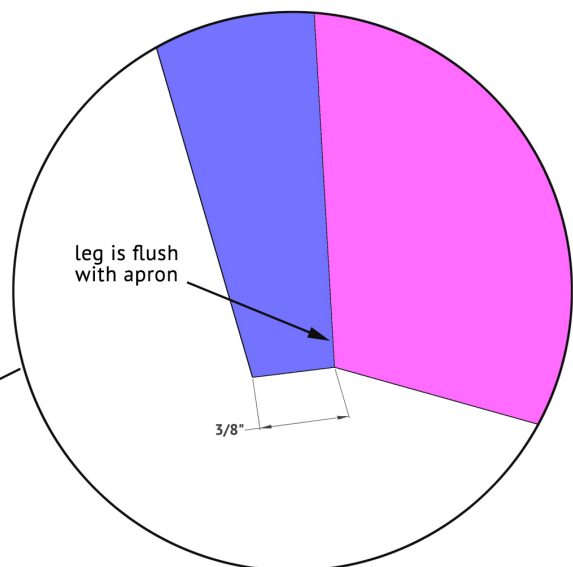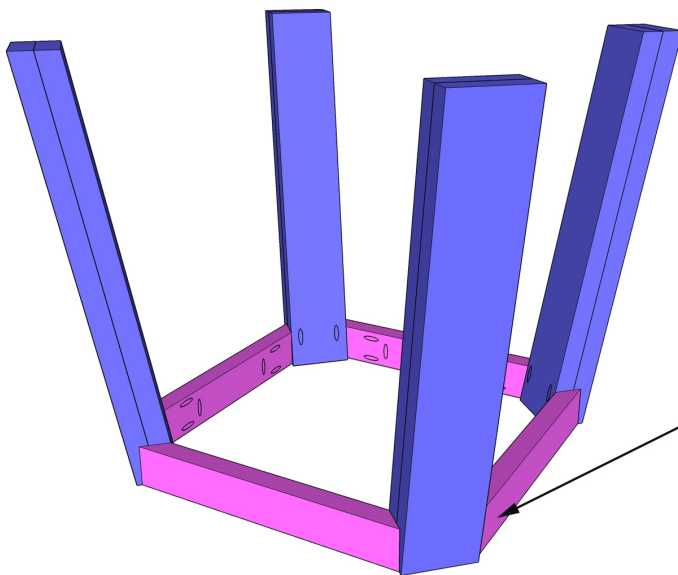


5

Cut the long runner to size and drill 1 1/2" pocket holes at both ends of one side of the board. Attach it to the table legs with 2 1/2" pocket hole screws and wood glue.

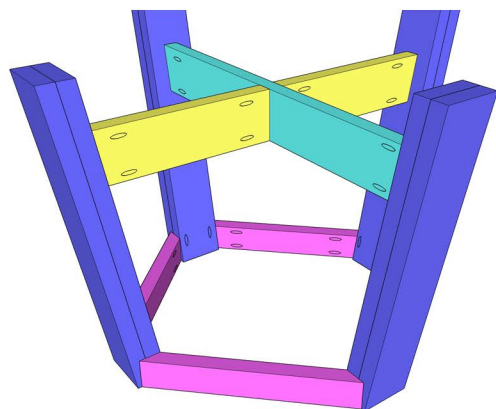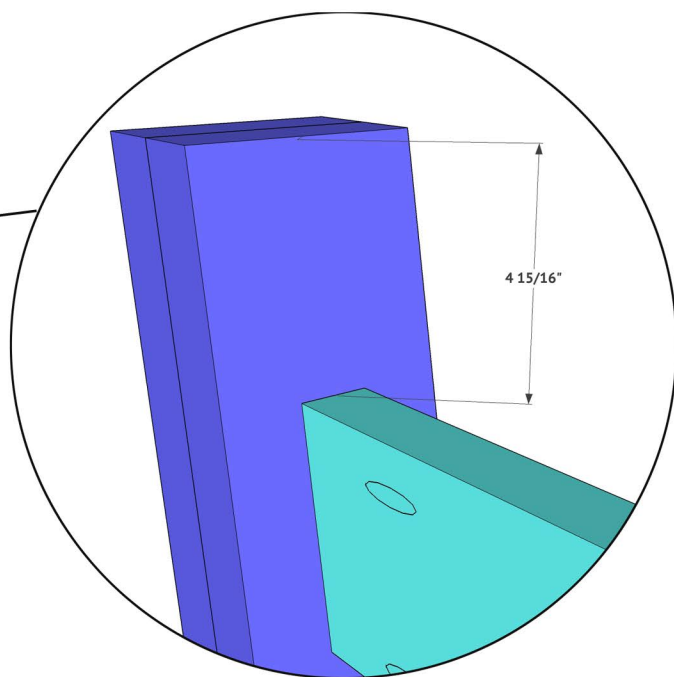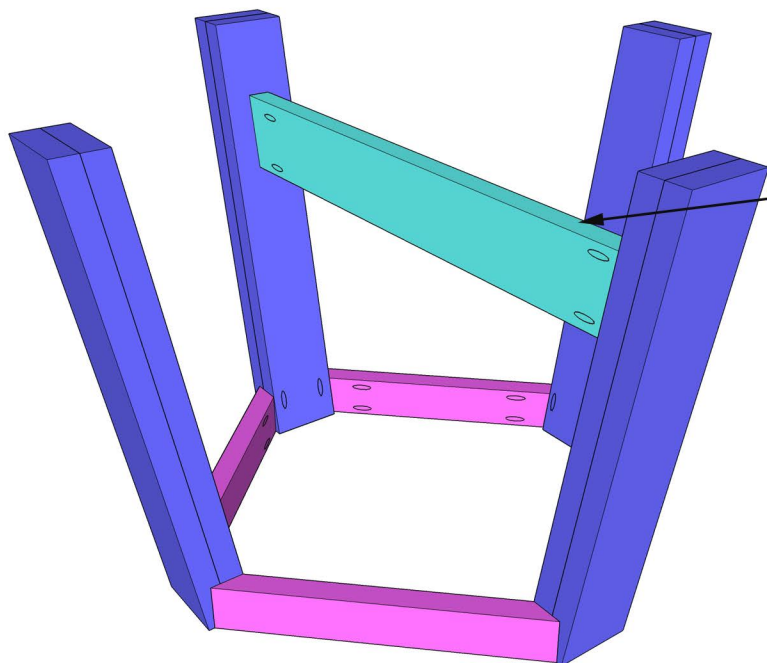



6

Cut the short runners to size and drill 1 1/2" pocket holes at both ends on one side of each short runner. Attach them to the legs and long runner with 2 1/2" pocket hole screws and wood glue.

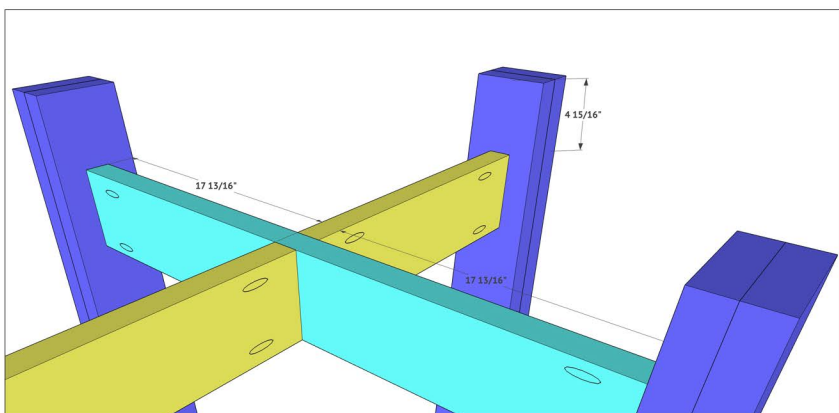




Cut the decorative pieces to size and attach them to each leg with 3" wood screws and wood glue.

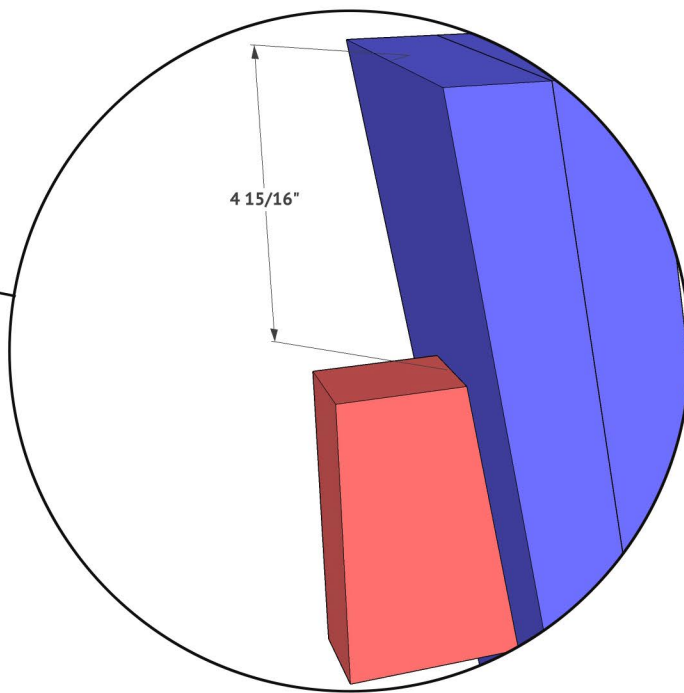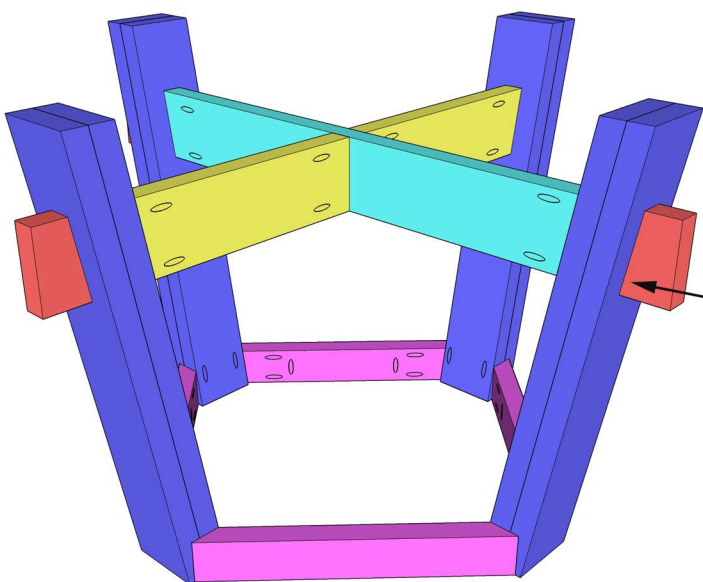

Center the table base on the bottom of the table top and attach it to the bottom of the table top with 1 1/4" pocket hole screws.

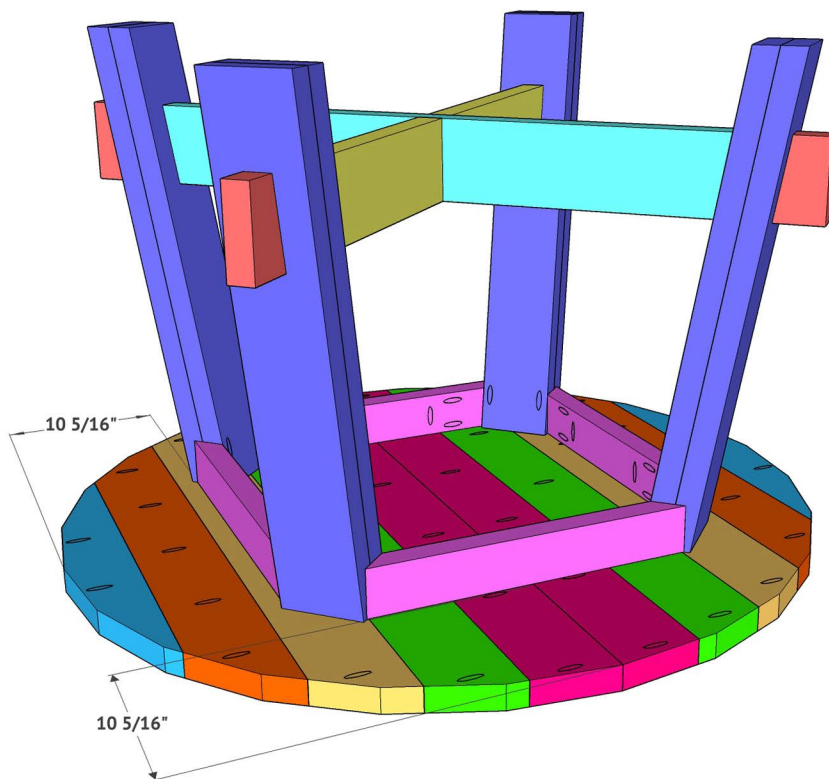

Now just fill your screw holes, sand it down smooth and give it a finish!

Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!

