



©2020 WWW.SHANTY-2-CHIC.COM



Farmhouse Console Table

Supply List

Item	Quantity	Description
2 x 6 x 8 - ripped to size	8	framing lumber
2.5" pocket hole screws	several	Kreg brand
wood glue		
2" brad or finish nails	several	


Remember!


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

CUT LIST

This table uses eight 2x6x8 boards. I ripped them to 4" and 5" boards. If you choose to skip this step, make sure to adjust your measurements.


2x6x8

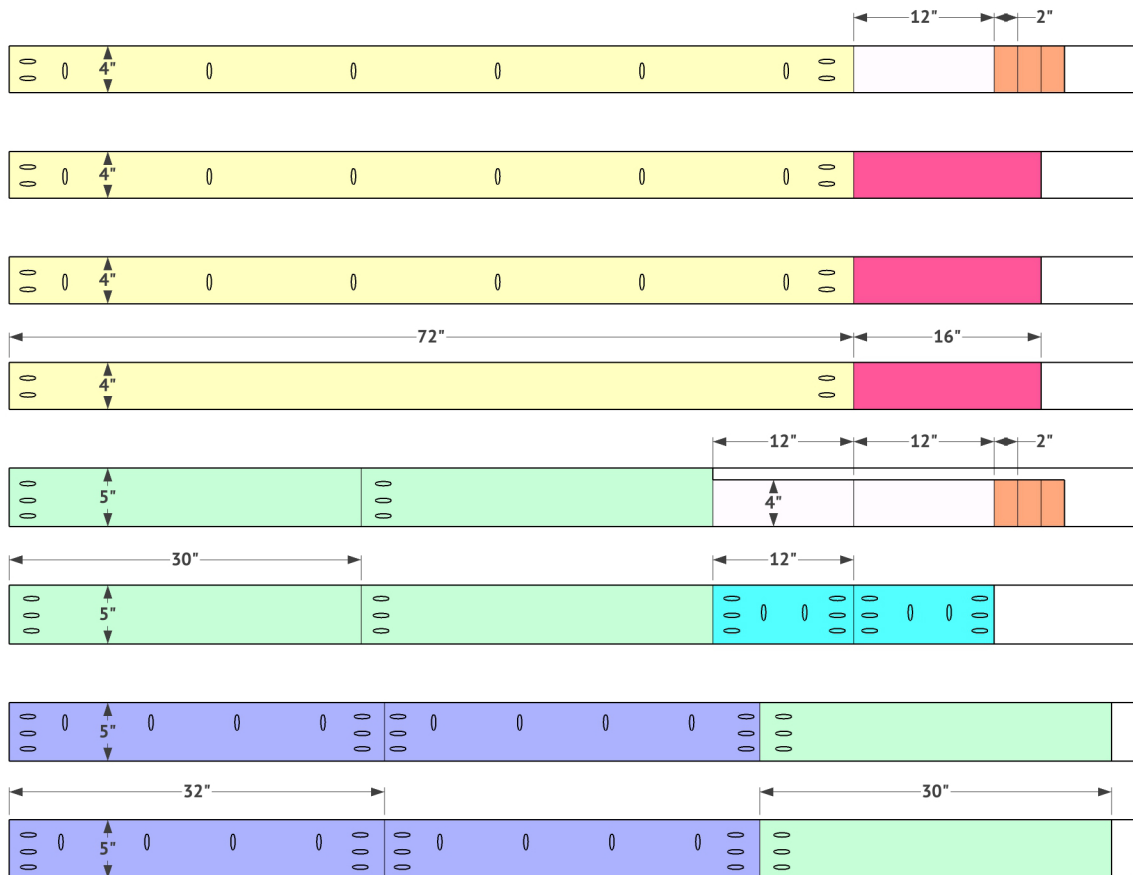

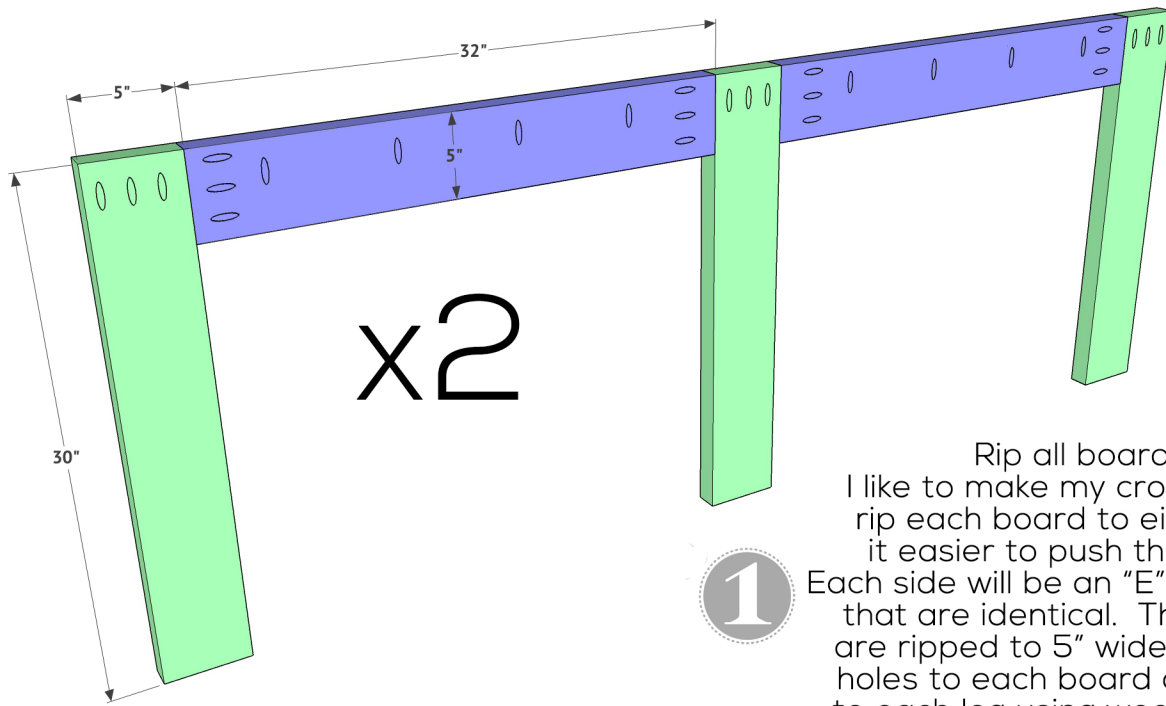


1

Rip all boards to size first. I like to make my cross cuts first, and then rip each board to either 4" or 5" to make it easier to push through the table saw. Each side will be an "E" shape. Build 2 of these that are identical. The boards on this part are ripped to 5" wide each. Add 1.5" pocket holes to each board and attach the aprons to each leg using wood glue and 2.5" pocket hole screws. The top of the legs will be flush with the top of the aprons.

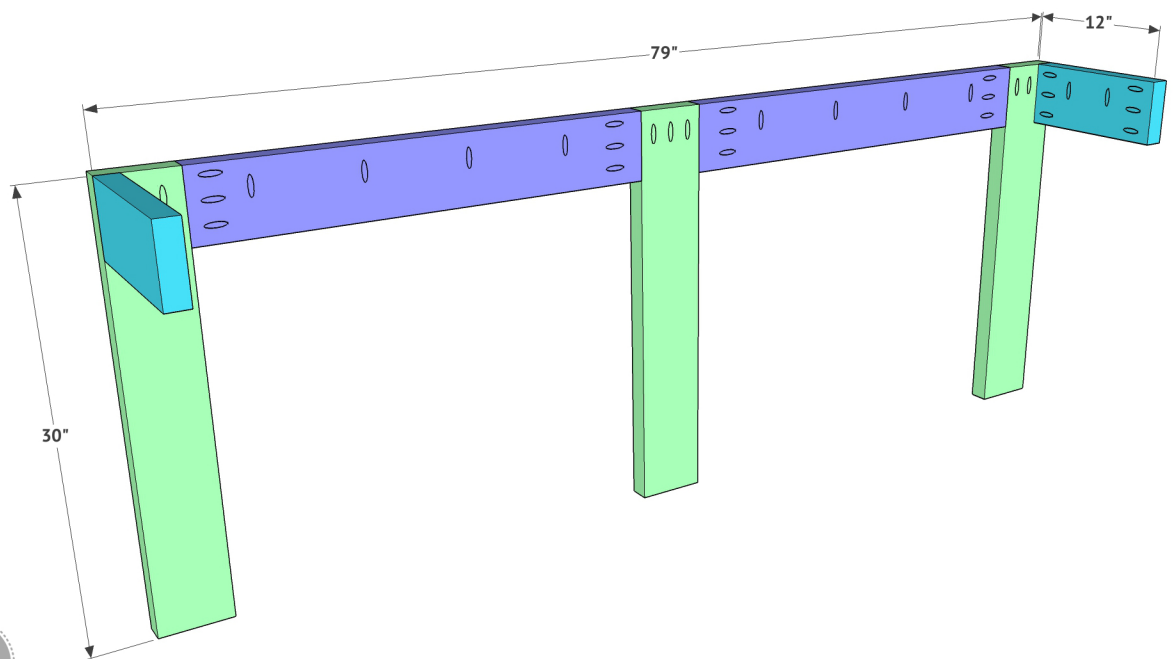

2

Attach the smaller aprons to one of your "E" shapes. These aprons will be flush with the top and side of the outside legs. Attach the apron using wood glue and 2.5" pocket hole screws.

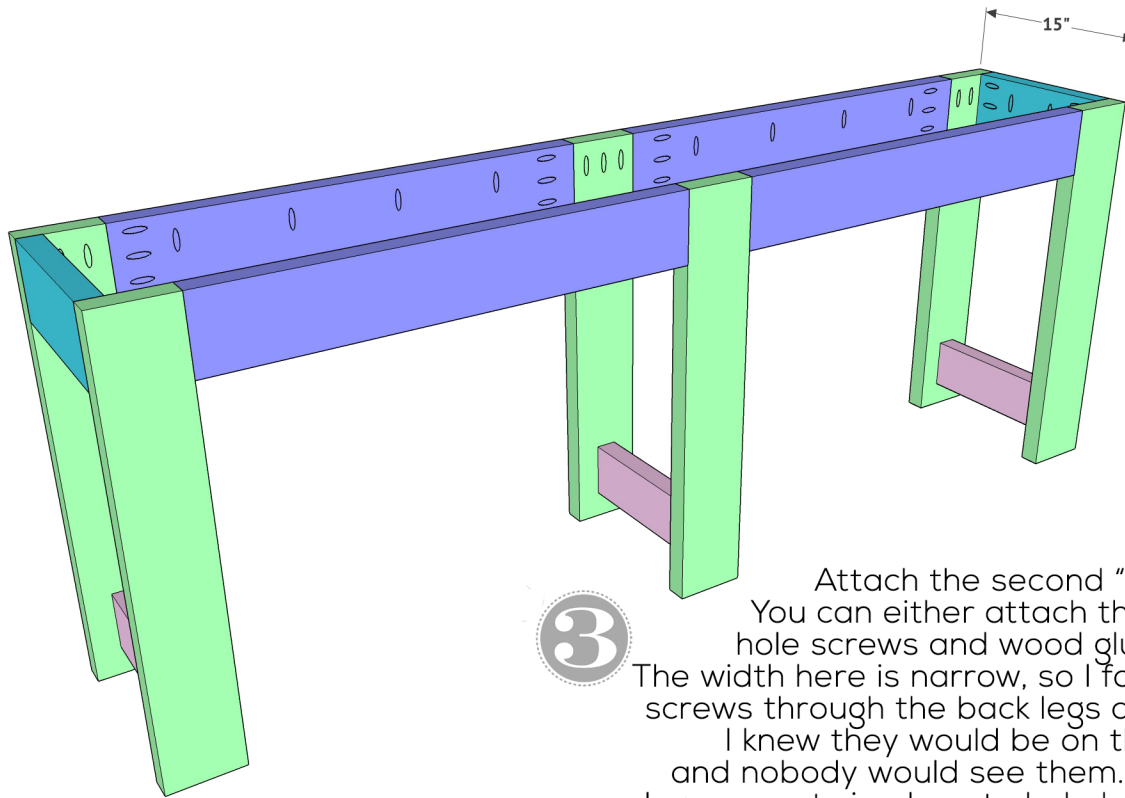



3

Attach the second "E" shape next. You can either attach this with 2.5" pocket hole screws and wood glue, or wood screws. The width here is narrow, so I found it easier to use wood screws through the back legs and into the small aprons. I knew they would be on the back of the table and nobody would see them. I also placed the small leg supports in place to help hold things up on this part.

4

The leg supports are ripped at 4" wide each and they are 12" long. I lined them up in place and marked where I wanted them with a pencil. Attach them using wood glue and 2.5" wood screws through the legs and into the support boards. Don't worry about the screws showing on this part because they will be covered in a later step.

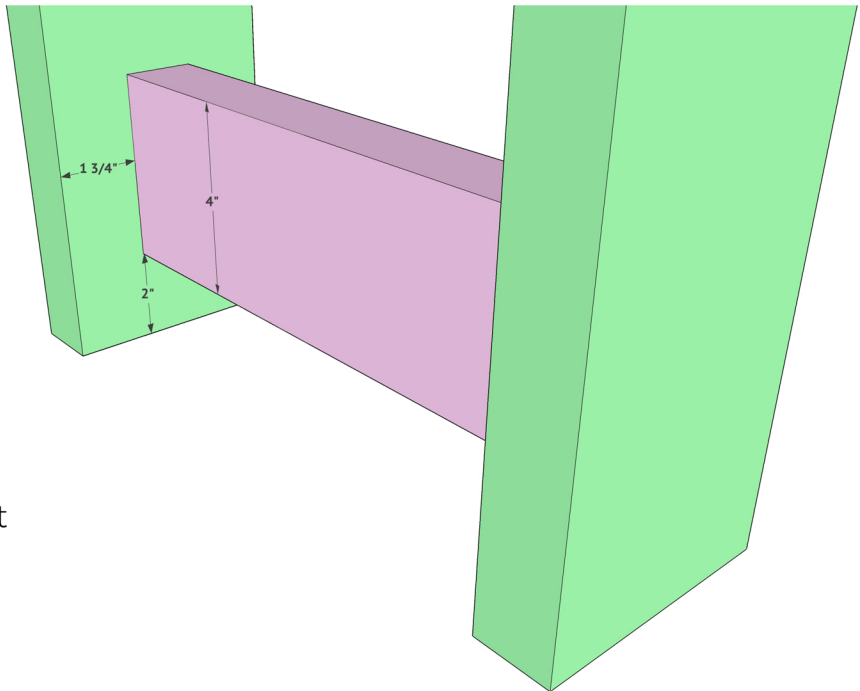



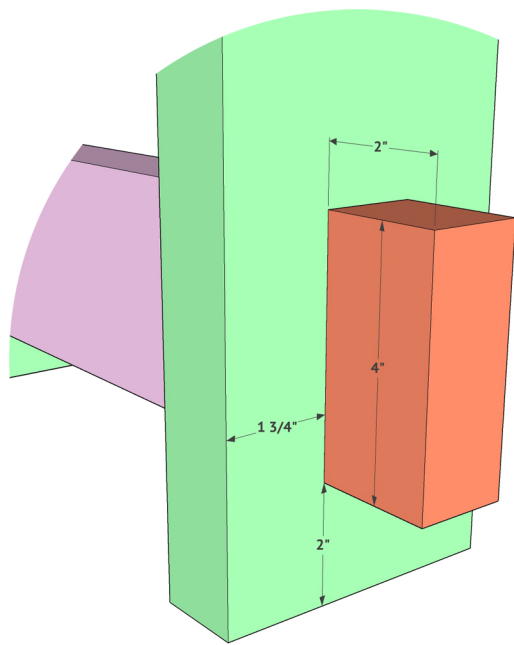


Now attach the small decorative pieces. These are so cute and will also cover up those screws we used on the last step. Attach these pieces using wood glue and 2" brad or finish nails. There will be 6 total, one on the bottom of each leg.

5

6

The top planks are ripped to 4" each. Add 1.5" pocket holes where shown. Attach everything using 2.5" pocket hole screws.

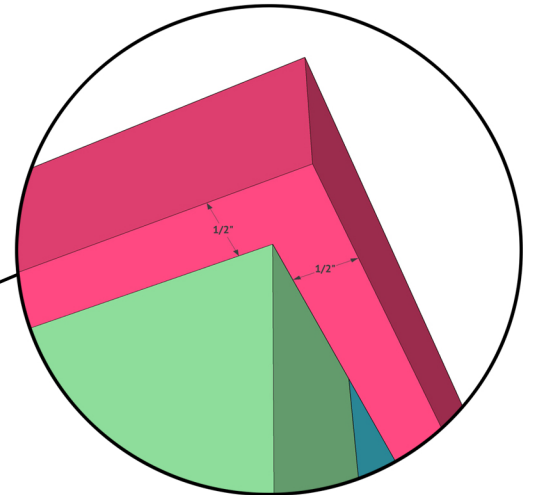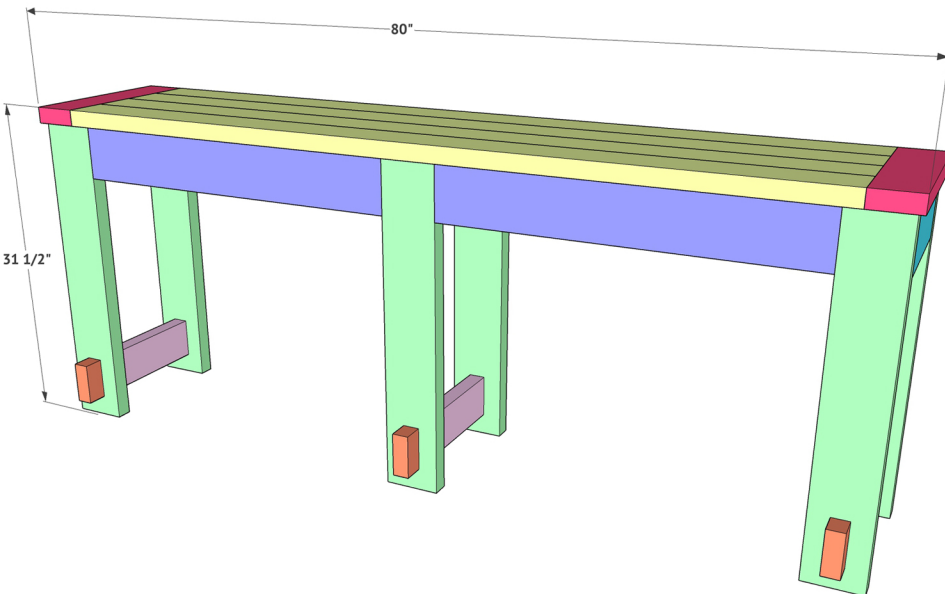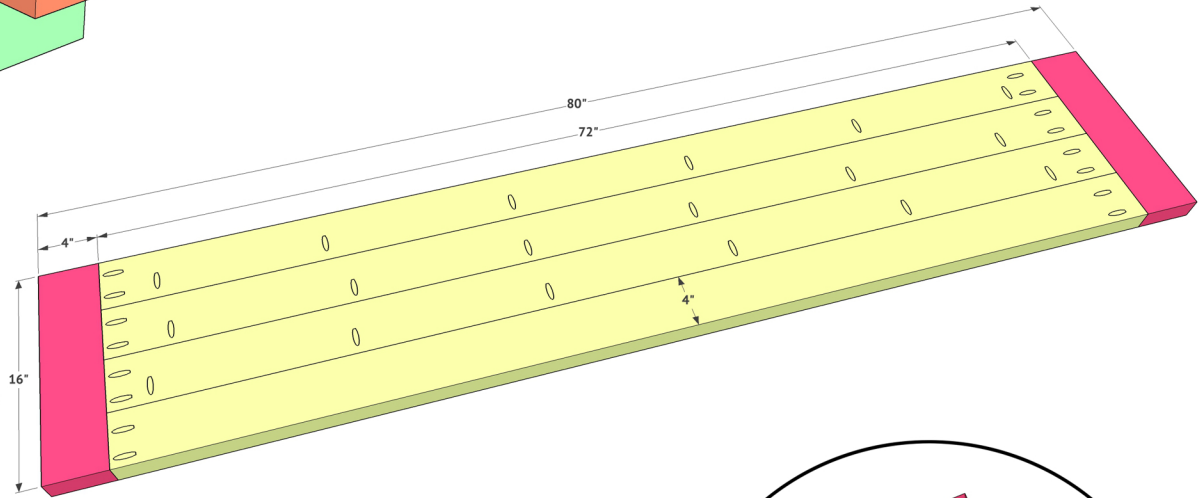

7

Attach the table top to the base using wood glue and 2.5" pocket hole screws through the base and into the top. You will have a 1/2" overhang on both the front and back and sides on each corner.

Be sure to share your builds with us using #shanty2chic

Happy Building!