



©2017 WWW.SHANTY-2-CHIC.COM



# DIY LOFT BED

## SUPPLY LIST

Item	Quantity	Description
2x10x8	4	Pine or Common Board
2x4x8	14	Pine or Common Board
2x2x8	11	Pine or Common Board
1x4x8	12	Pine or Common Board
3/4"x48"x96" Hardwood Plywood	2	Birch
1 1/4" Pocket Hole Screws		
2 1/2" Pocket Hole Screws		
1 1/4" Brad Nails		
3" Wood Screws		
1 1/4" Wood Screws		
Wood Glue		

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST (page 1)


This is a cut list for the entire bed. This set of plans is for part one of the bed build.



*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST (page 2)

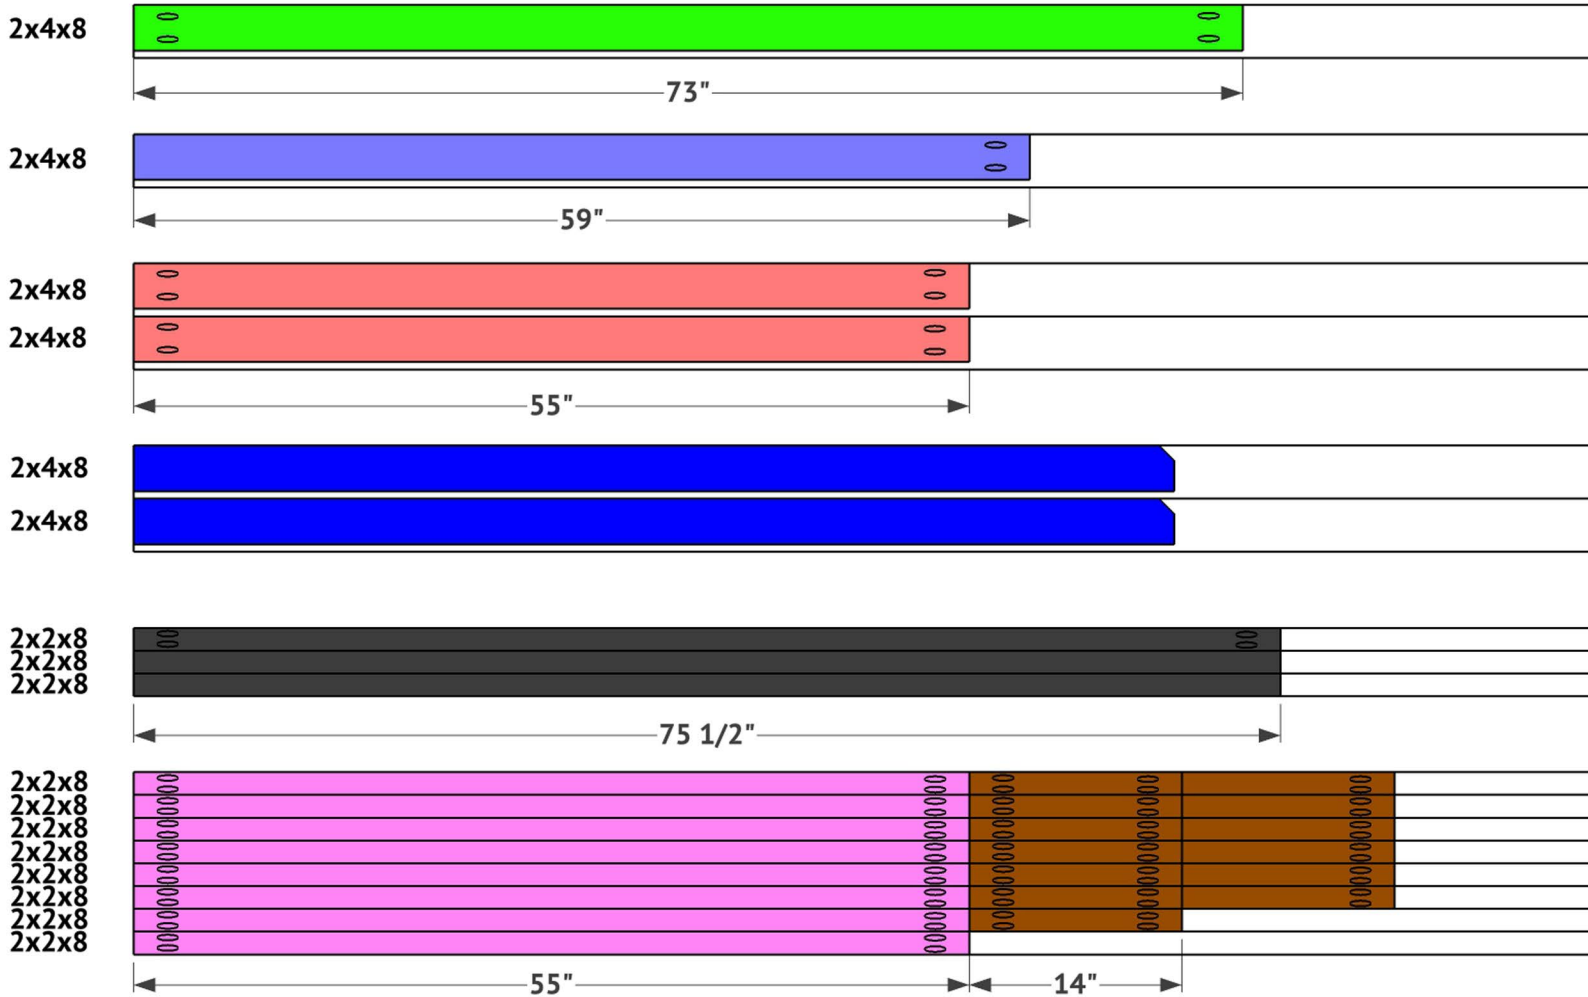

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST (page 3)

1x4x8	
1x4x8	
1x4x8	
1x4x8	
1x4x8	
1x4x8	
1x4x8	
1x4x8	
1x4x8	
1x4x8	
1x4x8	
1x4x8	
1x4x8	
1x4x8	
1x4x8	


55"

*Remember!*


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST (page 4)

**3/4"x48"x96"  
Hardwood Plywood**

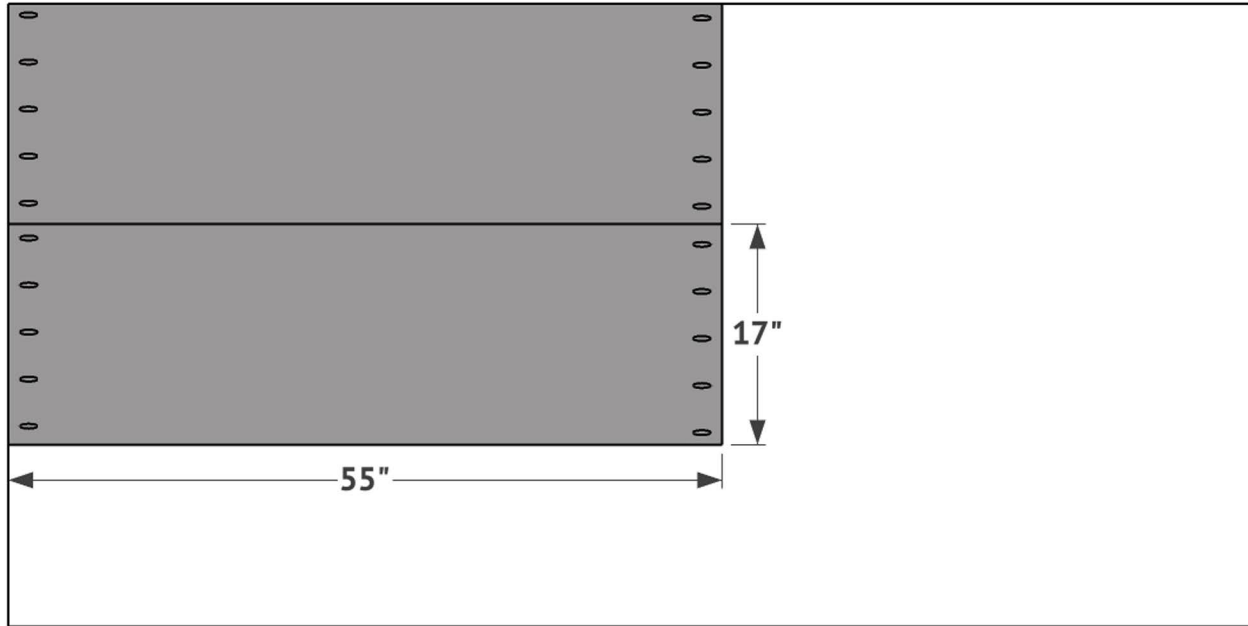


**3/4"x48"x96"  
Hardwood Plywood**

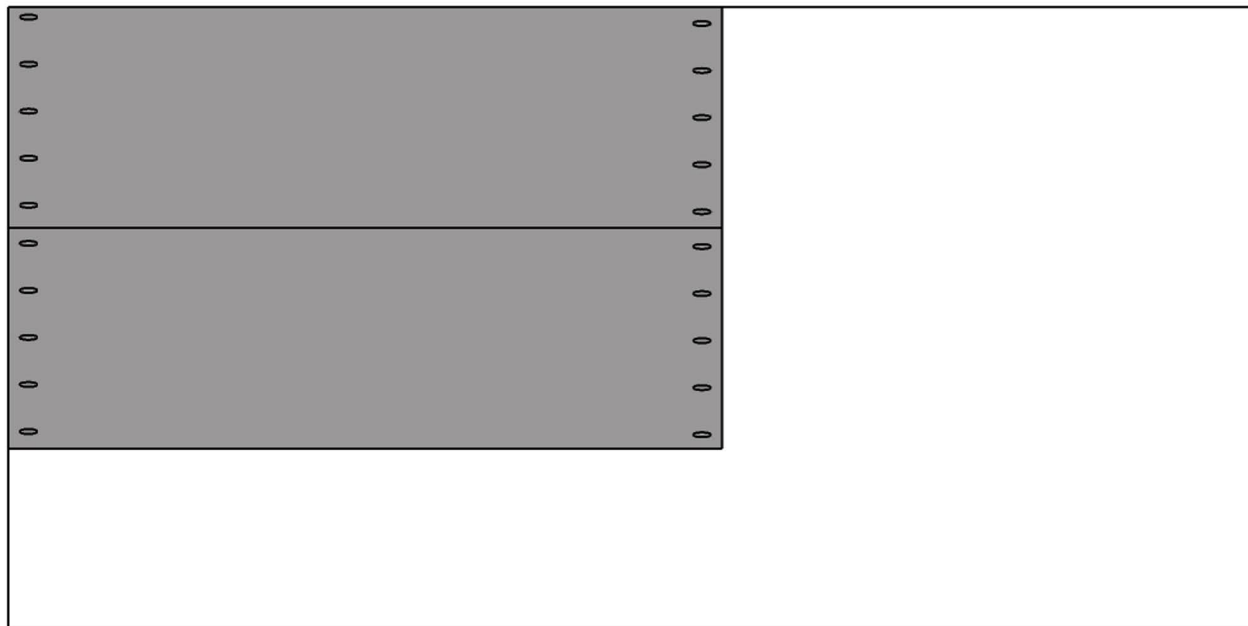

# Loft Bed Plans Part 1


1

Cut the back assembly pieces to size and drill 1 1/2" pocket holes according to the cut list. Attach the pieces together with 2 1/2" pocket hole screws and wood glue. Note the 2x10 board should have pocket holes facing the back.

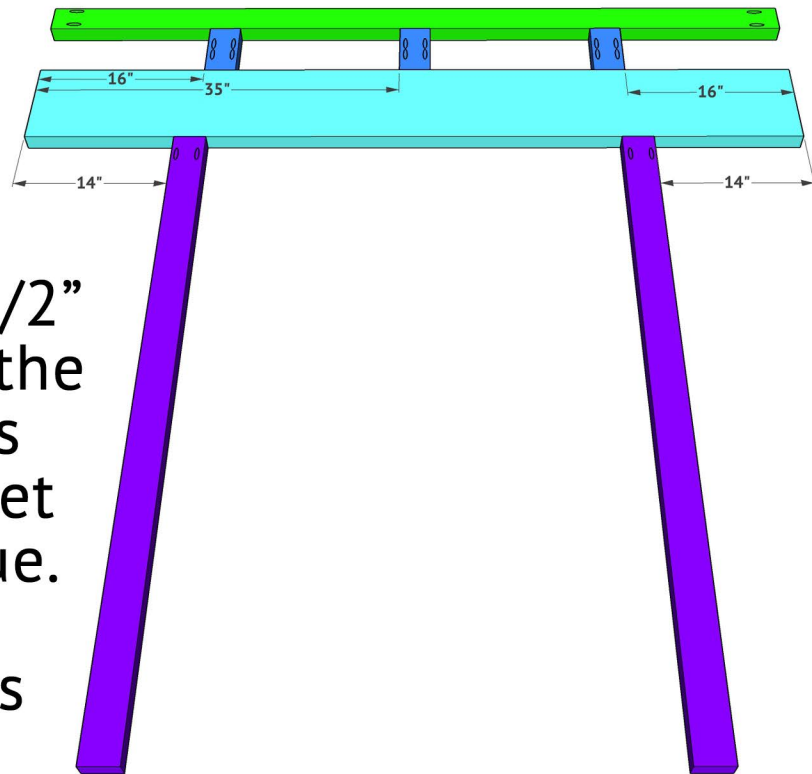




2

Cut the front assembly pieces to size and drill 1 1/2" pocket holes according to the cut list. Attach the pieces together with 2 1/2" pocket hole screws and wood glue.

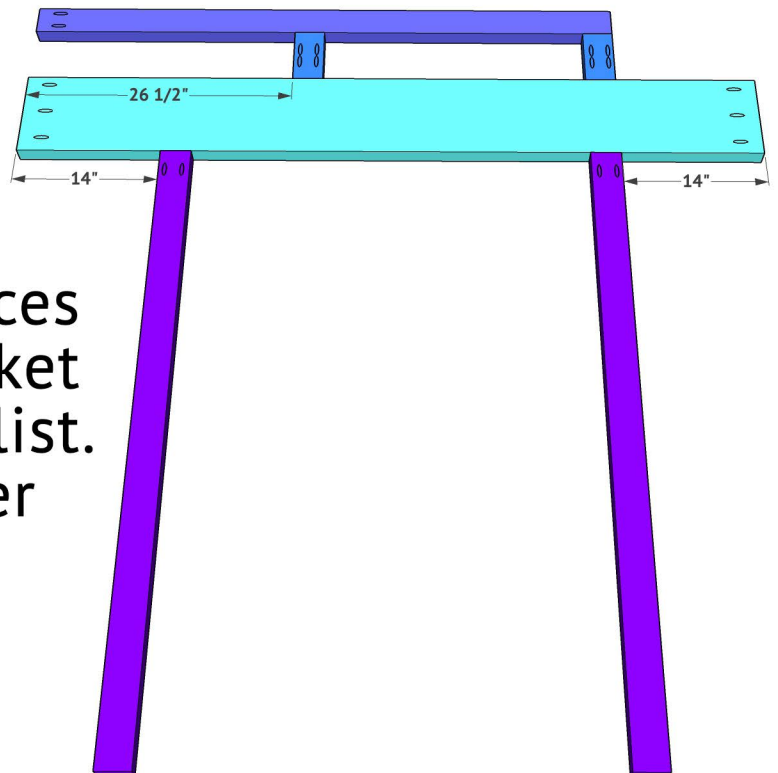


3

Cut the shelve side assembly to size and drill 1 1/2" pocket holes according to the cut list. Attach the pieces together with 2 1/2" pocket hole screws and wood glue. The outside of the horizontal pieces should be flush with the outside edges of the legs.

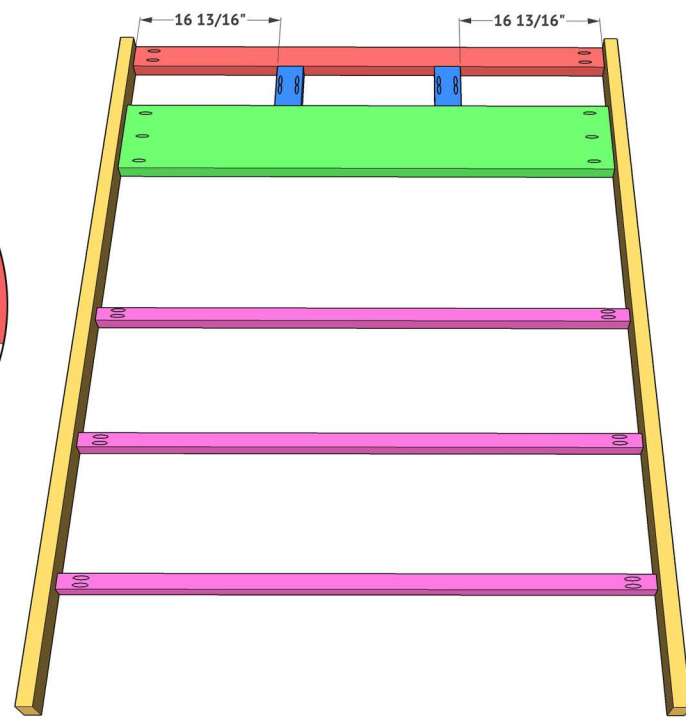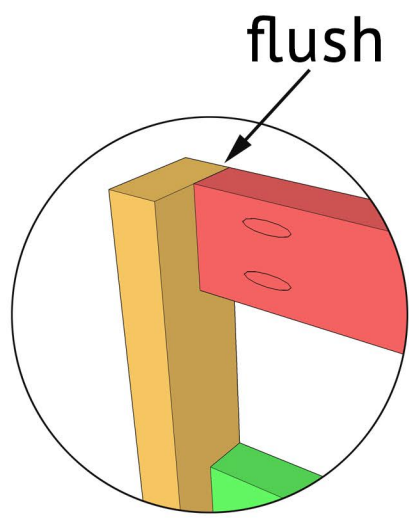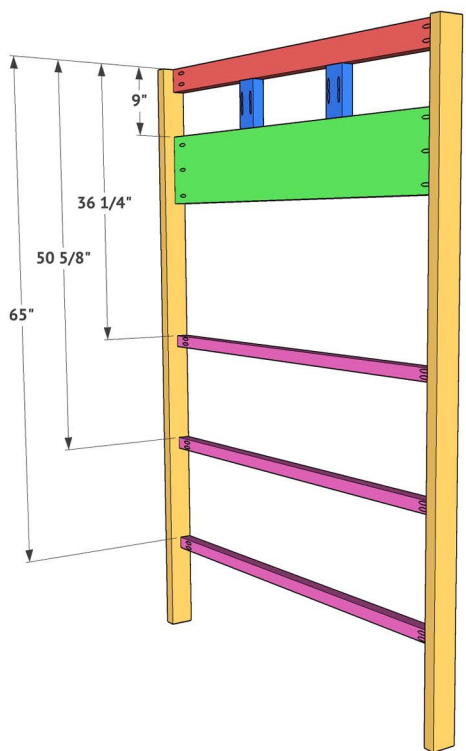

4


Cut the desk side assembly pieces to size and drill 1 1/2" pocket holes according to the cut list. Attach the pieces together with 2 1/2" pocket hole screws and wood glue. The outside of the horizontal pieces should be flush with the outside of the legs.

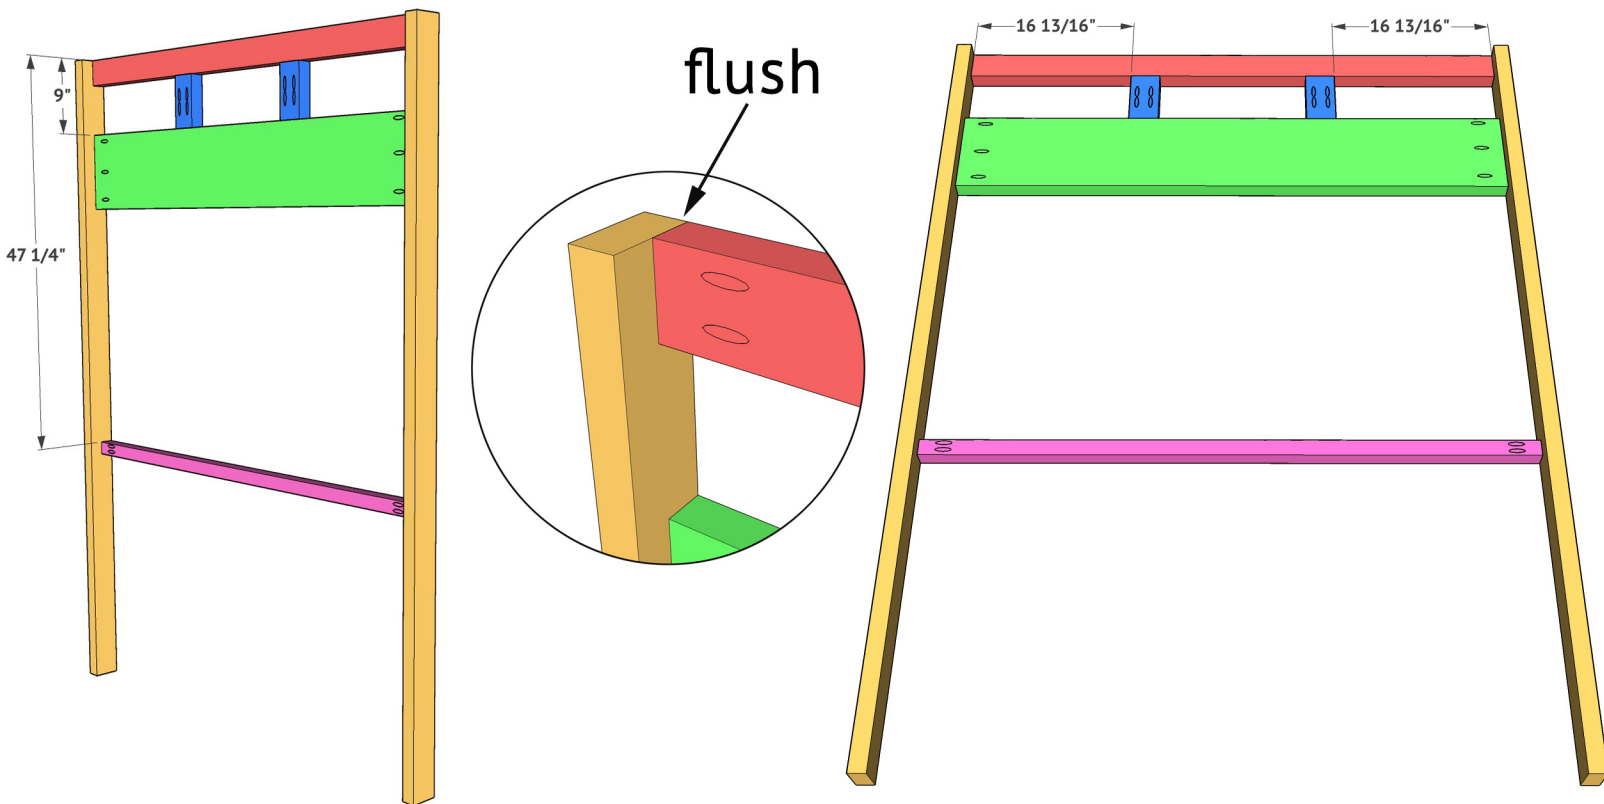




5

Attach the back assembly to the studs behind the wall with 3" wood screws. Attach the side assemblies to the back assembly with 2 1/2" pocket hole screws and wood glue.

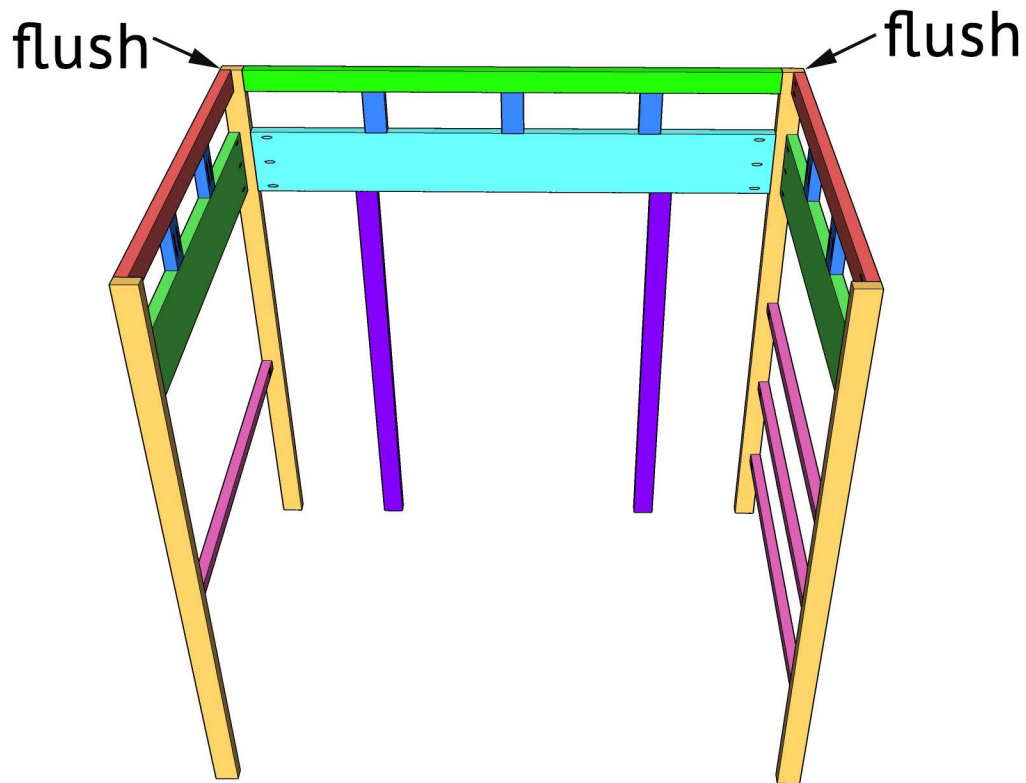

6

Attach the front assembly to the side assemblies with 2 1/2" pocket hole screws and wood glue.

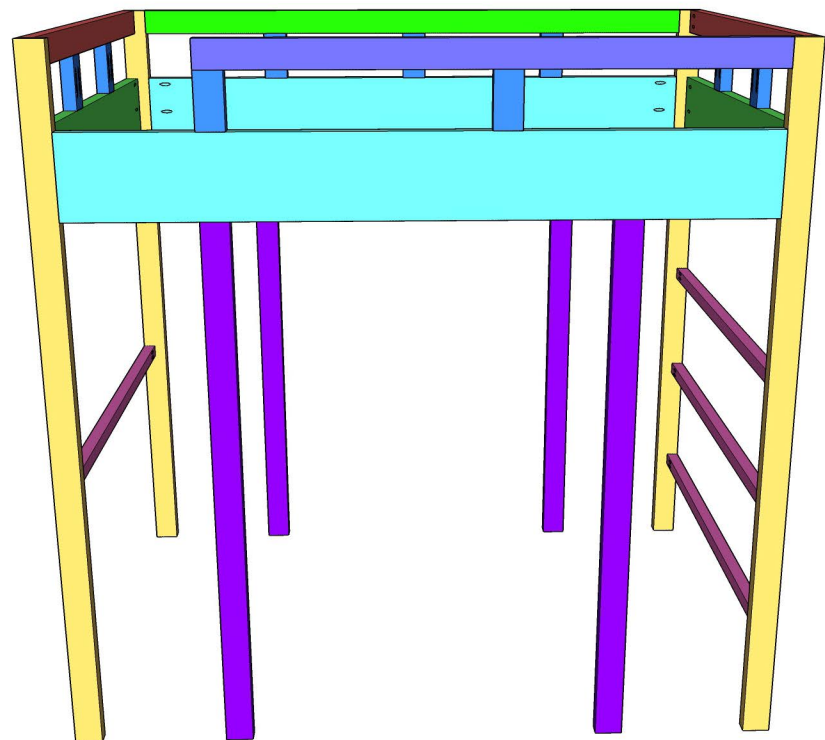

I'll be back with the second half of this Loft Bed soon!

Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!

