



©2017 WWW.SHANTY-2-CHIC.COM



DIY Stocking Holder

SUPPLY LIST

Item	Quantity	Description
2x6x8	1	Pine or Framing Lumber
1x4x6	1	Pine or Framing Lumber
1 1/4" Pocket Hole Screws		
2" Brad Nails		
Wood Glue		
Hooks	4	Link in Post on Our Site

Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!


CUT LIST




Note: I ripped my 2x6 boards to 5" wide to remove the round edges from the boards. This is not a necessary step.



Cut the front, back and side pieces to size. Attach the side pieces to the front piece with 2" brad nails and wood glue.

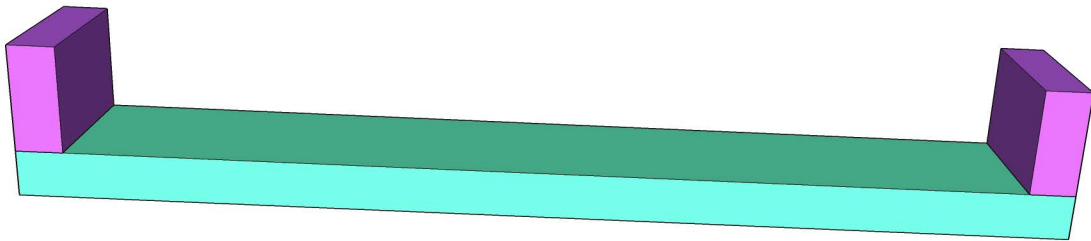


Attach the back piece to the side pieces the same way.

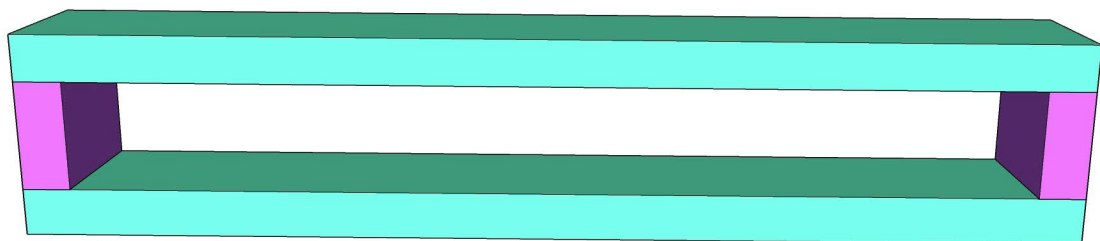



Cut the bottom board to size and drill $\frac{3}{4}$ " pocket holes on both edges. Attach it to the bottom of the planter with $1 \frac{1}{4}$ " pocket hole screws and wood glue.

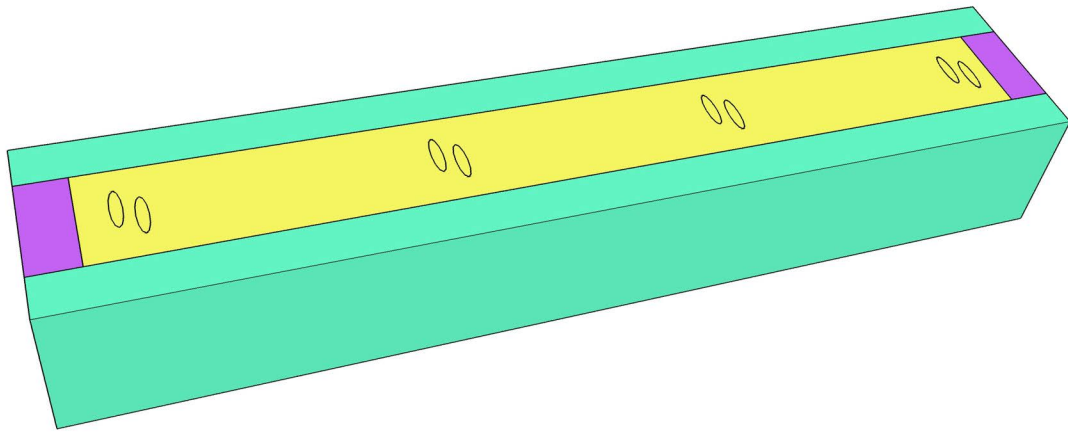

Now, just sand it down, add a finish and hooks and you're done! Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!

