



©2017 WWW.SHANTY-2-CHIC.COM



# DIY Modern Full-Sized Bed

## SUPPLY LIST


Item	Quantity	Description
2x8x8	3	Framing Lumber
1x6x8	7	Common Board
1x4x8	12	Common Board
2x2x8	2	Framing Lumber
2x4x8	2	Framing Lumber
1 1/4" Pocket Hole Screws		
2 1/2" Pocket Hole Screws		
1 1/4" Wood Screws		
2 1/2" Wood Screws		
Wood Glue		
Feet	4	Link in Post on our Site

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST 1

***Note: I ripped the round edges off of all of the 2x boards. This is not a necessary step but if you choose not to rip your round edges, adjust the plans accordingly.***

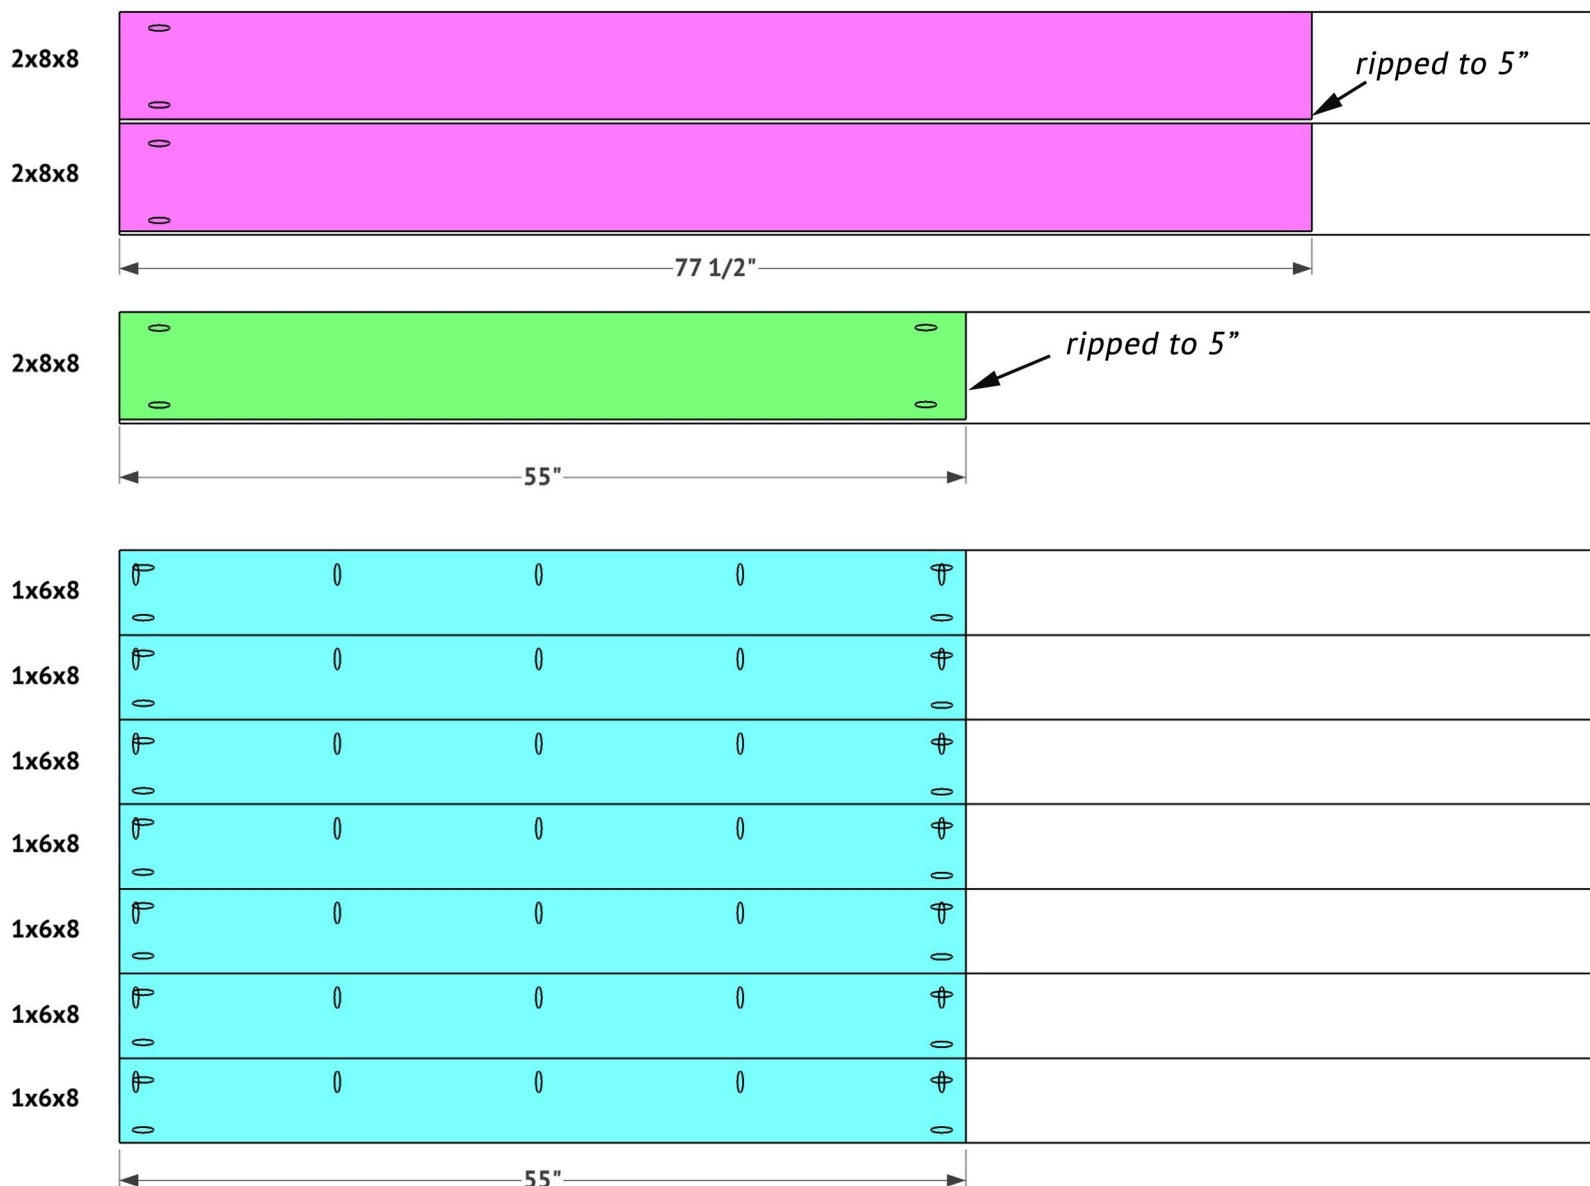

*Remember!*


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST 2

1x4x8		
1x4x8		
1x4x8		
1x4x8		
1x4x8		
1x4x8		
1x4x8		
1x4x8		
1x4x8		
1x4x8		
1x4x8		
1x4x8		
1x4x8		
55"		
2x2x8		
2x2x8		
76"		
2x4x8		
58"		
		<i>ripped to 2"</i>
2x4x8		
38 1/2"		
		<i>ripped to 2"</i>


1

Cut the headboard slats to size and drill  $\frac{3}{4}$ " pocket holes on one edge and both ends of each of the planks. Attach them together with  $1 \frac{1}{4}$ " pocket hole screws.

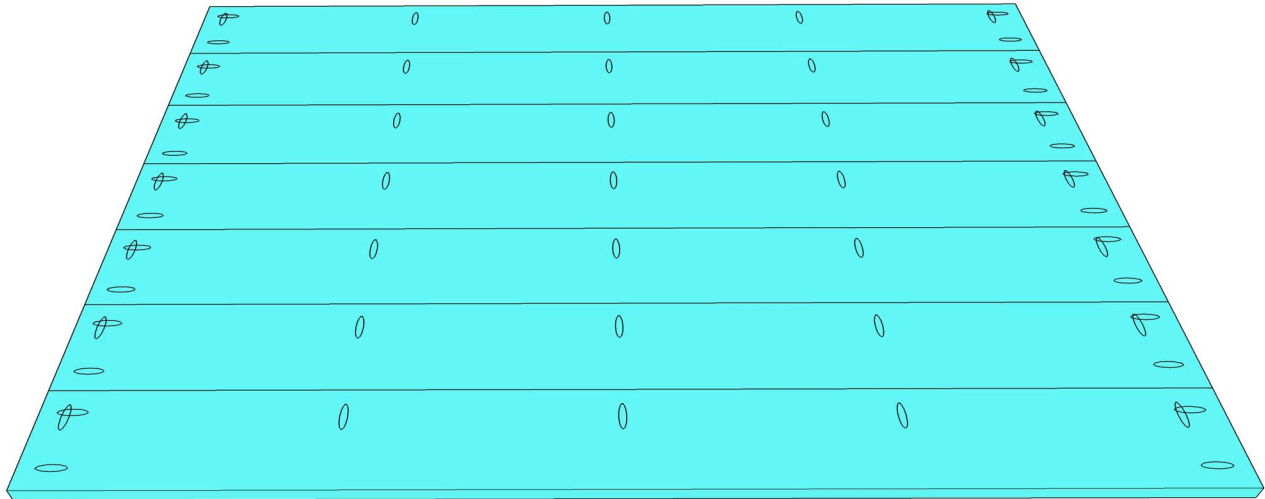


2

Cut the side trim to size and attach it to the sides of the planks with  $1 \frac{1}{4}$ " pocket hole screws and wood glue. The front of the trim should be flush with the front of the planks.

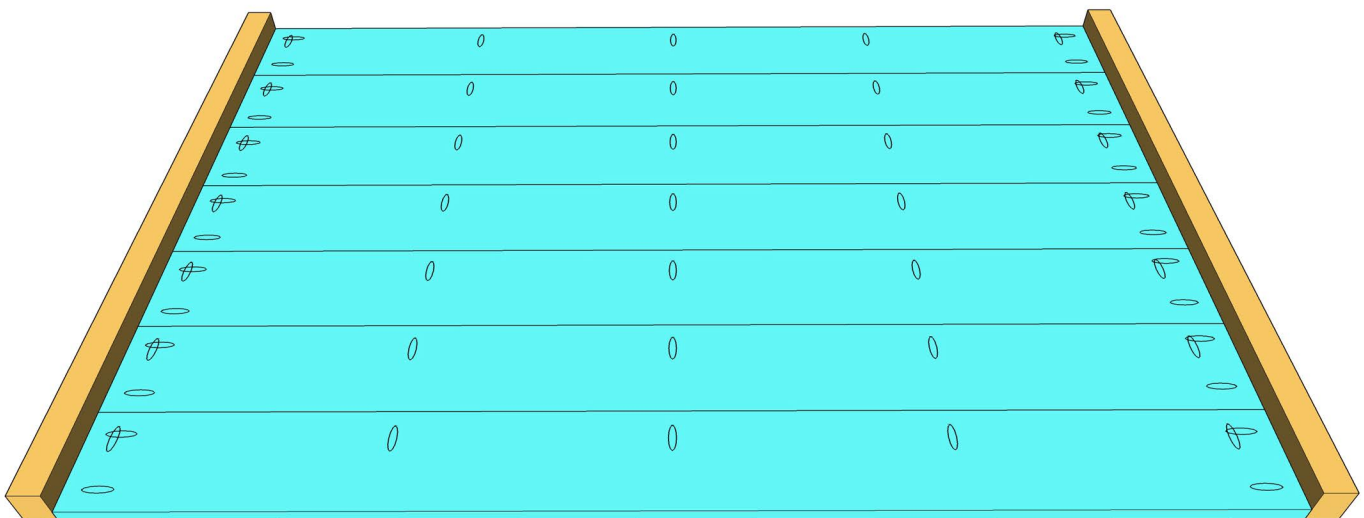


3

Cut the top trim to size and attach it to the top of the headboard with 1 1/4" pocket hole screws and wood glue. It should be flush with the planks and side trim.

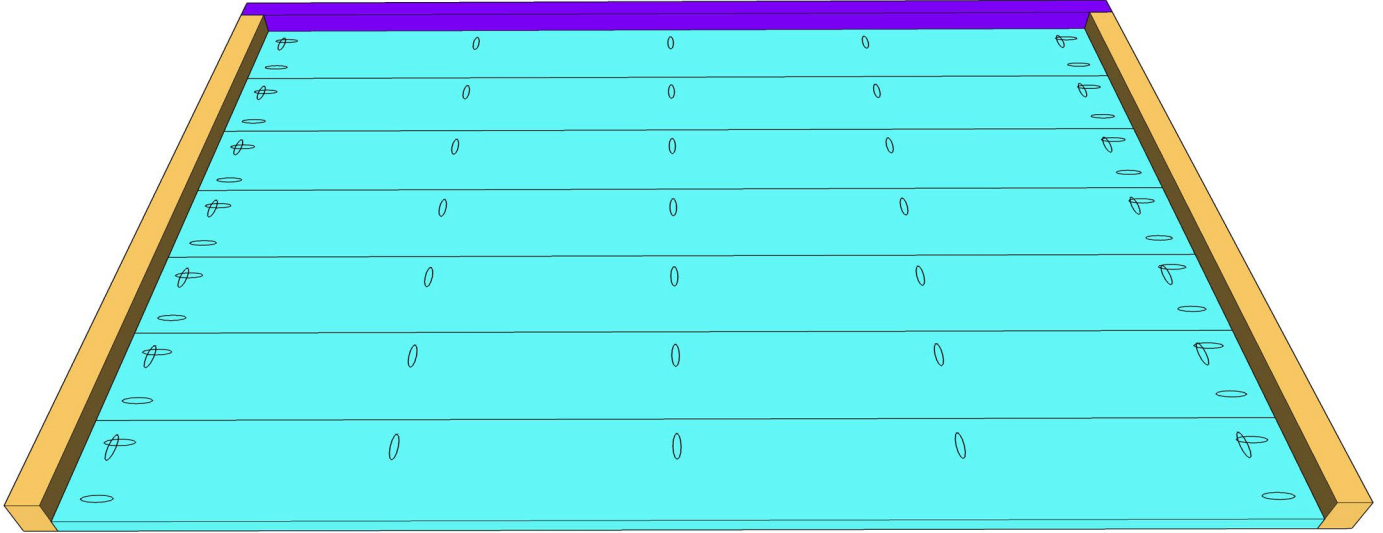


4

Cut the side rails and footboard to size. Drill 1 1/2" pocket holes at both ends of the footboard piece and one end of each side rail. Attach the side rails to the footboard with 2 1/2" pocket hole screws and wood glue.

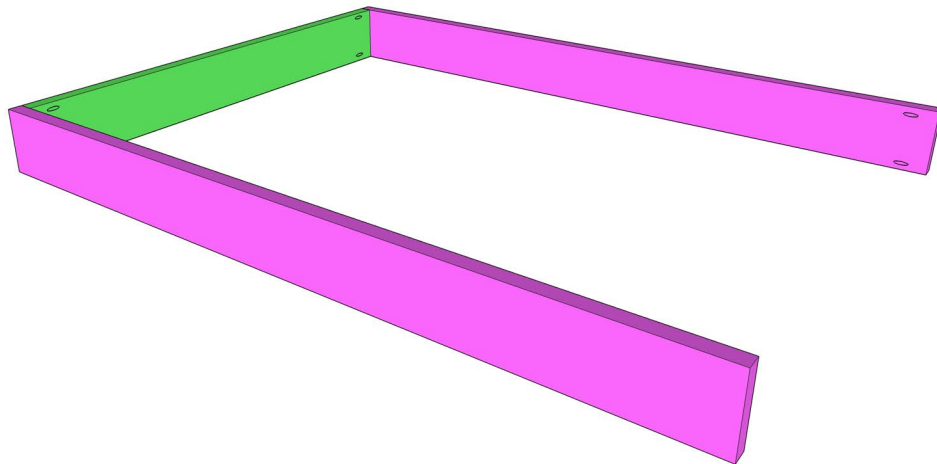




Cut the cleats to size and drill 1 1/2" pocket holes on each end. Attach one cleat to the inside of each side rail with 2 1/2" wood screws and wood glue. Attach one end to the footboard with 2 1/2" pocket hole screws. Center the final cleat on the footboard and attach it with 2 1/2" pocket hole screws and wood glue. The cleats should sit 3/4" down from the top of the bed frame.

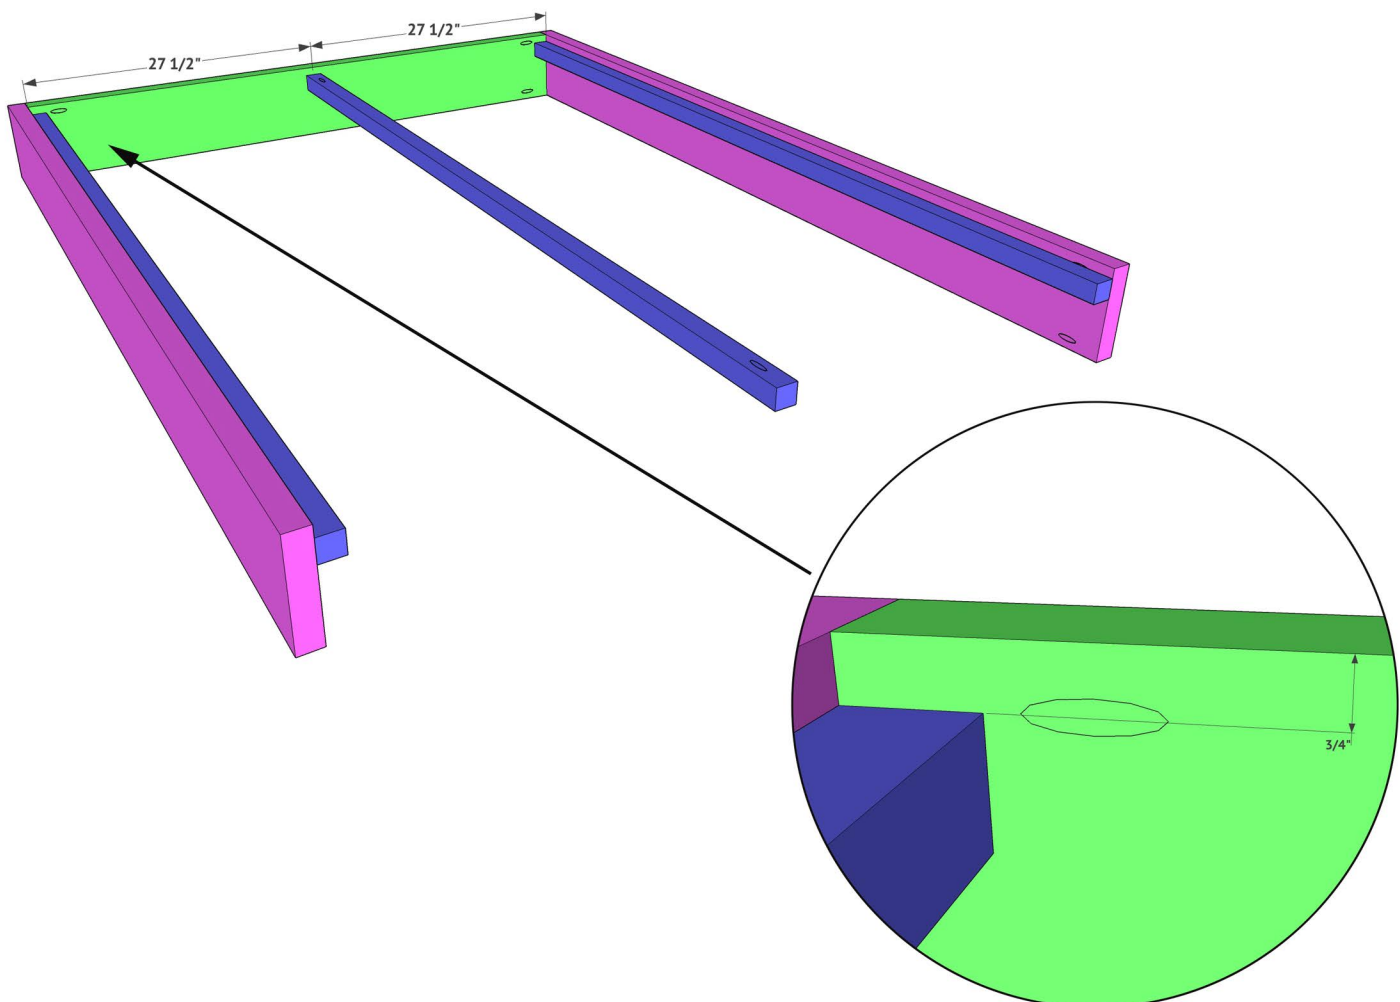


6

Attach the bed frame to the headboard with 2 1/2" pocket hole screws. The side rails should be flush with the side trim on the headboard. Note the placement of the middle cleat on the headboard.

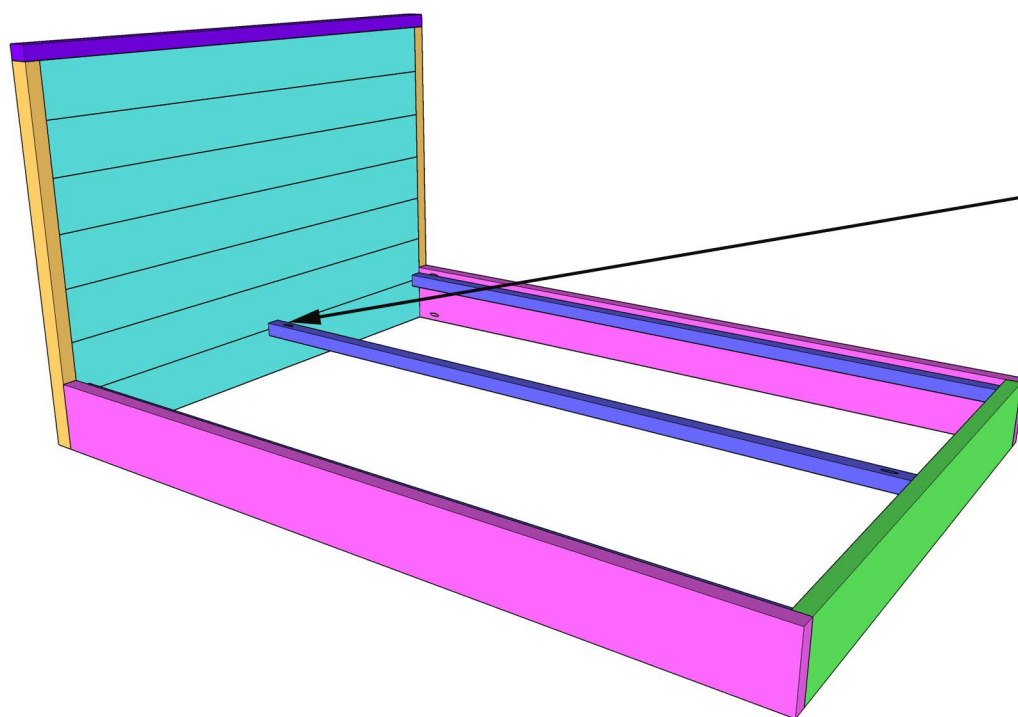

7

Cut the mattress slats to size and attach them to the cleats with 1 1/4" wood screws.

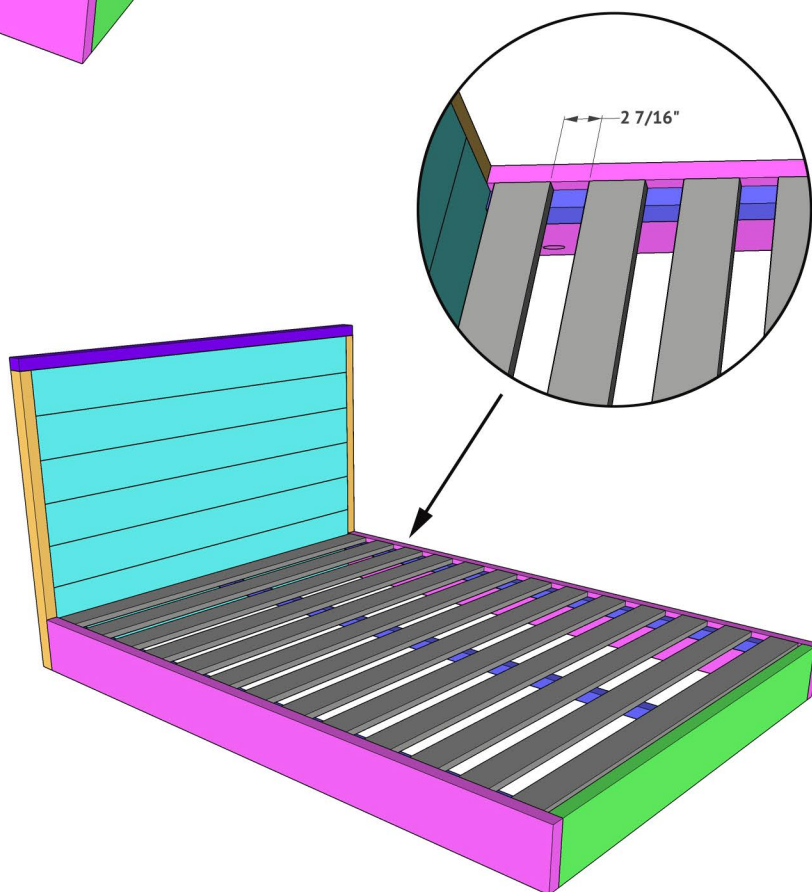

Add a finish and attach the feet and you're done!

This is a great build to get creative on and make it your own! Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!

