


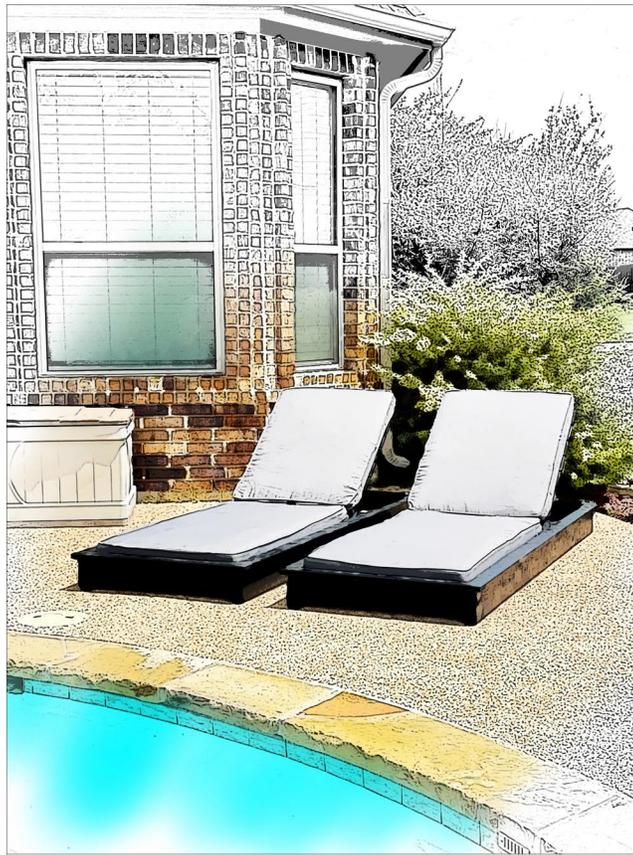

©2017 WWW.SHANTY-2-CHIC.COM



DIY Lounge Chair


SUPPLY LIST

| Item | Quantity | Description |
|---------------------------|----------|---------------------------------|
| 2x6x8 | 4 | Framing Lumber |
| 1x6x8 | 2 | Common Board |
| 1x4x8 | 8 | Common Board |
| 2 1/2" Pocket Hole Screws | | |
| 1 1/4" Wood Screws | | |
| 2 1/2" Wood Screws | | |
| Wood Glue | | |
| 1 1/2" Hinge | 1 | Link in Profile |
| Piano Hinge | 1 | Link in Profile |


Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

CUT LIST

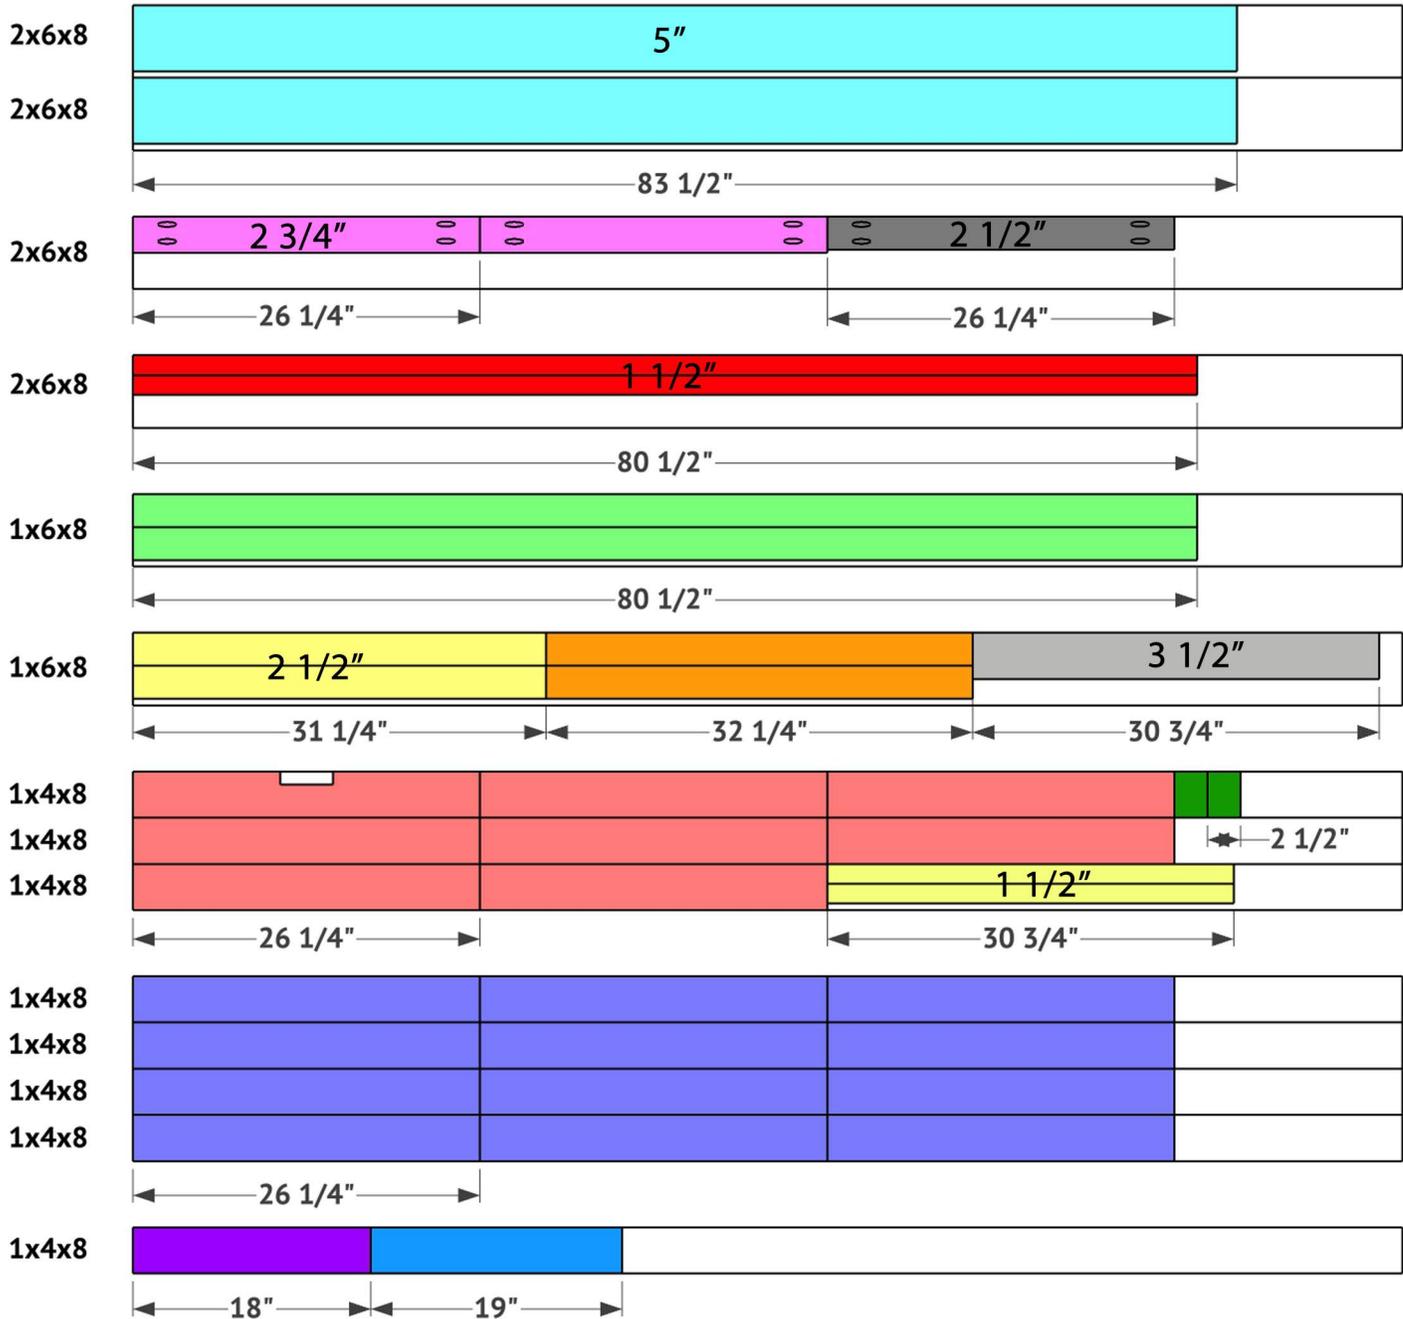


Cut Detail:

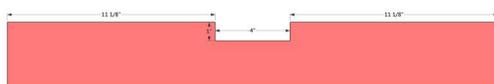

Note: I ripped the round edges off of all of the 2x boards and I used wider boards to create more narrow boards to save on the cost of lumber. This is not a necessary step but if you choose not to, please adjust the plans accordingly.


1

Cut the frame pieces to size. Drill 1 1/2" pocket holes at both ends of the top and bottom frame boards. Attach them together with 2 1/2" pocket hole screws and wood glue.

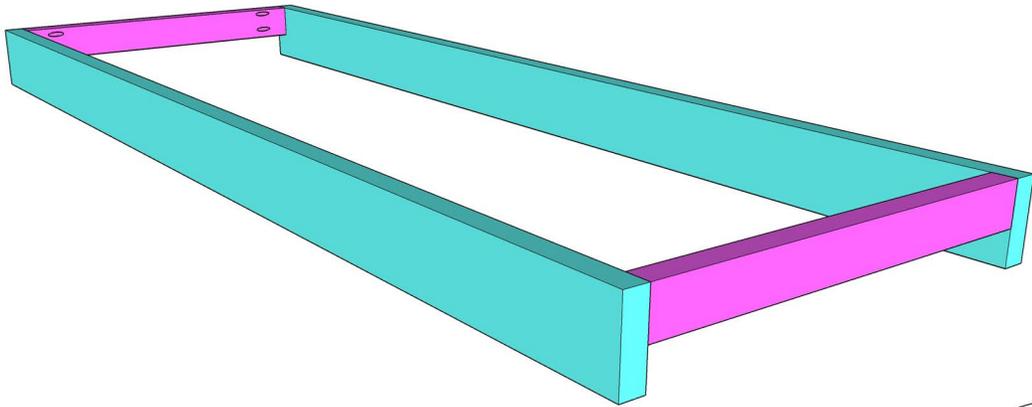


2

Cut the cleats to size. Attach them to the inside of the frame, 1 1/4" from the top of the frame with 2 1/2" wood screws and wood glue.

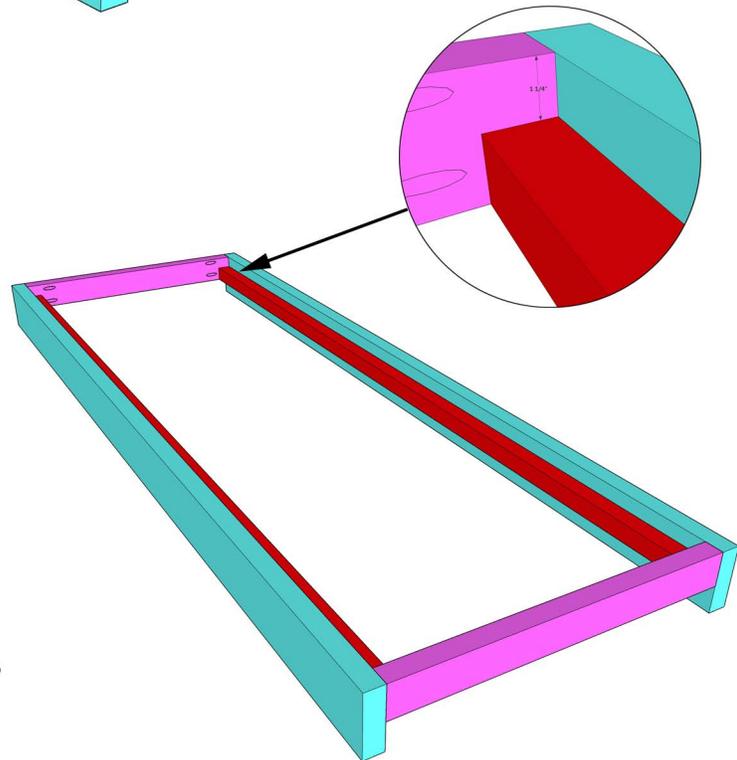


3

Cut the cross support piece to size and drill 1 1/2" pocket holes at both ends. Flip the lounge chair upside down and attach the cross support to the bottom of the cleats with 2 1/2" pocket hole screws and wood glue.

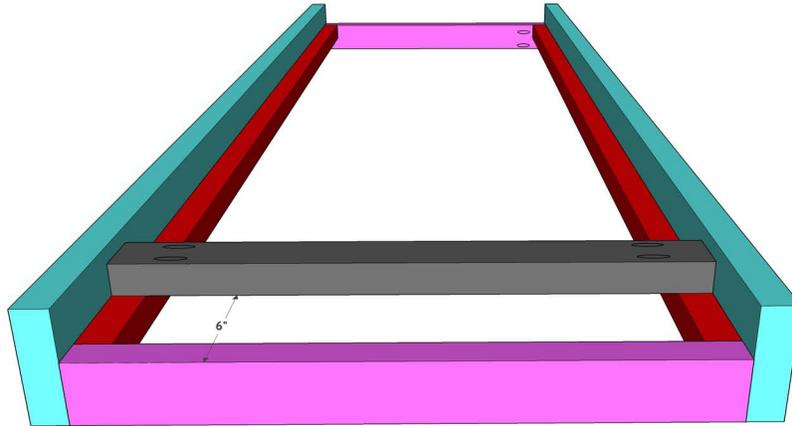


4

Cut the bottom slats to size. Space them out evenly with the end slat being flush with the end of the frame. Attach them to the cleats with 2" wood screws and wood glue.

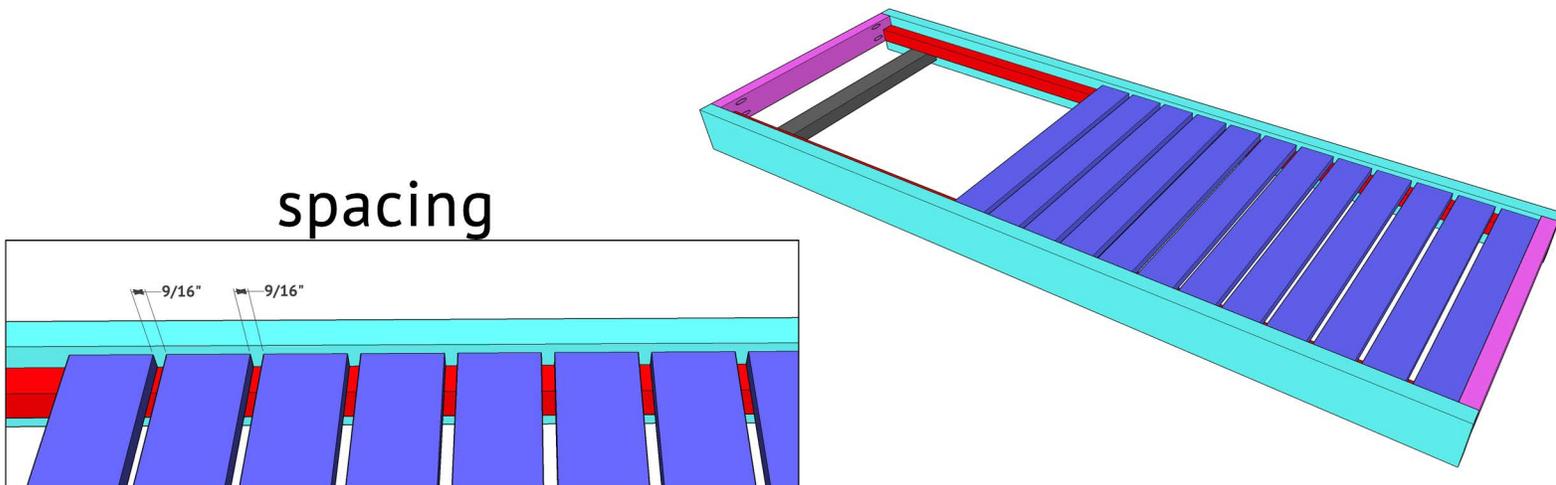


5

Cut the top slats and back supports to size and lay them upside down. Space the slats out and attach the back supports to the back of the slats with 1 1/4" wood screws and wood glue.

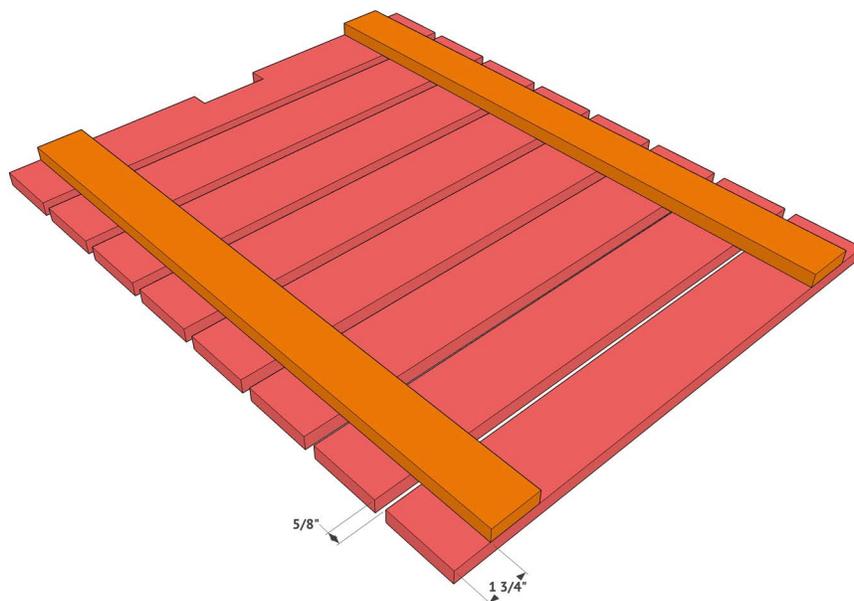


6

Cut the back slider pieces to size. Attach the side pieces to the bottom piece with 1 1/4" brad nails and wood glue. The back of the side pieces should be flush with the back of the bottom piece.

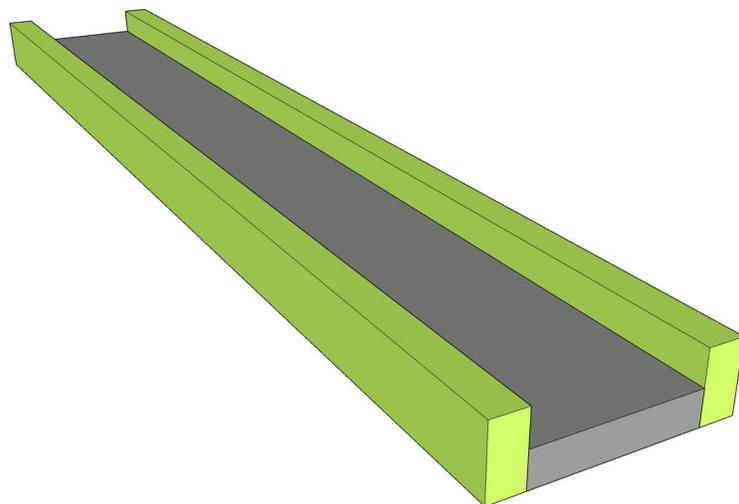




Center the slider on the back of the top slat assembly and attach it with 1 1/4" wood screws and wood glue. Cut the spacer blocks to size and attach them to the inside of the slider with 1 1/4" wood screws and wood glue.

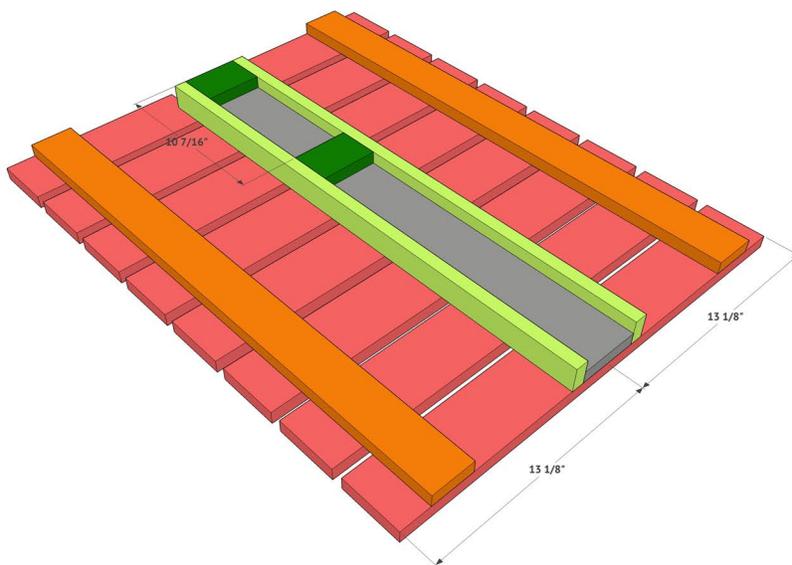


Cut the arm assembly pieces to size. Attach the short piece to the long piece with 1 1/4" brad nails and wood glue. The square ends should be flush with each other.

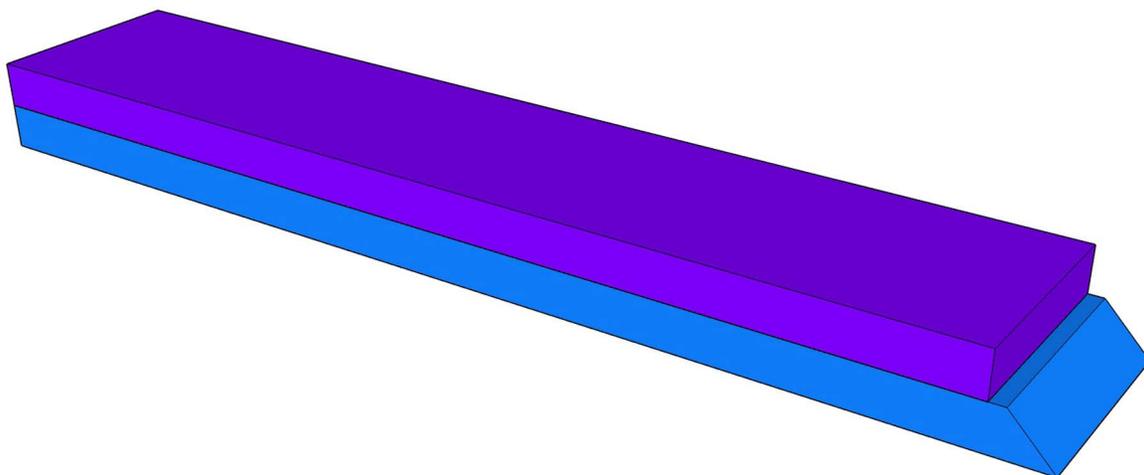


9

Center the arm on the top of the cross support. Attach it to the top of the cross support with an outdoor hinge.

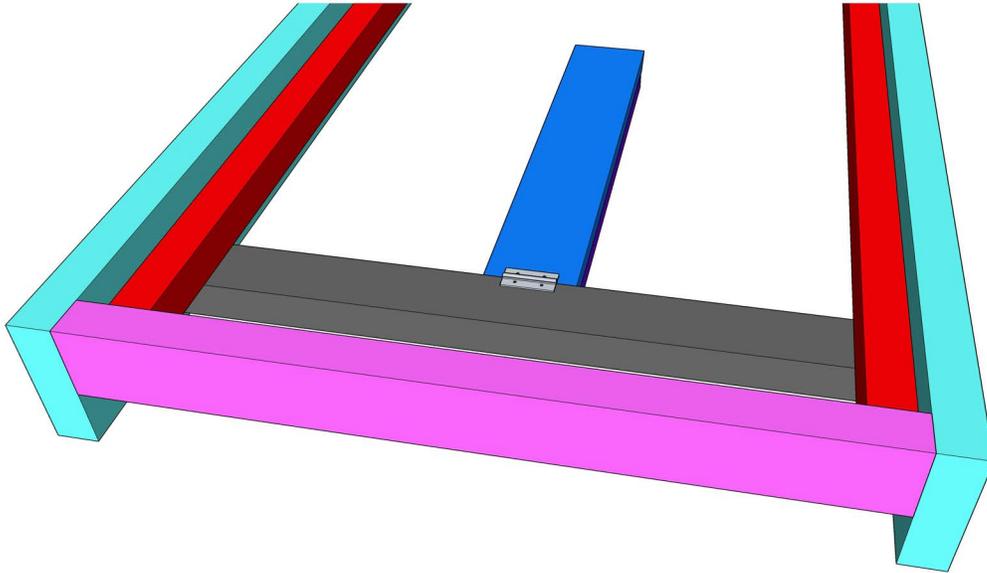


10

Lay the top slat assembly upside down on top of the bottom slats. Attach the top slat assembly to the bottom slats with a piano hinge.

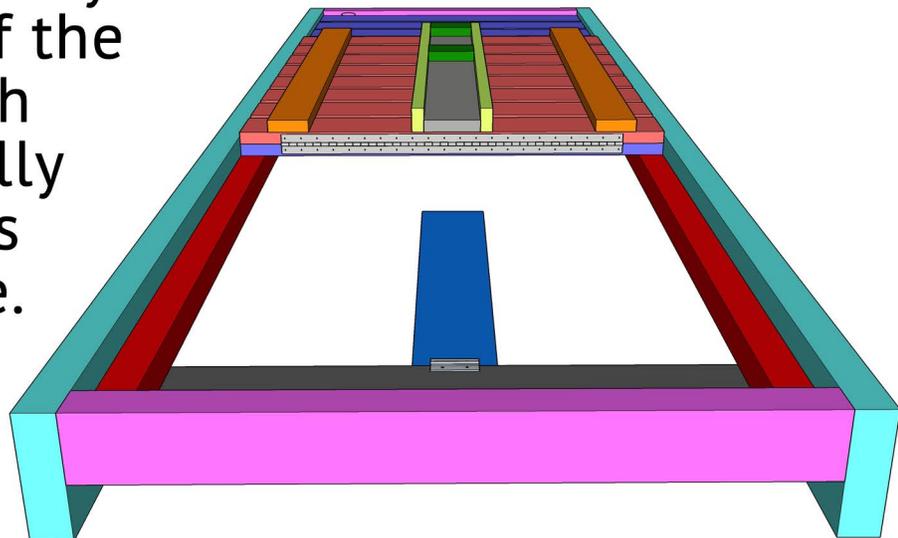


11

Cut the side trim pieces to size. Attach them to the sides of the frame with 1 1/4" wood screws and wood glue. The inside of the trim pieces should be flush with the inside of the frame.

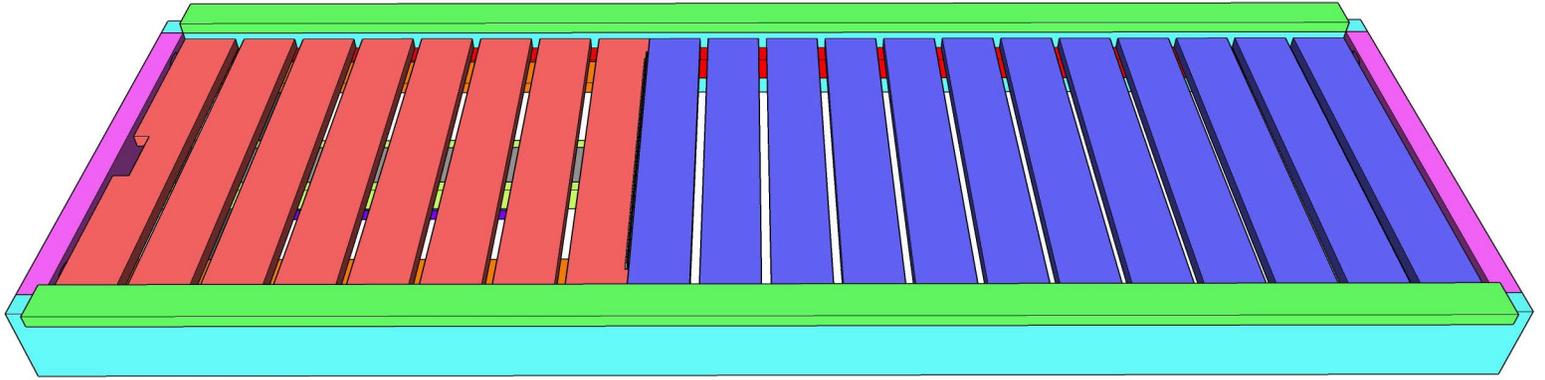

12

Cut the end pieces to size and attach them to the ends of the lounge chair frame with 1 1/4" wood screws and wood glue.

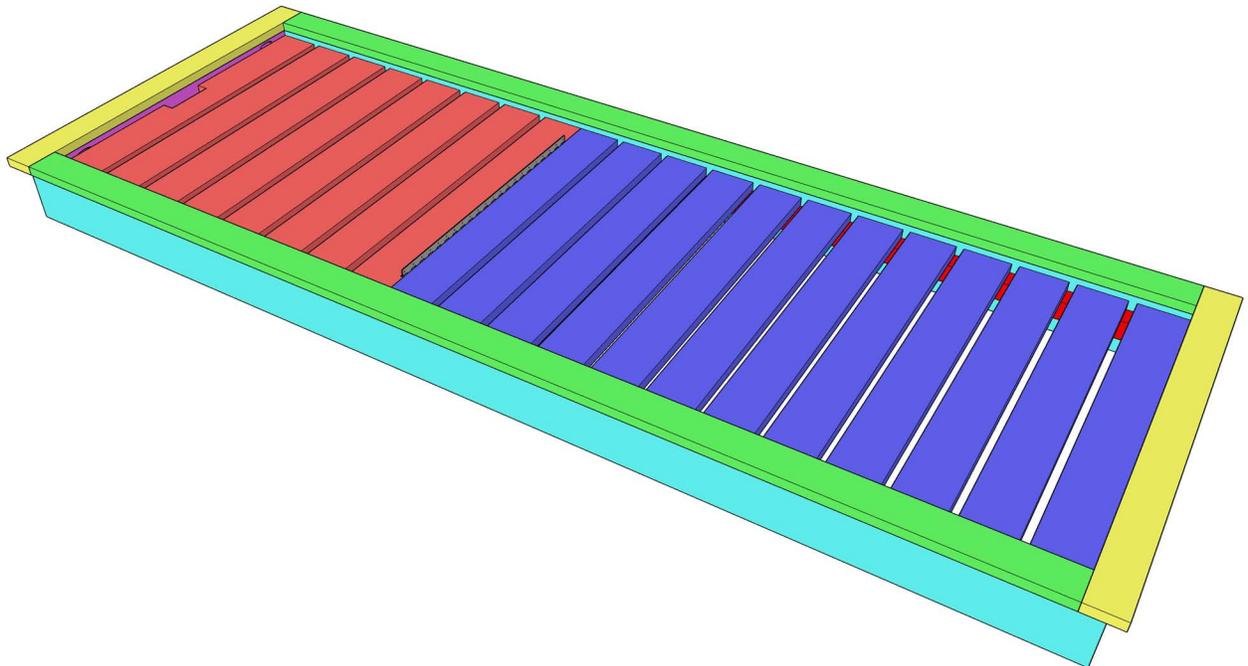

Fill your screw holes with wood filler and add a finish! I used an indoor/outdoor spray paint. Get creative and make it your own!

Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!

