



©2017 WWW.SHANTY-2-CHIC.COM



DIY CUSTOM BARN DOOR


SUPPLY LIST

Item	Quantity	Description
1x6x10	1	Common Board
1x6x8	1	Common Board
1x4x8	3	Common Board
1/4"x4x8 Bender Board	5	
1/2"x4x4 Poplar	4	
1/4"x48"x96"	2	Hardwood Plywood
1 1/4" Pocket Hole Screws		
1 1/4" Brad Nails		
5/8" Pin Nails		
5/8" Staples		
Wood Glue		
Barn Door Hardware	1	Link in Post
Barn Door Pull	1	Link in Post

Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

CUT LIST

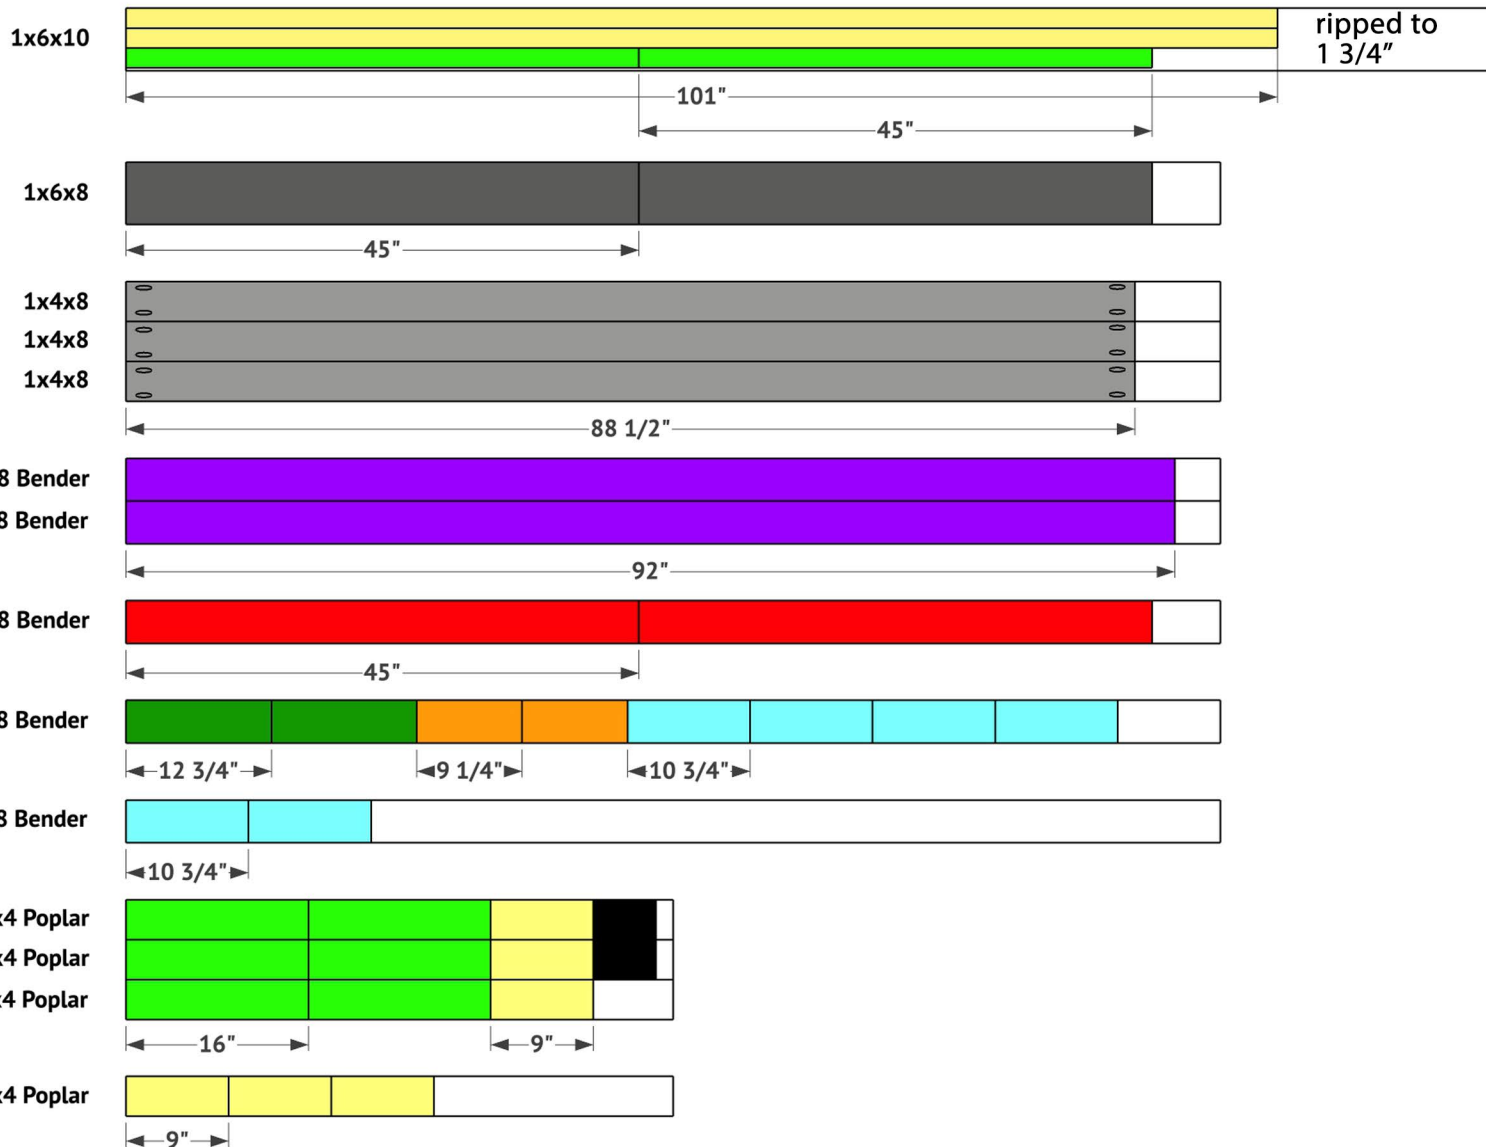


Remember!


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

CUT LIST

**1/4"x48"x98"
Hardwood Plywood**

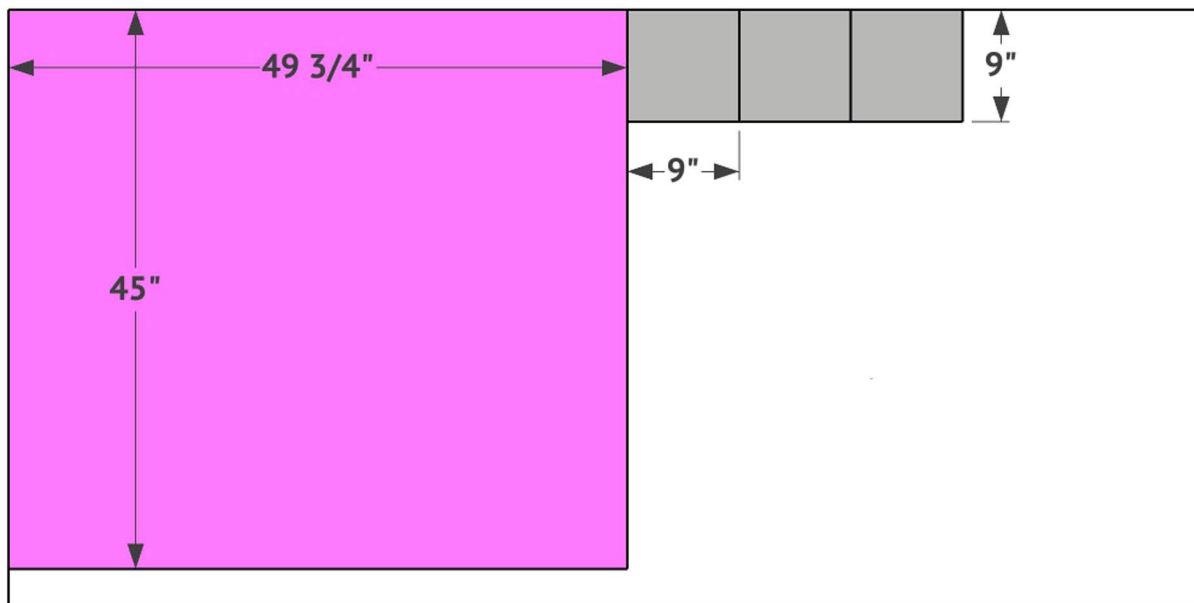


**1/4"x48"x98"
Hardwood Plywood**

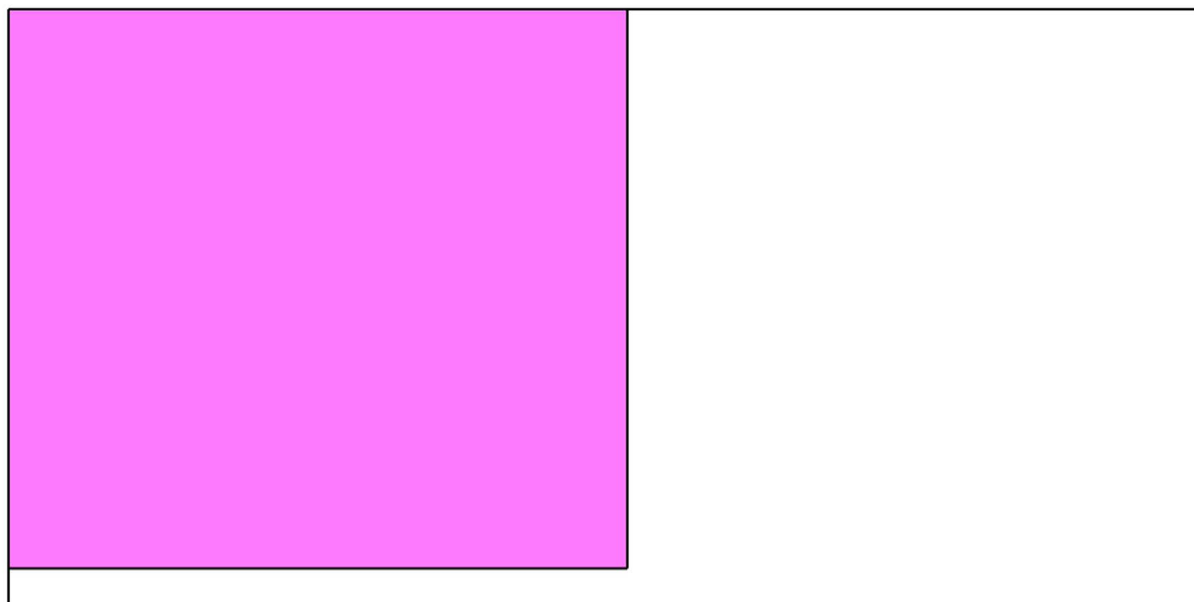

1


Cut the frame pieces to size.

Drill $\frac{3}{4}$ " pocket holes at the end of each of the long boards. Attach them to the short boards with $1 \frac{1}{4}$ " pocket hole screws and wood glue.

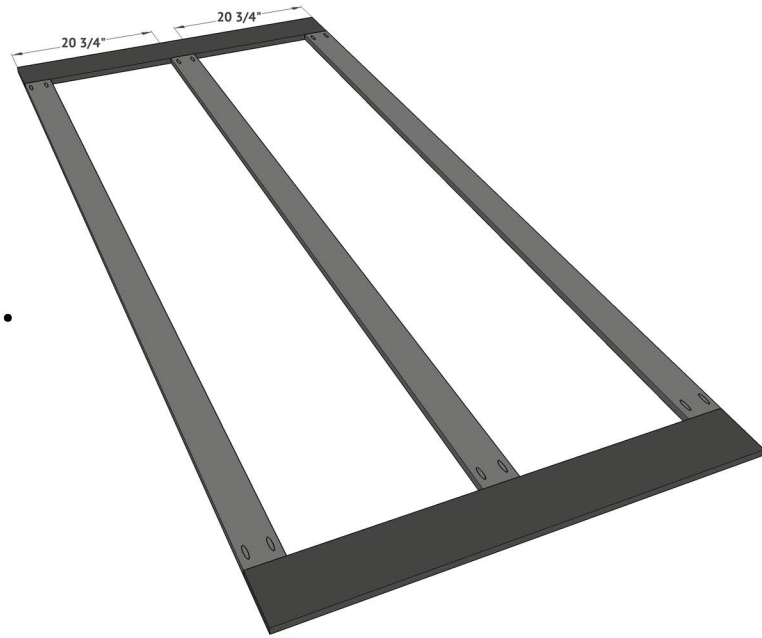


2

Cut the plywood sheets to size and attach them to the frame with $\frac{5}{8}$ " staples and wood glue.

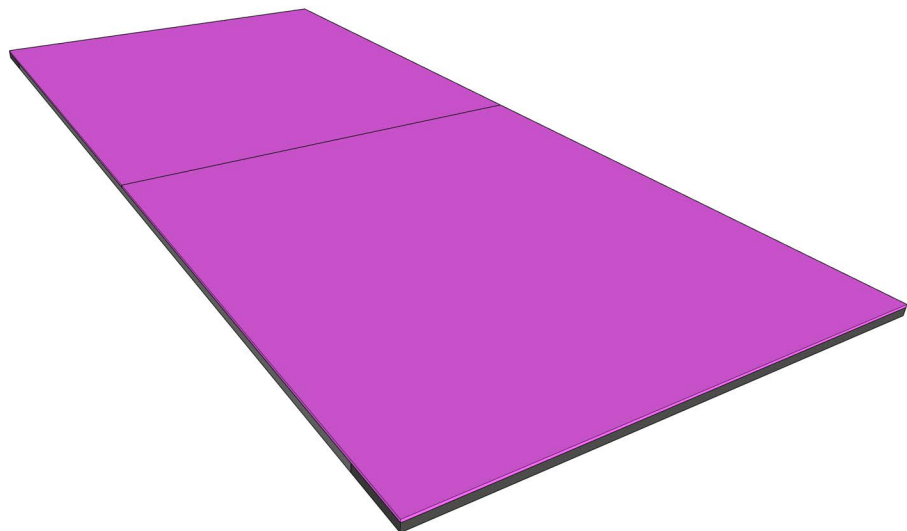


3

Cut the top and bottom trim pieces to size. Attach them to the top and bottom of the barn door frame with 1 1/4" brad nails. The bottom of the trim should be flush with the bottom of the frame.

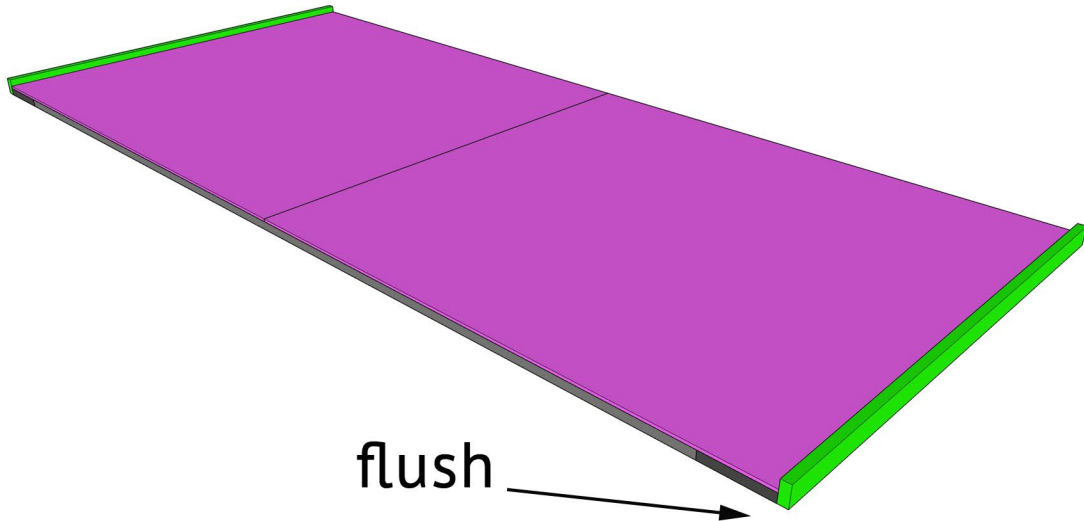


4

Cut the side trim pieces to size and attach them to the sides of the barn door with 1 1/4" brad nails and wood glue.

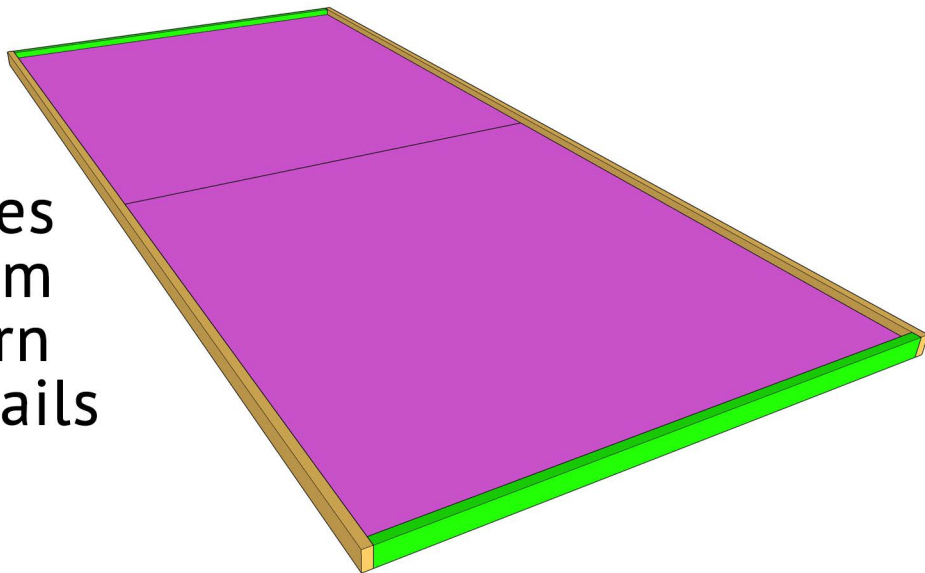


5

Cut the top and bottom, front trim. Attach it to the top and bottom of the plywood with 5/8" pin nails and wood glue.

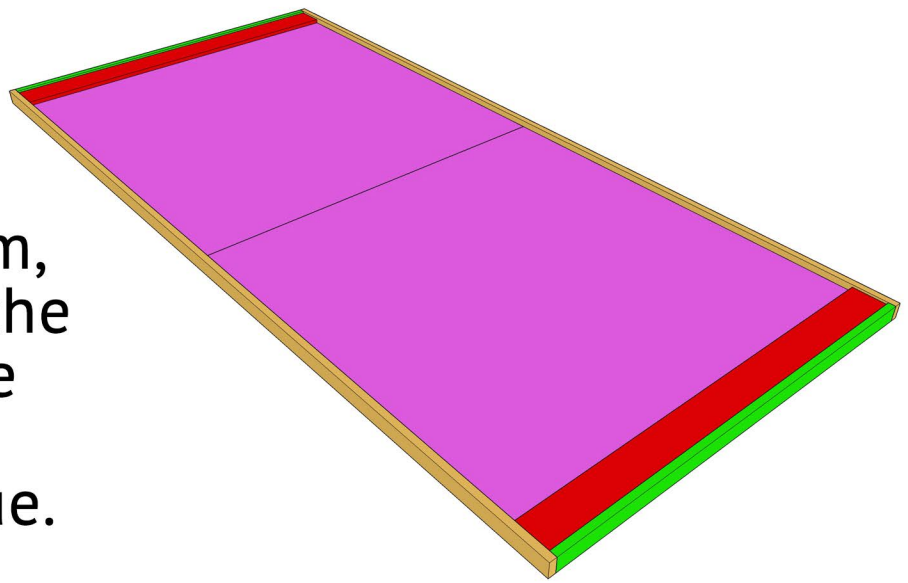


6

Cut the vertical bender boards to size. Attach them to the sides of the plywood with 5/8" pin nails and wood glue.

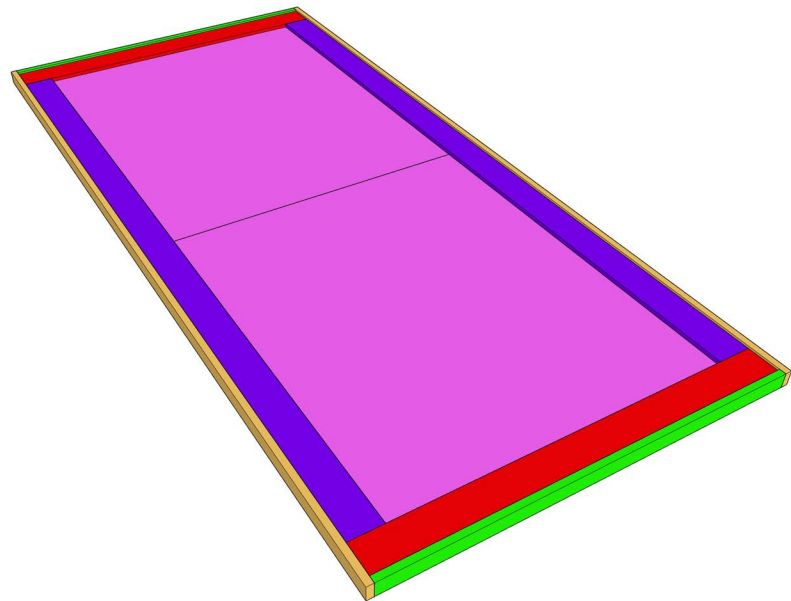


7

Cut the squares to size, center them on the plywood according to the sketch and attach them to the plywood with 5/8" pin nails and wood glue.

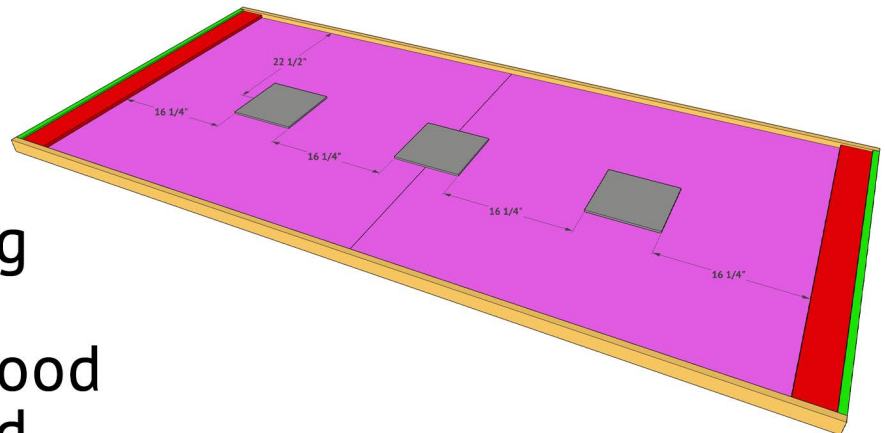




Cut the side trim pieces for the squares. Attach them on the outside of the squares with 5/8" pin nails and wood glue.

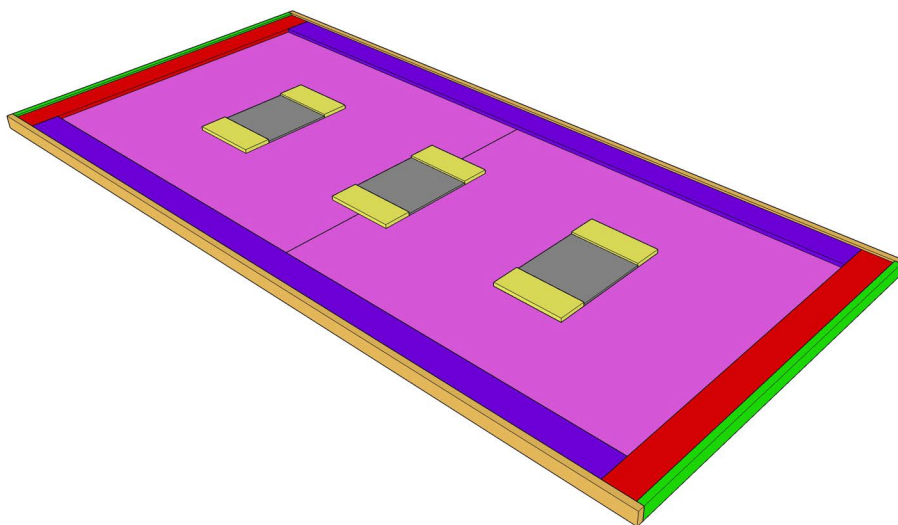


Cut the top and bottom trim pieces to size and attach them the same way.

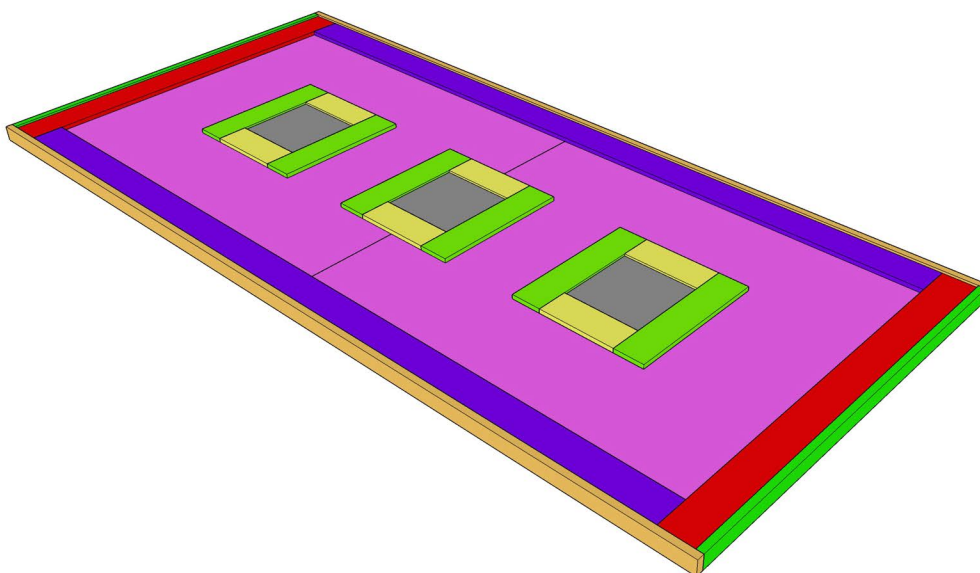


10

Cut the final trim pieces to size. Center them on the squares according to the sketch and attach them the same way.

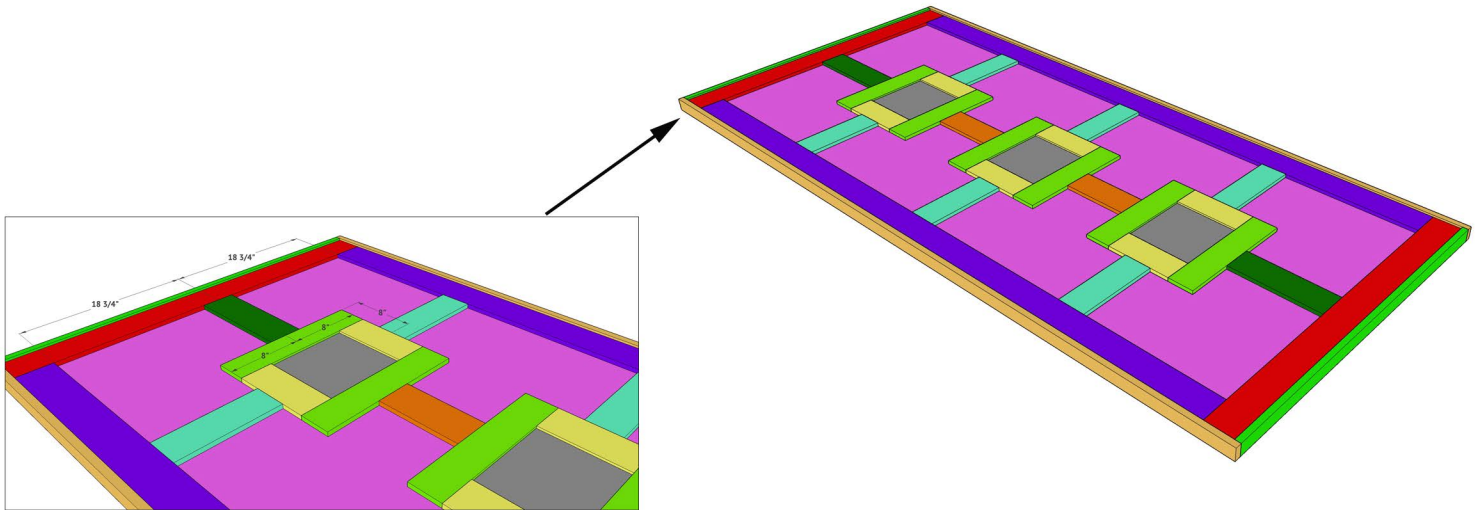

11

Cut the wheel blocks to size and attach them to the top corners of the barn door with 1 1/4" brad nails and wood glue.

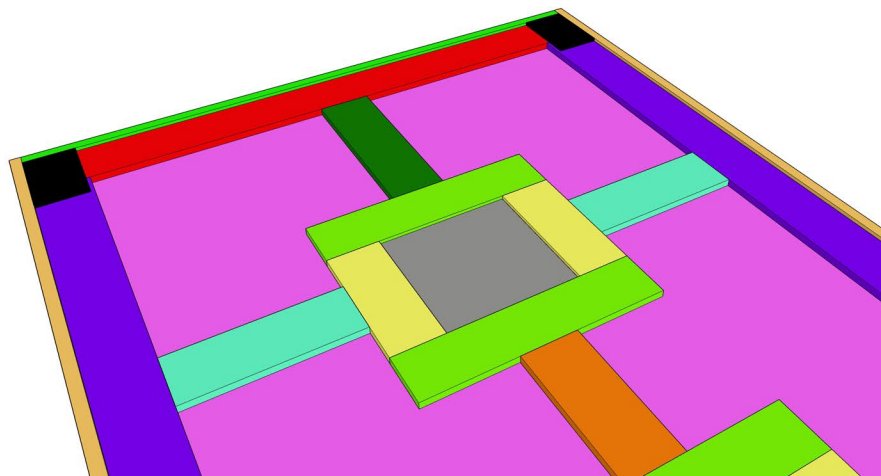

Fill your nail holes, sand it down and add a finish!
This is a great project to customize with the trim. Get creative with it and make it your own!

Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!!

