



©2017 WWW.SHANTY-2-CHIC.COM



# DIY NIGHTSTAND

## SUPPLY LIST

Item	Quantity	Description
1"x6"x48"	16	Barnwood
1/2"x48"x48"	1	Hardwood Plywood
2x4x8	5	Framing Lumber
1 1/4" Pocket Hole Screws		
2 1/2" Pocket Hole Screws		
3/4" Staples (or brad nails)		
5/8" Pin Nails		
1" Pin Nails		
2 1/2" Wood Screws		
Drawer Slides	2	
Drawer Pull	1	
Wood Glue		
Wood Filler		

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

**CUT LIST** *Note: This set of plans is for one nightstand.  
1x6x48 barnwood can be replaced with 1x6x8 pine.*

1"x6"x48"  
Barnwood

1"x6"x48"  
Barnwood




1"x6"x48"  
Barnwood

1"x6"x48"  
Barnwood


1"x6"x48"  
Barnwood

1"x6"x48"  
Barnwood

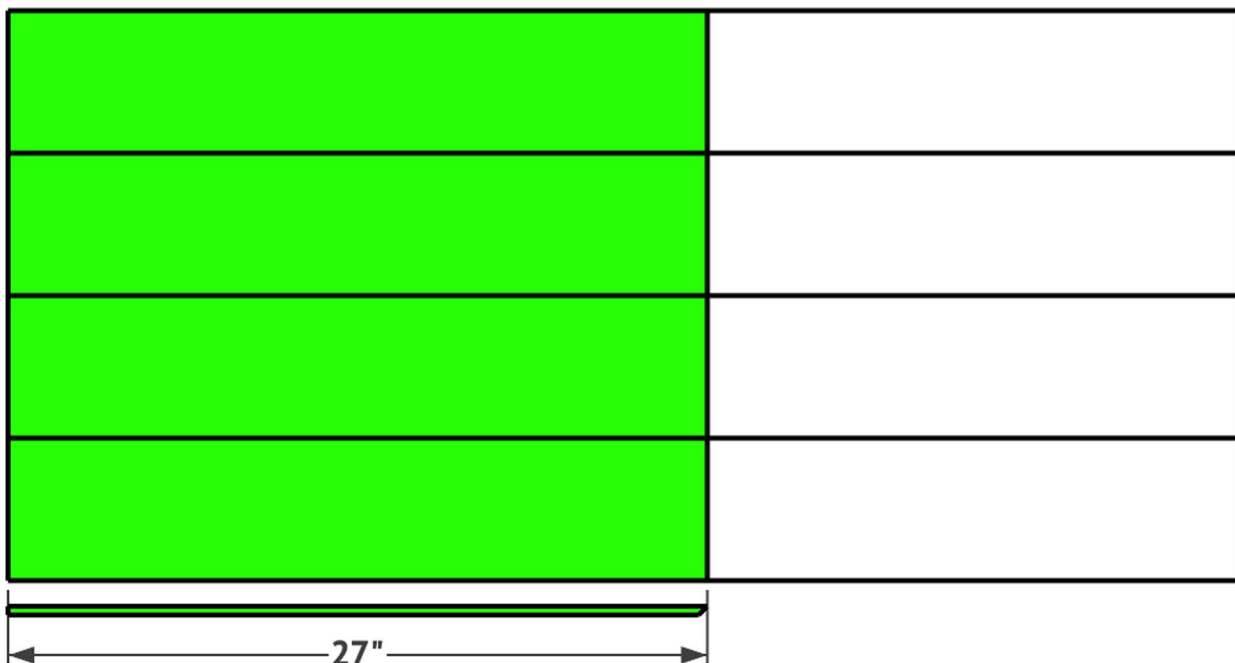

1"x6"x48"  
Barnwood


1"x6"x48"  
Barnwood

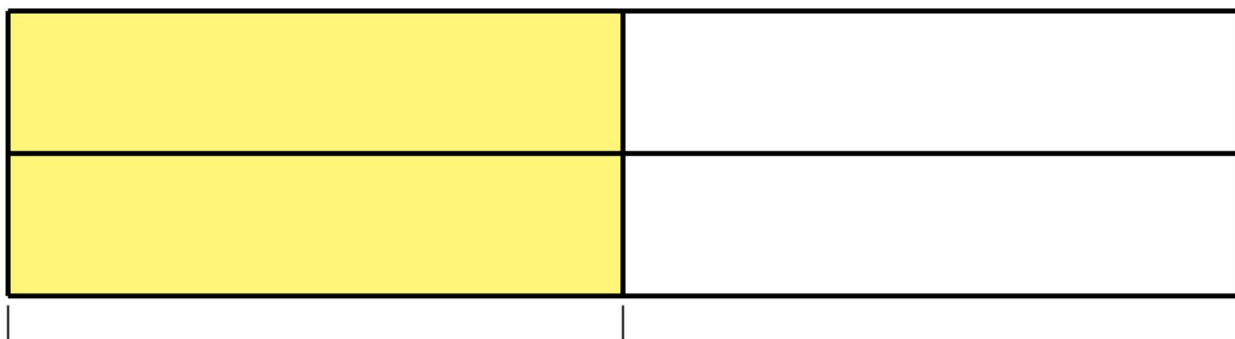

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST


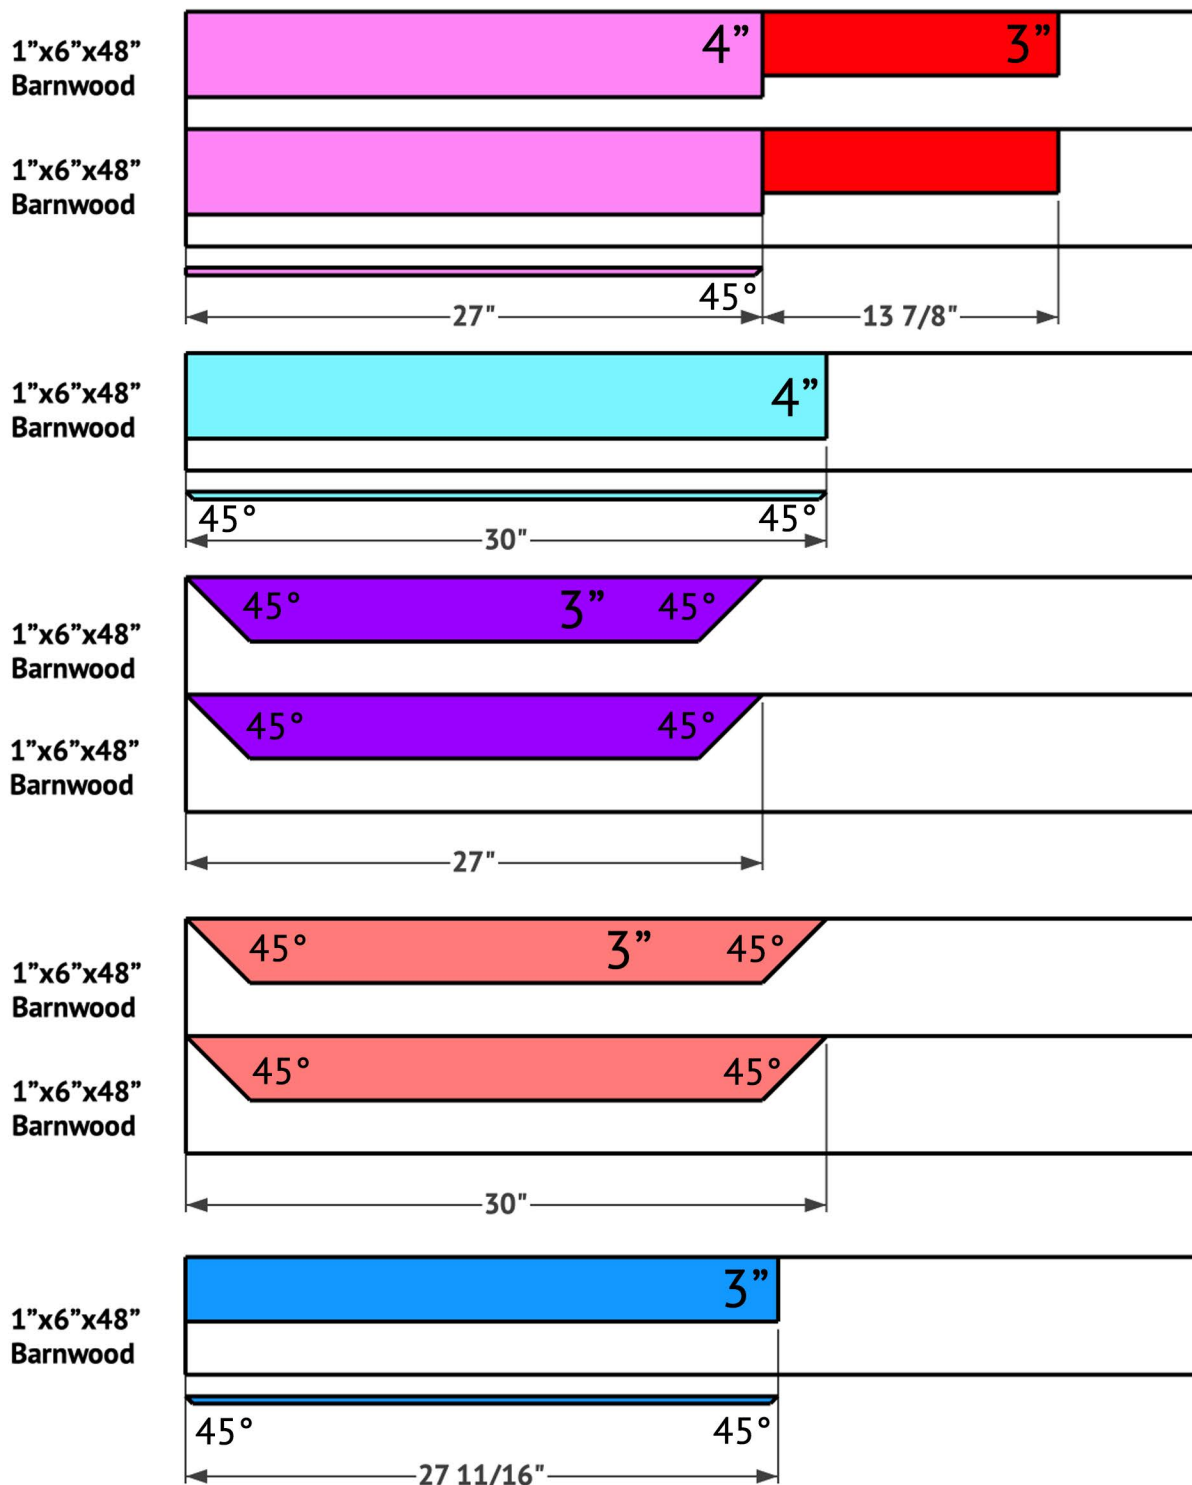


*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST


1/2"x48"x48"  
Hardwood Plywood

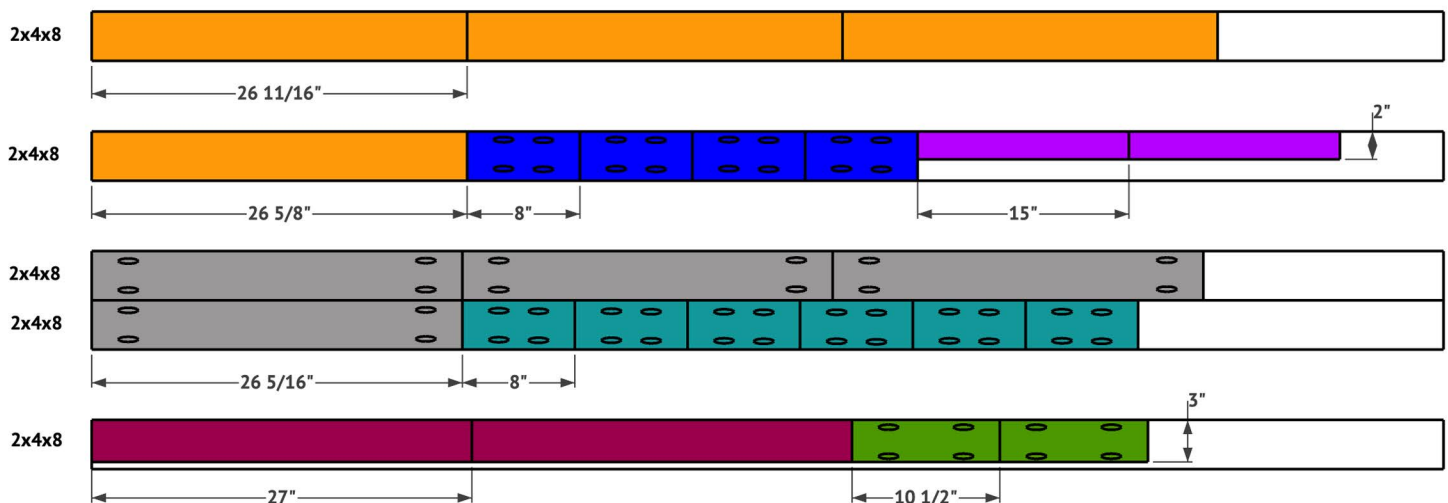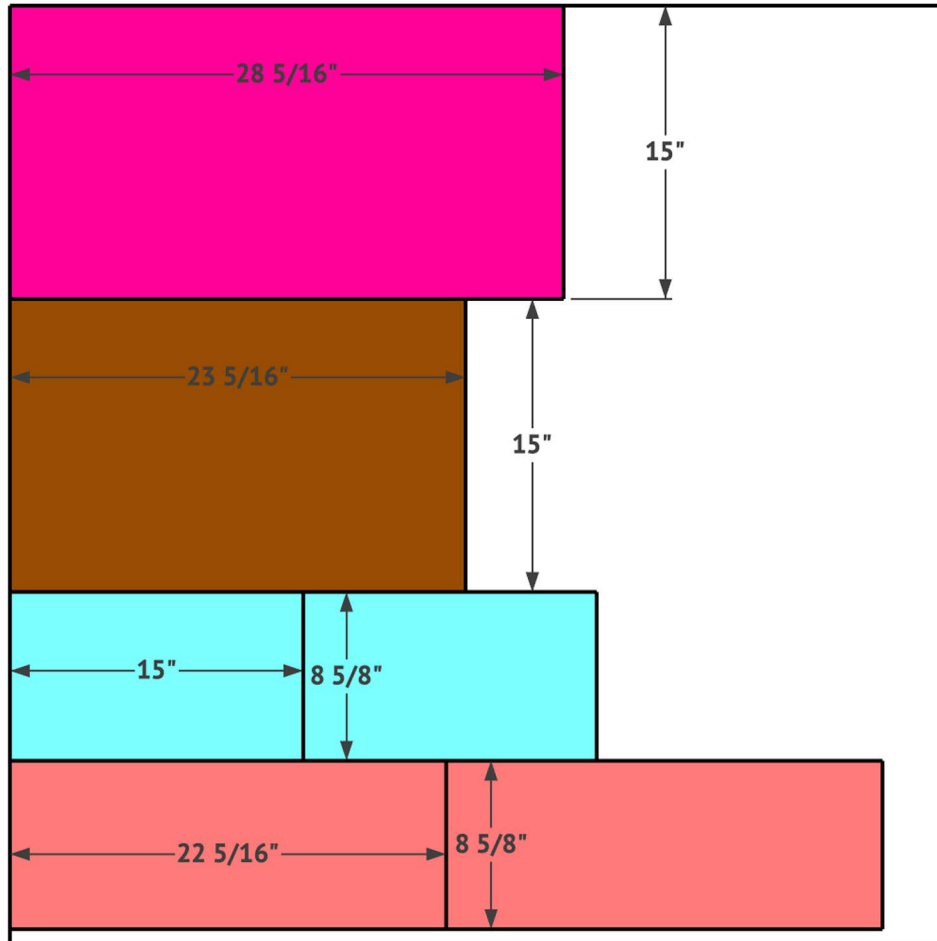

1


x2

Cut the side frame pieces to size. Drill 1 1/2" pocket holes at both ends of the short cross pieces and attach them to the side pieces with 2 1/2" pocket hole screws and wood glue. Build 2 side frame assemblies.

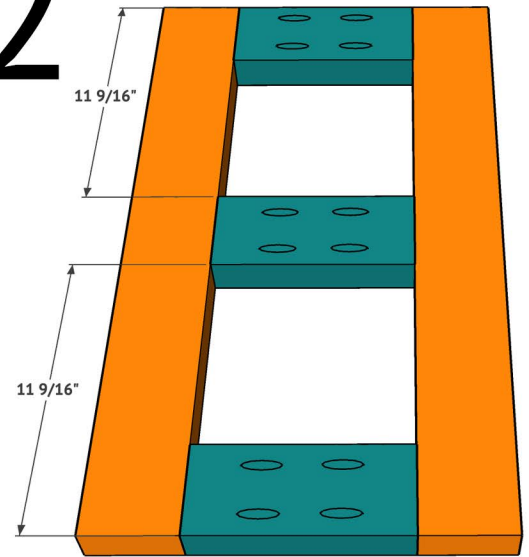


2

Cut the top and bottom support pieces to size and drill 1 1/2" pocket holes at both ends. Attach them to both side frame assemblies with 2 1/2" pocket hole screws and wood glue.

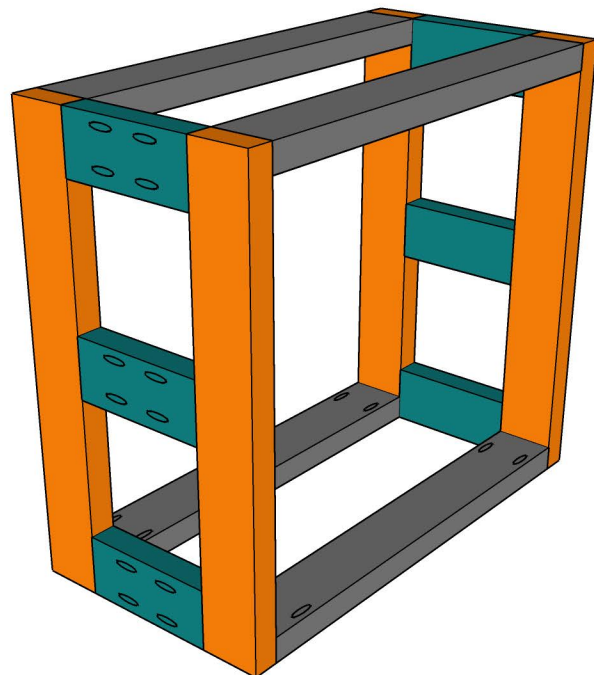


3

Cut the top and bottom cross supports and drill 1 1/2" pocket holes at both ends. Attach them to the top and bottom supports with 2 1/2" pocket hole screws and wood glue,

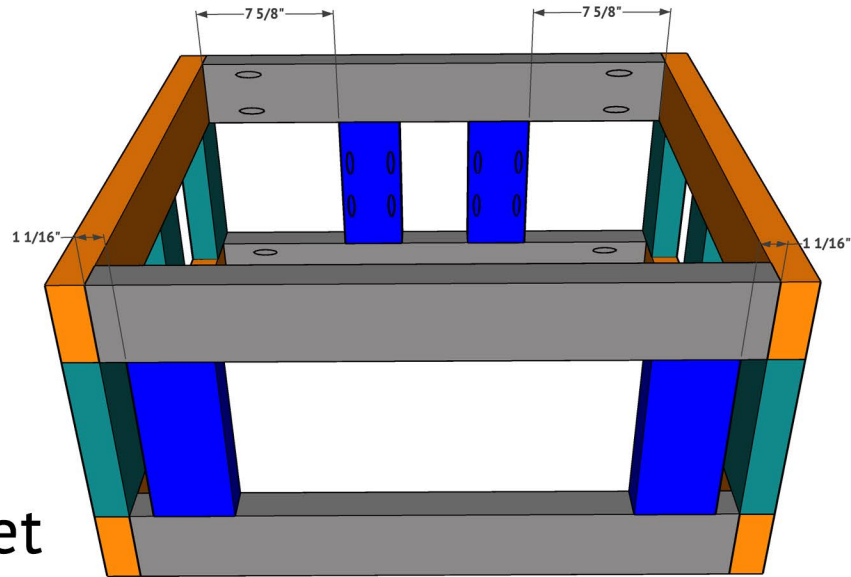

4

Cut the pedestal pieces to size and drill 1 1/2" pocket holes at both ends of the short side pieces. Attach them to the long, front and back piece with 2 1/2" pocket hole screws and wood glue.


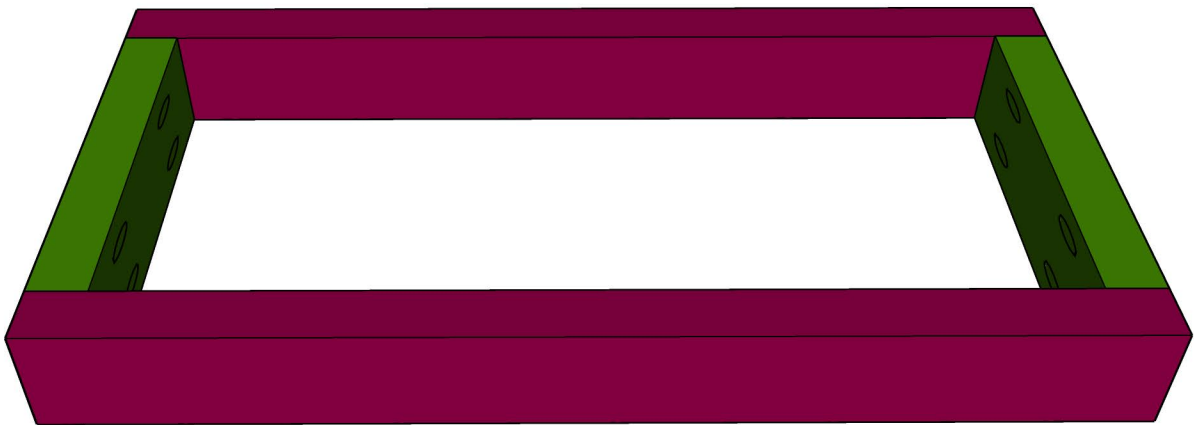




5


Attach the pedestal to the bottom of the nightstand, according to the image. Use 2 1/2" wood screws from the bottom of the inside of the nightstand and into the top of the pedestal.

flush

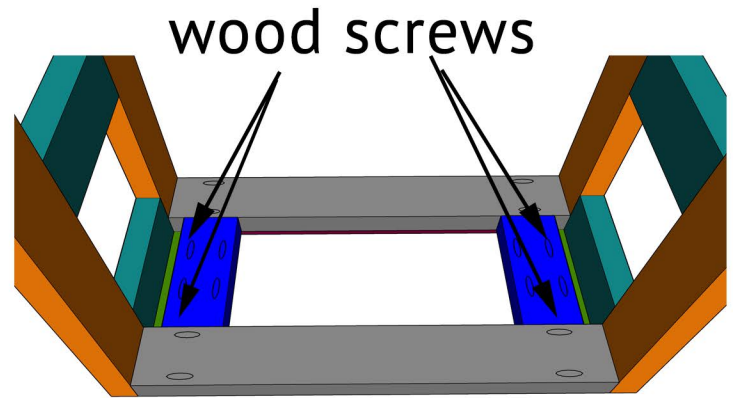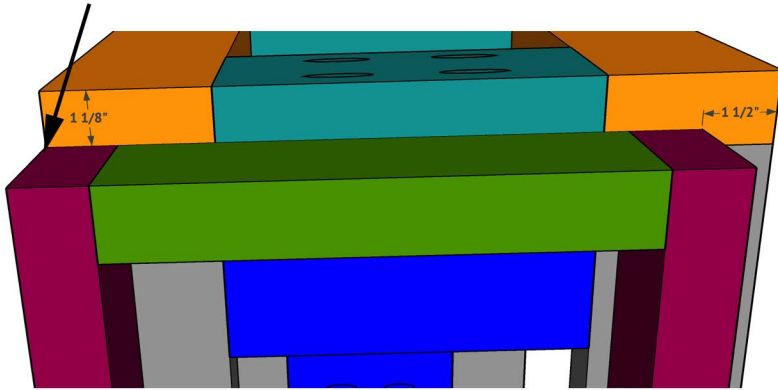


6

Cut the cleats to size, center them over the bottom cross supports and attach them with 2 1/2" wood screws from the top of the cleat into the supports.

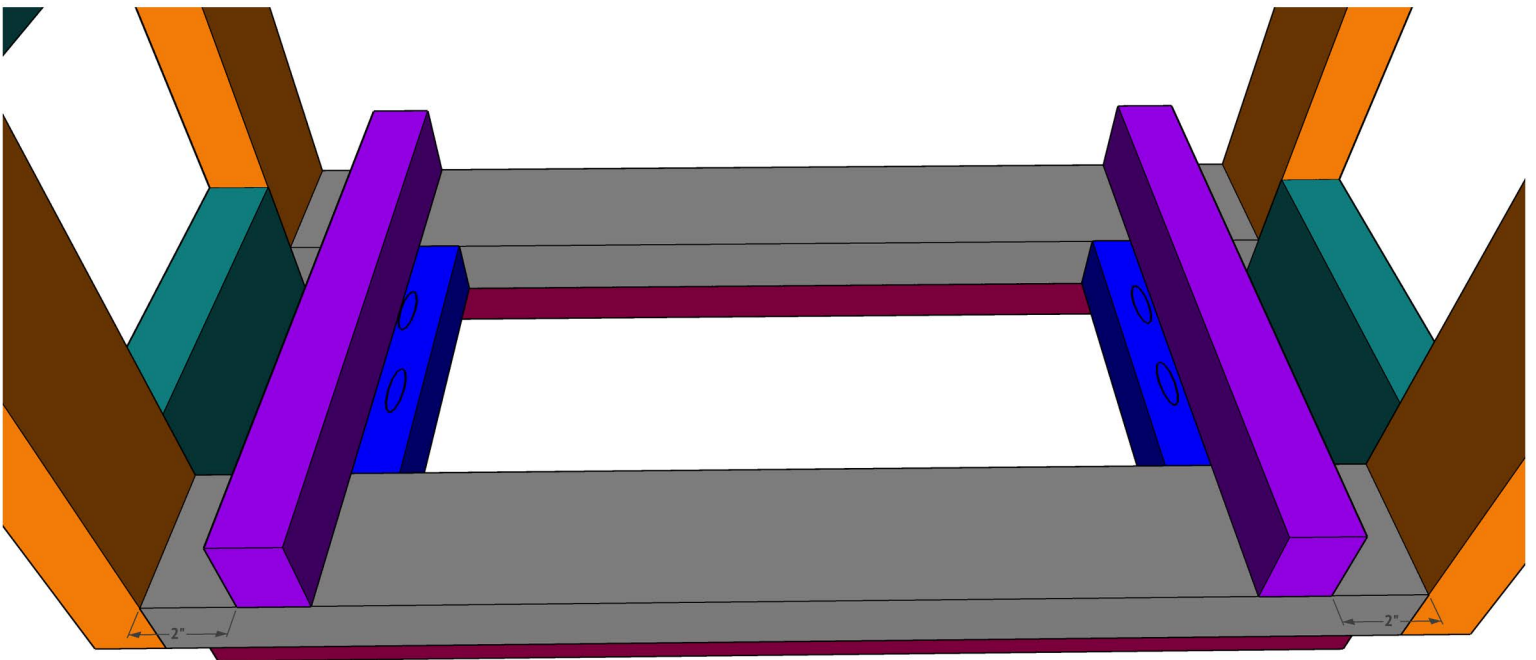




Attach the drawer slides to the cleats.

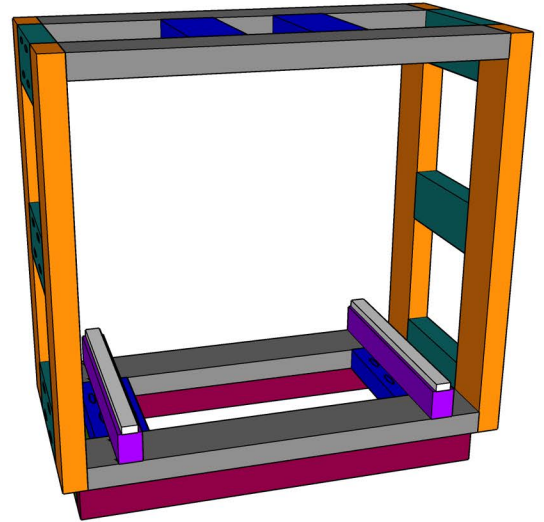

Cut the shelf to size and attach  $\frac{3}{4}$ " pocket holes on both edges. Attach it to the side cross supports with  $1 \frac{1}{4}$ " pocket hole screws and wood glue.


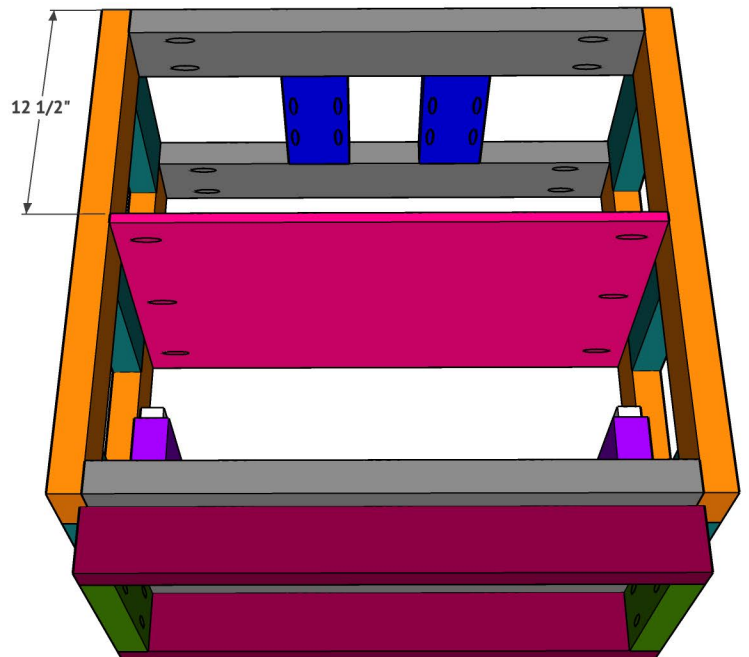





9

Cut the drawer sides, front and back pieces to size. Attach them together with  $\frac{3}{4}$ " staples or brad nails and wood glue.

Cut the drawer bottom to size and attach it to the drawer the same way. Attach the drawer to the drawer slides.


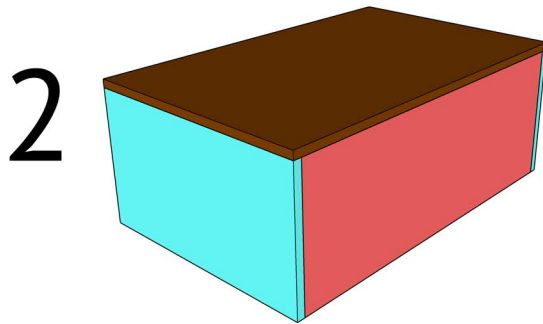
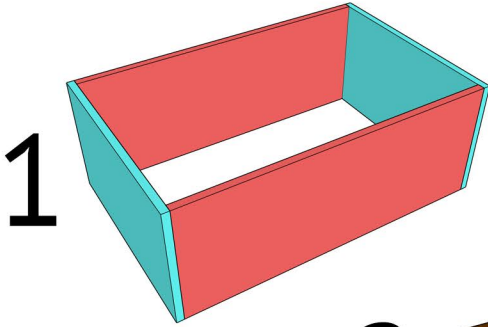


3

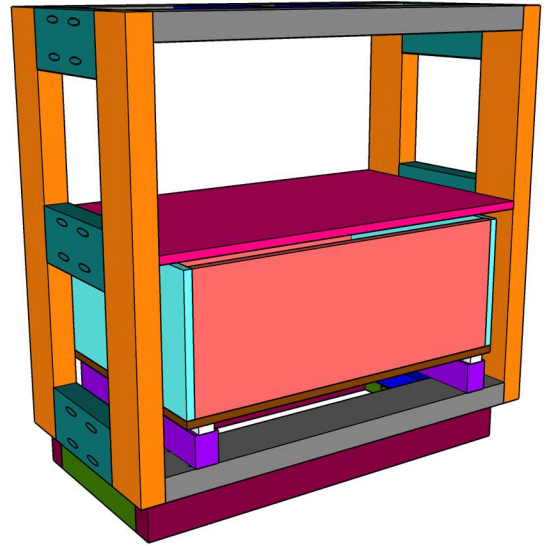

10


Cut the side trim pieces to size and attach them to the nightstand frame with 1" pin nails and wood glue. Start with the two outside pieces, then measure and cut for the middle piece. The bottom of the boards will be flush with the bottom of the nightstand frame, with the  $45^\circ$  cut on the top. Do this for both sides.

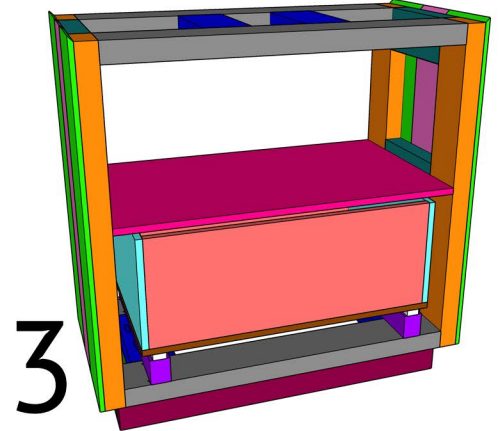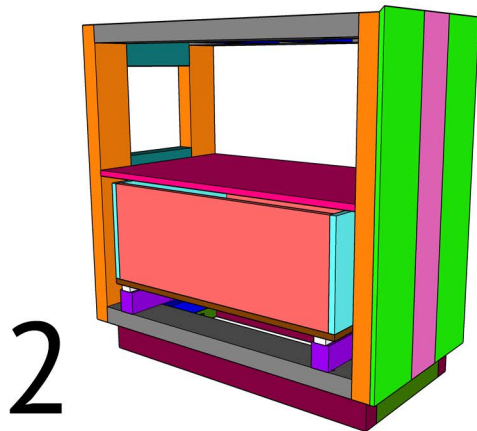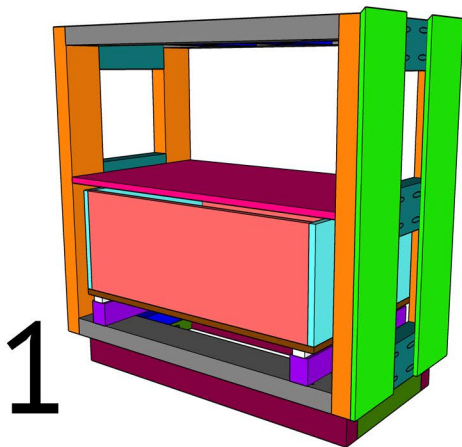


11

Cut the top boards to size and attach them to the top of the nightstand the same way.

1

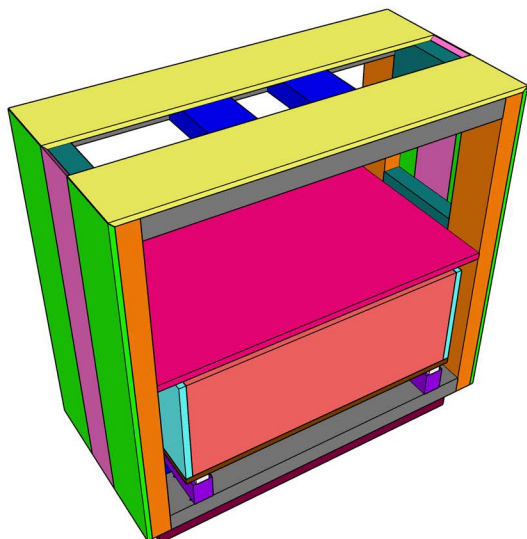


2

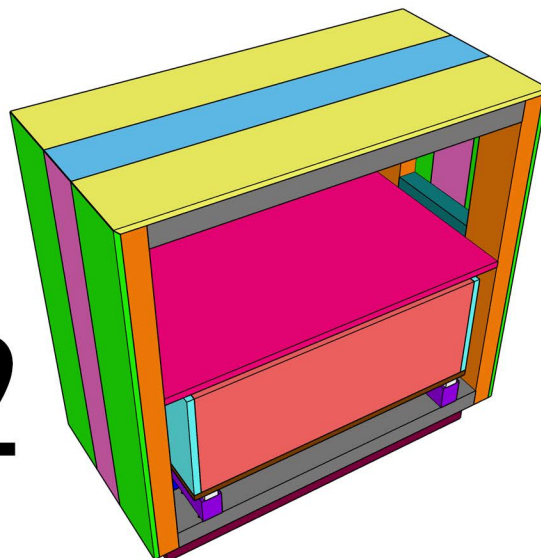


12

Cut the side, bottom trim pieces to size. Attach them to the sides of the pedestal with 1" pin nails and wood glue. Cut the front, pedestal trim piece to size and attach it the same way.

1


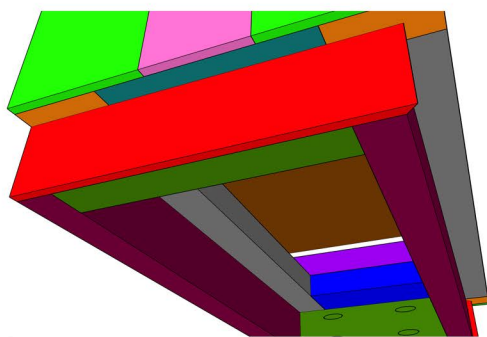


2

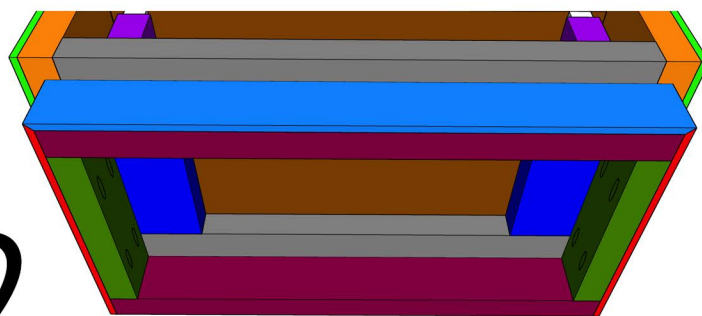


13

Measure and cut for the front trim pieces.  
Attach them one piece at a time and  
attach with 1" pin nails and wood glue.

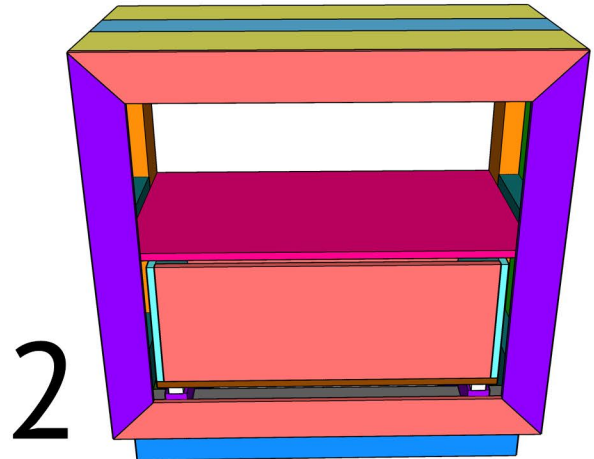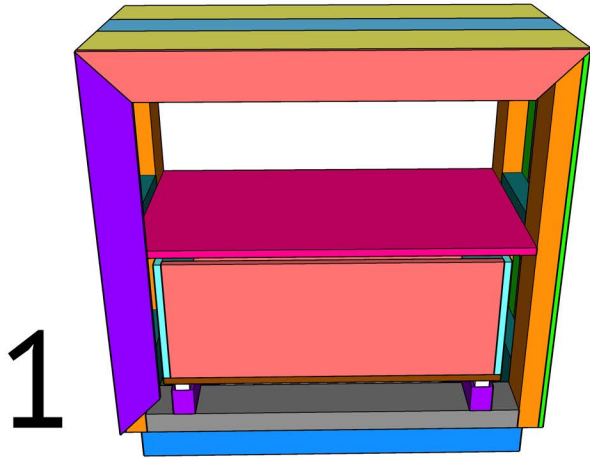

14

Cut the drawer faces  
to size and attach them  
to the front of the drawer  
with 5/8" pin nails and  
wood glue. Leave a 1/8"  
gap on the sides to allow  
the drawer to slide smooth.

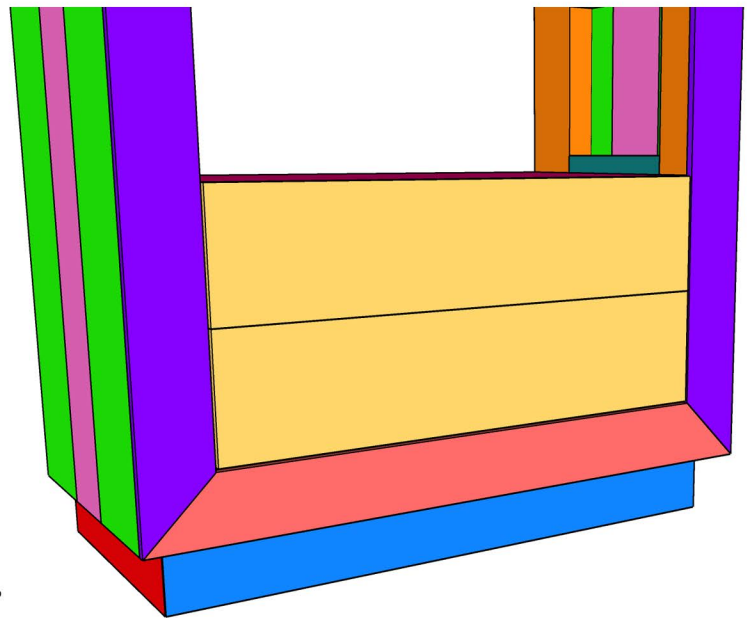

Add a finish to the shelf and the inside of the top shelf and add a drawer pull.

Get creative and make it your own! Be sure to share it on social media and use #shanty2chic so we can share it too!

Happy Building!

