



©2017 WWW.SHANTY-2-CHIC.COM



# DIY Craft Cabinet



## SUPPLY LIST

Item	Quantity	Description
1x4x8	3	Pine or Common Boards
3/4"x48"x96" Hardwood Plywood	1	Birch
1/2"x48"x48" Hardwood Plywood	1	Birch
1/4"x48"x48" Hardwood Plywood	1	Birch
3/4"x24"x48" Laminated Pine	1	Pine (Project Panel)
1 1/4" Pocket Hole Screws		
1 1/4" Brad Nails		
5/8" Brad Nails		
3/4" Staples (or brad nails)		
1" Pin Nails		
Drawer Slides	3	Link in Post
Drawer Pulls	3	Link in Post
Cabinet Pull	1	Link in Post
Cabinet Hinges	2	Link in Post
2" Casters	4	Link in Post
Wood Glue		

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!




## CUT LIST

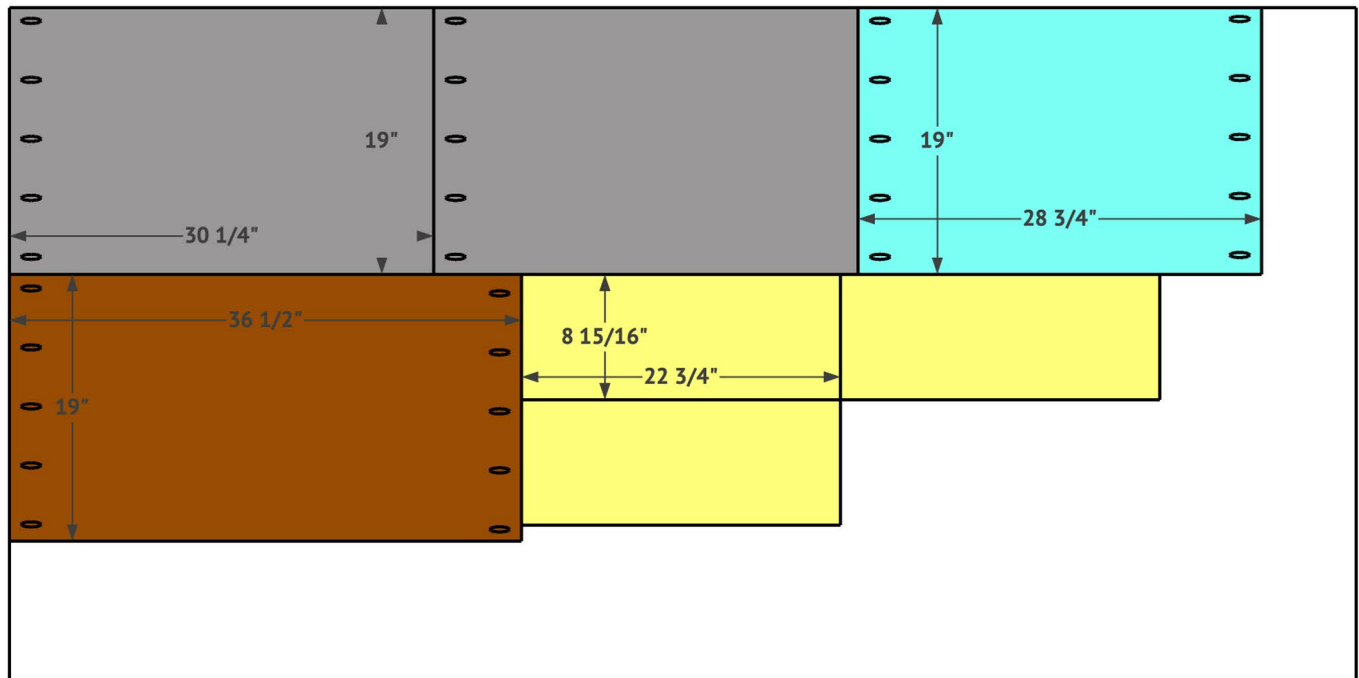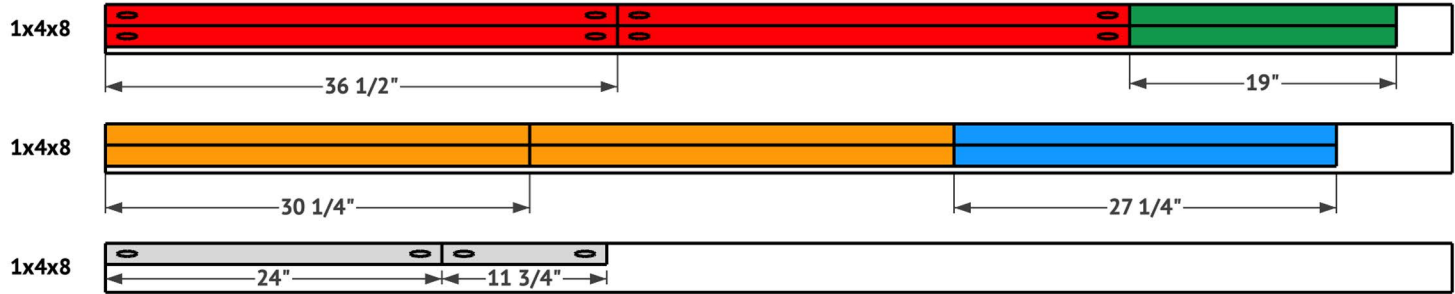

*Remember!*


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST

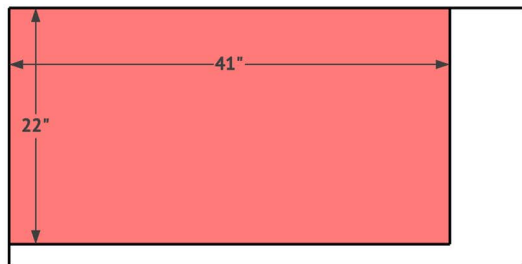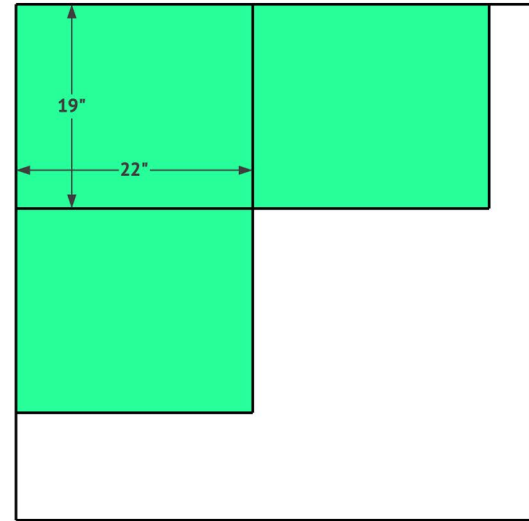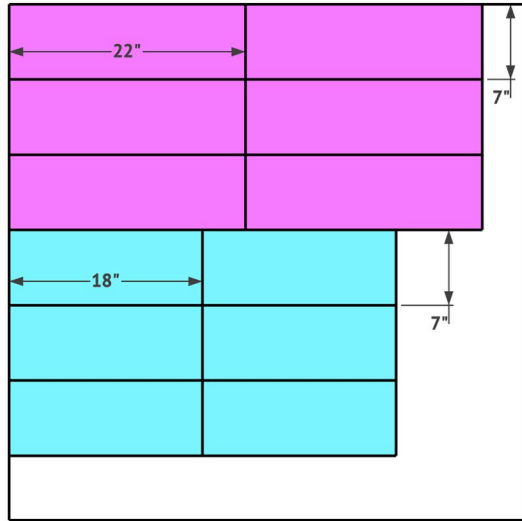


1

Cut the bottom and side panels to size. Drill  $\frac{3}{4}$ " pocket holes at both ends of the bottom board and the top ends of the side pieces. Attach the side panels to the bottom panel with  $1\frac{1}{4}$ " pocket hole screws and wood glue. Leave a  $\frac{3}{4}$ " space at the bottom.

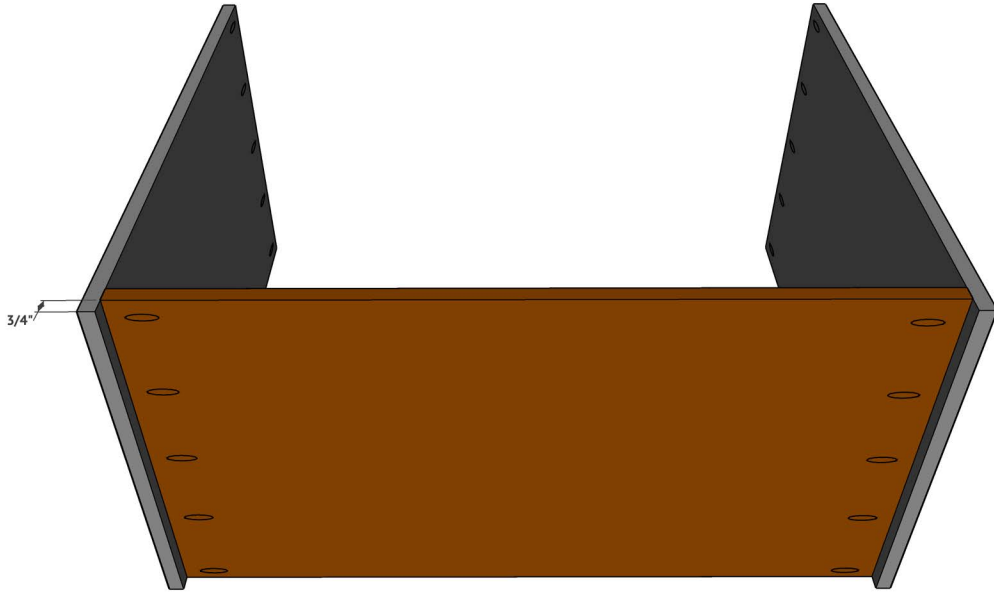


2

Cut the middle divider to size. Drill  $\frac{3}{4}$ " pocket holes at both ends and attach it to the bottom panel with  $1\frac{1}{4}$ " pocket hole screws and wood glue.

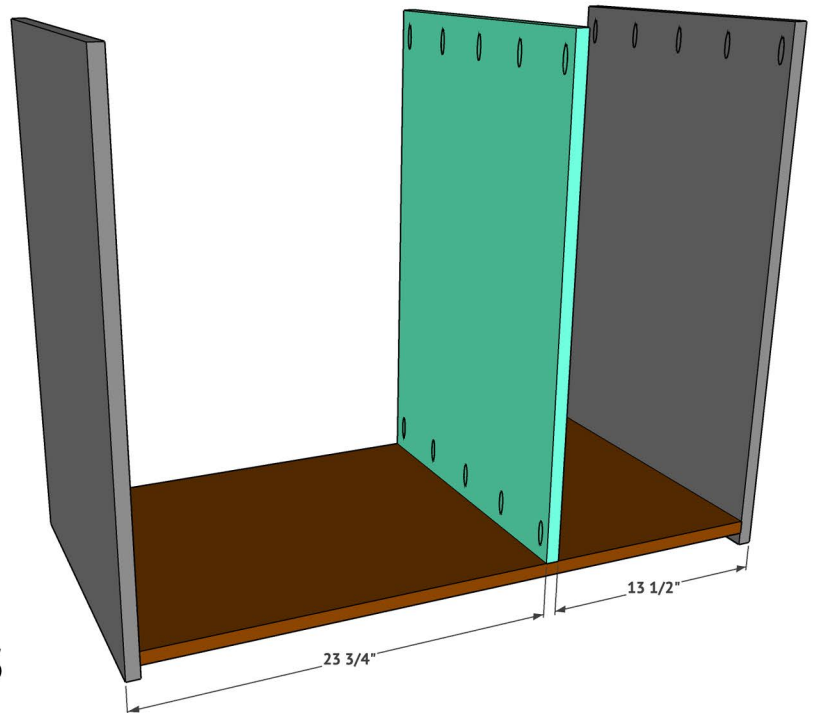

3


Cut the face frame pieces to size and drill  $3/4$ " pocket holes at both ends of the top, bottom and middle pieces. Attach them together with  $1\ 1/4$ " pocket hole screws and wood glue. Build 2 face frame assemblies.

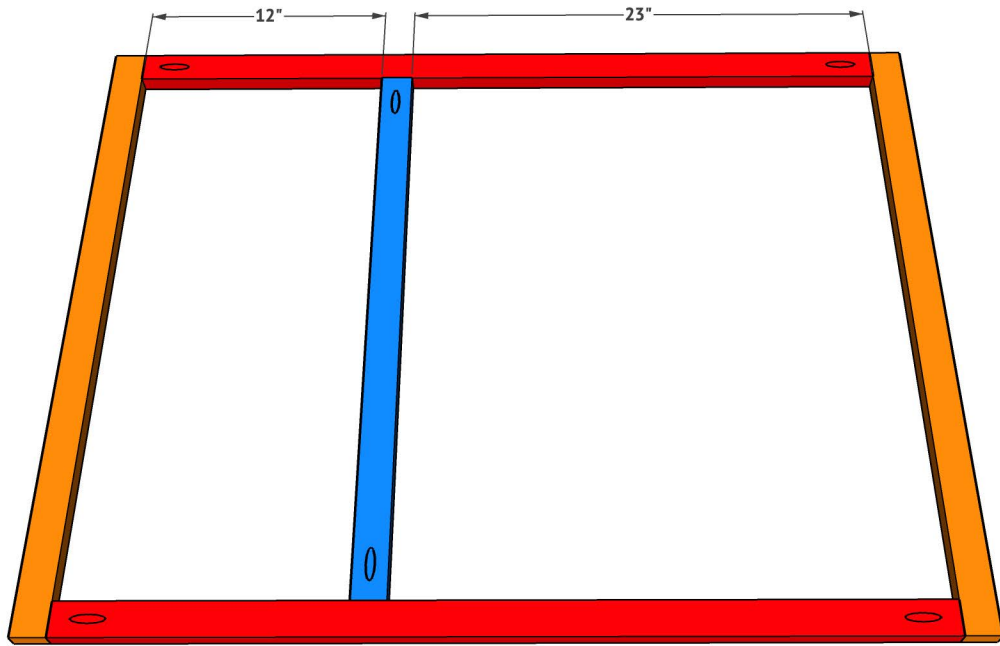

x2


4

Attach the face frames to the front and back of the cabinet with  $1\ 1/4$ " brad nails and wood glue. The side face frame pieces should be flush with the inside of the side panels.

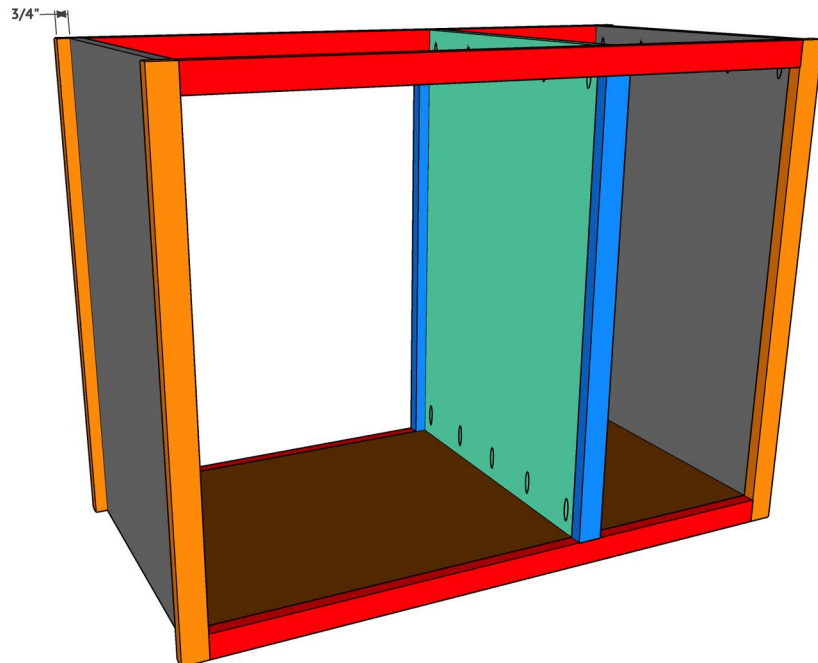


5

Measure and cut the side trim pieces to size. Attach them to the top and bottom of both side panels with 1 1/4" brad nails and wood glue.

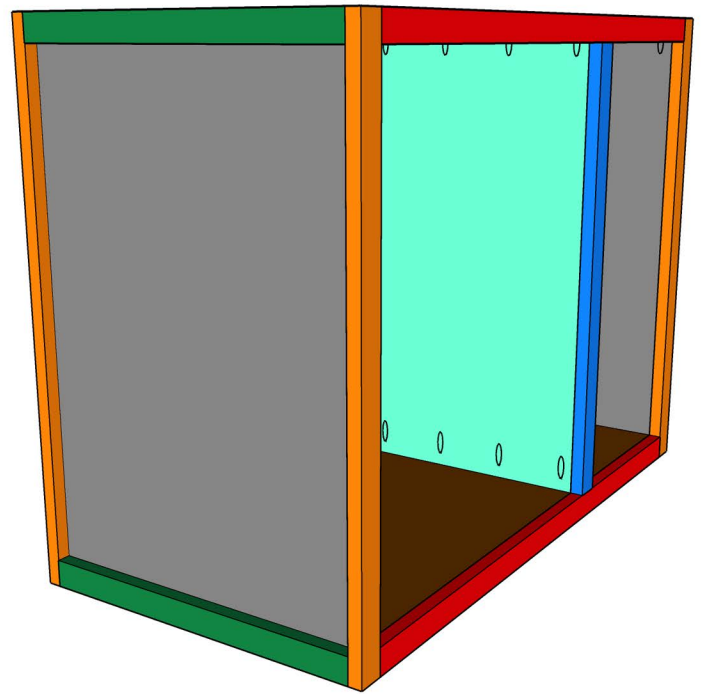

6


Attach the drawer slides according to the manufacturer's instructions. The front of the drawer slides should be flush with the front of the divider.

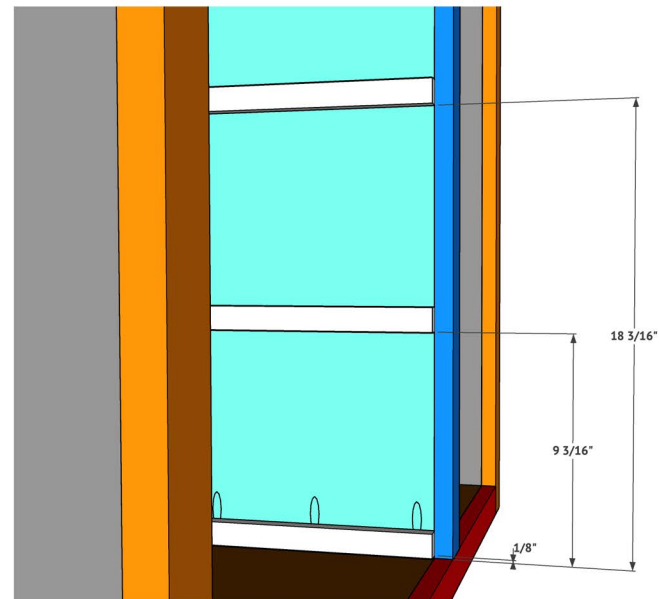






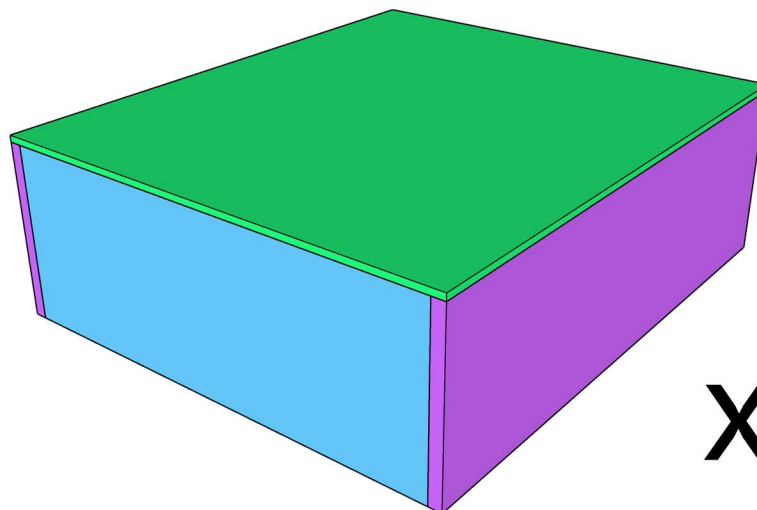
Cut the drawer pieces to size and attach them together with 5/8 brad nails and wood glue.

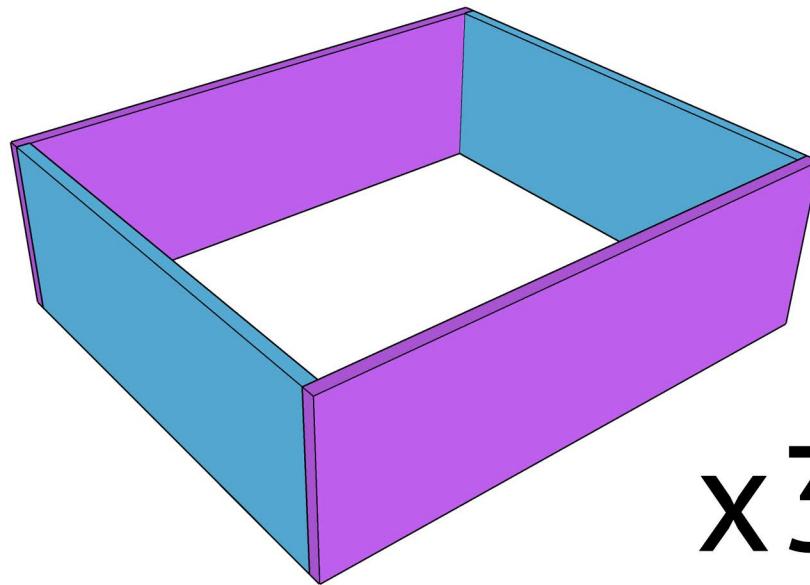

x3




Cut the drawer bottom to size and attach it to the bottom of the drawer frame with 3/4" staples and wood glue.  
Build 3 drawers.



x3


9

Install the drawers with the drawer slides.

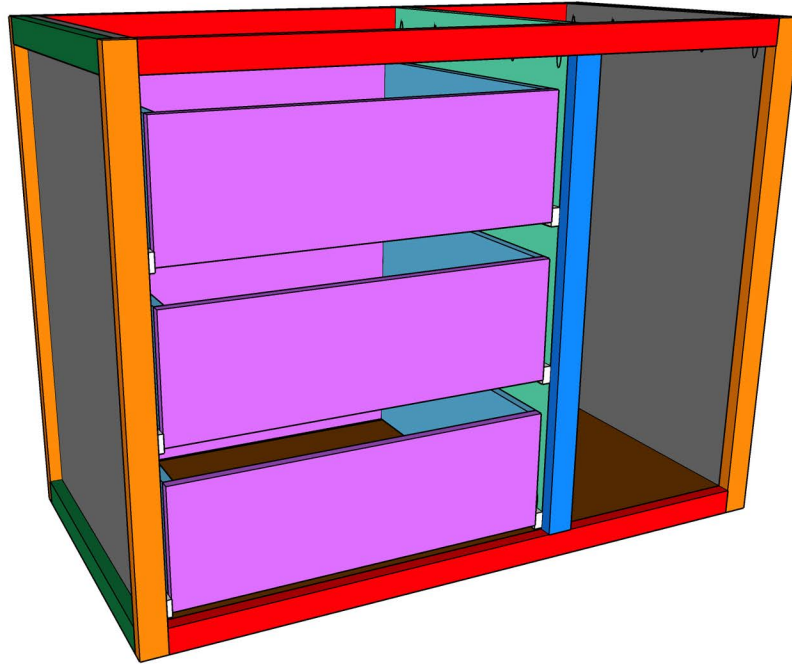

10



Measure and cut the drawer faces to size. Attach them to the front of the drawers with 1" pin nails and wood glue. There should be a 1/8" gap around all sides of the drawer faces.

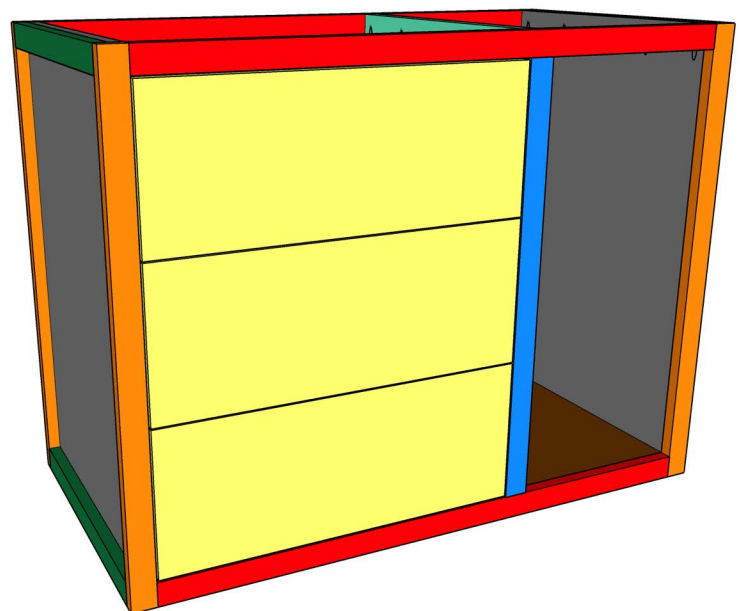




11

Cut the door frame pieces to size and drill  $\frac{3}{4}$ " pocket holes at both ends of the side pieces. Attach them together with  $1\frac{1}{4}$ " pocket hole screws and wood glue. Cut the door panel to size and attach it to the back of the frame with  $\frac{3}{4}$ " staples and wood glue.

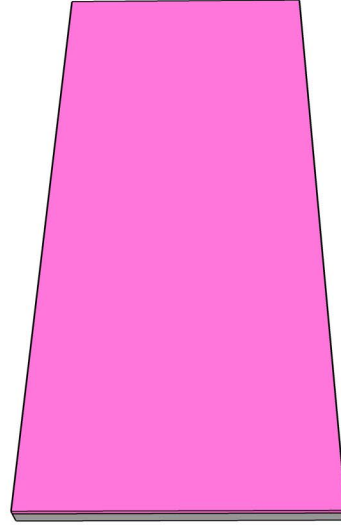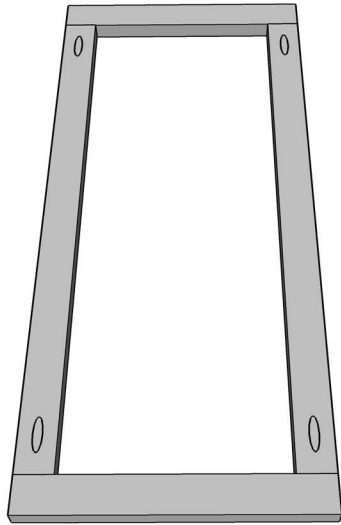



12

Attach the door to the cabinet with cabinet door hinges. There should be a  $\frac{1}{8}$ " gap around all sides.

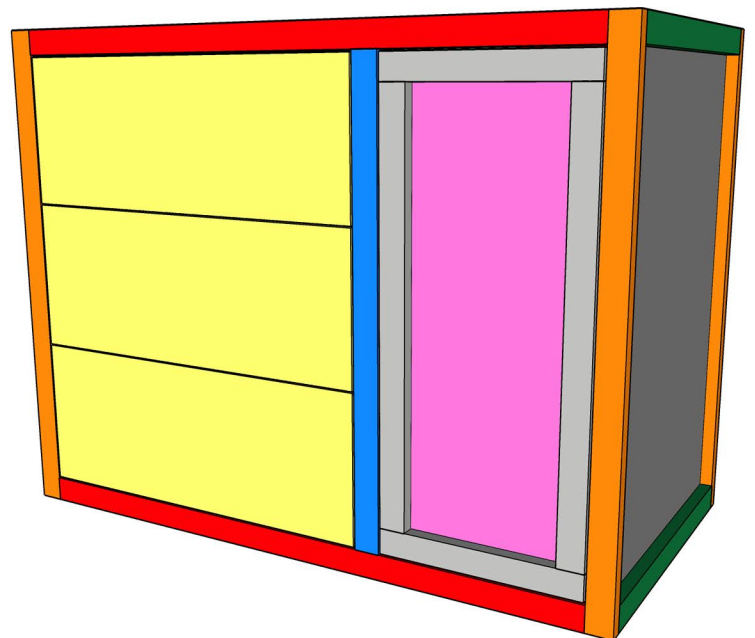

13

Cut the project panel to size and attach it to the top of the cabinet with 1 1/4" pocket hole screws and wood glue.

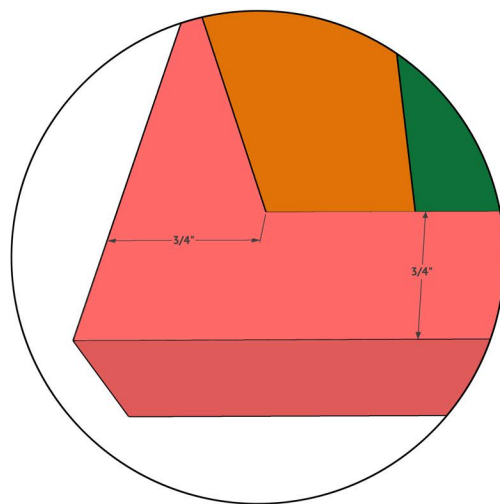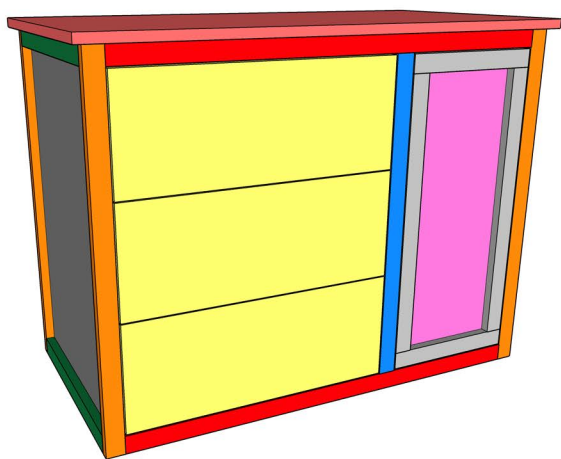

Add a finish and hardware and that's it!  
Be creative and make it your own!  
Make sure to share your builds with us  
on social media and use #shanty2chic  
so we can share them too!

Happy Building!

