



©2017 WWW.SHANTY-2-CHIC.COM



# DIY LARGE PLANTER BOX


## SUPPLY LIST

Item	Quantity	Description
1x6x8	9	Cedar
1x4x8	2	Cedar
2x4x8	6	Cedar
1 1/4" Pocket Hole Screws		
2 1/2" Pocket Hole Screws		
1 1/2" Outdoor Wood Screws		
1 1/4" Brad Nails		
Wood Glue		

*Remember!*


Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

## CUT LIST

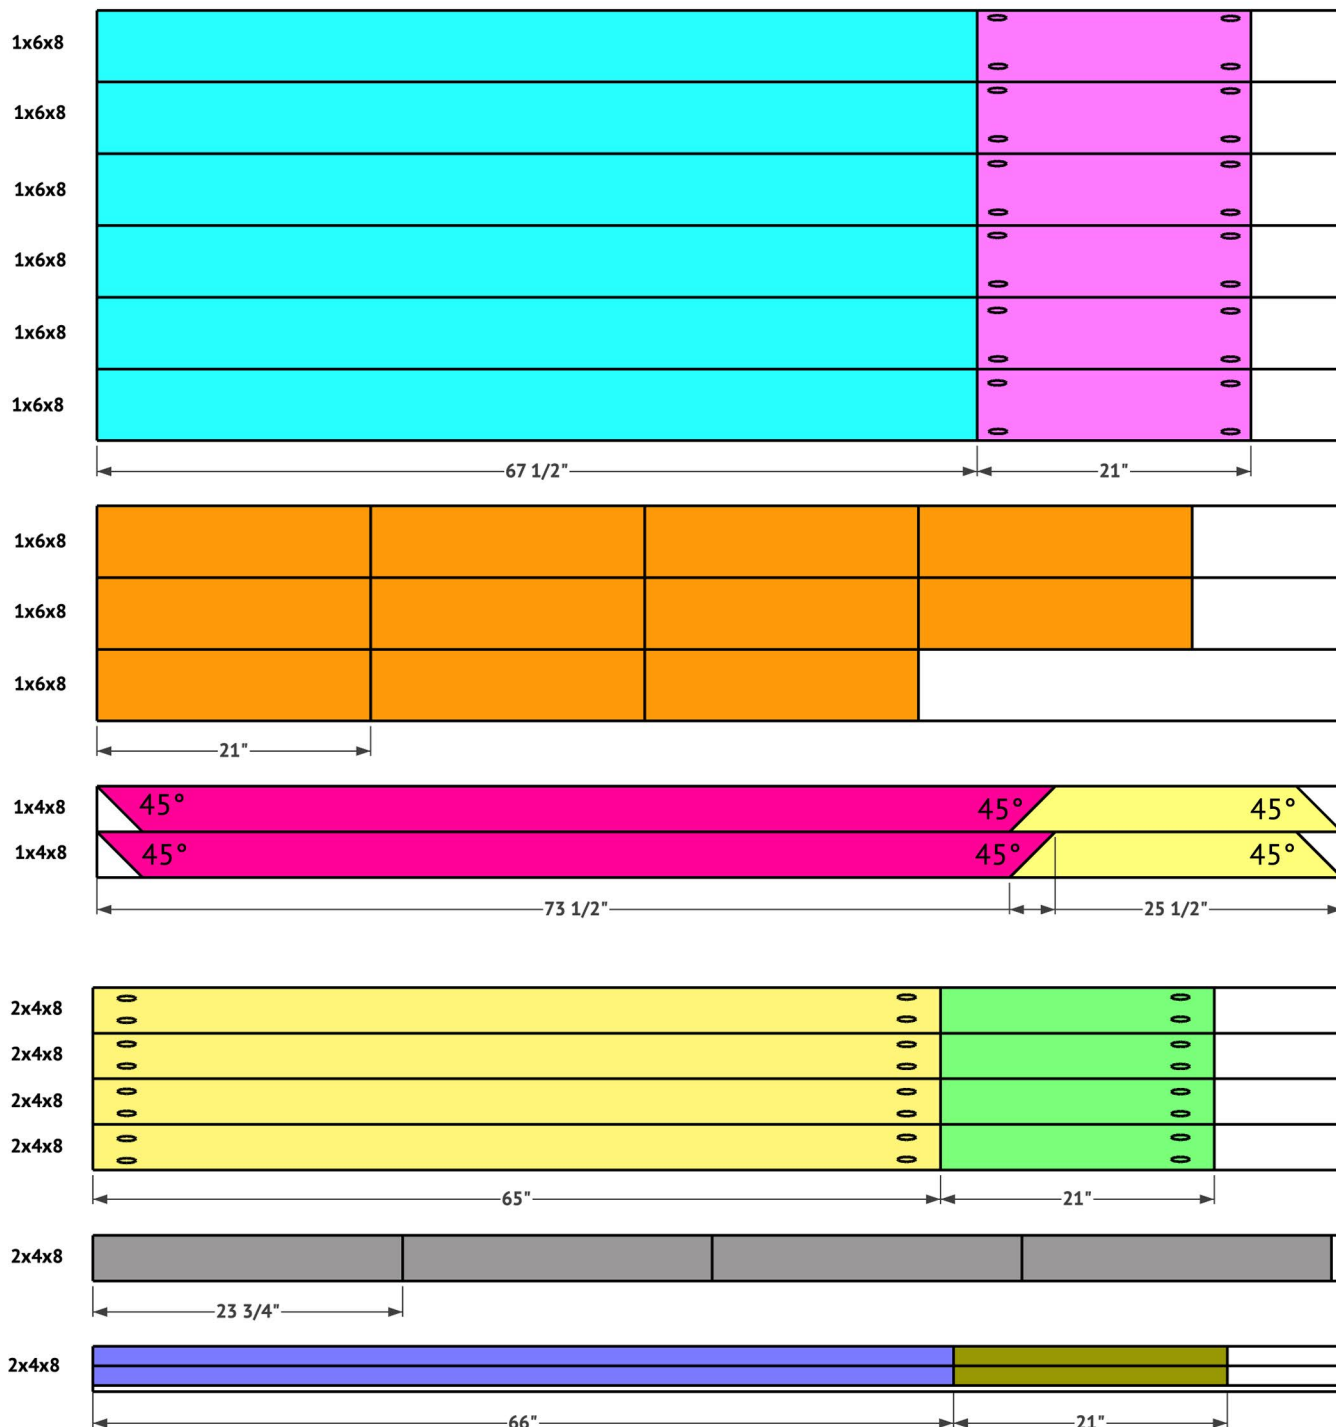

1


Cut the frame pieces to size. Drill 1 1/2" pocket holes at both ends of each long horizontal frame pieces. Attach them to two legs with 2 1/2" pocket hole screws and wood glue. There should be a 1 1/4" space at the bottom of the legs. Build two long frame assemblies.

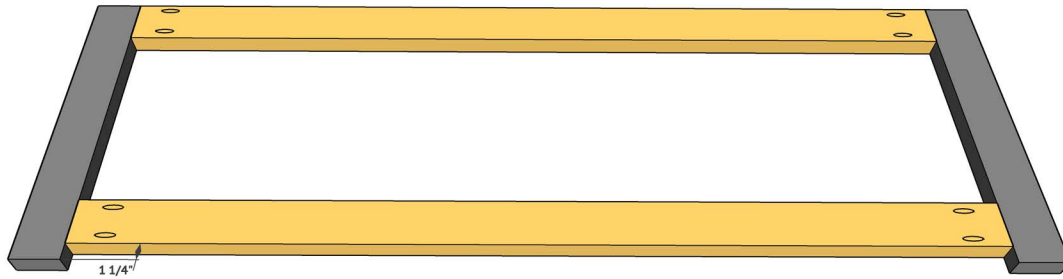

x2

2


Cut the short frame pieces to size and drill 1 1/2" pocket holes at both ends of each piece. Attach them to the long frame assemblies with 2 1/2" pocket hole screws and wood glue.

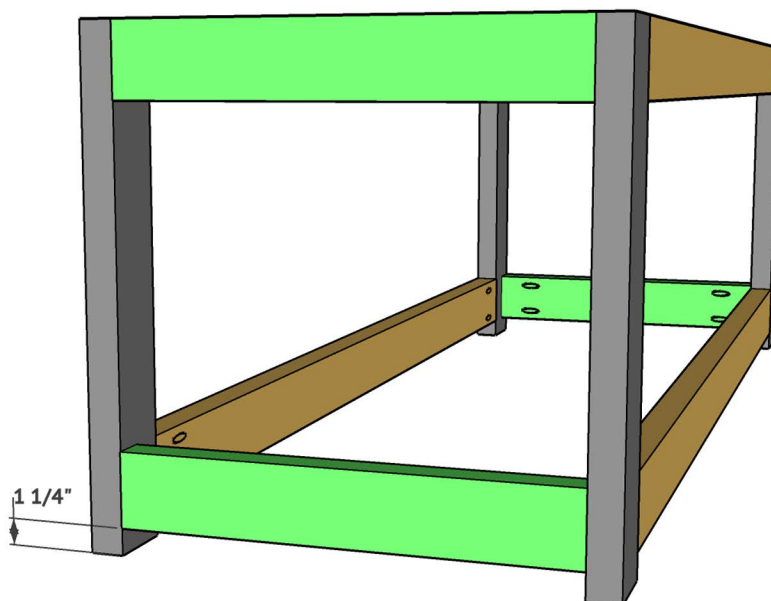

3


Cut the short cleats to size and attach them flush with the bottom of the short frame pieces with 2 1/2" outdoor wood screws and wood glue.

*Note: If you don't need a deep planter box you can attach the cleats higher. Check out the post on our site for more detailed instructions.*

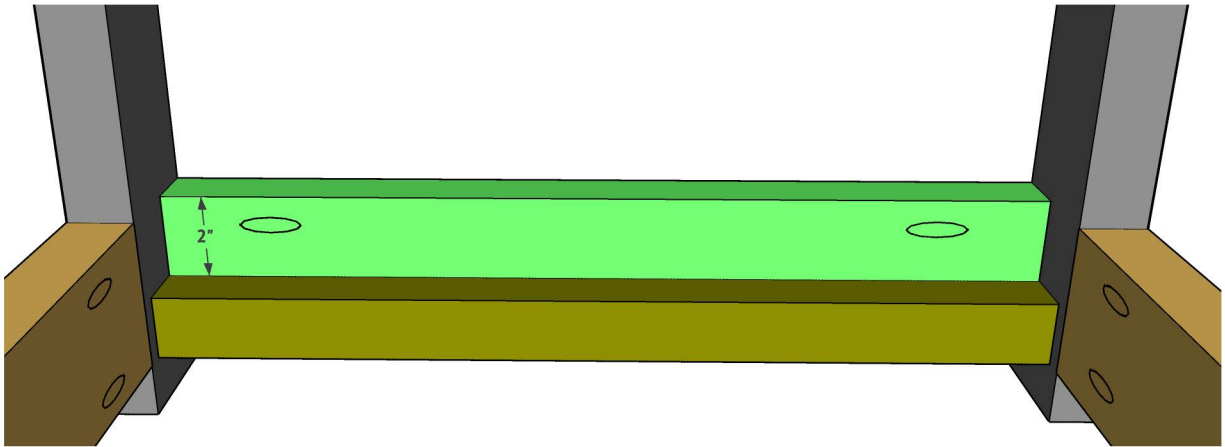

4


Cut the long cleats to size and attach them flush with the bottom of the long frame pieces with 2 1/2" wood screws and wood glue.

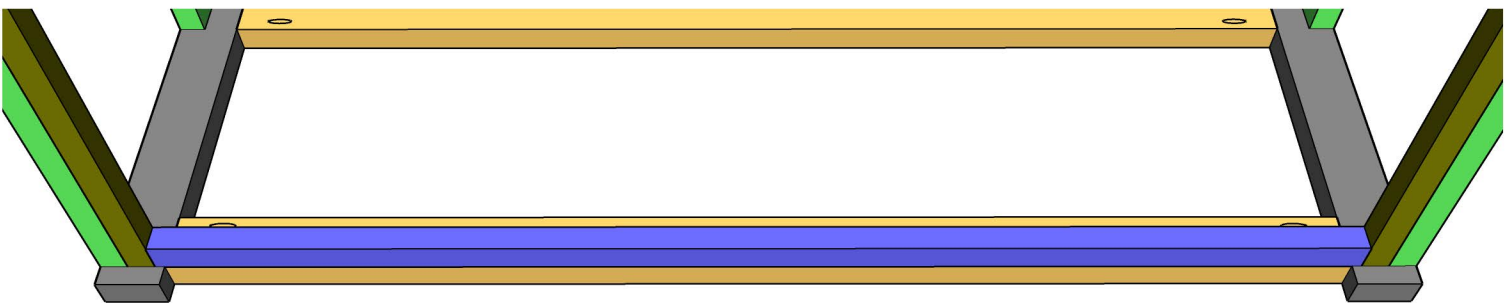




5

Cut the bottom slat pieces to size, spread them out evenly over the cleats and attach them to the cleats with 1 1/2" outdoor wood screws and wood glue.

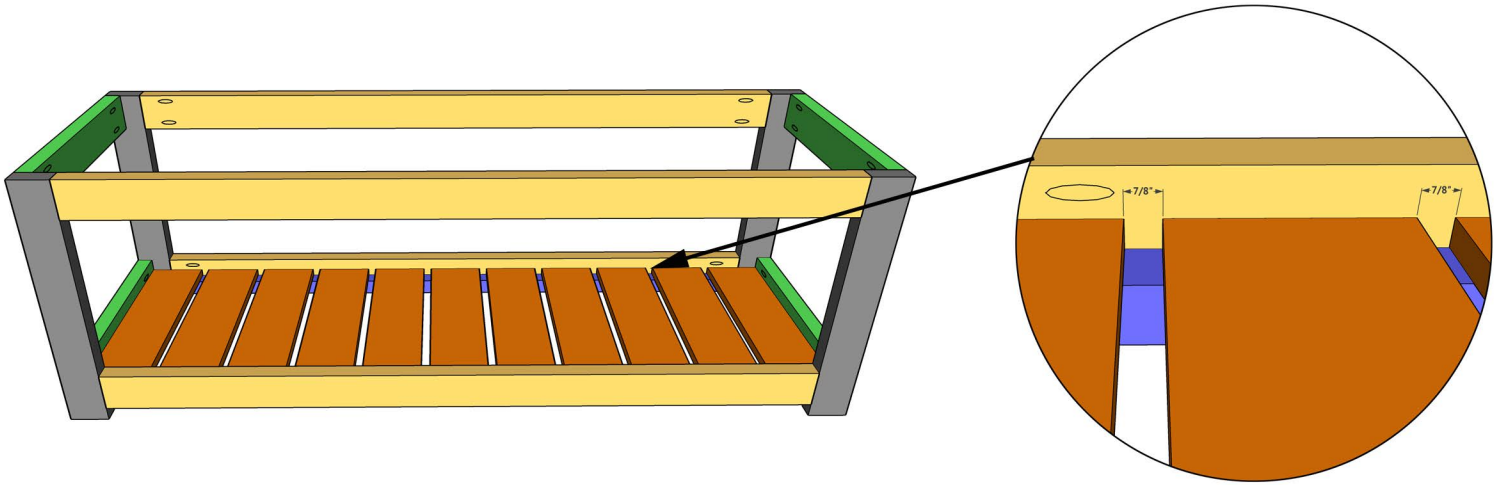


6

Cut the side slat pieces to size and drill 3/4" pocket hole screws at both ends. Attach them to the inside of the legs with 1 1/4" pocket hole screws and wood glue.


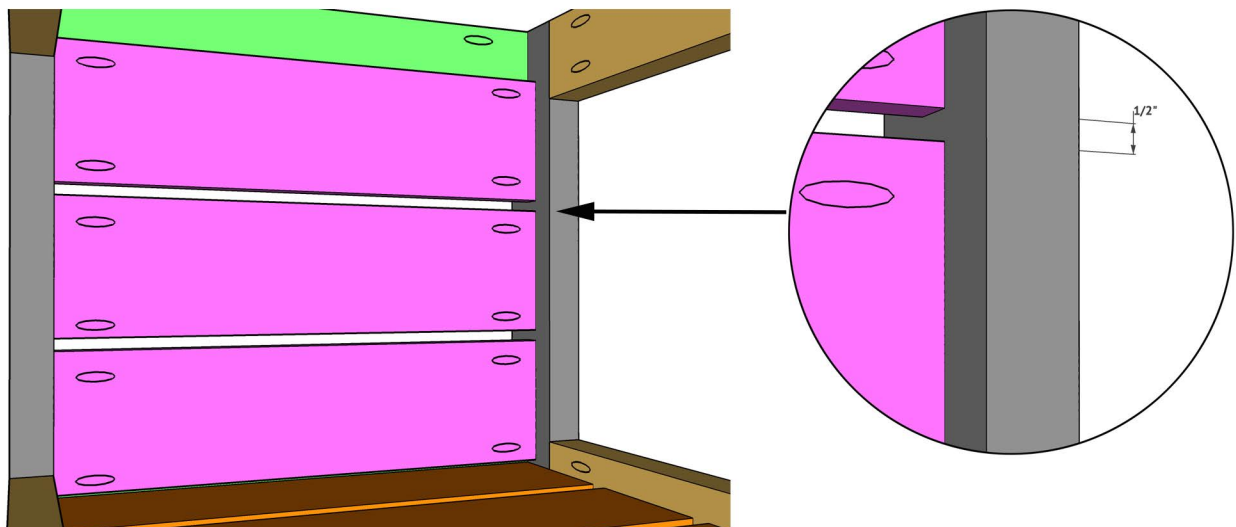




Cut the long slats to size and attach them to the inside of the planter box with 1 1/2" outdoor wood screws and wood glue, from the back of the slats into the inside of the legs and frame. Use the same spacing as the side slats.

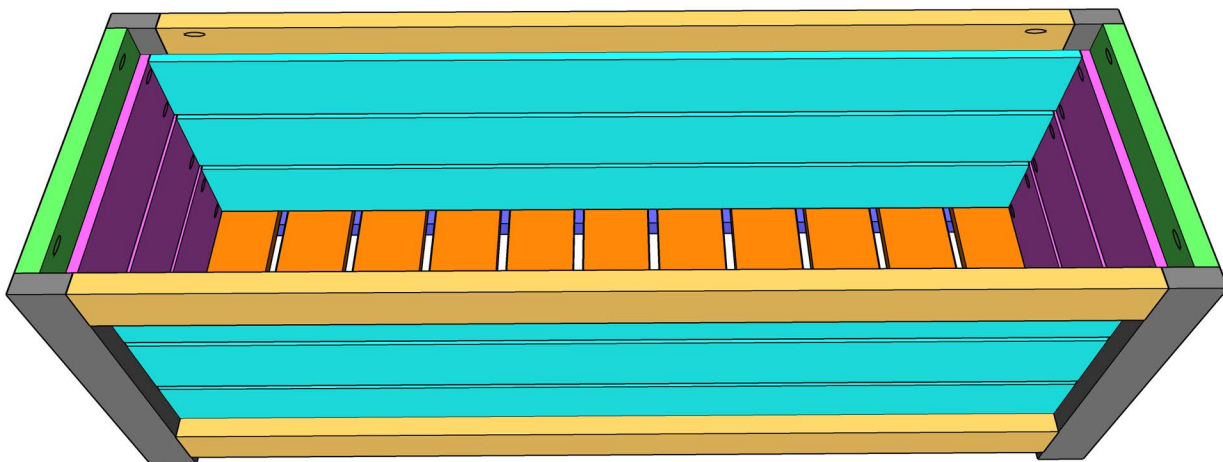

Cut the short trim pieces to size and attach them to the top ends of the planter box with 1 1/2" outdoor wood screws and wood glue. Measure and cut for the long trim pieces and attach them the same way. Pop a few 1 1/4" brad nails into the mitered corners.

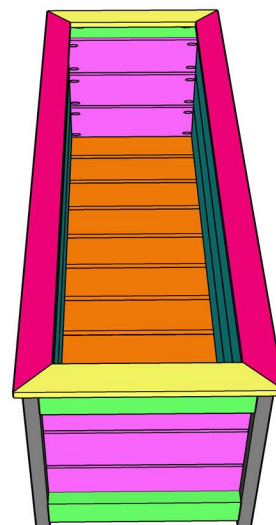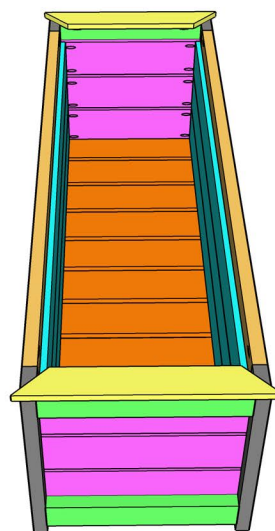

Fill any exposed pocket holes and screw holes, sand it down and add an outdoor finish.

You can check out our video and post to see how we prepped the planter box for planting!

Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!

