



©2017 WWW.SHANTY-2-CHIC.COM



DIY TURNED LEG COFFEE TABLE

SUPPLY LIST


Item	Quantity	Description
2x6x8	5	Framing Lumber
Turned Legs	4	Link in Post on our Site
2 1/2 Pocket Hole Screws		
Stain		
Wood Glue		

Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!


CUT LIST

Note: I used 2x6 for this entire build. I ripped the planks and breadboards to 5" wide and the aprons to 3" wide. This is not a necessary step but if you choose not to rip your boards, adjust the plans accordingly.

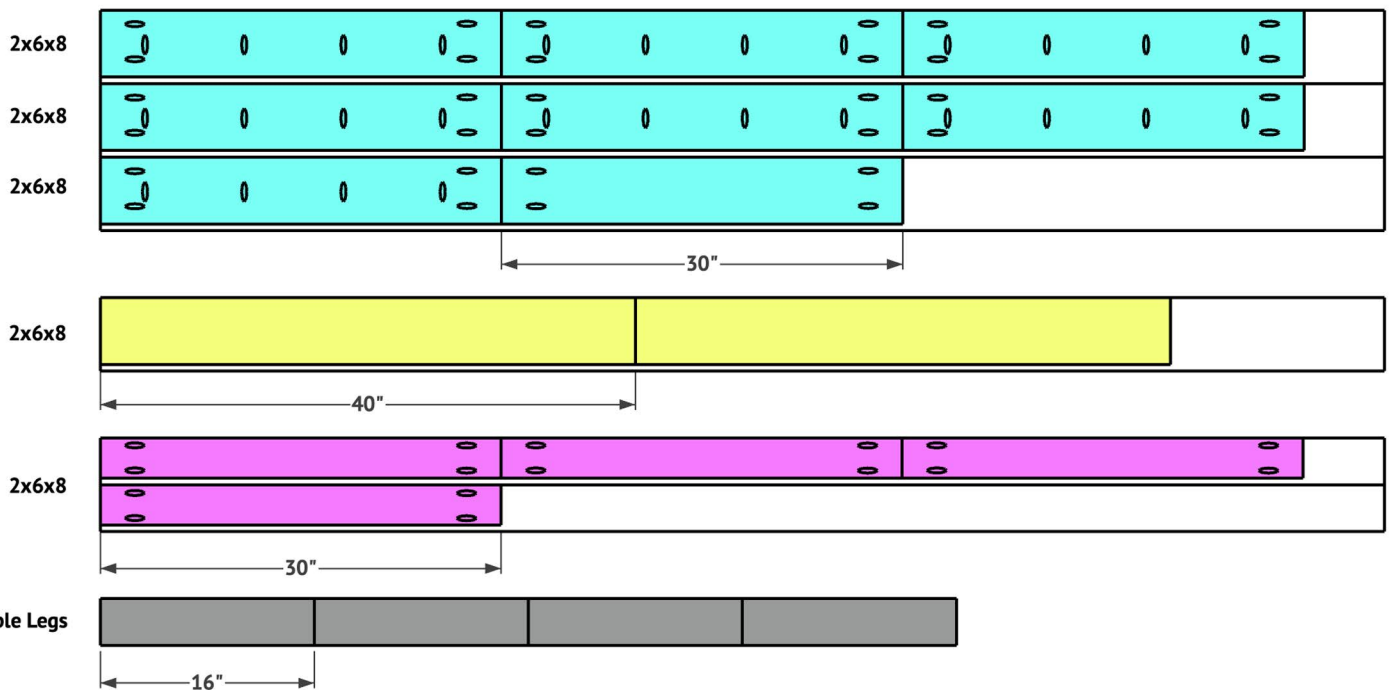


1

Cut the plank boards to size and drill 1 1/2" pocket holes on both ends of each board and one edge on all except one board. Attach the planks together with 2 1/2" pocket hole screws.

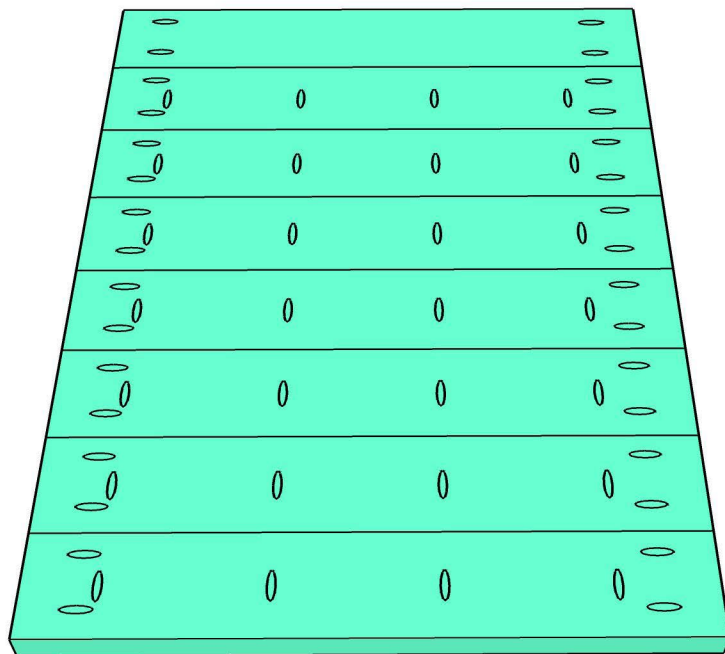



2

Cut the breadboard pieces to size and attach them to the planks with 2 1/2" pocket hole screws, through the pocket holes at the end of the planks.

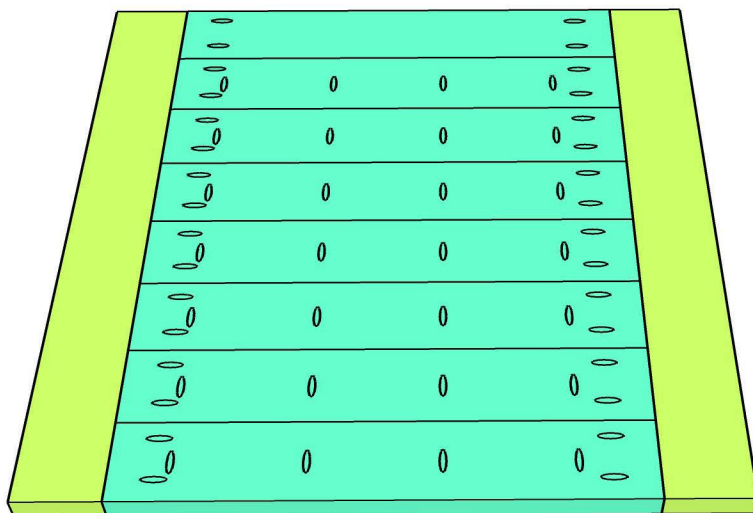



3

Cut the apron pieces to size and drill 1 1/2" pocket holes at both ends of each apron piece and 3/4" pocket holes on one edge of each apron. Center the aprons on each leg and attach them to the legs with 2 1/2" pocket hole screws and wood glue.

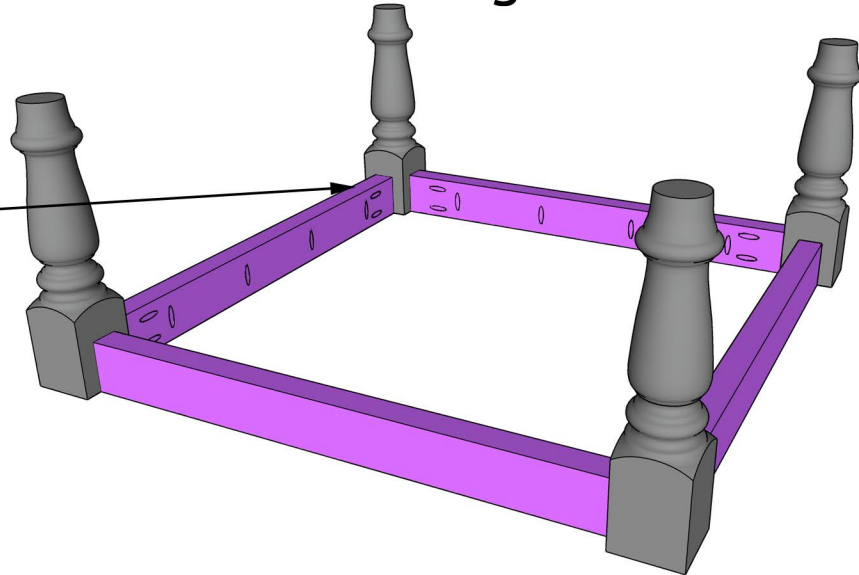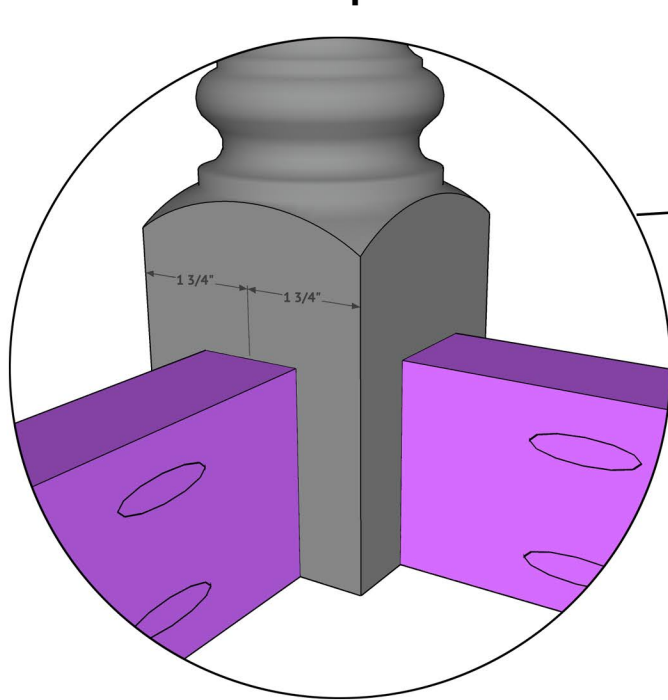

4

Flip over the planked top and center the table base over it. Attach the table base to the table top with 1 1/2" pocket hold screws and wood glue, through the pocket holes in the aprons and into the bottom of the table top.

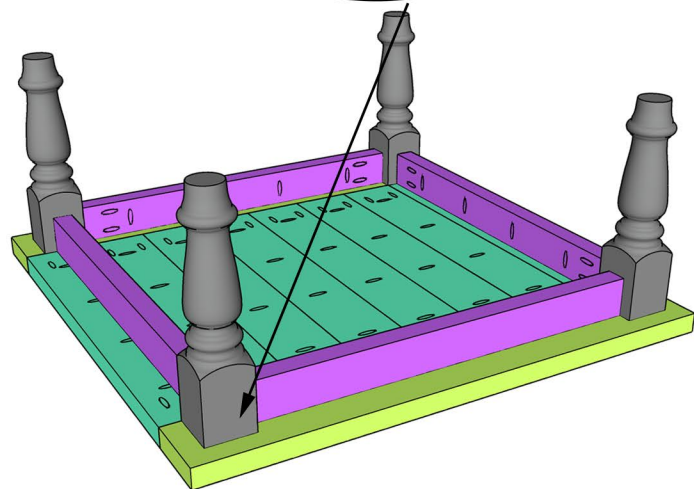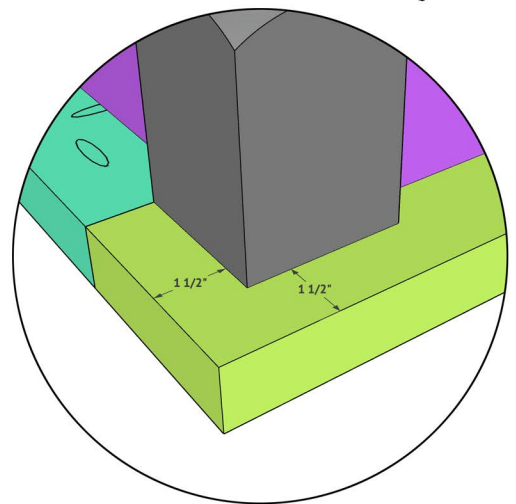

All finished!

Sand down the entire table add a finish and a protective finish! You can check out the tutorial on our website to see how we finished ours! Have fun and make it your own!

Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!

