

# Shanty Chic

DIY FURNITURE – WOODWORKING – HOMEMAKING




## SUPPLY LIST

Item	Quantity	Description
2x12x8	2	Pine or Framing Lumber
2x8x8	5	Pine or Framing Lumber
2x4x8	1	Pine or Framing Lumber
2" Brad or Finish Nails		
2 1/2" Pocket Hole Screws		
2 1/2" 16 Gauge Finish Nails		
Wood Glue		
Finish		
Protective Finish		

*Remember!*

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!


## CUT LIST

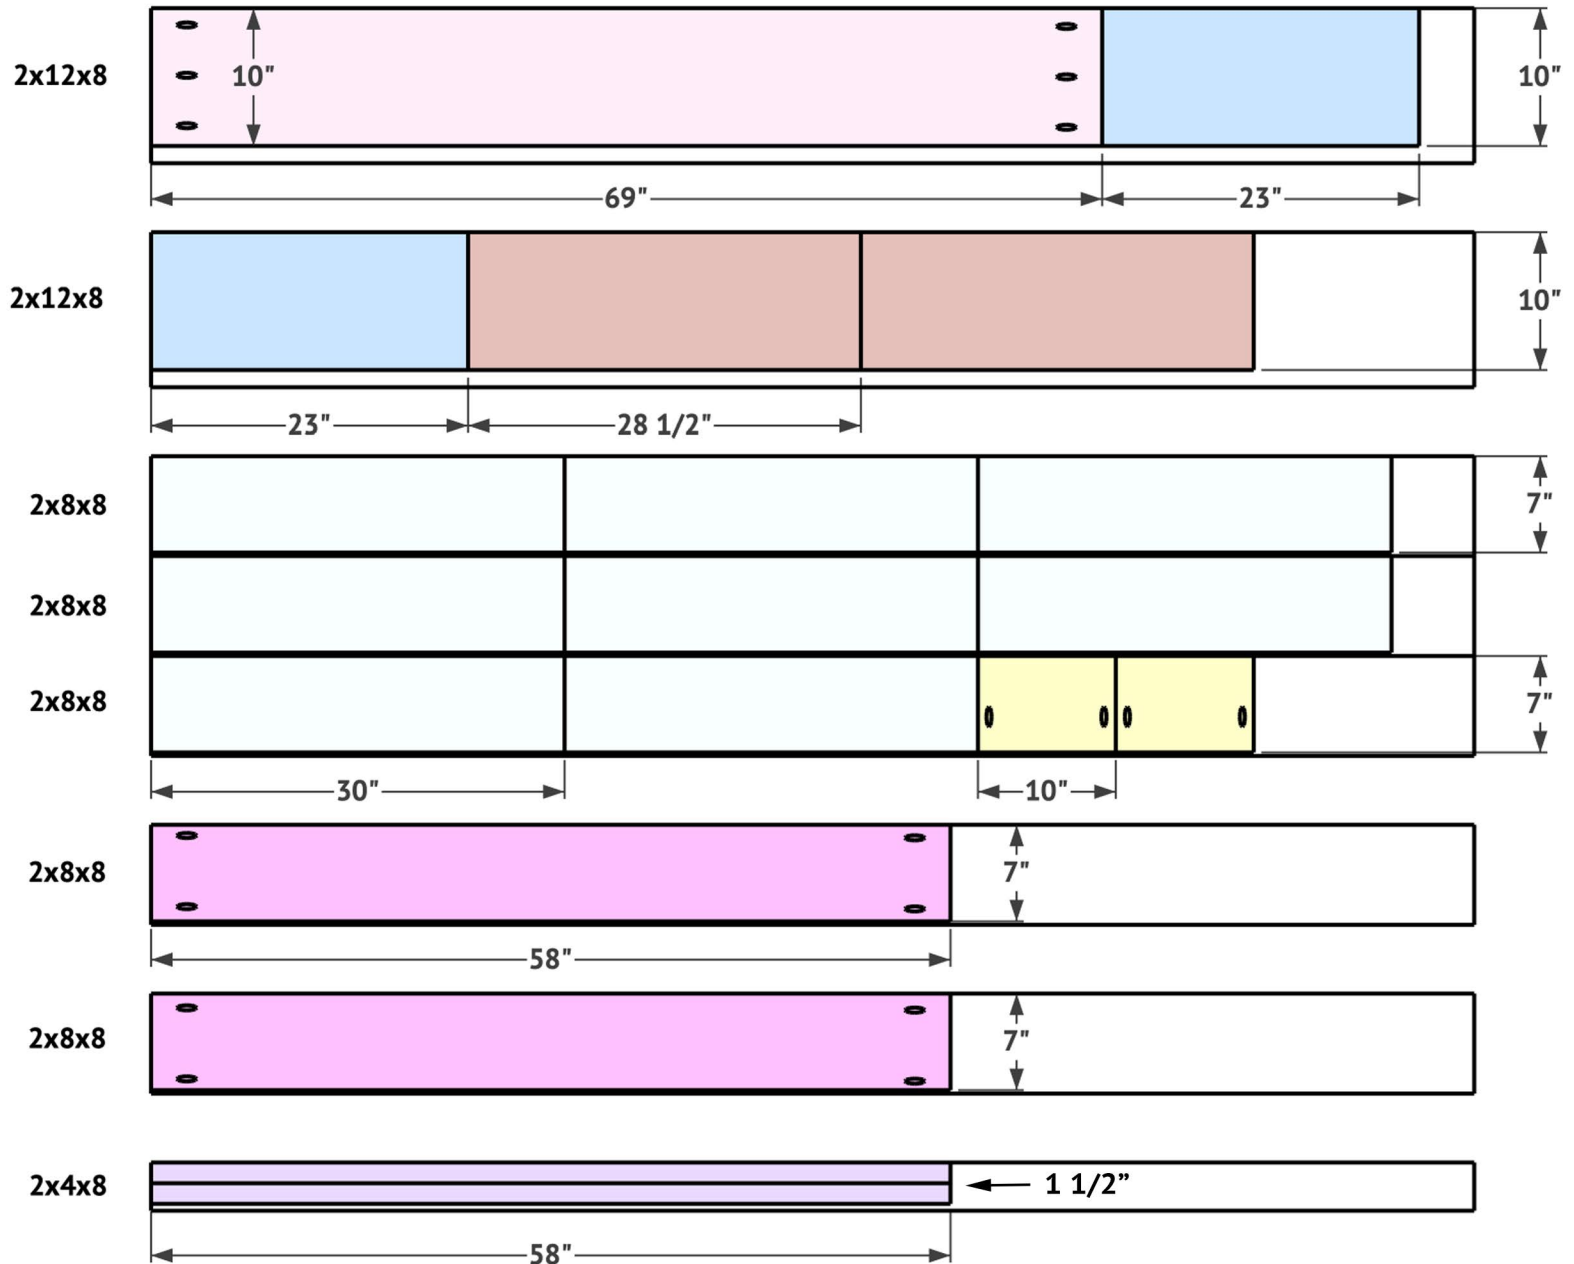

1

Cut the legs to size and stack two legs together with wood glue. Clamp the legs together until completely dry. Build 4 leg assemblies.


Note: You can also use 2" brad nails to speed this process up.

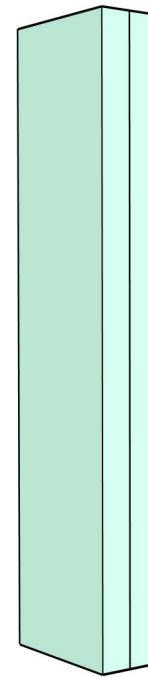

x4

2


Cut the spacers to size and attach them to one side of each leg assembly using 2" brad or finish nails and wood glue.

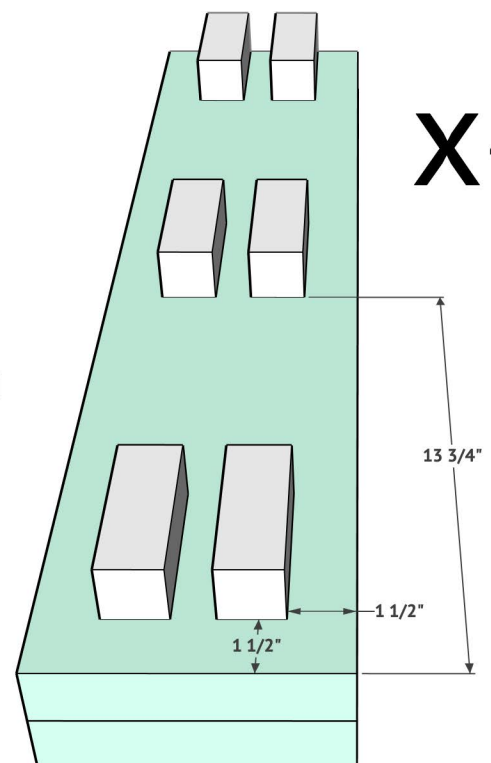

x4


3


Cut the top square trim piece to size and drill 1 1/2" pocket holes on one end of the board. Attach it to the outside panels with 2 1/2" pocket hole screws and wood glue.

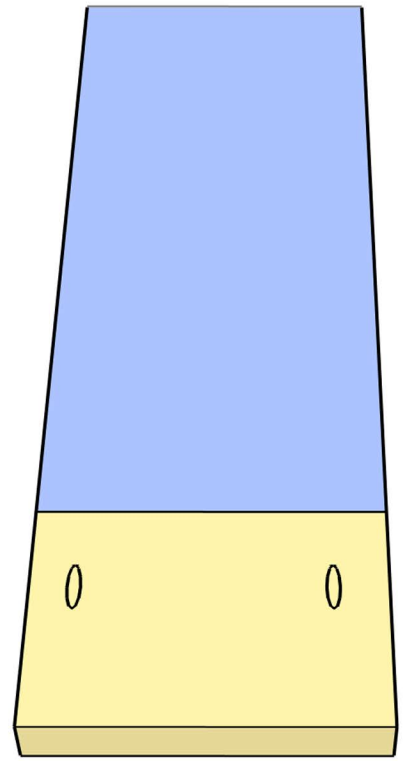

4

Cut the top middle plank to size and drill 1 1/2" pocket holes at both ends. Attach one outside panel to each end of the top plank with 2 1/2" pocket hole screws and wood glue. The pocket holes on the outside panels should face inside.

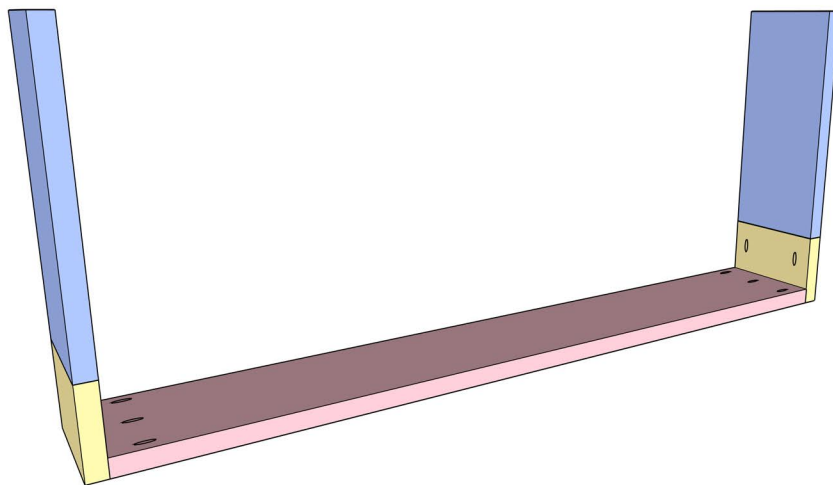

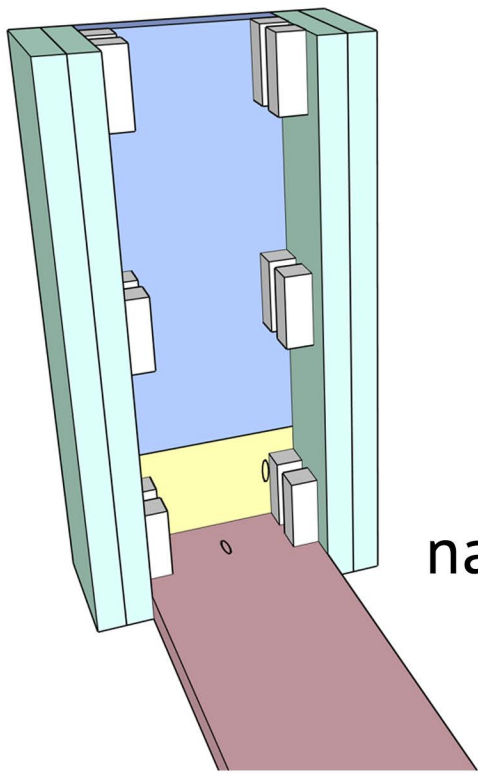


5

Attach one leg assembly to each side of the outside panels. Use wood glue and 2 1/2" finish nails from the outside of the outside panels and into each spacer.


6

Measure and cut for the front and back, narrow planks. Attach a narrow plank to each side of the middle top plank with 2" brad or finish nails and wood glue.

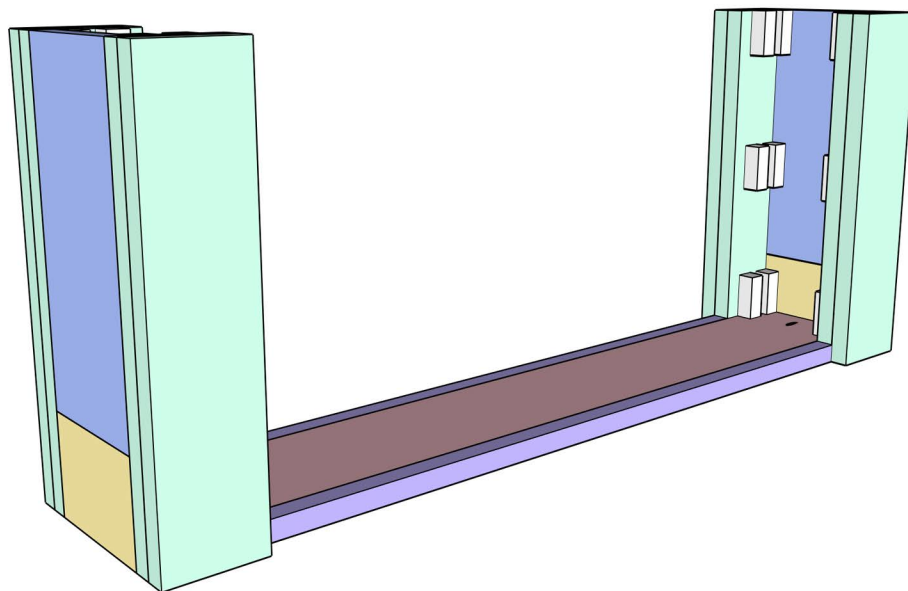




Attach each inside panel to a leg assembly with 2 1/2" finish nails and wood glue from the outside of the inside panel, into the spacers behind the panel.

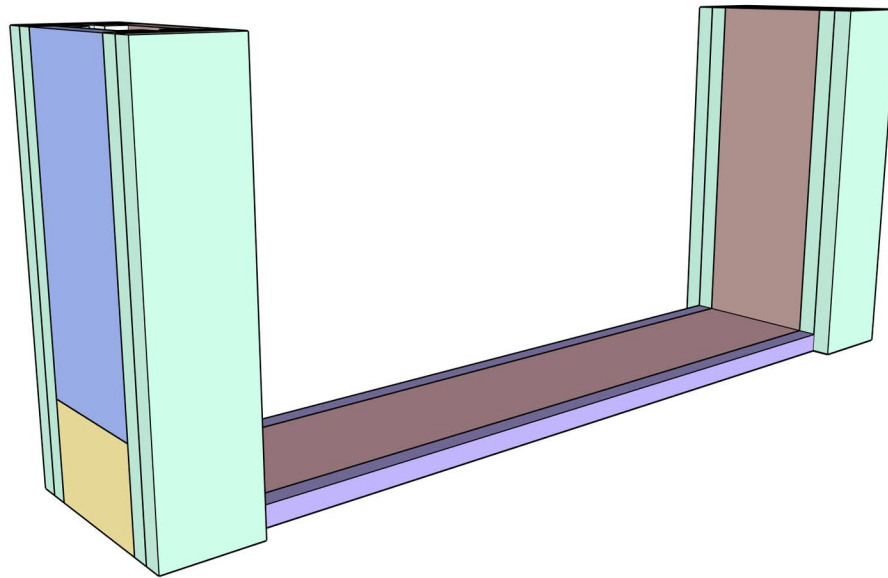

Measure and cut the apron pieces to size. Drill 1 1/2" pocket holes at both ends of the aprons and attach them to the leg assemblies with 2 1/2" pocket hole screws and wood glue.

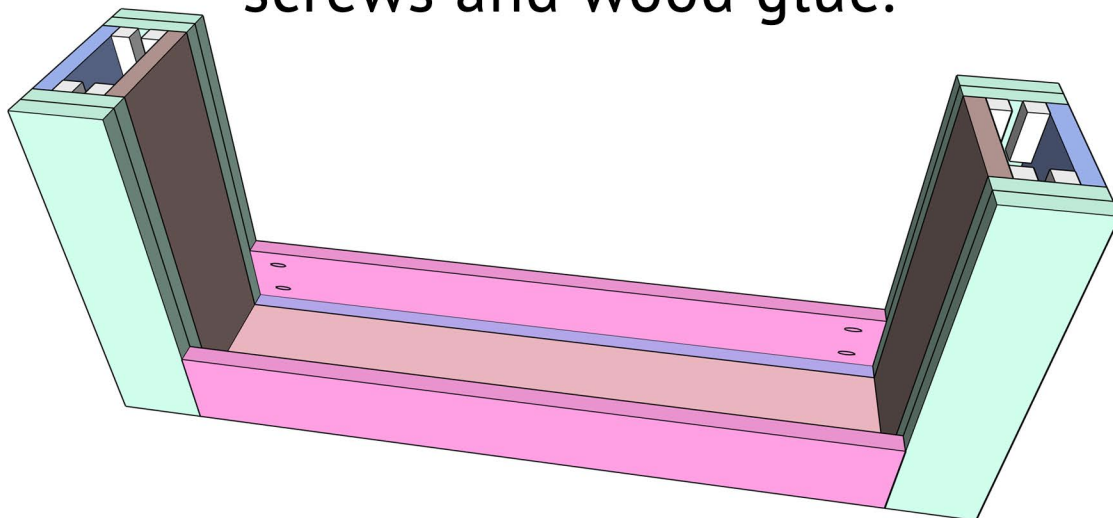

Fill any exposed nail holes and sand the entire console down.

Choose a finish of your choice and make sure to follow-up with a protective finish!

Make it your own! Be sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!

