



DIY FANCY LEG DESK


SUPPLY LIST

Item	Quantity	Description
2x6x8	7	Framing Lumber
1x4x8	1	Pine or Common Boards
1x6x6	1	Pine or Common Boards
1/4" 23"x20 3/4" Scrap	1	MDF or Plywood
Table Legs	4	Link in Post
1 1/4" Pocket Hole Screws		
2 1/2" Pocket Hole Screws		
5/8" Staples		
Drawer Pull	1	Link in Post
Set of 18" Drawer Slides	1	Link in Post
Stain		Link in Post
Protective Finish		Link in Post

Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!


CUT LIST

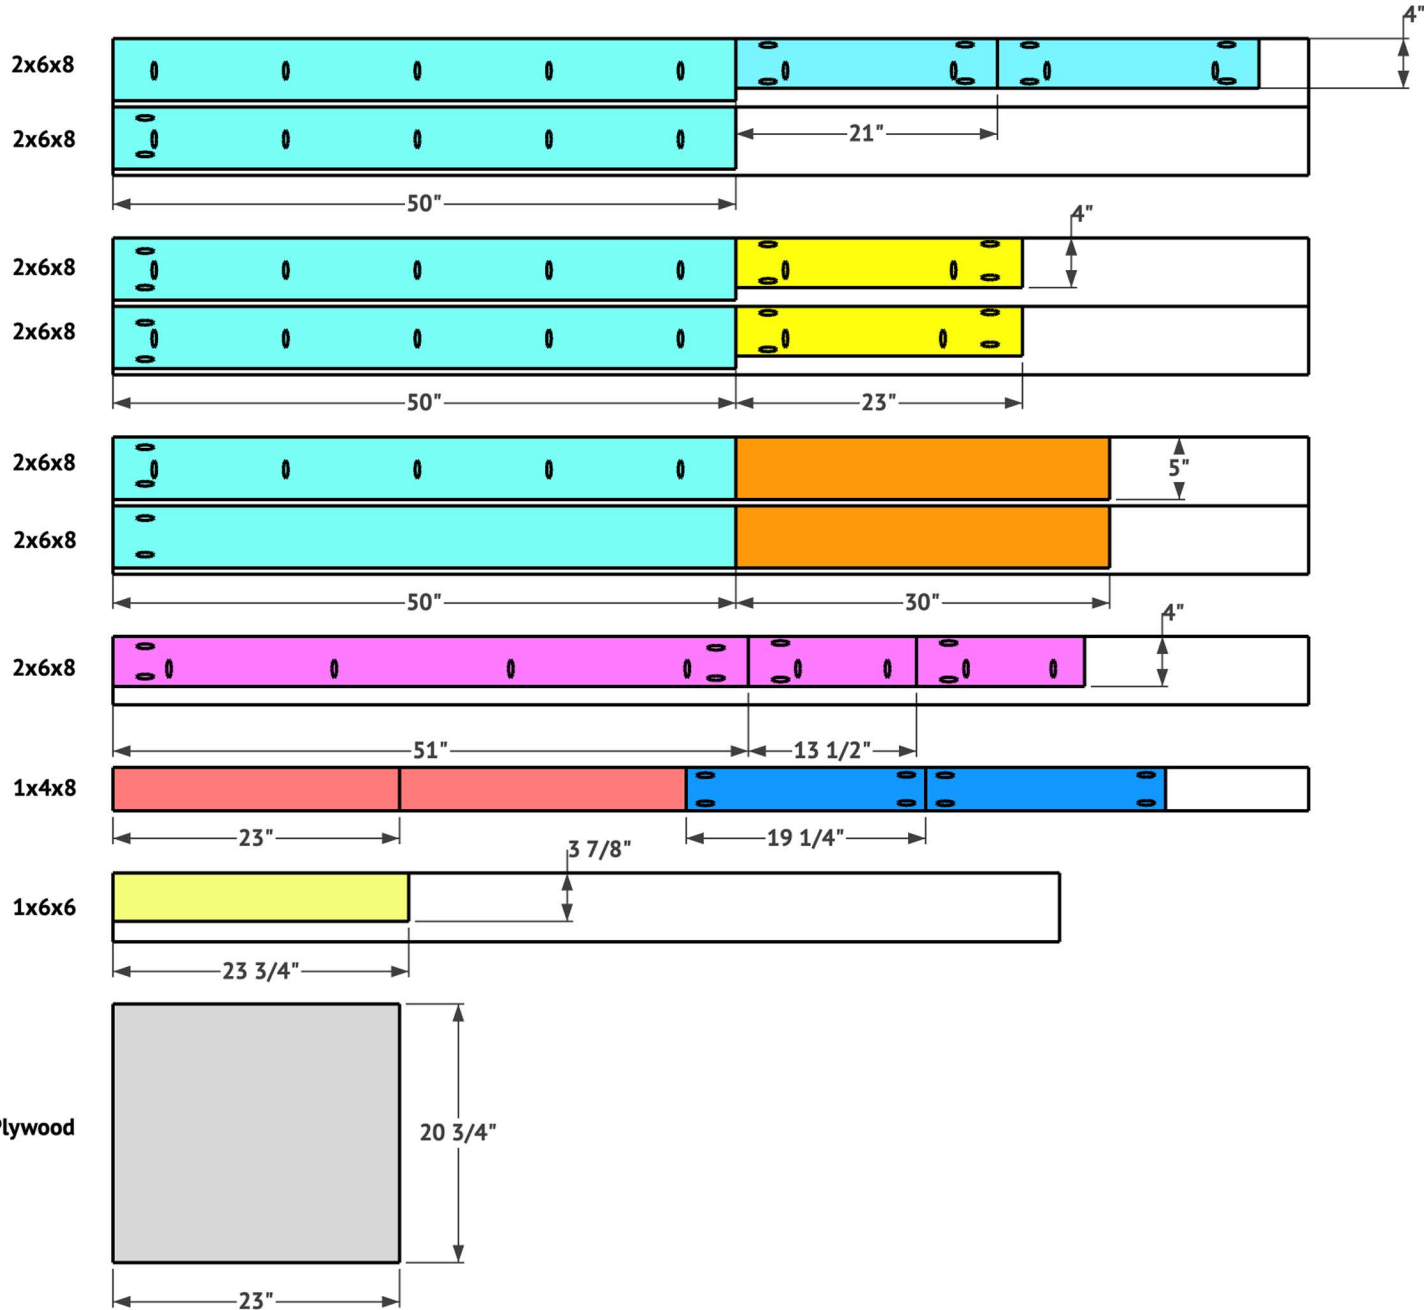

1/4" MDF or Plywood


1

Cut the long planks to size and drill 1 1/2" pocket holes on one edge and both ends of each plank. Attach them together with 2 1/2" pocket hole screws.

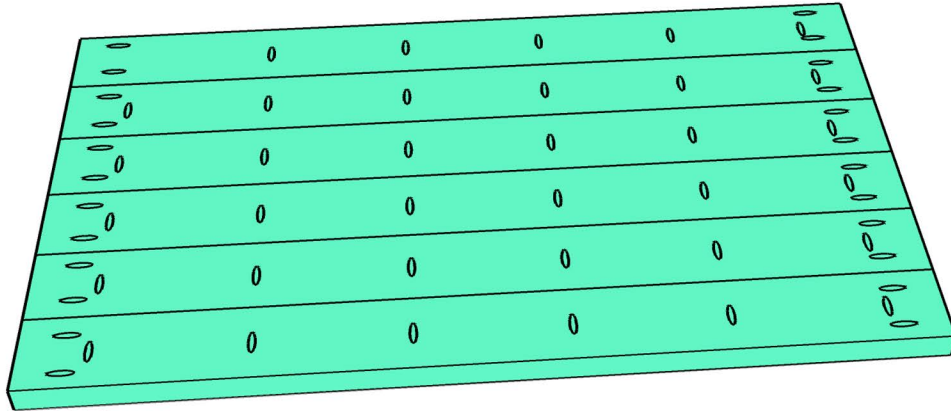


2

Measure and cut the breadboard ends to size and attach them to each side of the plank assembly with 2 1/2" pocket hole screws.

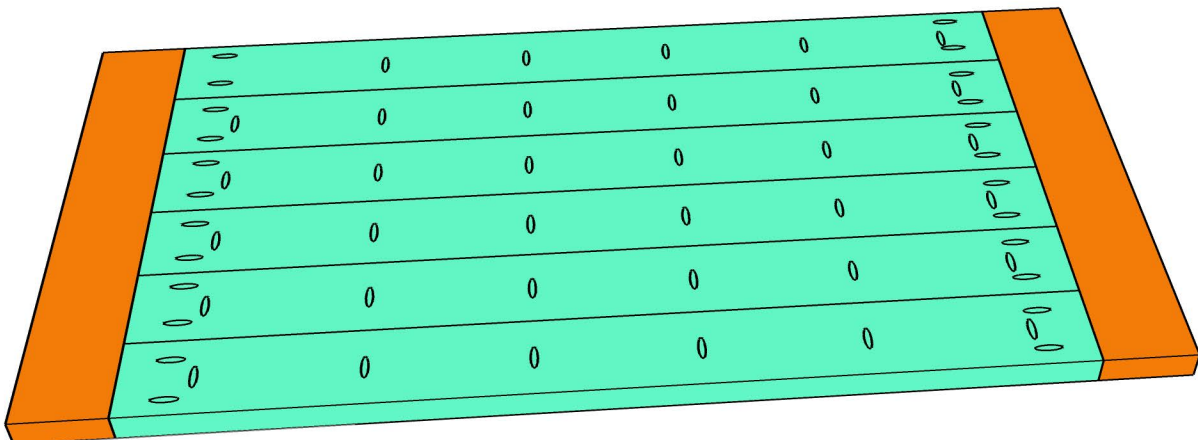

3



Cut the side aprons to size and drill 1 1/2" pocket holes on one edge and both ends. Attach one leg to the end of each apron piece with 2 1/2" pocket hole screws and wood glue.

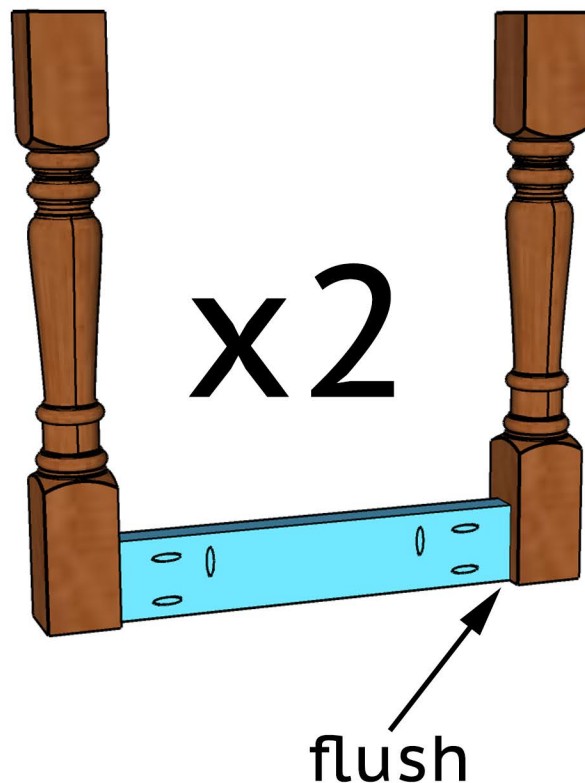

Build two side assemblies.


4

Cut the long back apron and the two short front aprons to size. Drill 1 1/2" pocket holes on one edge of each apron piece, both ends of the long apron and one end of each short apron. Attach them to the legs with 2 1/2" pocket hole screws and wood glue.

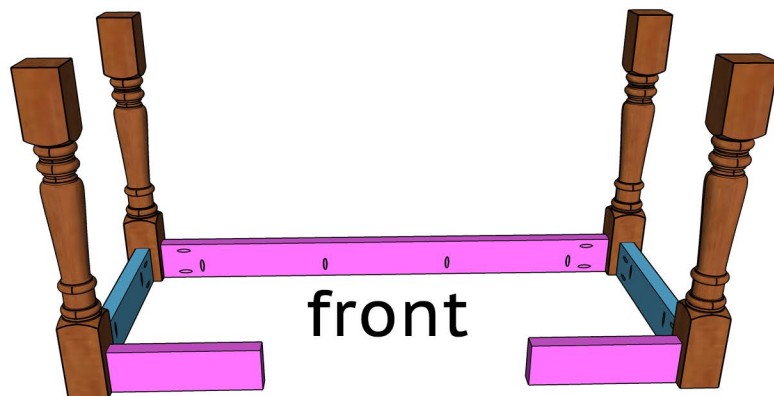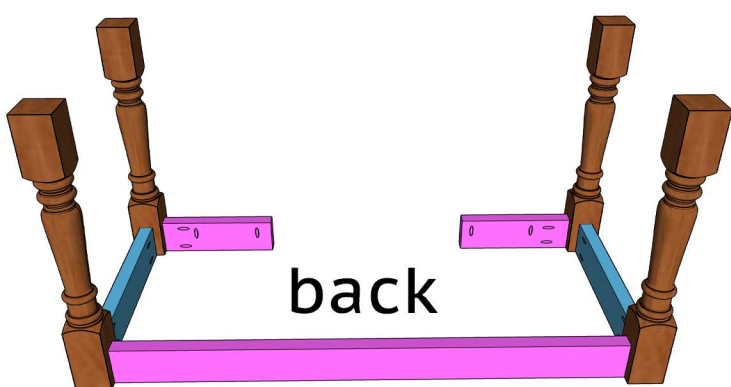



5

Cut the support pieces to size and drill 1 1/2" pocket holes on one edge and both ends of the boards. Attach them to the front and back apron pieces with 2 1/2" pocket hole screws and wood glue.

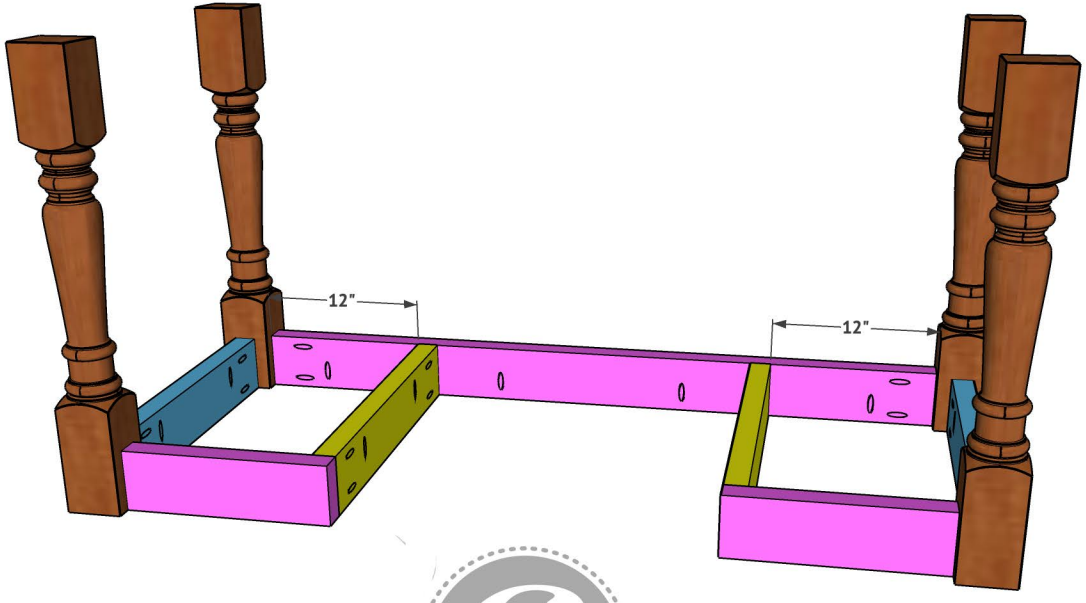


6

Cut the drawer frame pieces to size and attach them together with 1 1/4" brad nails and wood glue. Cut the 1/4" backing to size and attach it to the drawer frame with 5/8" staples and wood glue. You can use 1 1/4" brad nails to attach the backing as well.

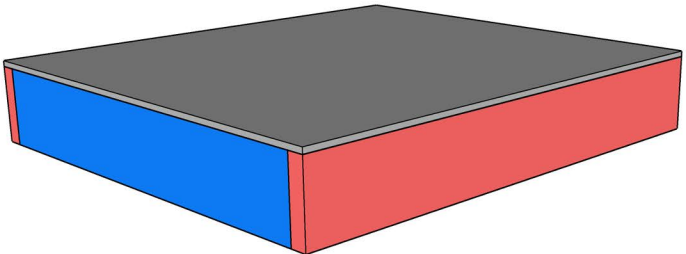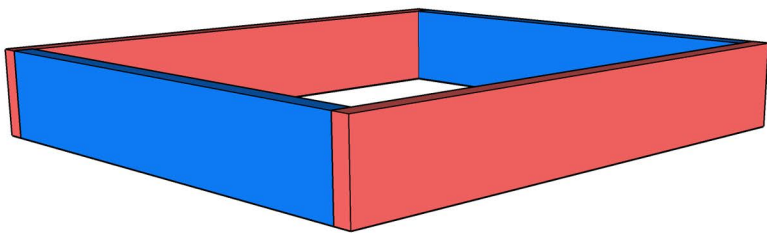




Install the drawer according to the instructions with your drawer slides. You can check out the tutorial on our website to see how we installed our drawer.

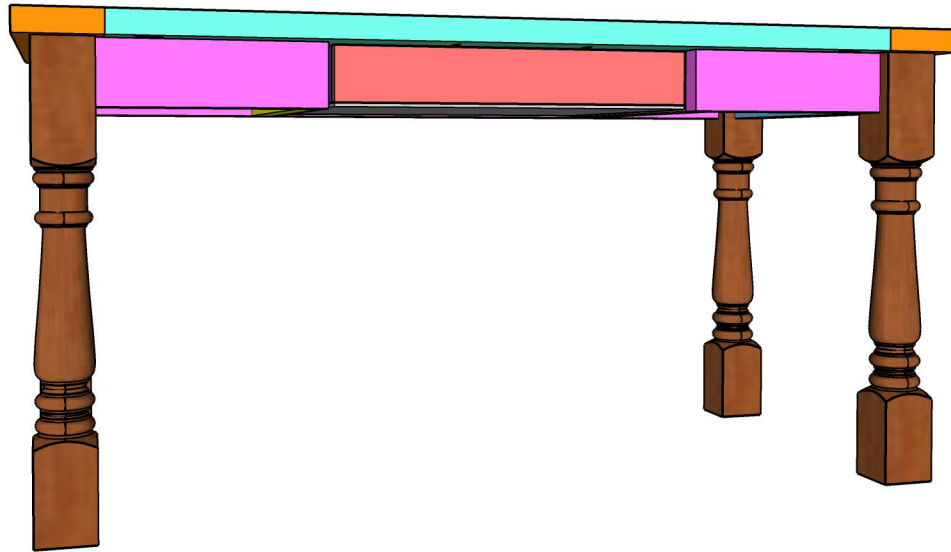


Measure and cut the drawer face to size and attach it to the drawer frame with 1 1/4" brad nails and wood glue. Attach from the inside of the drawer and into the drawer face.

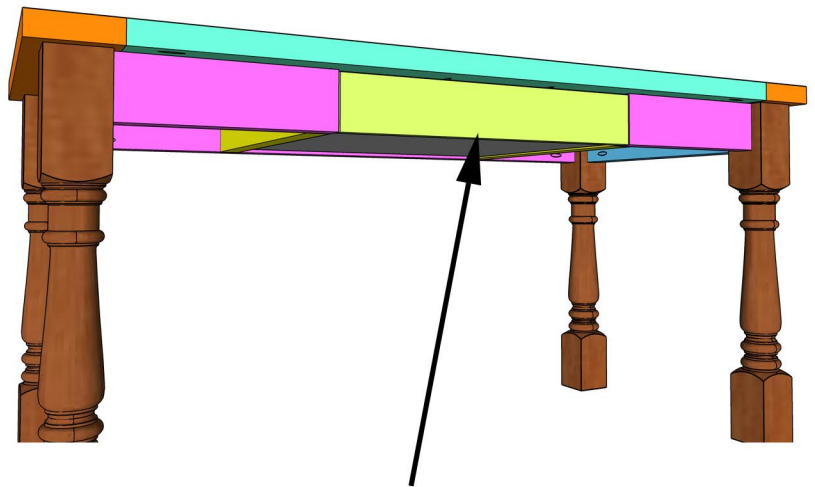

Leave a 1/8" reveal around the top and sides of the drawer frame.

9

Cut the support pieces to size and drill 1 1/2" pocket holes on one edge and both ends of the boards. Attach them to the front and back apron pieces with 2 1/2" pocket hole screws and wood glue.

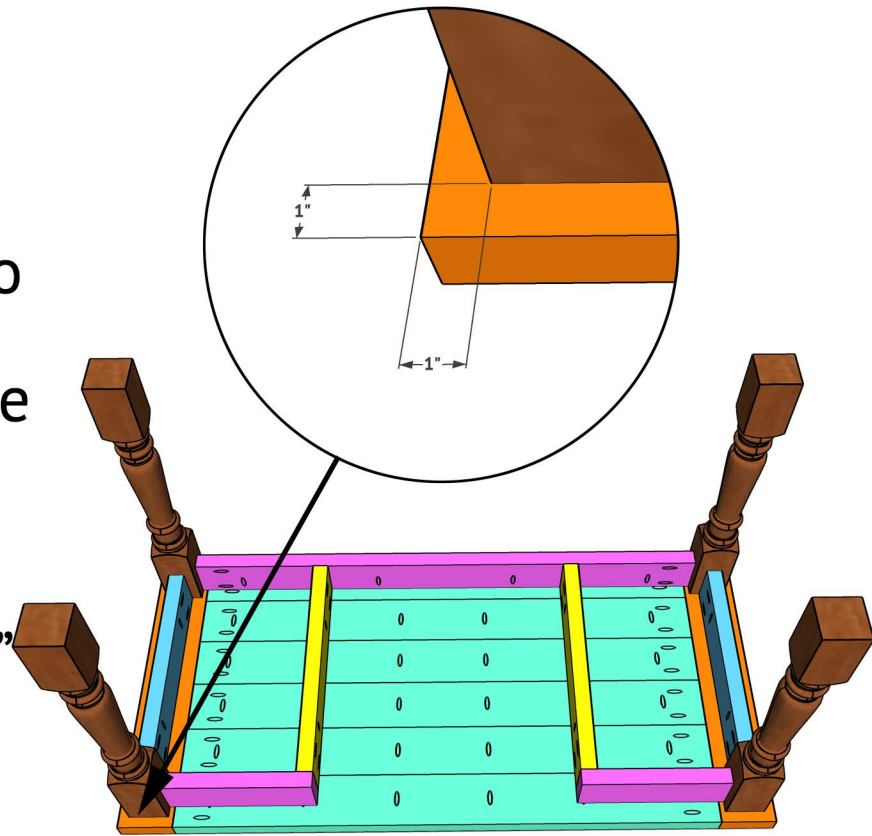

Sand down the desk, add a finish, poly and decorative hardware!

Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!

