




DIY Turned Wood Coffee Table

Supply List

Item	Quantity	Description
24" x 48" Edge-Glued Panel	1	ripped to 2.5" each
1 x 3 x 6	2	pine or whitewood
1 x 2 x 8	2	pine or whitewood
Turned Leg Set	1	check website for details
Beaded Wood Trim	1 set	check website for details
3/4" Kreg Pocket Hole Screws	several	
Wood Glue		

Cut List


edge glued
panel 24"x48"

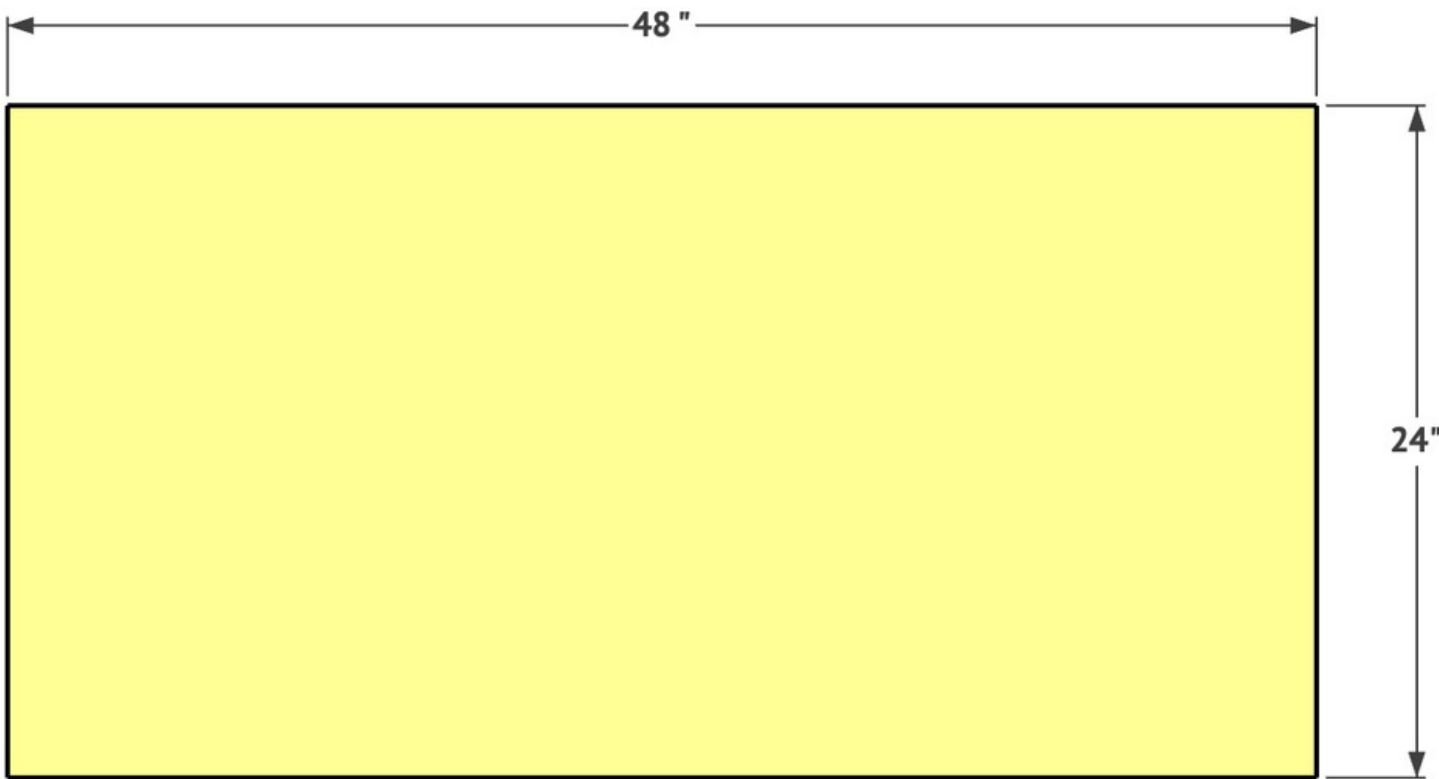


2 - 1x2x8



2 - 1x3x6

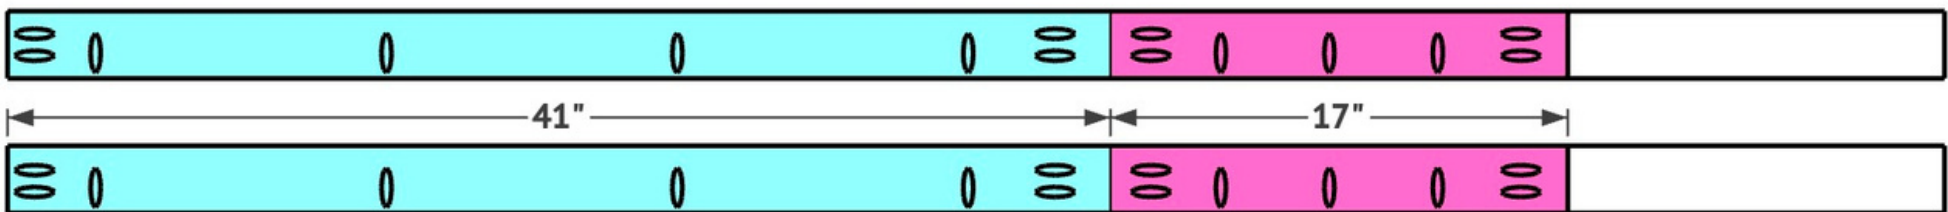

Beaded Wood
Trim


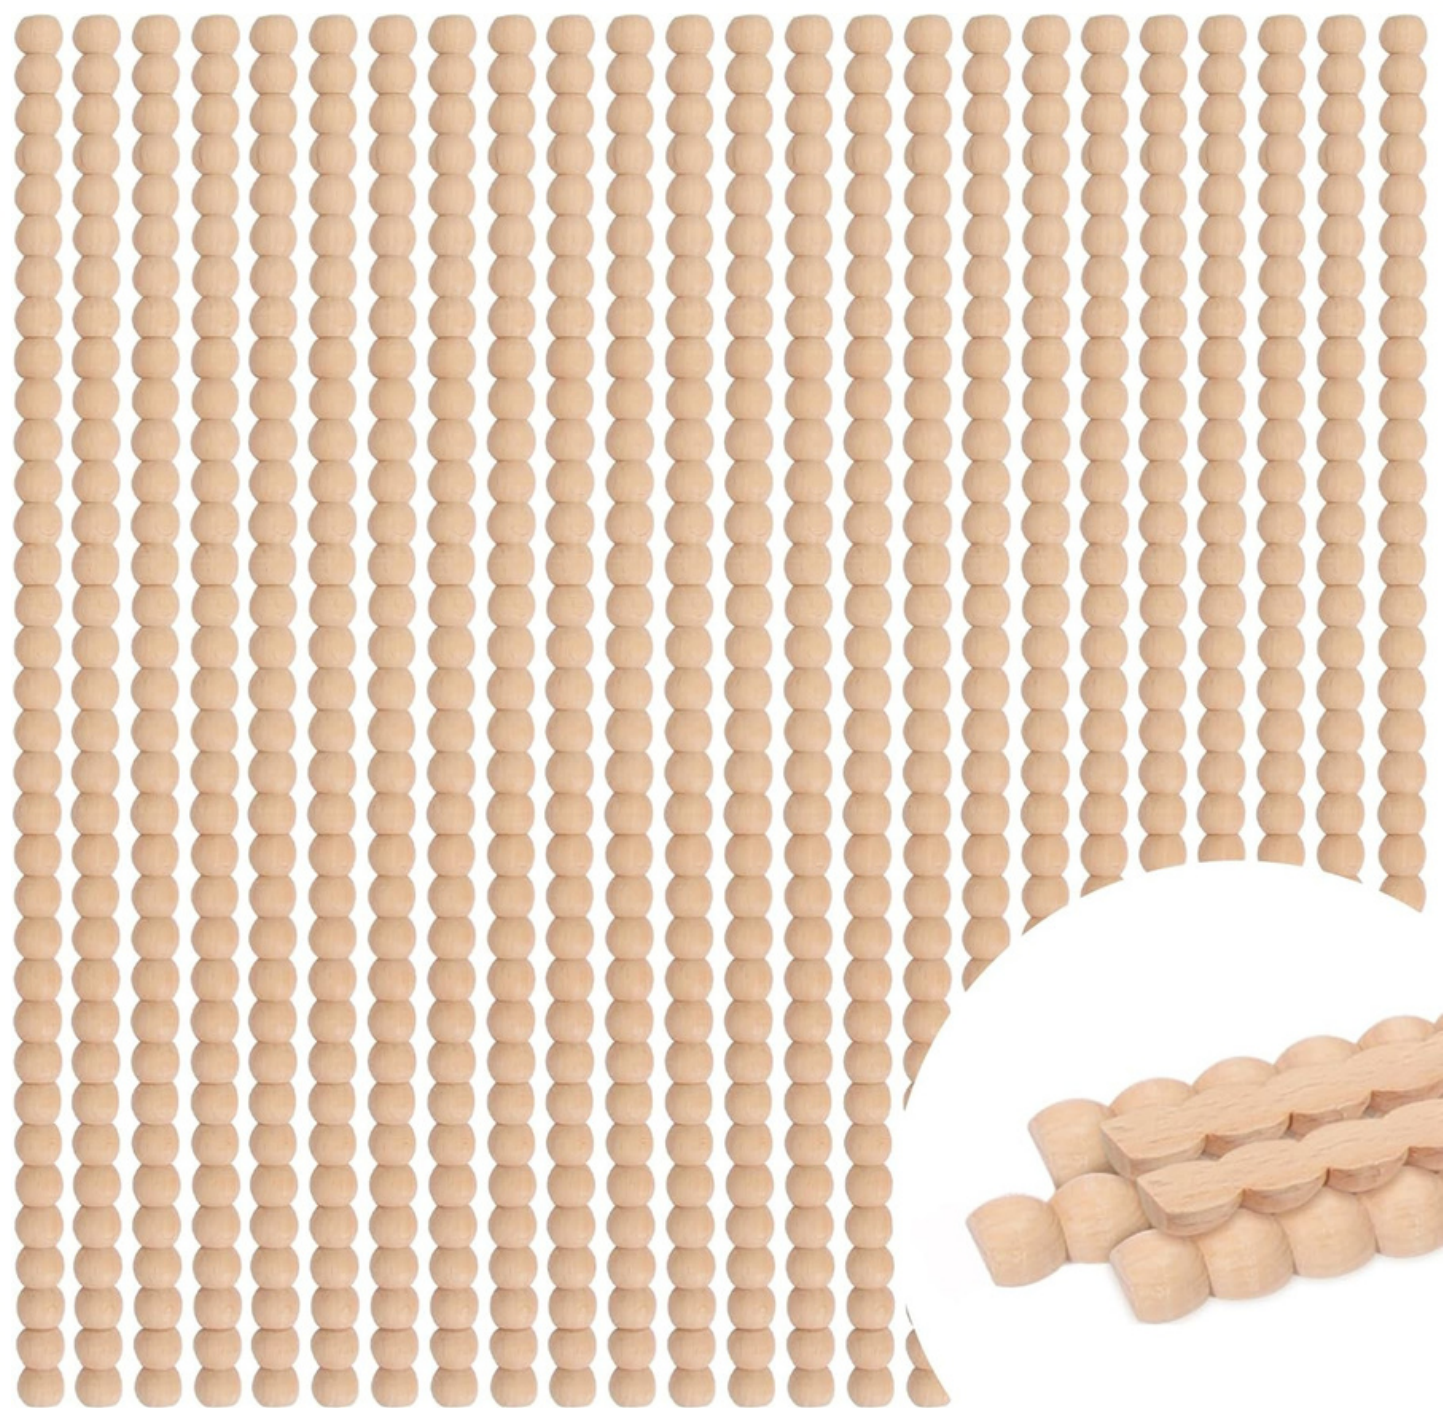


Turned Wood
Leg Set




STEP 1

Cut all apron boards to size according to the plans. Drill $\frac{3}{4}$ " pocket holes in both ends of each apron board, plus additional pocket holes along the top edge for attaching the tabletop.

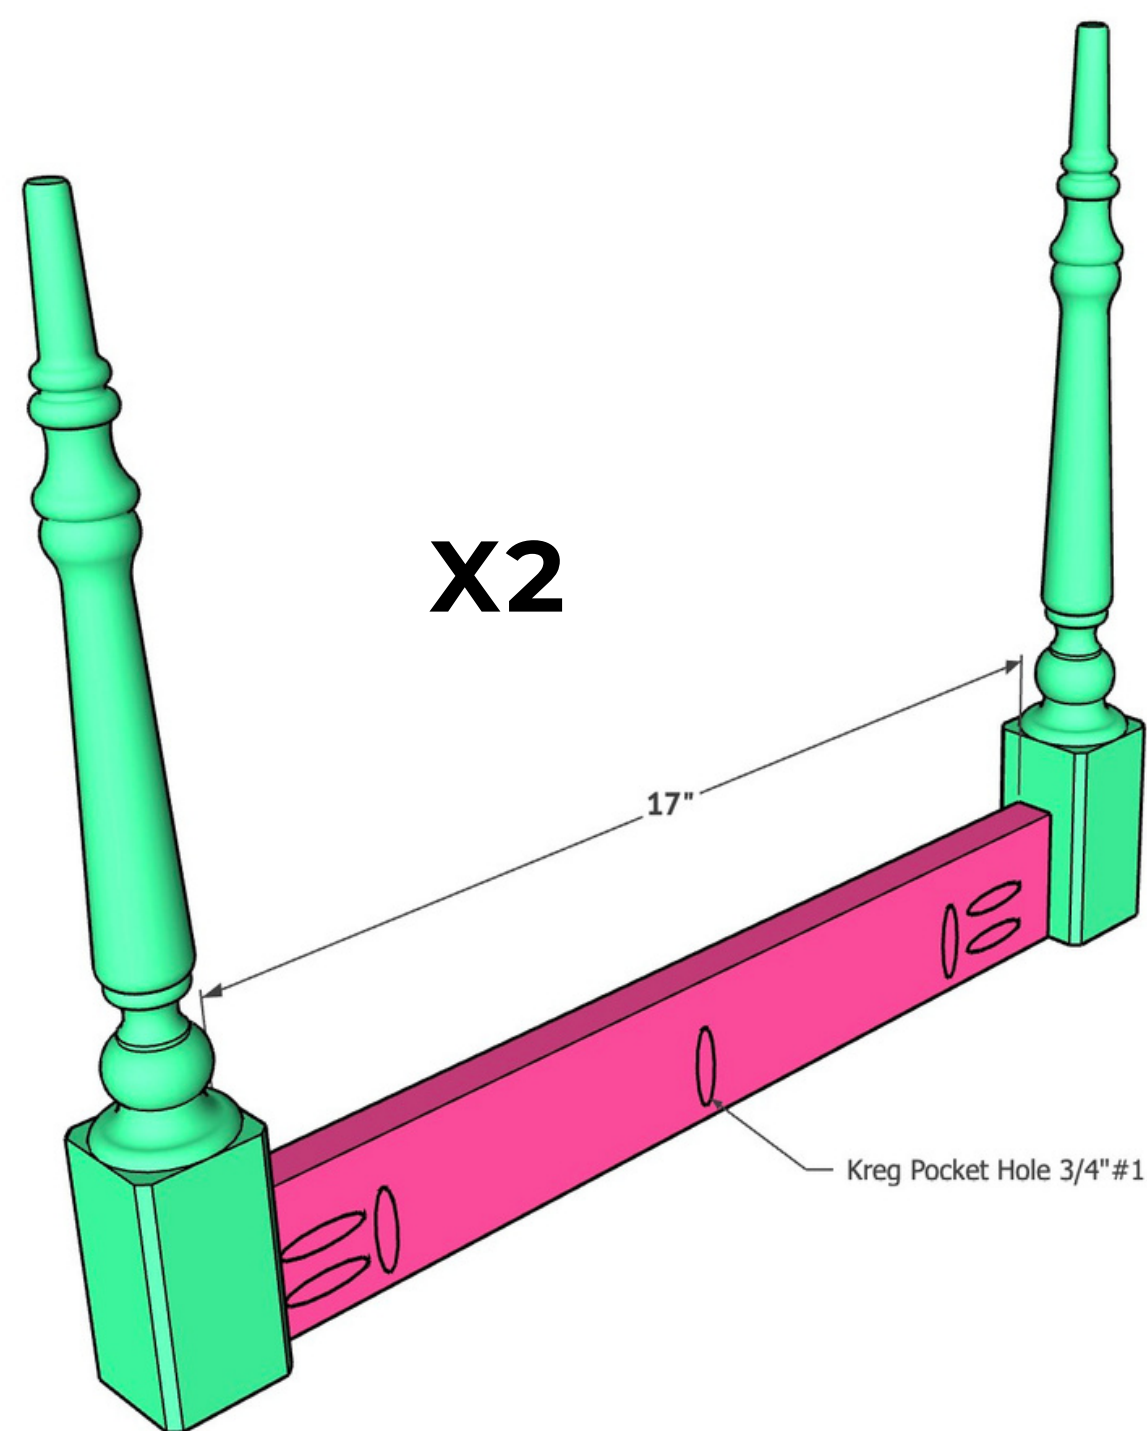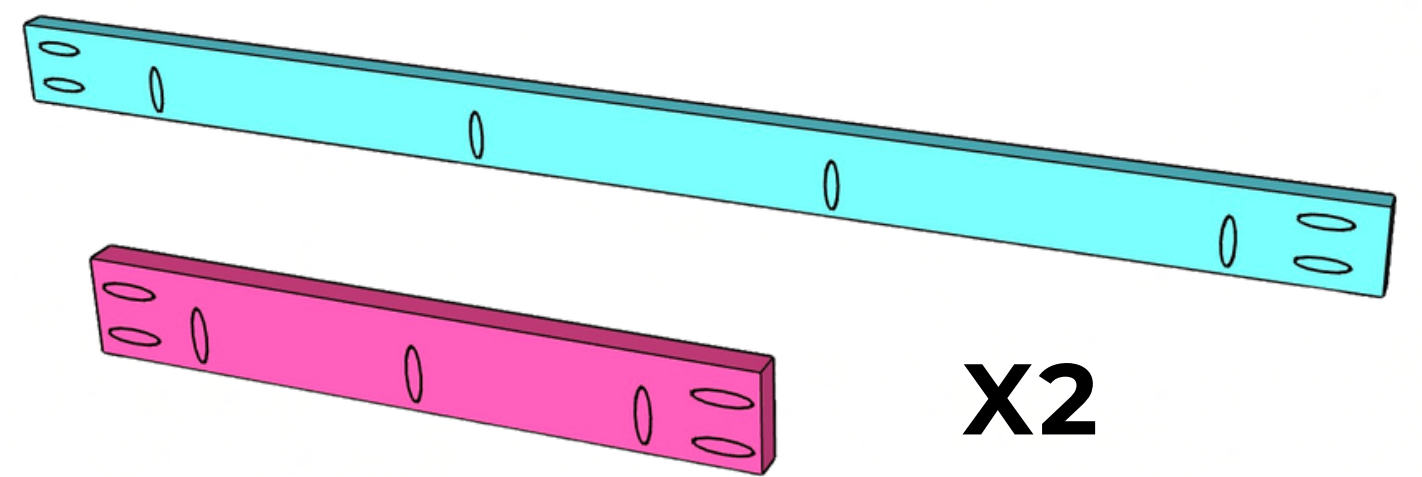

STEP 2

Mark each turned leg $\frac{1}{2}$ " in from the inside edge. Attach the two short apron boards to the legs with wood glue and $1\frac{1}{4}$ " pocket hole screws. Repeat for the second leg assembly.

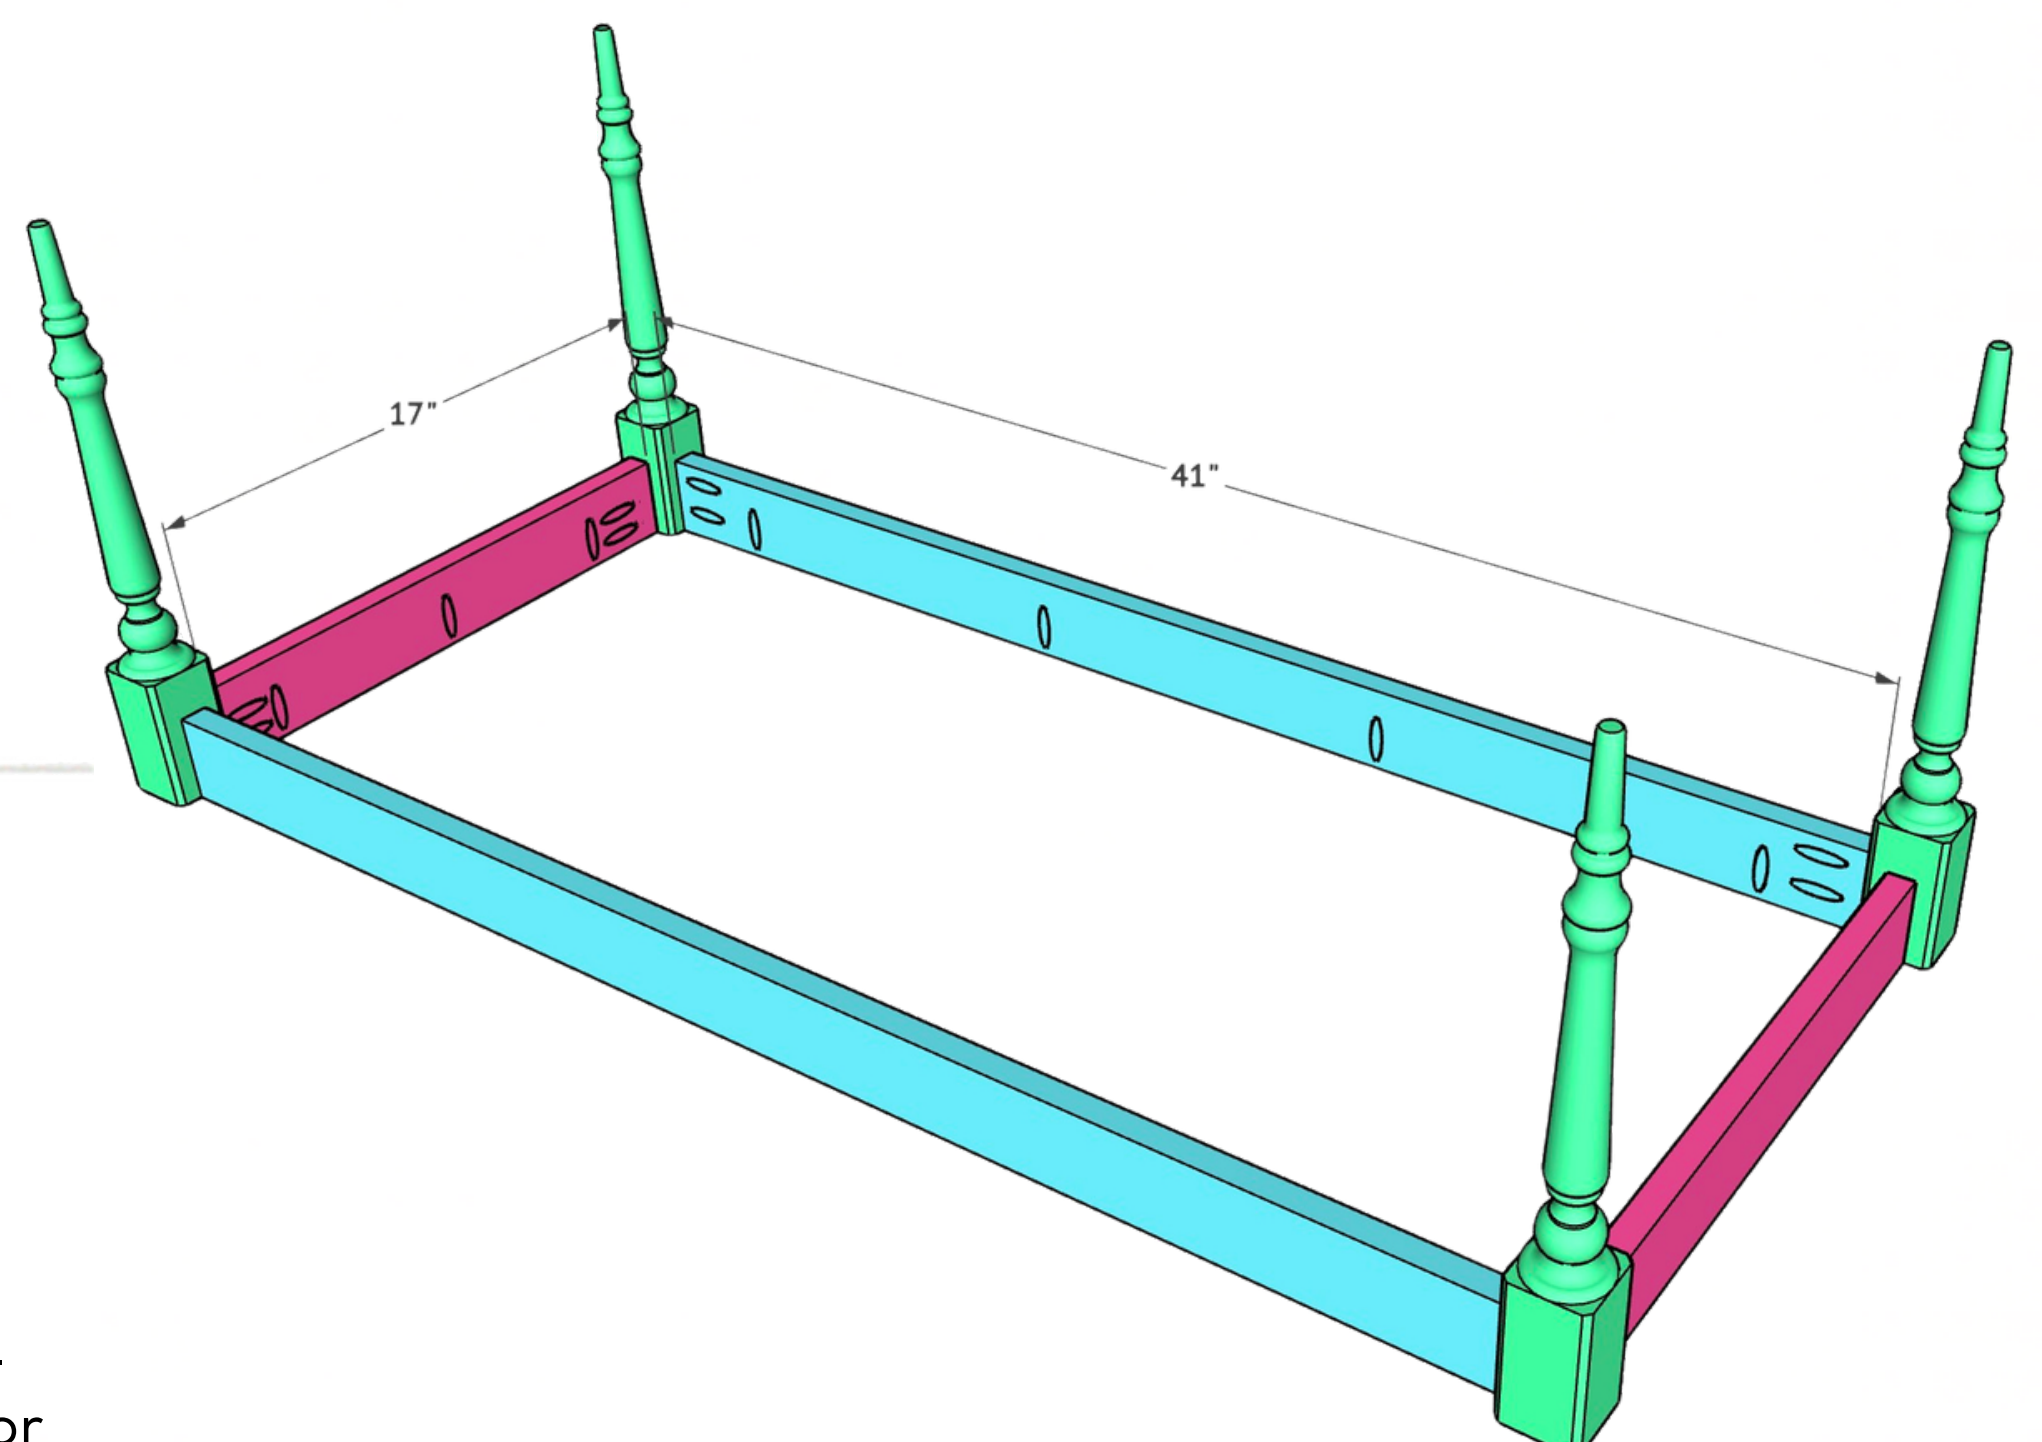


STEP 3

Connect both leg assemblies with the two long apron boards using wood glue and $1\frac{1}{4}$ " pocket hole screws. Check the base for square before tightening all of the screws.


STEP 4

Center the completed base on the underside of the tabletop, leaving a 1" overhang on all four sides. Clamp it in place and attach it with 1-1/4" pocket hole screws through the apron pocket holes.

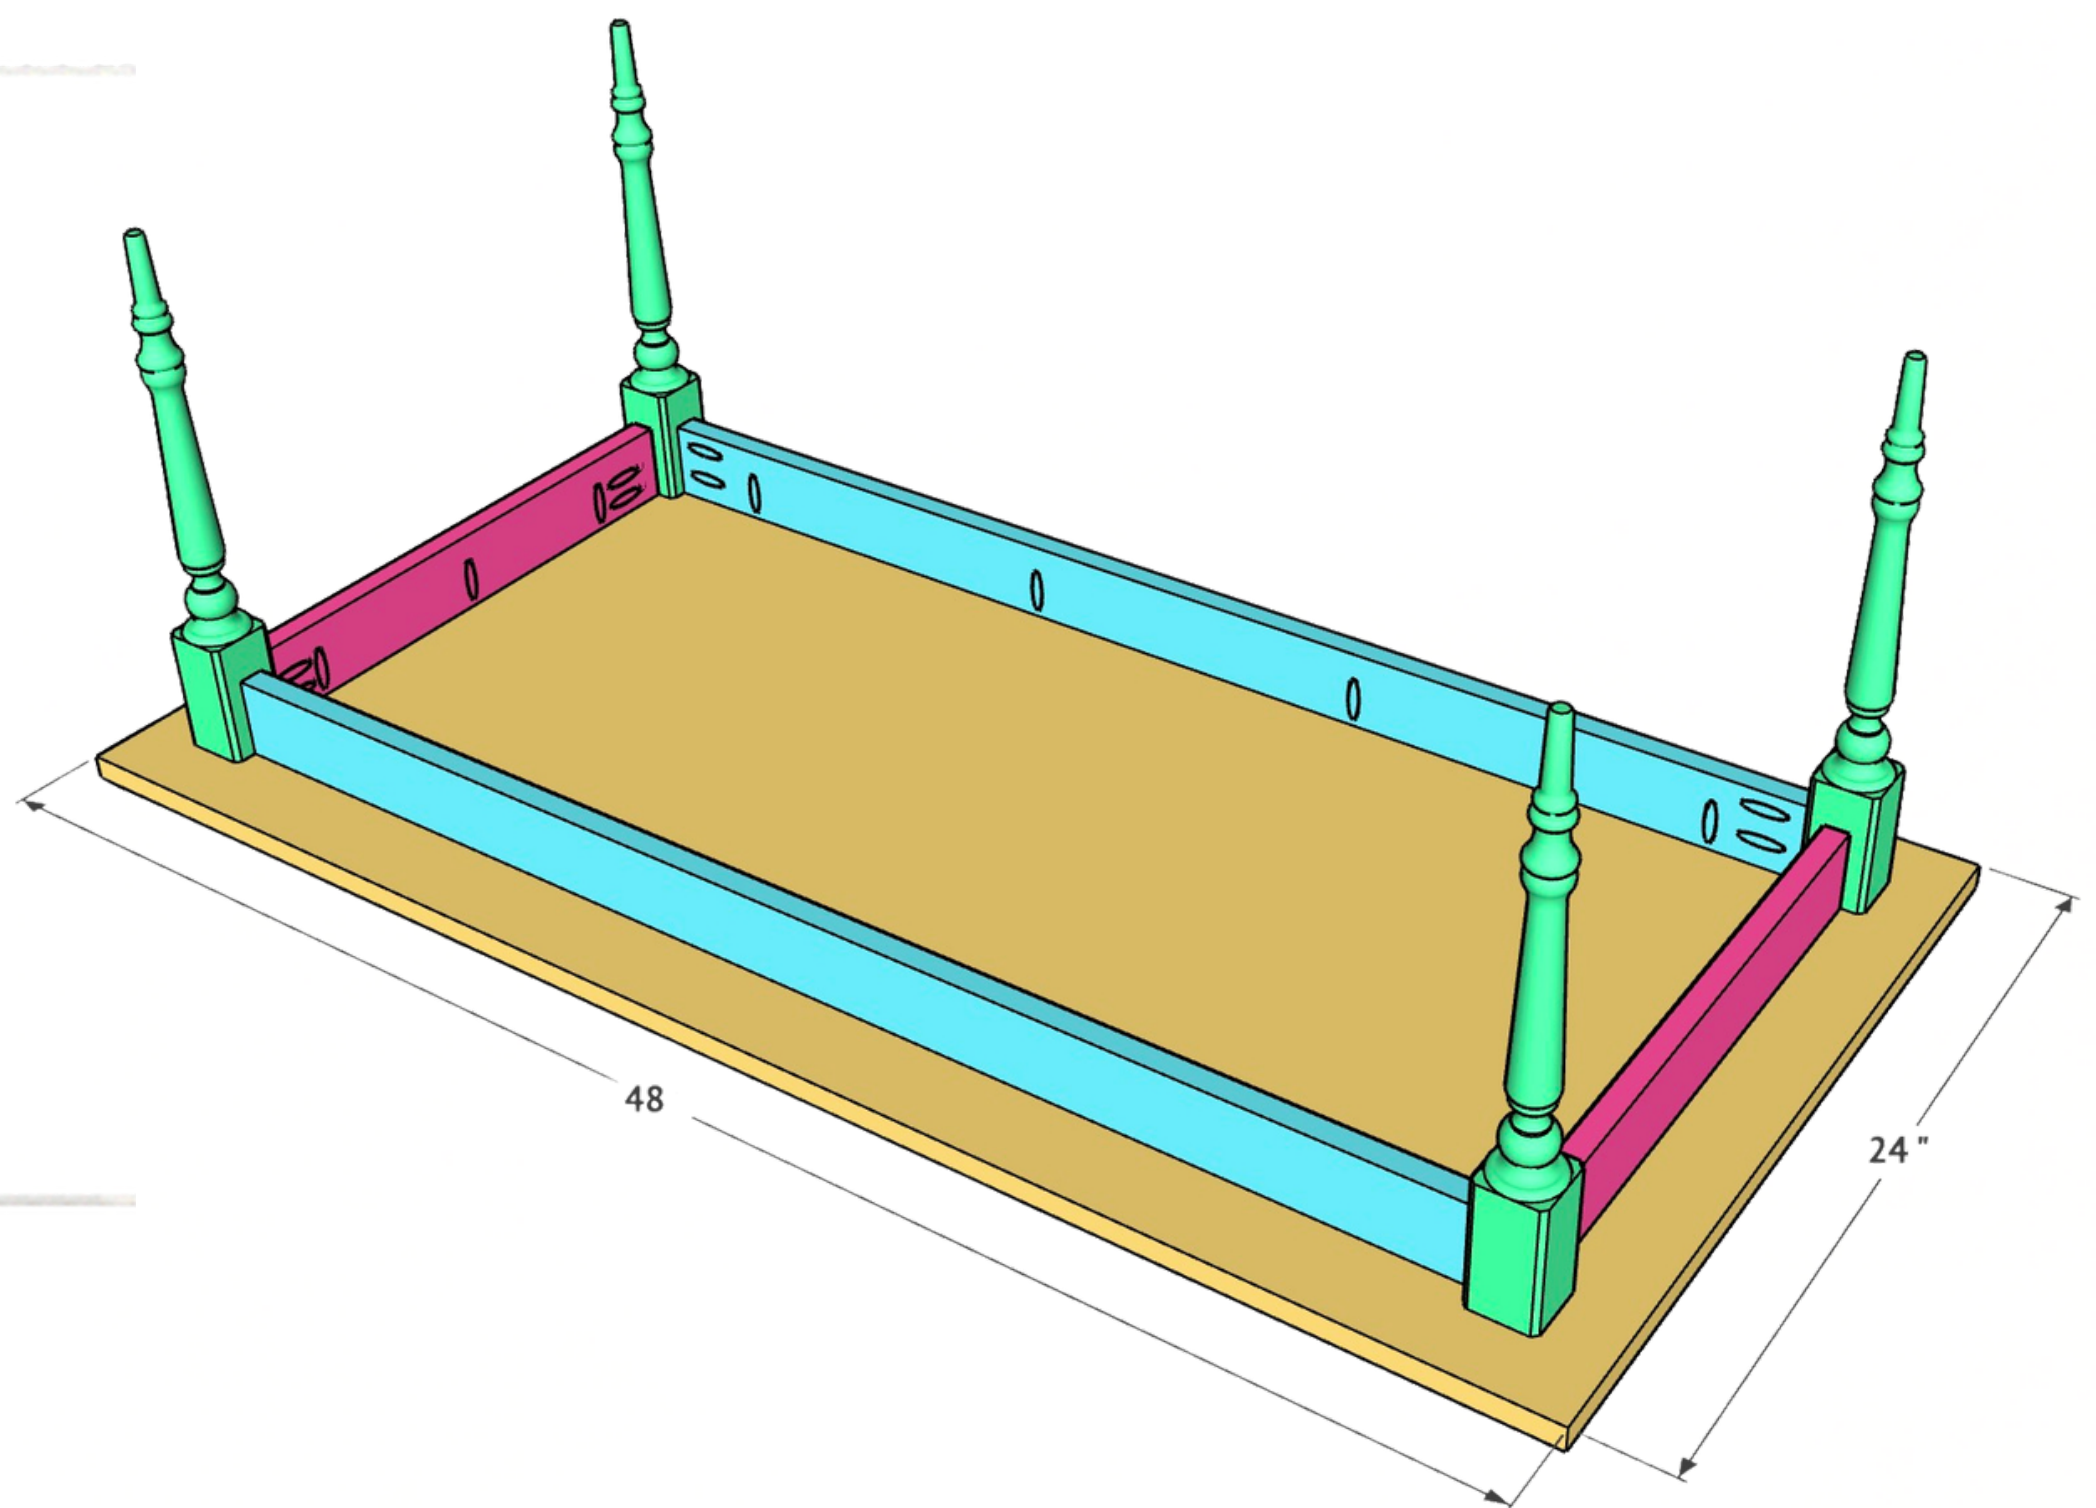

STEP 5

Measure the assembled tabletop before cutting the trim. Cut the 1x2 trim with 45° mitered corners, then attach it flush with the tabletop using wood glue and 1-1/4" brad nails. Add a little glue inside each miter joint for a tight fit.

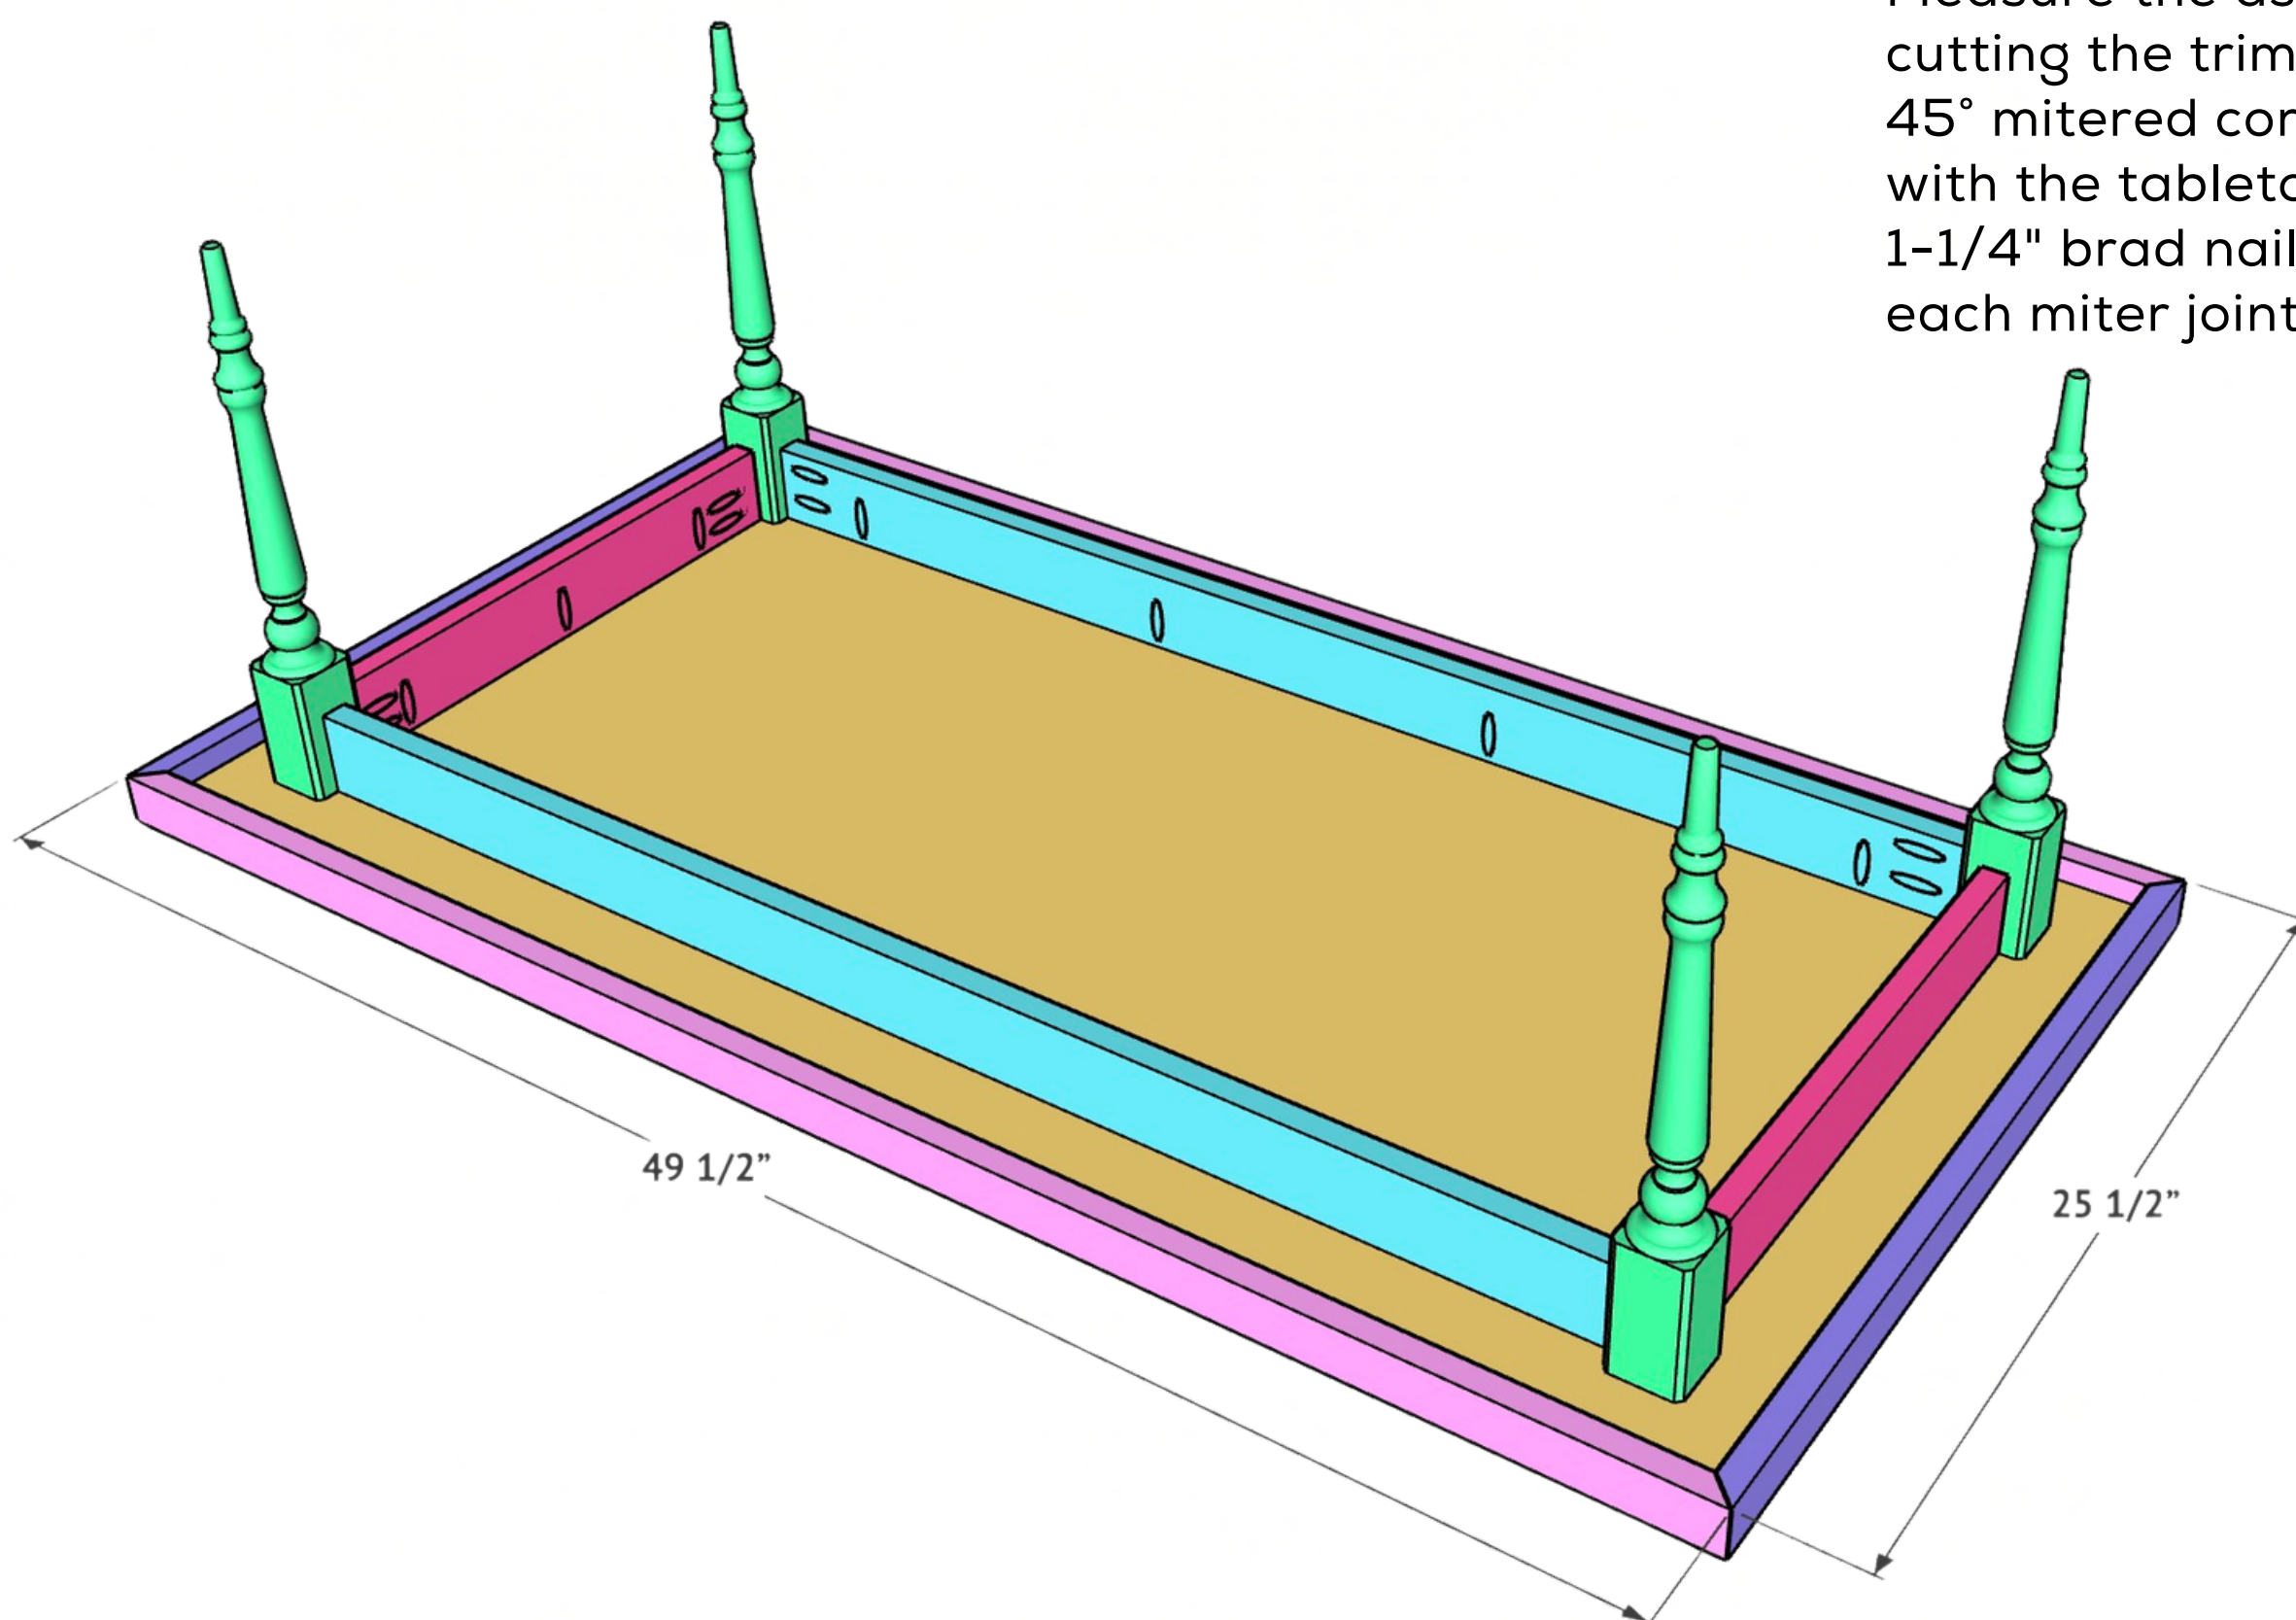

STEP 6

Cut the beaded wood trim to fit each side of the 1x2 trim. Apply wood glue to the back of the trim, position it flush with the side of the 1x2, and secure it with 3/4" brad nails.

