Rustic Modern Side Table

Supply List

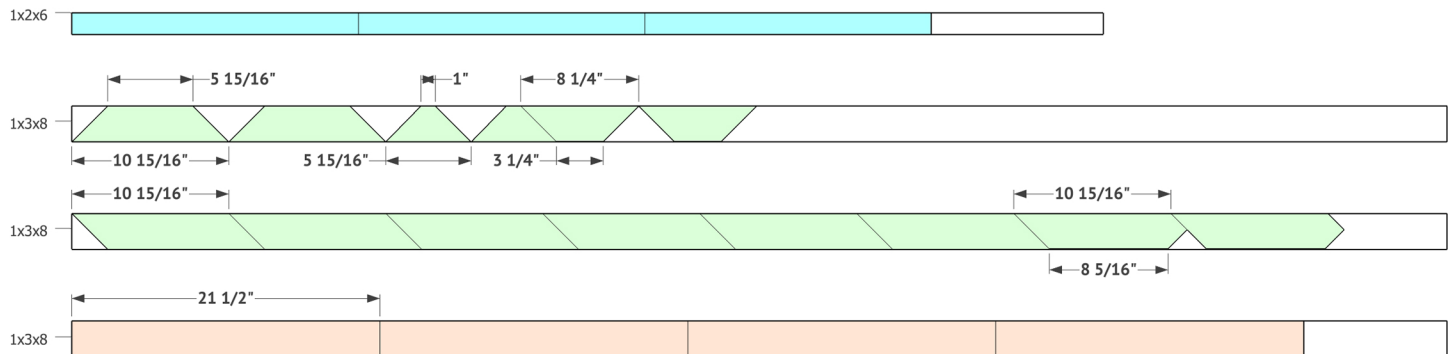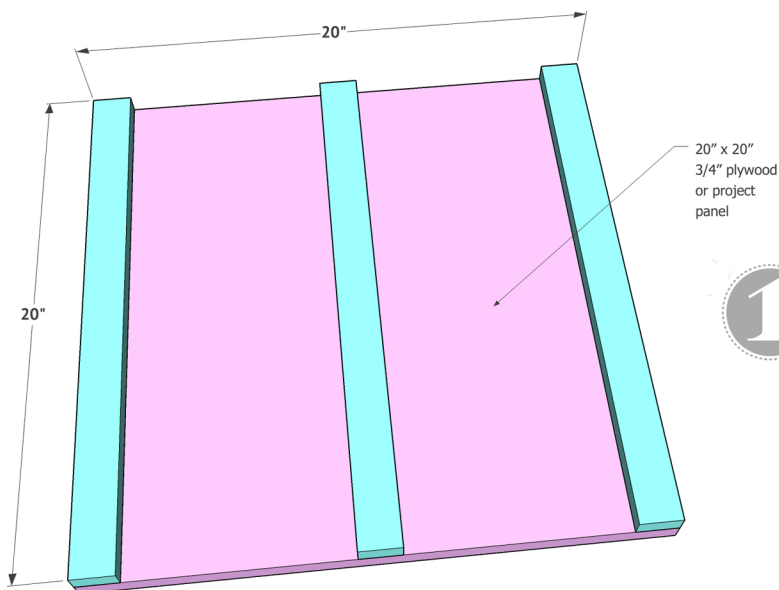| Item	Quantity	Description
1x3x8	3	pine or white wood
1x2x6	1	pine or white wood
20" x 20" panel	1	plywood or project panel
metal legs	2	link on website
1.25" brad nails	several	
wood glue		
screws to attach legs	8	

Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!

CUT LIST

20" x 20"
3/4" plywood
or project
panel

20"

20"
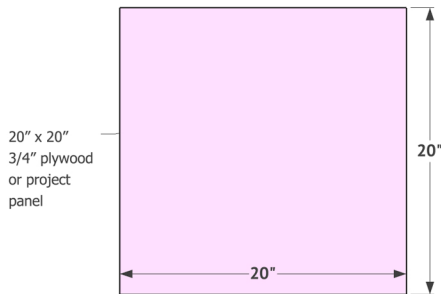
It's best to cut as you go! Use these measurements as a guide but measure each cut as you go!

1x2x6

1x3x8

5 15/16"   1"   8 1/4"

10 15/16"   5 15/16"   3 1/4"

1x3x8

10 15/16"   10 15/16"

8 5/16"

1x3x8

21 1/2"

20"

20"

20" x 20"
3/4" plywood
or project
panel

① Attach the 1x2 boards to the project panel first using wood glue and 1.25" brad nails. Two of the boards will be flush on each side and the other board will be centered on the panel.

②

10 15/16"

Each of these are 45°
cuts on each end

Start by lining up one side. These are simple 45° cuts on each end. I did put the exact cuts on the cover sheet, but measure and cut as you go. I found it easiest to make several of the same size like you see here, and then make my smaller pieces from the scrap I cut off. We made all cuts and dry fit everything before attaching.
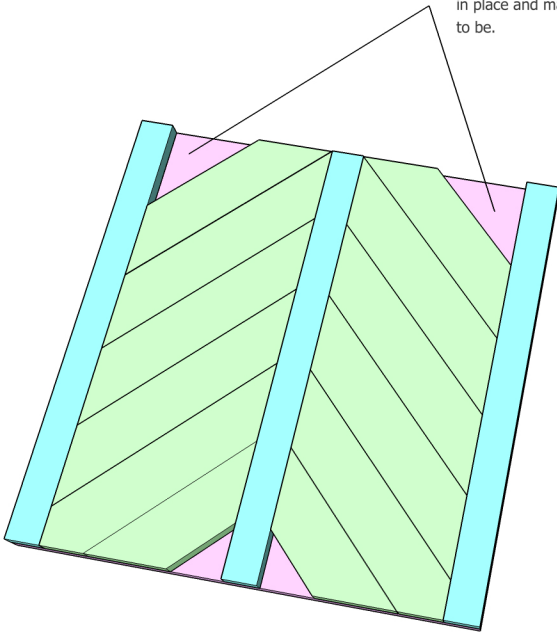
20"

20"

10 15/16"
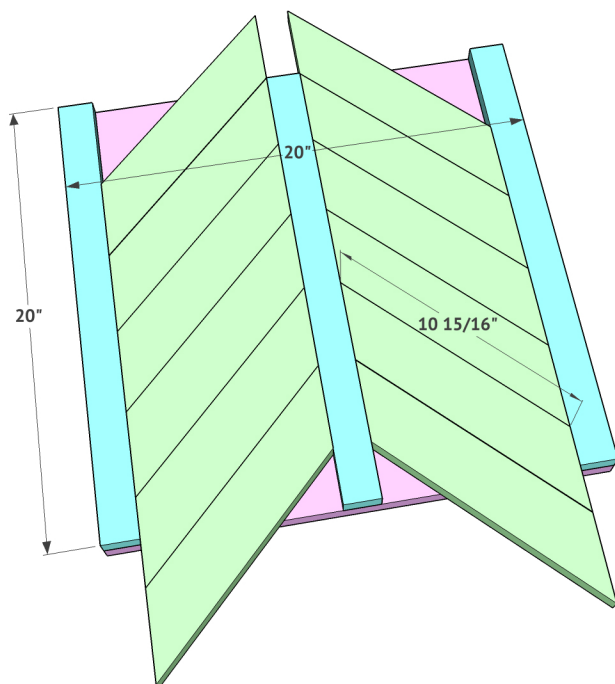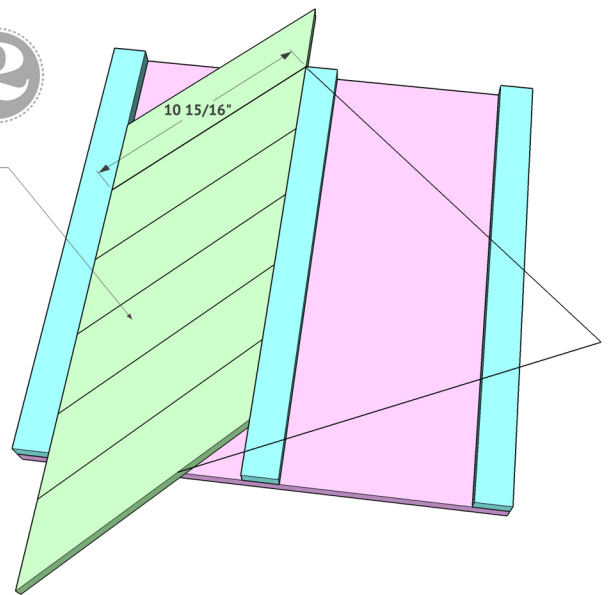
③

Now repeat the same thing on the opposite side.

Now use the scraps from the
boards you marked and cut to
fill in these spaces. Just hold a scrap
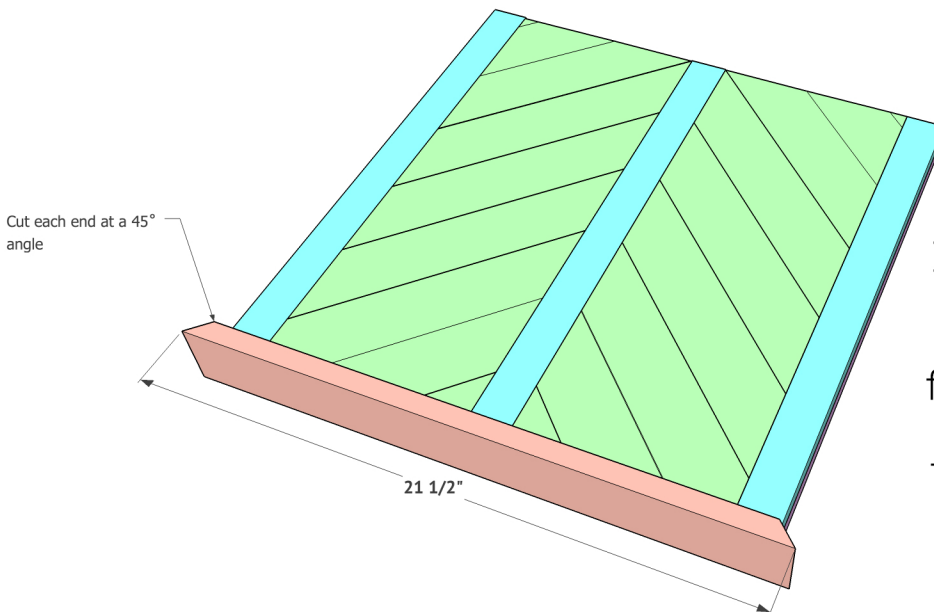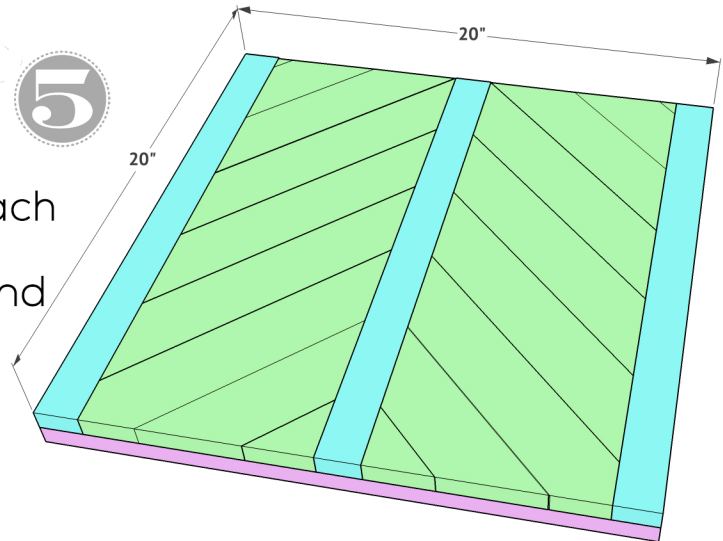in place and mark where the cut needs
to be.

④ Now fill the smaller spaces with
the scrap you cut from the other
boards. Rememner these
are simple 45° cuts!

⑤

20"

20"

Once you have made all the
cuts and dry fit everything, attach
all of the patterned boards
to the panel using wood glue and
1.25" brad nails.

⑥

Cut each end at a 45°
angle

21 1/2"

The trim pieces are also
1x3 baords. We chose to add
a 45° cut to each corner
to give the table a clean
finished look. Line the base of
each trim board up flush with
the bottom of the panel. This
will leave the top with an
overhang giving it a tray look.

21 1/2"

21 1/2"
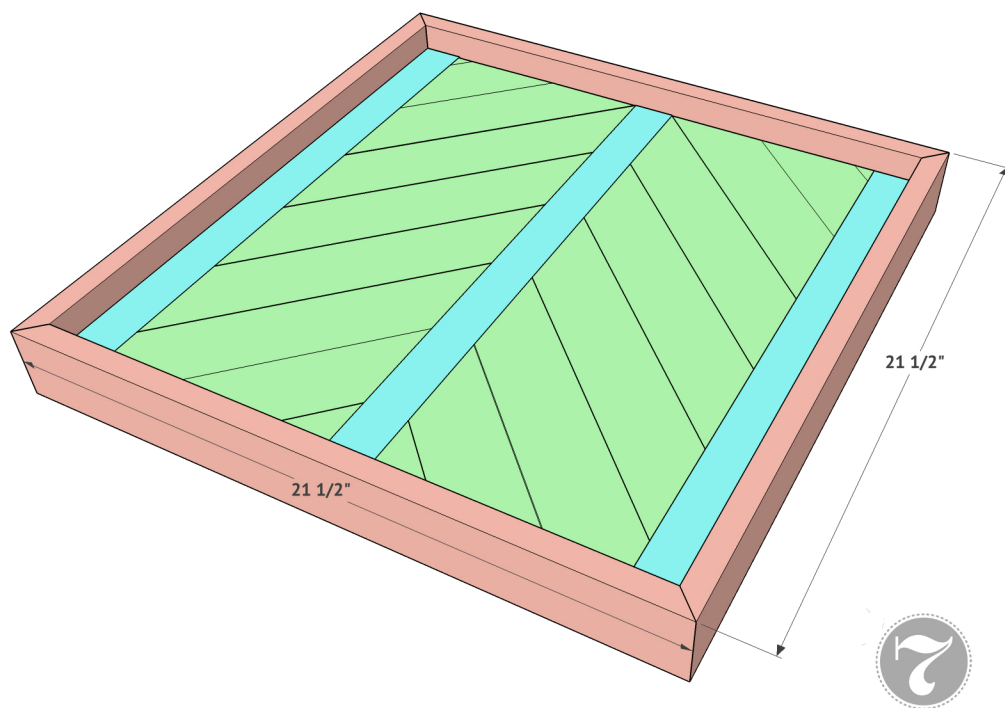
Measure and cut the rest of the
trim boards to size and attach them to
the outside of the panel using wood
glue and brad nails. Now you are ready for
legs! Be sure to check the website for
a link to the legs we used. This would also
make the cutest tray! Add a couple pulls to
the sides and you are set! Have fun with
it! Be sure to tag us and use hashtag
#shanty2chic when you share your builds!